

Application Examples Manual (Bridge, Civil & Structural)

LUSAS Version 14.7 : Issue 1

LUSAS
Forge House, 66 High Street, Kingston upon Thames,
Surrey, KT1 1HN, United Kingdom

Tel: +44 (0)20 8541 1999
Fax +44 (0)20 8549 9399
Email: info@lusas.com
<http://www.lusas.com>

Distributors Worldwide

Copyright ©1982-2011 LUSAS
All Rights Reserved.

Table of Contents

Introduction	1
Where do I start?	1
Software requirements	1
What software do I have installed?	1
About the examples	1
Format of the examples	2
Running LUSAS Modeller	5
Creating a new model / Opening an existing model	6
Creating a Model from the Supplied VBS Files	7
The LUSAS Modeller Interface	8
Linear Analysis of a 2D Frame	11
Description	11
Modelling	12
Running the Analysis	20
Viewing the Results	21
Importing DXF Data	31
Description	31
Modelling	32
Simple Building Slab Design	37
Description	37
Modelling	38
Running the Analysis	44
Viewing the Results	45
Linear Analysis of a Post Tensioned Bridge	57
Description	57
Modelling	58
Running the Analysis	68
Viewing the Results	69
Simple Grillage	75
Description	75
Modelling	76
Running the Analysis	90
Viewing the Results	91
Simple Slab Deck	101
Description	101
Modelling	102
Running the Analysis	112
Viewing the Results	113
Wood-Armer Bridge Slab Assessment	123
Description	123
Modelling	124
Running the Analysis	132
Viewing the Results	134
Grillage Load Optimisation	141
Description	141
Modelling	143
Viewing the Results	154

Bridge Slab Traffic Load Optimisation	161
Description	161
Modelling	162
Running the Analysis	175
Viewing the Results	176
BRO Slab Analysis	183
Description	183
Modelling	183
Running the Analysis	185
Viewing the Results	185
Section Slicing of a 3D Shell Structure	193
Description	193
Modelling	194
Running the Analysis	198
Viewing the Results	198
Seismic Response of a 2D Frame (Frequency Domain)	207
Description	207
Modelling	208
Running the Analysis	217
Viewing the Results	218
Running the Analysis	233
Viewing the Results	233
Seismic Response of a 3D Frame (Frequency Domain)	237
Description	237
Modelling	239
Running the Analysis	240
Viewing the Results	241
Buckling Analysis of a Plate Girder	250
Description	250
Modelling	251
Running the Analysis	262
Viewing the Results	264
Staged Construction of a Concrete Tower with Creep	267
Description	267
Modelling	268
Running the Analysis	280
Viewing the Results	281
3-Span Concrete Box Beam Bridge of Varying Section	285
Description	285
Modelling : Preliminary Model	288
Running the Analysis : Preliminary Model	300
Viewing the Results : Preliminary Model	301
Modelling : Detailed Model	302
Running the Analysis : Detailed Model	306
Viewing the Results : Detailed Model	306
Segmental Construction of a Post Tensioned Bridge	309
Description	309
Modelling	311
Running the Analysis	325
Viewing the Results	327
3D Nonlinear Static Analysis of a Cable Stayed Mast	329
Description	329

Modelling.....	330
Running the Analysis.....	340
Viewing the Results	341
2D Consolidation under a Strip Footing	347
Description	347
Modelling.....	348
Running the Analysis.....	355
Viewing the Results	356
Drained Nonlinear Analysis of a Retaining Wall	363
Description	363
Modelling.....	364
Running the Analysis.....	379
Viewing the Results	381
Staged Construction of a Concrete Dam	391
Description	391
Modelling.....	392
Viewing the Results	412
Seismic Analysis of a 2D Frame (Time Domain)	423
Description	423
Modelling.....	425
Running the Analysis.....	426
Viewing the Results	427
Seismic Analysis of a 3D Frame (Time Domain)	443
Description	443
Modelling.....	445
Running the Analysis.....	446
Viewing the Results	447
Train Induced Vibration of a Bridge	459
Description	459
Modelling.....	460
Running the Analysis.....	464
Viewing the Results	464
Track-Structure Interaction to UIC774-3	483
Description	483
Defining Model Data.....	484
Modelling / Running an Analysis	494
Viewing the Results	497
Alternative Analyses with Same Temperature Only Model.....	505

Introduction

Where do I start?

Start by reading this introduction in its entirety. It contains useful general information about the Modeller user interface and details of how the examples are formatted.

Software requirements

The examples are written for use with version 14.7 of LUSAS software products.

The LUSAS software product (and version of that product) and any product options that are required in order to run an example will be stated in a usage box like this:

For software product(s):	All (except LT versions)
With product option(s):	Nonlinear

Note that Composite examples can be run in any software product if a Composite product option has been purchased. Similarly, LUSAS Analyst or LUSAS Composite products can run bridge or civil examples if a Bridge or Civil product option was purchased. The LUSAS Academic software product will run any example.

What software do I have installed?

To find out which software product(s), which version of that product, and which software options are installed and licensed for your use run LUSAS and select **Help > About LUSAS Modeller** and press the **Key Information** button to display a dialog that lists the facilities and options supported by your software license.

About the examples

The examples are of varying complexity and cover different modelling and analysis procedures using LUSAS. The first example in this manual contains detailed information to guide you through the procedures involved in building a LUSAS model, running an analysis and viewing the results. This fully worked example details the contents of each dialog used and the necessary text entry and mouse clicks involved.

The remaining examples assume that you have completed the fully worked example and may not necessarily contain the same level of information. It will benefit you to work through as many examples as possible, even if they have no direct bearing on your immediate analysis interests.

Except where mentioned, all examples are written to allow modelling and analysis to be carried out with the Teaching and Training version of LUSAS which has restrictions on problem size. The teaching and training version limits are currently set as follows:

500 Nodes	100 Points	250 Elements	1500 Degrees of Freedom	10 Loadcases
---------------------	----------------------	------------------------	-----------------------------------	------------------------

Because of the modelling and analysis limits imposed by the Teaching and Training Versions some examples may contain coarse mesh arrangements that do not necessarily constitute good modelling practice. In these situations these examples should only be used to illustrate the LUSAS modelling methods and analysis procedures involved and should not necessarily be used as examples of how to analyse a particular type of structure in detail.

Format of the examples

Headings

 
Each example contains some or all of the following main headings:

- ☐ **Description** contains a summary of the example, defining geometry, material properties, analysis requirements and results processing requirements.
 - **Objectives** states the aims of the analysis.
 - **Keywords** contains a list of keywords as an aid to selecting the correct examples to run.
 - **Associated Files** contains a list of files held in the \<Lusas Installation Folder>\Examples\Modeller directory that are associated with the example. These files are used to re-build models if you have problems, or can be used to quickly build a model to skip to a certain part of an example, for instance, if you are only interested in the results processing stage.
- ☐ **Modelling** contains procedures for defining the features and attribute datasets to prepare the LUSAS model file. Multiple model files are created in some of the more complex examples and these therefore contain more than one 'Modelling' section.
- ☐ **Running the Analysis** contains details for running the analysis and assistance should the analysis fails for any reason.

- **Viewing the Results** contains procedures for results processing using various methods.

Menu commands

Menu entries to be selected are shown as follows:



This implies that the **Geometry** menu should be selected from the menu bar, followed by **Point**, followed by the **Coordinates...** option.

Sometimes when a menu entry is referred to in the body text of an example it is written using a bold text style. For example the menu entry shown above would be written as **Geometry > Point > Coordinates...**

Toolbar buttons

For certain commands a toolbar button will also be shown to show the ‘short-cut’ option to the same command that could be used instead:



 
The toolbar button for the **Geometry > Point > Coordinates...** command is shown here.

User actions

Actions that you need to carry out are generally bulleted (the exception is when they are immediately to the right of a menu command or a toolbar button) and any text that has to be entered is written in a bold text style as follows:

- Enter coordinates of **(10, 20)**.

So the selection of a typical menu command (or the equivalent toolbar button) and the subsequent action to be carried out would appear as follows:




Enter coordinates of **(10, 20)**.

Selecting the menu commands, or the toolbar button shown will cause a dialog box to be displayed in which the coordinates **10, 20** should be entered.

Filling-in dialogs

For filling-in dialogs a bold text style is used to indicate the text that must be entered. Items to be selected from drop-down lists or radio buttons that need to be picked also use a bold text style.

For example:

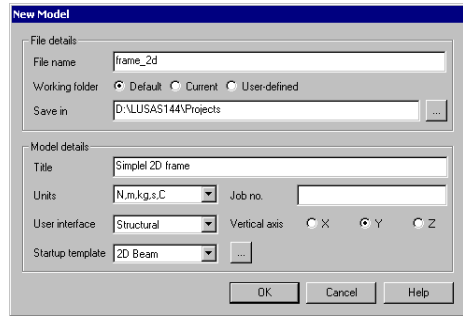


- In the New Model dialog enter the filename as **frame_2d** and click the **OK** button to finish.

Grey-boxed text

Grey-boxed text indicates a procedure that only needs to be performed if problems occur with the modelling or analysis of the example. An example follows:

Rebuilding a model

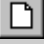 Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

- Enter the file name as **example**

To recreate the model, select the file **example_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.

Visual Basic Scripts

Each example has an associated set of LUSAS-created VBS files that are supplied on the release kit. These are installed into the \<Lusas Installation Folder>\Examples\Modeller directory. If results processing and not the actual modelling of an example is only of interest to you the VBS files provided will allow you to quickly build a model for analysis. These scripts are also for use when it proves impossible for you to correct any errors made prior to running an analysis of an example. They allow you to re-create a model from scratch and run an analysis successfully. For more details refer to Creating a Model From The Supplied VBS files.

Modelling Units

At the beginning of each example the modelling units used will be stated something like this:

“Units used are N, m, kg, s, C throughout”

All units presented in the example are consistent units.

Icons Used

Throughout the examples, files, notes, tips and warnings icons will be found. They can be seen in the left margin.



Files. The diskette icon is used to indicate files used or created in an example.



Note. A note is information relevant to the current topic that should be drawn to your attention. Notes may cover useful additional information or bring out points requiring additional care in their execution.



Tip. A tip is a useful point or technique that will help to make the software easier to use.



Caution. A caution is used to alert you to something that could cause an inadvertent error to be made, or a potential corruption of data, or perhaps give you results that you would not otherwise expect. Cautions are rare, so take heed if they appear in the example.

Running LUSAS Modeller


- Start LUSAS Modeller from the start programs menu. Typically this is done by selecting:

Start > All Programs > LUSAS 14.x for Windows > LUSAS Modeller

- The on-line help system will be displayed showing the latest changes to the software.
- Close the on-line Help system window.

(LUSAS Academic version only)

- Select your chosen LUSAS product and click the **OK** button.

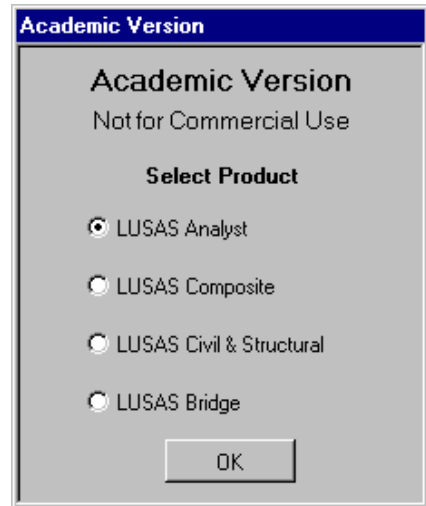


Creating a new model / Opening an existing model

When running LUSAS for the first time the LUSAS Modeller Startup dialog will be displayed.

This dialog allows either a new model to be created, or an existing model to be opened.



Note. When an existing model is loaded a check is made by LUSAS to see if a results file of the same name exists. If so, you have the option to load the results file on top of the opened model.

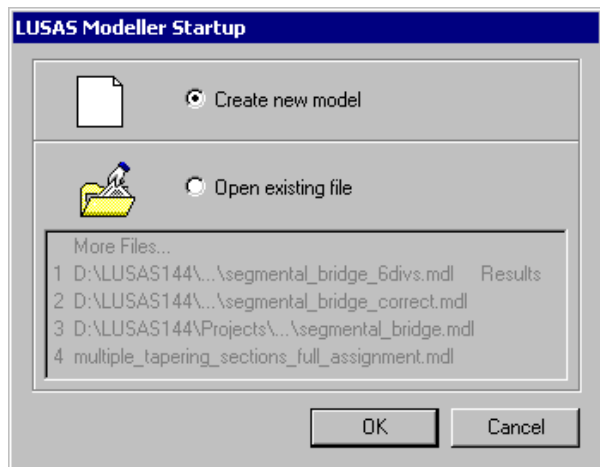


Note. When an existing model is loaded, that in a previous session crashed forcing LUSAS to create a recovery file, you have the option to run the recovery file for this model and recover your model data.

If creating a new model the New Model dialog will be displayed.

- Enter information for the new model and click the OK button.


Product specific menu entries for the selected software product in use e.g. **Bridge** or **Civil** will be added to the LUSAS Modeller menu bar.

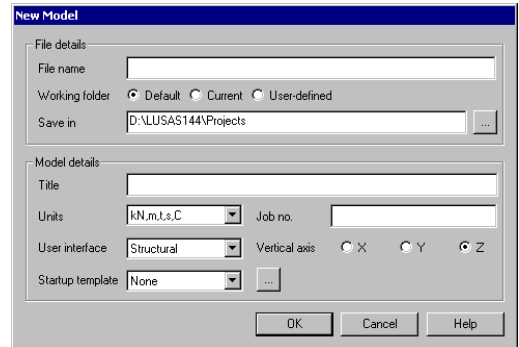

Creating a Model from the Supplied VBS Files


If results processing and not the actual modelling of an example is only of interest, the VBS files provided will allow you to quickly build a model for analysis.

 Proceed as follows to create the model from the relevant VBS file supplied:



Start a new model file.

 - Enter the file name as **example name** and click **OK**
- In general, ensure that the User interface selected is of the same type as the analysis to be carried out.




Select the file **example_name_modelling.vbs** located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.



Note. VBS scripts that create models automatically perform a **File > Save** menu command as the end.

Some additional modelling may need to be carried out prior to an analysis being run. See individual examples for details.



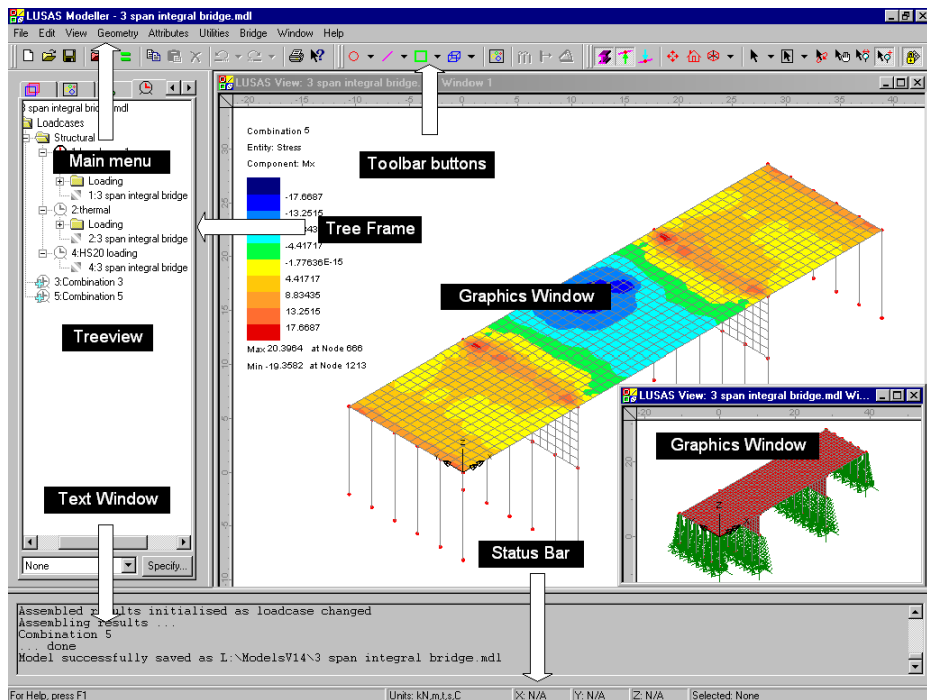





The LUSAS Modeller Interface



Modelling in LUSAS

A LUSAS model is graphically represented by geometry features (points, lines, surfaces, volumes) which are assigned attributes (mesh, geometric, material, support, loading etc.). Geometry is defined using a whole range of tools under the **Geometry** menu, or the buttons on the Toolbars. Attributes are defined from the **Attributes** menu. Once defined attributes are listed in the Treeview.

Treeview

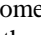
Treeviews are used to organise various aspects of the model in graphical frames. There are a number of Treeviews showing Layers , Groups , Attributes , Loadcases , Utilities , and Reports . Treeviews use drag and drop functionality. For example, an attribute in the  Treeview can be assigned to model geometry by dragging the attribute onto an object (or objects) currently selected in the graphics window, or by copying and pasting an attribute onto another valid Treeview item as for instance, a group name, as held in the groups  Treeview.

Context Menus

Although commands can be accessed from the main menu, pressing the right-hand mouse button with an object selected usually displays a context menu which provides access to relevant operations.

Getting Help

LUSAS contains a comprehensive Help system. The Help consists of the following:

- The **Help** button  on the Main toolbar is used to get context-sensitive help on the LUSAS interface. Click on the **Help** button, then click on any toolbar button or menu entry (even when greyed out).
- Most dialogs include a **Help** button which provides information on that dialog.
- Selecting **Help > Help Topics** from the main menu provides access to all the Help files.



If the Help Contents, the Help Index and the Search facility are not shown when a help page is first displayed pressing the Show button will show these tabs in the HTML Help Window.

Linear Analysis of a 2D Frame

For software product(s):	LUSAS <i>Civil & Structural</i> LT and above, or LUSAS <i>Bridge</i> LT and above
With product option(s):	None.

Description

A simple 2D frame is to be analysed. The geometry of the frame is as shown.

All members are made of mild steel with a Young's modulus of $210\text{E}9$ Pa, a Poisson's Ratio of 0.3 and a mass density of 7860 kg/m^3 .


The structure is subjected to two loadcases; the self-weight of the structure, and a sway load at the top of the left-hand column.

The units of the analysis are N, m, kg, s, C throughout.

Objectives

The required output from the analysis consists of:

- ☐ A deformed shape plot showing displacements caused by the imposed loading.
- ☐ An axial force diagram showing stresses in the members.

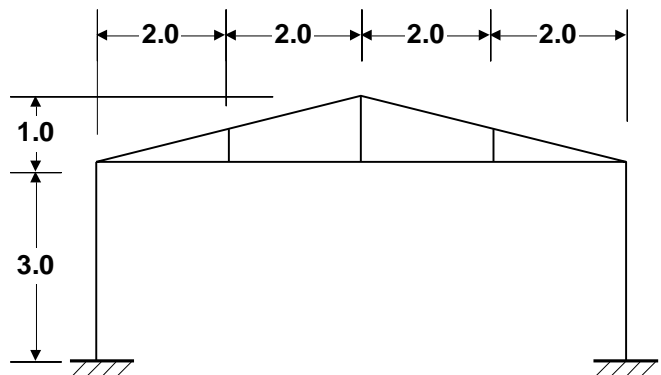

Keywords

2D, Frame, Beam, Standard Sections, Fleshing, Copy, Mirror, Deformed Mesh, Axial Force Diagram, Shear Force Diagram, Bending Moment Diagram, Fibre Results, Report, Printing Results.

Associated Files



- ☐ **frame_2d_modelling.vbs** carries out the modelling of the example.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a New Model

- Enter the file name as **Frame_2D**
- Use the **Default** working folder.
- Enter the title as **Simple 2D Frame**
- Set the units to be **N,m,kg,s,C**
- Ensure the **Structural** user interface is selected.
- Select the startup template **2D Beam** from those available in the drop down list.
- Select the **Vertical Y axis** option.
- Click the **OK** button.



Note. Save the model regularly as the example progresses. This allows a previously saved model to be re-loaded if a mistake is made that cannot be corrected easily.



The Undo button may also be used to correct a mistake. The undo button allows any number of actions since the last save to be undone.


Feature Geometry



Enter coordinates of (0, 0), (0, 3), (4, 3) and (4, 4) to define the main setting-out points for one-half of the portal frame. Use the **Tab** key to move to the next entry field on the dialog. With all the coordinates entered click the **OK** button.



Note. Sets of coordinates must be separated by commas or spaces unless the 'Grid Style' method is chosen. The **Tab** key is used to create new entry fields. The Arrow keys are used to move between entries.

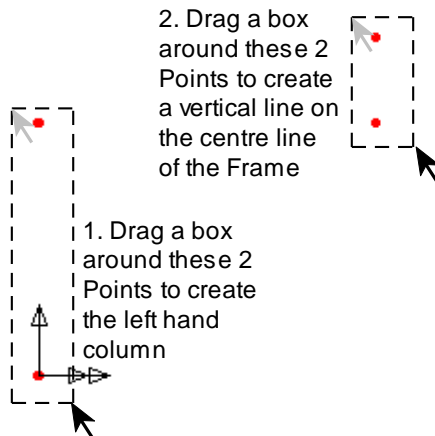

- Select the Points on the left-hand side of the model.



Connect the selected Points with a Line representing the left-hand column of the portal frame.

- Select the pairs of Points on the right hand side of the model.



Connect the selected Points with a Line representing the right-hand vertical member on the frame centreline.

- Create the horizontal member by selecting the appropriate Points and define a Line in a similar manner.
- Select the Points at the top of the left hand column and the apex of the roof. (Hold down the **Shift** key to add the second Point to the initial selection).



Connect the selected Points with a Line representing the sloping member of the frame.

To create the vertical roof member at quarter span the 2 Lines shown are split into equal divisions to create the points required and the new line is then defined.

Geometry
Point >
Coordinates...

Geometry
Line >
Points...

Geometry
Line >
Points...

Geometry
Line >
Points...

- Select the lower line (first) and the upper line (second) of those shown (Hold down the **Shift** key to add the second Line to the initial selection).
- Enter the number of divisions for both Lines as **2**
- Ensure that **Delete original lines after splitting** is set so that the original Lines are deleted and click the **OK** button.
- Drag a box around the 2 Points just created.

Select these 2 Lines to be split

Drag a box around these 2 Points





Create the Line representing the internal member.

This completes the geometry definition for the half-frame.


Model attributes now need to be defined and assigned to the model.




Note. LUSAS Modeller works on a define and assign basis where attributes are first defined, then assigned to features of the model. This can be done either in a step-by-step fashion for each attribute or by defining all attributes first and then assigning all in turn to the model.


- ☐ Attributes, once defined, are displayed in the  Treeview. Unassigned attributes appear 'greyed-out'.
- ☐ Attributes are then assigned to features by dragging an attribute dataset from the  Treeview onto previously selected features.





Tip. Useful commands relating to the manipulation of attributes can be accessed by selecting an attribute in the  Treeview, then clicking the right-hand mouse button to display a shortcut menu.

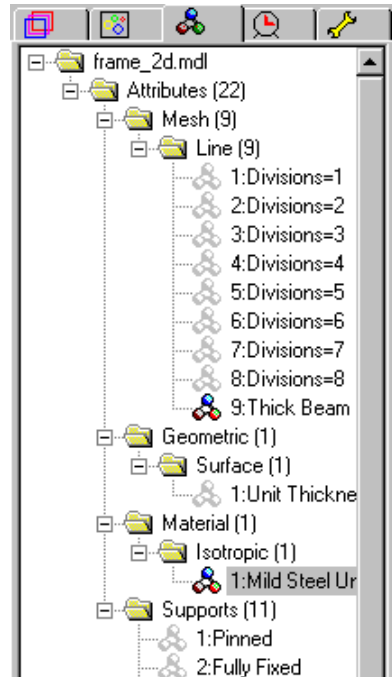

Meshing

 The Line features are to be meshed using two-dimensional beam elements. A 2D thick beam element is automatically provided in the  Treeview but to show the process involved another will be defined:






- Select **Thick beam, 2 dimensional, Linear** elements.
- Set the number of divisions to be **1**
- Enter the attribute name as **Thick Beam** then click **OK**
- Select the whole model. (**Ctrl** and **A** keys together).
- Drag and drop the mesh attribute **Thick Beam** from the  Treeview onto the selected model Lines.




 Note. When an assignment is made confirmation of the assignment is written to the Text Output Window.


Material Properties



- Select material **Mild Steel** from the drop-down list, leave the grade set as Ungraded and click **OK** to add the material attribute to the  Treeview.
- With the whole model selected (**Ctrl** and **A** keys together) drag and drop the material attribute **Iso1 (Mild Steel Ungraded)** from the  Treeview onto the selected features.

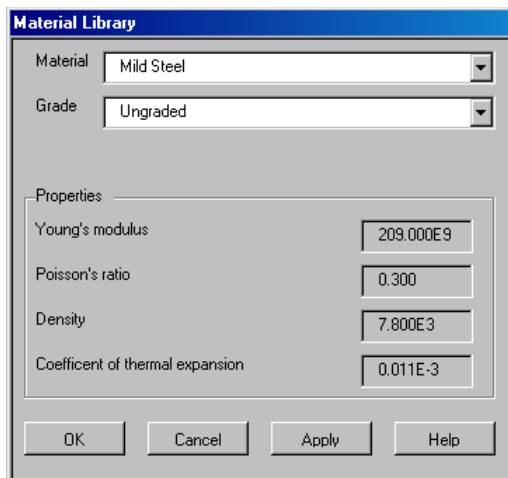

Geometric Properties

 

The standard sections dialog will appear.

- In the Usage section select **2D Thick Beam**
- Select the library of **UK Sections**
- Select section type **Universal Beams (BS4)**
- Select section name **127x76x13kg UB**.
- Enter the Attribute name as **stanchion**.
- Click the **Apply** button to add the Universal Beam attribute to the Treeview.
- Change the section type to **Equal Angles (EN10056)** and select the **70x70x6 EA** section name.
- Enter the Attribute name as **roof member**
- Click the **OK** button to add the Equal Angle attribute to the Treeview.


	Value
Cross sectional area (A)	1.65E-3
Second moment of area about z axis (Izz)	4.73E-6
Effective shear area in y direction (Asy)	0.508E-3
Offset in y direction (Ry)	0.0



Note. The orientation of the section is appended to the section name which is un-editable. Attribute names (used for identification purposes) can be appended to the section name to make selection of similarly sized members easier.

Assigning Geometric Properties

- Drag a box around the Lines representing the roof members.
- Drag and drop the geometry attribute **70x70x6 EA major y roof member** from the Treeview onto the selected Lines.
- Select the Line representing the left-hand vertical member.
- Drag and drop the geometry attribute **127x76x13kg UB major y stanchion** from the Treeview onto the selected Line.

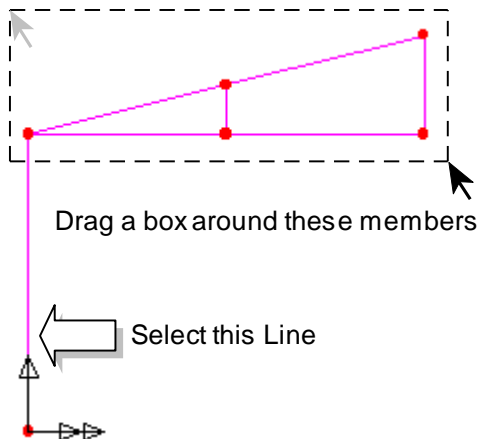

Geometric assignments are visualised by default.

- Click in a blank part of the Graphics Window to deselect the members.



Select the isometric button to see the geometric visualisation on the members.




The Zoom in button can be used to check the orientations.



Select the Home button to return the model to the default view.



Select the fleshing on/off button to turn-off the geometric visualisation.

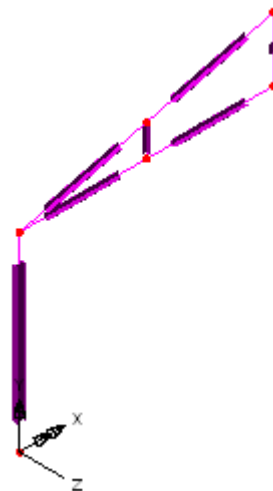


Supports

LUSAS provides the more common types of support by default. These can be seen in the Treeview. The structure will be supported at the end of the stanchion which is in contact with the ground with a fully fixed support condition.

Assigning the Supports

- Select the Point at the bottom of the left-hand vertical member.

- Drag and drop the support attribute **Fully Fixed** from the  Treeview onto the selected feature.
- Ensure the **Assign to points** and **All loadcases** options are selected and click **OK**

Mirroring the Model

One half of the 2D frame has now been generated. This half can now be copied about a mirror plane to create the complete frame.

- Select the whole model (**Ctrl** and **A** keys together).




Select **Mirror**, select **Parallel to Y axis** and enter **4** in X, and **0** in Z in the top cells and **4** in X, and **3** in Z in the lower cells to define the mirror plane.

- Click the **OK** button to create the full model.



Note. Features that are copied retain their attributes. This means that there is no need to define the mesh, material or geometric properties for the newly created Lines as they will already have the attributes from the original half of the model assigned.

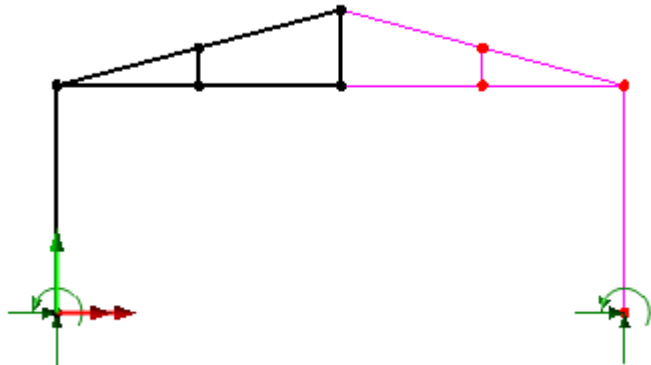


Note. In mirroring the features the Line directions will have been reversed. The orientation of Lines is important as it controls the local beam axes directions which will define the sign convention used to present the results.

- In the  Layers Treeview double-click on **Geometry** to display the geometry layer properties. Select the **Line directions** option and click **OK**


The Lines orientations are shown.

 - Select the 4 Lines to be reversed. (Hold down the **Shift** key to add lines to the initial selection).



The selected Line directions will be reversed.

- Once the Line directions are corrected, de-select the **Line directions** option in the geometry layer properties and click the **OK** button.

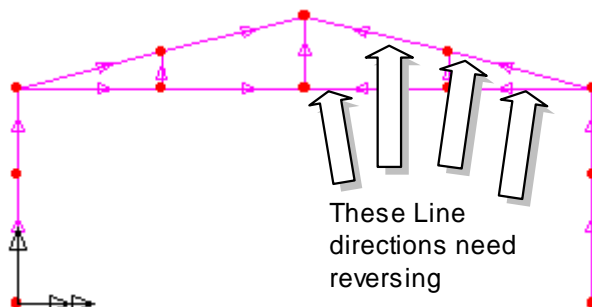


Loading

Two loadcases will be considered; self weight, and a concentrated sway load acting at the top of the left-hand vertical member.

Loadcase 1 - Self Weight

 
Loadcase 1 will represent the self-weight of the structure. This is modelled using a constant body force which is an acceleration loading simulating the force of gravity acting upon the structure.




- Select the **Body Force** option and click **Next**
- Enter a linear acceleration in the **Y** direction of **-9.81**
- Enter the attribute name as **Self Weight** and click **Finish** to add the attribute to the Treeview.
- Select the whole model (**Ctrl** and **A** keys together) and drag and drop the loading attribute **Self Weight** from the Treeview onto the selected features.
- Ensure that the **Assign to lines** option is selected and the loading is applied to **Loadcase 1** with a load factor of **1**. Click the **OK** button and the loading on the frame will be displayed.


Loadcase 2 - Sway Load

 Loadcase 2 is a sway load acting at the top of the left-hand vertical member.



- Ensure the **Concentrated** option is selected and click **Next**
- Enter a concentrated load in the **X** direction of **500**

- Enter the attribute name as **Sway Load** and click **Finish**
- Select the Point at the top of the left-hand column.
- Drag and drop the loading attribute **Sway Load** from the  Treeview onto the selected Point.
- Change the loadcase name to **Loadcase 2** and ensure that the **Assign to points** option is selected.
- Click the **OK** button to assign the loading as the active loadcase with a factor of **1**

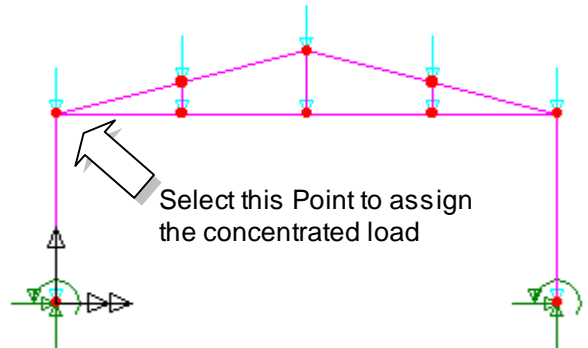

Saving the Model.

File
Save



Save the model file.

Running the Analysis

With the model loaded:


File
LUSAS Datafile...



When using the File > LUSAS Datafile... menu option a LUSAS data file name of **frame_2d** will be automatically entered in the File name field. Click the **Save** button to finish and to start the solver. When using the Solve Now button solving starts immediately.

A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.


If the analysis is successful...

LUSAS loadcase results will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ❑ **frame_2d.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.

- ❑ **frame_2d.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




- ❑ **frame_2d_modelling.vbs** carries out the modelling of the example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **frame_2D**





- To recreate the model, select the file **frame_2d_modelling.vbs** located in the **<LUSAS Installation Folder>\Examples\Modeller** directory.



Rerun the analysis to generate the results.

Viewing the Results

Selecting the Results to be Viewed



If the analysis is run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results for the first results loadcase (Loadcase 1) is set active. This is signified by the active results bitmap  in the  Treeview.

Deformed Mesh Plot

A deformed mesh plot is normally displayed initially to highlight any obvious errors with an analysis before progressing to more detailed results processing. The deformed

shape will usually show up errors in loading or supports and may also indicate incorrect material property assignments (e.g. where the results show excessive displacements).


For clarity, the geometry will be removed from the display to leave only the undeformed mesh displayed.


- In the  Treeview turn off the display of the **Geometry** and **Attributes** layers by right-clicking on each layer name and selecting the **On/Off** menu item.
- With no features selected click the right-hand mouse button in a blank part of the Graphics window and select the **Deformed mesh** option. This will add the deformed mesh layer to the  Treeview. Accept the default properties by selecting **OK**



Note. By default the maximum displacement is scaled to the magnitude defined on the deformed mesh dialog so the deformed shape can be easily visualised. The exaggeration factor used to multiply the displacements is displayed on the deformed mesh properties dialog and can be defined if required.

The deformed mesh plot for loadcase 1 (the default active loadcase) will be displayed on top of the mesh layer.



- Turn off the **Mesh** layer from the  Treeview to leave only the deformed mesh displayed as shown.

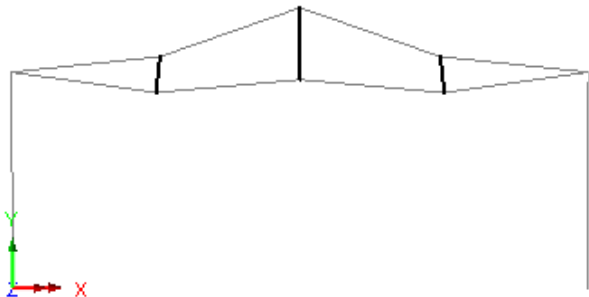

Defining a Combination


Combinations can be created to view the combined effects of multiple loadcases on the structure.

 The combination properties dialog will appear.

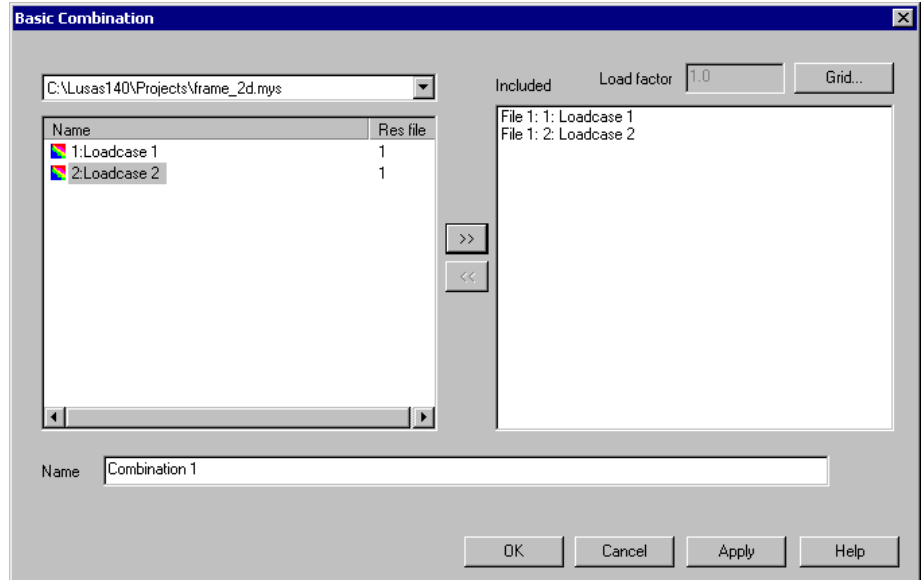

- Ensure **frame_2d.mys** is selected from the drop down list.

Both results loadcases should be included in the combination panel.

- Select **Loadcase 1**, hold the shift key down and select **Loadcase 2**. Click the  button to add the loadcases to the load combination.
- Click the **OK** button to finish.



Note. The load factor may be modified by selecting the included loadcase in the right hand list and updating the factor or by updating the factor in the grid, which is displayed by selecting the Grid button.



Note. To obtain the correct effect from the combined loads in this example, the Combination should only include one occurrence of each loadcase.

Viewing a Combination

- In the  Treeview right-click on **Combination 1** and select the **Set Active** option.


The deformed mesh plot will show the effect of the combined loading on the structure.

Marking Peak Values

- With no features selected click the right-hand mouse button in a blank part of the Graphics window and select the **Values** option to add the values layer to the Treeview.

The values layer properties will be displayed.

- Select **Displacement** results from the Entity drop down list and select the resultant displacement **RSLT** from the Component drop down list.
- From the **Values Display** tab set **100%** of **Maxima** values to be displayed.
- Set the number of significant figures to **3**
- Click the **OK** button to display the deformed mesh plot showing the displacement at each node.

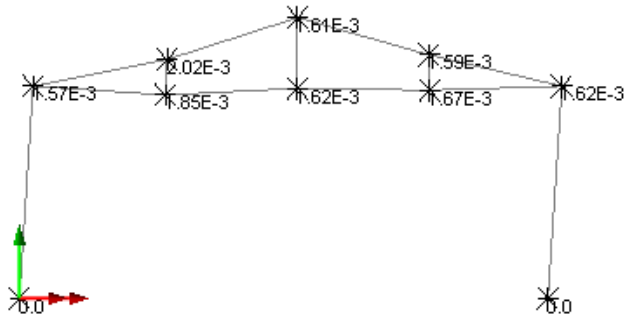

Note. Because this example is written for LUSAS LT versions that only allow one model or results viewing window to be used the Values layer is best turned off prior to adding further layers. In Standard and Plus versions of LUSAS multiple windows each having different layers can be defined.

- Turn off the **Values** layer in the Treeview.


Axial Force Diagram


- With no features selected click the right-hand mouse button in a blank part of the graphics window and select **Diagrams** to add the diagrams layer to the Treeview.

The diagram properties will be displayed.


- Select **Force/Moment – Thick 2D Beam** results of axial force **Fx** in the members
- Select the **Diagram Display** tab and select the **Label values** button.
- Select the **Label only if selected** option.

- Select the **Window summary** option
- Change the number of significant figures to **4**
- Click the **OK** button to finish.

The order of the layers in the  Treeview governs the order that the layers are displayed. To see the deformed mesh on top of the diagram plot the deformed mesh layer needs to be moved down the Treeview to a position after the diagram layer.


- In the  Treeview select the **Deformed Mesh** layer, click the right-hand mouse button and select the **Move Down** option.

- Now add labels to the columns (vertical members). Select the left hand column, hold the **Shift** key and select the right hand column.

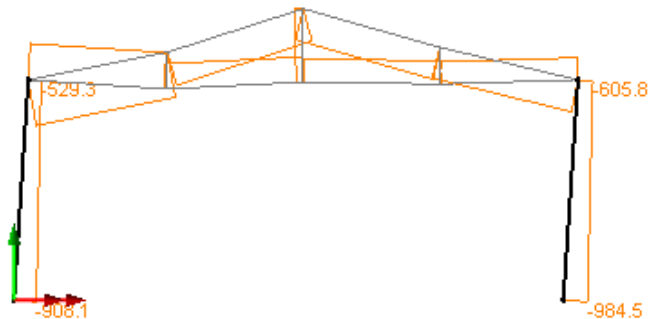


An axial force diagram for each member will be displayed with values of F_x displayed on the selected columns.

Shear Force Diagram


- In the  Treeview double-click on the **Diagrams** layer. The diagram properties will be displayed.


- Select **Force/Moment** – **Thick 2D Beam** results of shear force F_y in the members.

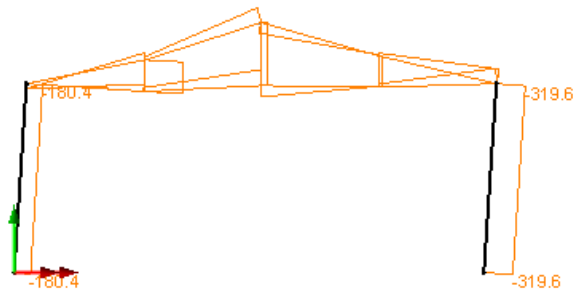

- Click the **OK** button to display a shear force diagram of stresses in each member with labels on the selected vertical members.


Bending Moment Diagram

- In the  Treeview double-click on the **Diagrams** layer. The diagram properties will be displayed.
- Select **Force/Moment – Thick 2D Beam** results of bending moments in the members **Mz**
- Click the **OK** button to display a bending moment diagram for each member with labels on the selected vertical members.

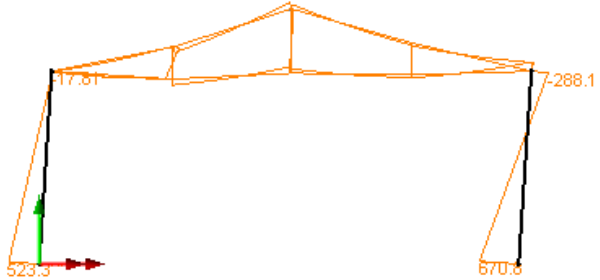


Viewing Results on Fleshed Members

As an alternative to plotting diagram results stresses in beams can be plotted on fleshed members.

- Turn off the **Diagrams** layer in the  Treeview.
- Click in a blank part of the Graphics Window to deselect the members.




Select the isometric button.

- With no features selected click the right-hand mouse button in a blank part of the graphics window and select **Contours** to add the contours layer to the  Treeview.

The contour properties will be displayed.



- Select **Stress – Thick 2D Beam** results of axial and moment results in the members **Sx(Fx Mz)**

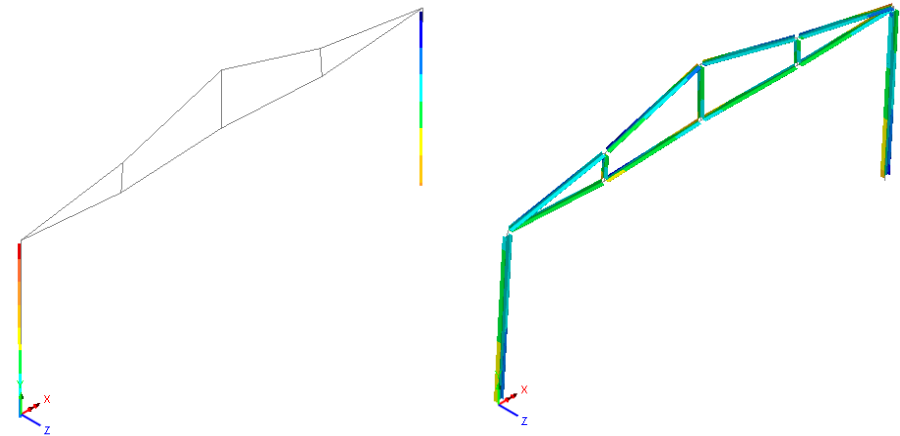Initially contours will be drawn at the current active fibre location on both stanchions as seen on the left-hand image below. Fibre locations will be explained shortly.




Select the fleshing on/off button to visualise the stress results on the fleshed cross-section as seen on the right-hand image above.


Viewing Force/Moment Results at Fibre Locations

As an alternative to plotting force and moment diagrams along nodal lines they can be also plotted at pre-defined fibre locations on members and be superimposed on other results plots. Standard steel sections have various extreme fibre locations pre-defined. Fibre locations can be visualised by double-clicking the Geometric Line attribute name in the  Attributes Treeview and selecting the  Visualise button.



Select the Home button to return the model to the default view.

- In the  Treeview double-click on the **Diagrams** layer name to display the Diagram layer properties dialog.
- Select **Force/Moment – Thick 2D Beam** results of shear force **Fy** in the members.
- Select the **Diagram Display** tab and select the **Label values** button.
- Select the **Label only if selected** option.
- Select the **Window summary** option.
- Select the **Scale** tab and set a local scale of magnitude **12 mm**
- Click the **OK** button to finish.
- Box-select the 3 vertical roof members to display the shear forces.

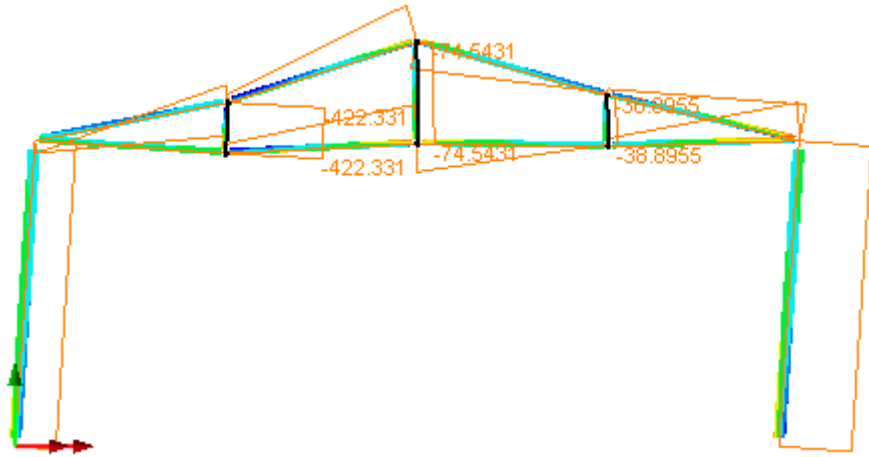

Save the Model

File
Save




Save the model file.




Note. When the model file is saved after viewing results, all load combinations, envelopes, and graph datasets, if defined, are also saved and therefore do not have to be re-created if the model is amended and a re-analysis is done at a later date.


Creating a Report

Selective model and results details can be printed to a variety of output formats by using the LUSAS report facility. Reports can include screen captures and imported images or additional text. A report template is used to specify items to be included in a report. This template is saved in the  Treeview when a model is saved. A model can have any number of report templates.

Utilities
Report...

- On the Report dialog enter a report title of **2D Frame**
- Leave the modelling units and the number of significant figures set to default values.
- Enter a report name of **Report 1** and click **OK**.

A report entry will be created in the  Treeview.


- In the  Treeview right-click on **Report 1** and select **Add Chapter**

- With the **Model properties** tab selected select the **All** checkbox.
- Select the **Loadcase/Basic combination results** tab and click the **Add** button
- On the Results Entity dialog select **Displacement** from the entity pull-down menu and click **OK**
- Select the **Add** button again, select **Force/Moment – Thick 2D Beam** from the pull-down menu and click **OK**
- Select the **User content** tab and select the **Capture** button, and save the current screen image as a **JPG** file of the name **frame_2d.jpg**
- Click **OK** to finish



Note. The default order of the report items in the Treeview (and hence the order of any items on any exported report) can be changed by dragging and dropping the report sections as required. Right-clicking on an item gives access to additional options, such as modifying existing data or adding more chapters.

Viewing and Exporting a Report

- In the  Treeview right-click on **Report 1** and select **View Report**

After a short pause whilst the report is created, the first page of the report will be displayed. The contents of the report may be browsed using the ‘page forward’ and ‘page backward’ buttons at the top of the dialog.



Select the **Export Report** button.

- On the Export dialog and from the **Format:** drop-down menu select **Adobe Acrobat (PDF)**
- From the **Destination:** drop-down menu select **Application** to open the file with Adobe Acrobat and click **OK**
- On the Export Options dialog select a page range of **All** and click **OK**




This completes the example.

Importing DXF Data

For software product(s):	All (except LT versions)
With product option(s):	None.
Note: This example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

 This example shows the steps involved in importing DXF drawing data for use in LUSAS.

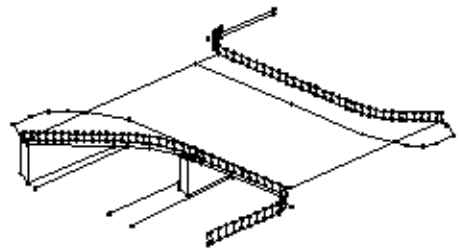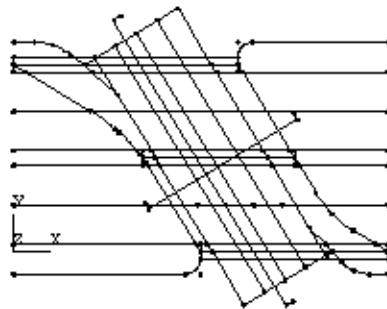

Features imported
from DXF file

The initial geometry shown is equivalent to that imported from a typical CAD general arrangement drawing.

Modelling Objectives

The operations in the creation of the model are as follows:

- ☐ Import initial Point and Line feature information from CAD drawing.
- ☐ Rationalise drawing to delete unwanted information.

- ☐ Re-scale imported features to establish analysis units of length (m).

Associated Files



- ☐ **slab.dxf** contains the drawing information available in DXF format.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **dxl_slab**
- Use the default working folder.
- Enter the title as **Imported DXF file of slab**
- Set the units as **kN,m,t,s,C**
- Ensure the **Structural** user interface is being used.
- Set the Startup template as **None**
- Ensure a vertical **Z** axis is set
- Click the **OK** button.



Note. It is useful to save the model regularly as the example progresses. This allows a previously saved model to be re-loaded if a mistake is made that cannot be corrected easily by a new user.

Importing DXF Model Data

With DXF data there may be situations where the DXF drawing units need to be converted from scaled ‘paper’ dimensions into full size model dimensions as with this

example where modelling units of metres are required. This conversion of units can be done in two ways:

1. By setting a pre-translation scale before importing the data
2. By transforming the data using a scale factor after importing the data

In both cases unless the paper dimensions are already known some measurement of data will be involved in LUSAS prior to either re-importing or scaling the data. By using the Advanced import options entities can be selected for inclusion/exclusion from import and LUSAS modelling-related features can be automatically tidied or merged together. This example covers the use of scaling the data after import. Notes describing the use of a pre-translation scale are at the end of the example.


Importing the DXF Data for Scaling




Select the DXF file **slab.dxf** from the \<Lusas Installation Folder>\Examples\Modeller directory and click the **Import** button.

Feature Geometry

The DXF features are imported in scaled units defined by the drawing scale. These features will need to be scaled to suit the units of the analysis. Only the features defining the plan view are to be used in creating the analysis model. All other features can be deleted.

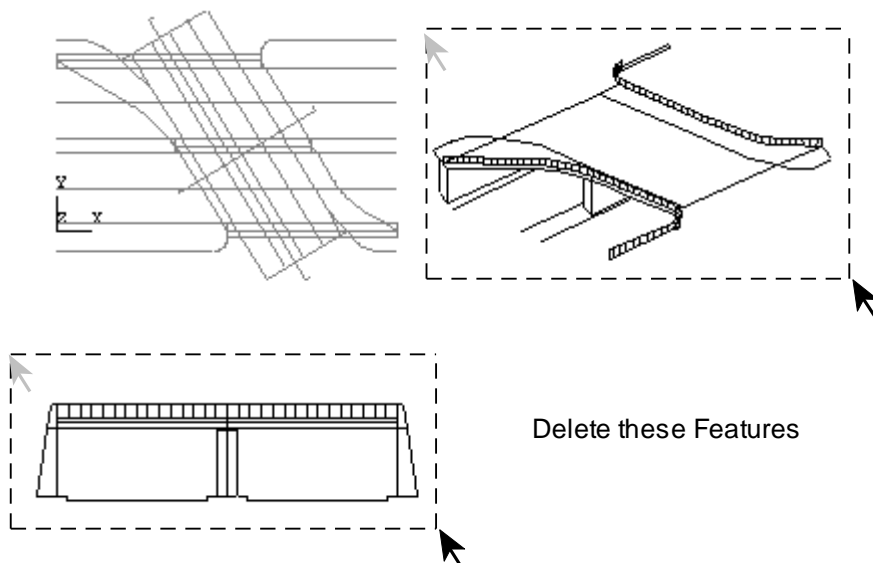

 - Drag a box around the Point and Line features on the other views of the bridge. Use the **Shift** key to add additional features to the initial selection.



Delete the selected features, confirming that the Lines and Points are to be deleted.

The remaining features will form the basis of the slab definition, but some further manipulation is required before a finite element model can be created.

Converting Units

The imported DXF drawing units are millimetres plotted at 1:100 scale, so these will need to be scaled by 100 to get the actual full-size dimensions of the slab in millimetres. These dimensions in millimetres will then need to be scaled by 0.001 to convert them into metres. To save scaling the data twice, one scale factor of $(100 \times 0.001) = 0.1$ can be used to convert the feature data into metres. Before scaling the model data it is worth checking the dimensions of the slab.

To check the existing model dimensions, 2 sample Points on the centre line of the mid-span support can be selected in turn and their coordinates obtained. If necessary zoom in on the model to make Point selection easier.





Use the Zoom in button to enlarge the view to include both ends of the centreline.



Return to normal cursor selection mode.

- Select the Point on the left-hand edge of the slab deck as shown in the diagram
- With the **Shift** key held down, select the Point shown on the right-hand edge of the deck.

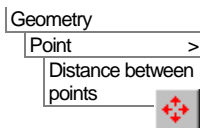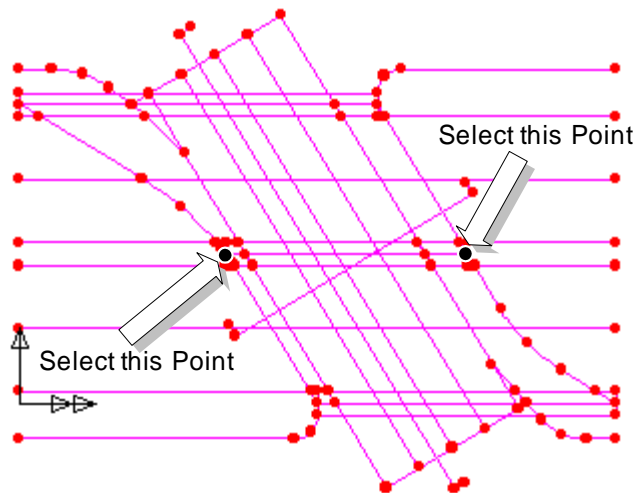

A value between the Points selected of 202.075 will be displayed in the message window.

Resize the model to fit the graphics window.

Scaling the model units

- Drag a box around the slab to select all the features. (Or press the **Ctrl** and **A** keys together).

Geometry
Point >
Move...



Select the **Scale** option and enter a **Scale** factor of **0.1** in the **X**, **Y** and **Z** fields. Leave the origin set as 0,0,0 and click **OK**

The slab dimensions will be scaled accordingly.

To check the new model dimensions, The same sample Points on the centre line of the mid-span support are to be selected and their new coordinates obtained.




Use the Zoom in button to enlarge the view to include both ends of the centreline as before.



Return to normal cursor selection mode.

- Select the Point on the left-hand edge of the slab deck as shown in the diagram

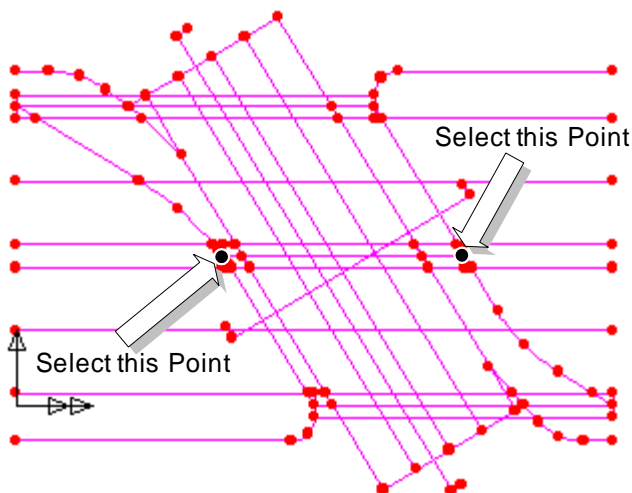

- With the **Shift** key held down, select the Point shown on the right-hand edge of the deck.

Geometry
Point >
Distance between points

A value between the Points selected of 20.2075 will be displayed in the message window.



Resize the model to fit the graphics window.

Save the model

File
Save



Save the model.

This completes the conversion and preparation of the DXF data model for use in LUSAS. From the imported data, Surfaces would be defined, a mesh assigned to the model, and geometric properties, supports and loading added.

This completes the example.

Notes on importing the DXF data using a pre-translation scale

As an alternative to scaling data a pre-translation scale could be used. After importing the DXF data and checking the model dimensions in LUSAS as previously described (if required) the DXF file can be re-imported using a pre-translation scale to convert it into the correct dimensions for use.

Select the DXF file **slab.dxf** from the **\<Lusas Installation Folder>\Examples\Modeller** directory and click the **Import** button.

- Click the **Advanced** button
- On the Import Parameters dialog enter a pre-translation scale of **0.1**
- Click the **OK** button
- Select **Import**

File
Import...

Simple Building Slab Design

For software product(s):	LUSAS <i>Civil & Structural</i> or LUSAS <i>Bridge</i> .
With product option(s):	None.
Note: The example as written exceeds the limits of the LUSAS Teaching and Training Version. However, by not increasing the default mesh density to 8 divisions per line (where shown) the analysis can be run using a default of 4 divisions per line.	

Description

Four panels of a concrete slab supported by a wall, columns and a lift shaft are to be analysed and reinforcement areas computed for bending moment only. Shear and displacement checks need to be carried out separately. The geometry of the slab is as shown.

The slab is subjected to self-weight and a live load.


The units of the analysis are N, m, kg, s, C throughout.

Objective

- ☐ To produce areas of reinforcement under working load

Keywords

Slab Design, Holes, Reinforcement, Wood Armer, RC Design, Steel Area, Load Combinations, Smart Combinations

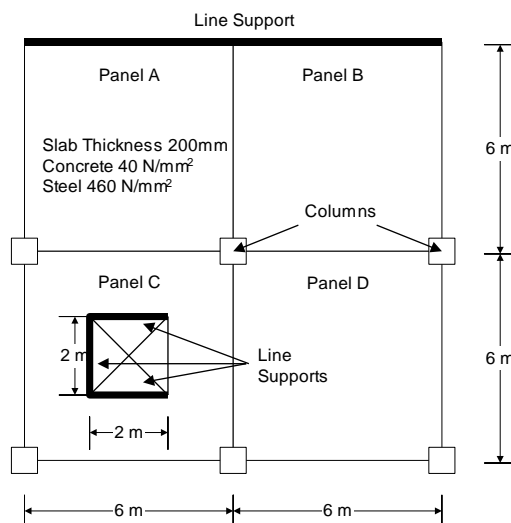

Associated Files



- ❑ **slab_design_modelling.vbs** carries out the modelling of the example.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **slab_design**
- Use the **Default** working folder.
- Enter the title as **Slab Design Example**
- Select units of **N,m,kg,s,C**
- Ensure the **Structural** user interface is selected.
- Select the Startup template **Standard** from those available in the drop-down list.
- Ensure the **Z** vertical axis is selected and click the **OK** button.




Note. Save the model regularly as the example progresses. Use the Undo button to correct any mistakes made since the last save was done.

Feature Geometry

Geometry
Surface >
Coordinates...



Enter coordinates of (0, 0), (6, 0), (6, 6) and (0, 6) to define the lower left-hand area of slab. Use the Tab key to move to the next entry field. With all the coordinates entered click the **OK** button to create a surface.

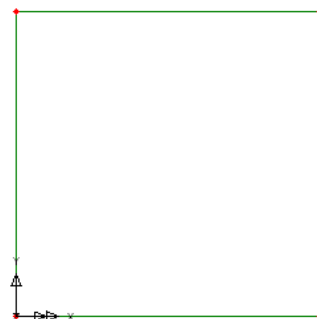

- Select the newly created Surface.

Geometry
Surface >
Copy...




Copy the selected surface with an X translation of 6. Click the **OK** button to create the new Surface.

- Use **Ctrl + A** keys together to select the whole model.

Geometry
Surface >
Copy...



Copy the selected surfaces with a Y translation of 6. Click the **OK** button to define two new Surfaces.

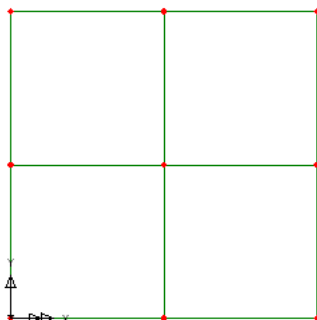

Defining a Hole in a Slab

Next, a hole representing the lift shaft needs to be defined. This is done by first creating a surface representing the extent of the lift shaft and then selecting both the surrounding and inner surface to define the hole.

Geometry
Surface >
Coordinates...




Enter coordinates of (2, 2), (4, 2), (4, 4) and (2, 4) and click **OK** to define the extent of the hole.

- Select the lower left Surface and then the Surface representing the lift shaft. (Use the **Shift** key to pick the second Surface to add to the selection)
- Ensure **Delete geometry defining holes** is selected. A new singular Surface will be created.

Geometry
Surface >
Holes >
Create

This new surface containing the hole can be seen / checked by clicking in a blank part of the Graphics Window and then re-selecting the lower-left hand surface.

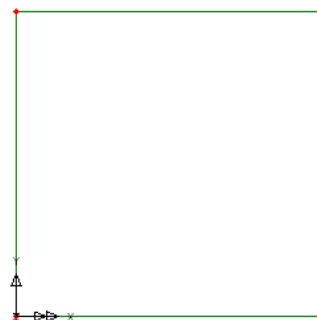




Note. It is normally good practice to ensure that the orientation of surface axes (and hence mesh element orientation) is consistent throughout the model. However, plate elements, as used in this example, produce results based upon global axes and as such ignore inconsistent element axes.

Meshing

By default lines normally have 4 mesh divisions per line. If you are using the Teaching and Training version this default value should be left unaltered to create a surface element mesh within the limit available. This will give a coarser mesh and correspondingly less accurate results will be obtained. Otherwise, for this example, and to give more accuracy, 8 divisions per line will be used.

- Select the **Meshing** tab and set the default number of divisions to **8** and click the **OK** button.
 - Select the element type as **Thick Plate**, the element shape as **Triangle** and the interpolation order as **Quadratic**. Select an **Irregular mesh** and ensure the **Element size** is deselected. This forces the number of default line mesh divisions to be used when meshing the surfaces. Enter the dataset name as **Thick Plate** and click the **OK** button.
 - With the whole model selected drag and drop the mesh dataset **Thick Plate** from the Treeview onto the selected Surfaces, defining the mesh spacing from the **assigned attribute**.
- In the vicinity of the lift core less elements are required.
- Select the 4 lines defining the lift core and drag and drop the mesh dataset **Divisions=4** from the Treeview onto the selected Lines.

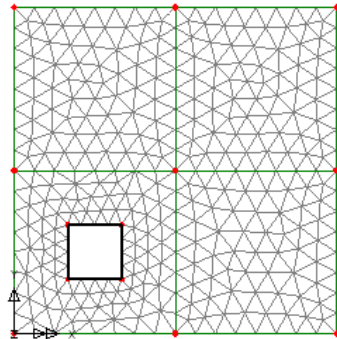


In this manner the mesh density on slabs can be varied according to the levels of detail required.

Geometric Properties

- Enter a thickness of **0.2**. Enter a dataset name of **Thickness 200mm** and click the **OK** button.
- With the whole model selected drag and drop the mesh dataset **Thickness 200mm** from the Treeview onto the selected Surfaces.

 
Geometric properties are visualised by default.



- In the  Treeview re-order the layers so that the **Attributes** layer is at the top, the **Mesh** layer is in the middle, and the **Geometry** layer is at the bottom.



Select the fleshing on/off button to turn-off the geometric visualisation.


Material Properties




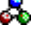

- Select material **Concrete BS8110** from the from drop-down list, select grade **Long Term C40** and click **OK** to add the material dataset to the  Treeview.
- Select the whole model and drag and drop the geometry attribute **Isol (Concrete BS8110 Long Term C40)** from the  Treeview onto the selected Surfaces.


Supports

For clarity the mesh layer is not shown on these diagrams.

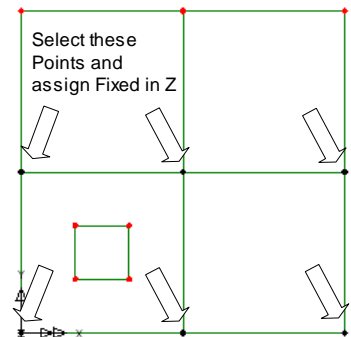- Select the 6 points where the columns are located.
- Assign the supports by dragging and dropping the support dataset **Fixed in Z** from the  Treeview and assign to **All loadcases** by clicking the **OK** button.



- Select the 2 Lines representing the line support and drag and drop the support dataset **Fixed in Z** from the  Treeview and assign to **All loadcases** by clicking the **OK** button.
- Select only the top, bottom, and left-hand lines defining the lift shaft and drag and drop the support dataset **Fixed in Z** from the  Treeview and assign to **All loadcases** by clicking the **OK** button.

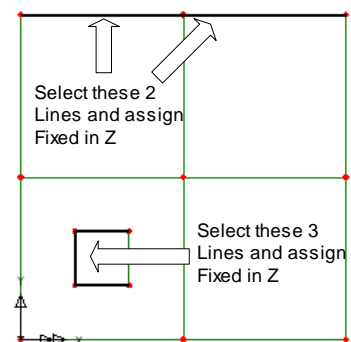




Select the isometric view button to check that all supports have been assigned correctly.

Z: N/A

Click this part of the status bar to view the model from the Z direction again.

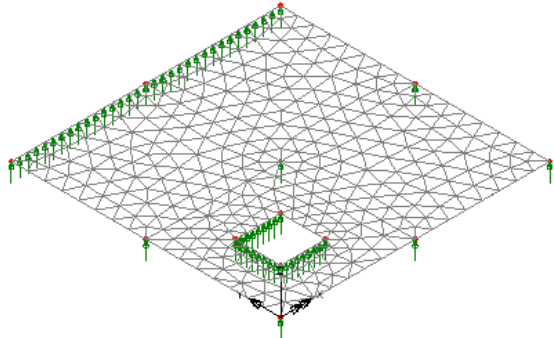


Loading

- Select the **Body Force** tab.
- Enter an acceleration of **-9.81** in the Z direction.
- Enter a dataset name of **Self Weight** and click the **Finish** button.
- Select the **Global Distributed** radio button.
- Select the **per unit Area** option.
- Enter **-5000** in the Z Direction.
- Enter a dataset name as **Live Load 5kN/m2** and click the **Finish** button.





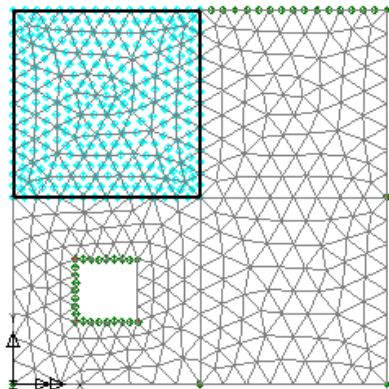


Now the dead and live loading needs to be assigned to each slab panel of the building. This is done using separate load cases so that the load cases can be combined to determine the most adverse effects.


- Firstly, right click on Loadcase 1 in the Treeview, select the **Rename** option and change the first loadcase name to **Panel A DL**
- Select the surface representing the top left-hand panel (Panel A).
- Assign the dead loading by dragging and dropping the dataset **Self Weight** from the Treeview onto the selection. The loading assignment dialog will be displayed. Select the loadcase **Panel A DL** Leave the load factor as 1 and click the **OK** button.







Note. The loading assigned to each panel will be visualised as each loadcase is assigned to the model

- Drag and drop the dataset **Live Load 5kN/m²** from the  Treeview onto the selection and change the loadcase name to **Panel A LL** Leave the load factor as 1 and click the **OK** button.
- Select the top right-hand panel (Panel B).
- Assign the dead loading by dragging and dropping the dataset **Self Weight** from the  Treeview onto the selection. Change the loadcase name to **Panel B DL** Leave the load factor as 1 and click the **OK** button.
- Drag and drop the dataset **Live Load 5kN/m²** from the  Treeview onto the selection and change the loadcase name to **Panel B LL** Leave the load factor as 1 and click the **OK** button.
- Select the bottom-left panel (Panel C).
- Assign the dead loading by dragging and dropping the dataset **Self Weight** from the  Treeview onto the selection. Change the loadcase name to **Panel C DL** Leave the load factor as 1 and click the **OK** button.
- Drag and drop the dataset **Live Load 5kN/m²** from the  Treeview onto the selection. Change the loadcase name to **Panel C LL** Leave the load factor as 1 and click the **OK** button.
- Select the bottom right-hand panel (Panel D).
- Assign the dead loading by dragging and dropping the dataset **Self Weight** from the  Treeview onto the selection. Change the loadcase name to **Panel D DL** Leave the load factor as 1 and click the **OK** button.
- Drag and drop the dataset **Live Load 5kN/m²** from the  Treeview onto the selection. Change the loadcase name to **Panel D LL** Leave the load factor as 1 and click the **OK** button.

The  Treeview should now contain 8 loadcases consisting of a dead and live loadcase for each panel.

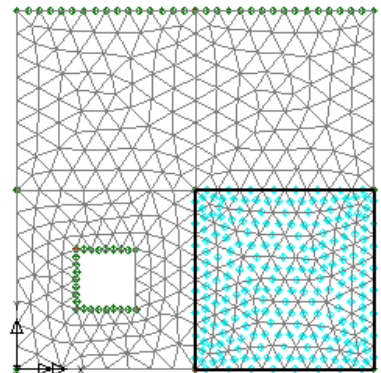


Saving the model

 

Save the model file.

Running the Analysis

 With the model loaded:




A LUSAS data file name of **slab_design** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **slab_design.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **slab_design.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




- ☐ **slab_design_modelling.vbs** carries out the modelling of the example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **slab_design**




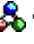
- To recreate the model, select the file **slab_design_modelling.vbs** located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.





Rerun the analysis to generate the results.

Viewing the Results

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for Loadcase 1 are set to be active by default.

- Turn off the **Attributes** layer in the  Treeview.
- With no features selected, click the right-hand mouse button in a blank part of the active window and select the **Contours** option to add the contours layer to the  Treeview.
- Select entity **Force/Moment - Thick Plate** and results component **MX(B)** to see the results for loadcase 1 - Panel A Dead Load.

Loadcase: 1:Panel A DL
Results file: slab_design.mys
Entity: Force/Moment - Thick Plate
Component: MX(B)

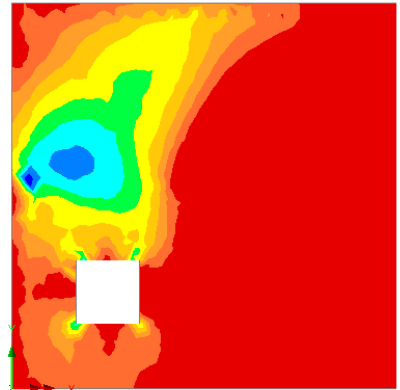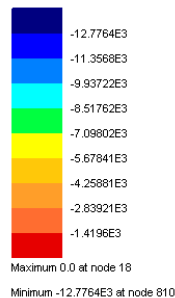


Defining a Load Combination


The loadcases will be combined to provide the most adverse loading effects. This is achieved using the smart load combination facility within LUSAS Modeller. For Ultimate Limit State (ULS) design the code BS8110 requires dead loading to be factored by 1.4 if it causes an adverse effect and 1.0 if it causes a relieving effect. Live loading that causes an adverse effect is factored by 1.6 and omitted if it causes a relieving effect.

Simple Building Slab Design

For the dead load this is equivalent to a permanent load factor of 1.0 and a variable load factor of 0.4 since 1.0 will always be applied and 0.4 will only be applied if it creates an adverse effect.

For the live load this is equivalent to a permanent load factor of 0.0 and a variable load factor of 1.6 since the loading will only be applied if it creates an adverse effect.

Creates a smart combination in the  Treeview.

- Include all loadcases in the smart combination. To do this select the first load case in the loadcase selector at the bottom-left of the then hold the **Shift** key down and scroll down the list and select the last loadcase.
- Click the  button to add these loadcases to the included list.
- Select the **Grid** button and set the permanent and variable factors as shown in bold in the table that follows:

Name	Loadcase ID	Results File ID	Permanent Factor	Variable Factor
Panel A DL	1	1	1	0.4
Panel A LL	2	1	0	1.6
Panel B DL	3	1	1	0.4
Panel B LL	4	1	0	1.6
Panel C DL	5	1	1	0.4
Panel C LL	6	1	0	1.6
Panel D DL	7	1	1	0.4
Panel D LL	8	1	0	1.6

- Click the **OK** button to return to the combination properties
- Change the smart combination name to **ULS**
- Click the **OK** button to complete the definition of the smart combination



The maximum combination will produce the most adverse hogging moments whilst the minimum combination will produce the most adverse sagging moments.



Note. When the properties of the max combination are modified the corresponding min combination is updated automatically.


- Select **ULS (Min)** from the Treeview with the right-hand mouse button and pick the **Set Active** option.

- Select entity **Force/Moment – Thick Plate** and results component **MX(B)** to combine, applying the variable factors based on the bottom Wood Armer moments in the X direction and click the **OK** button.

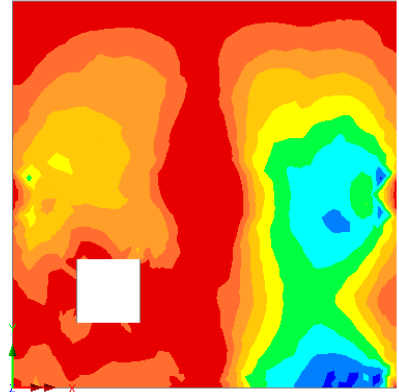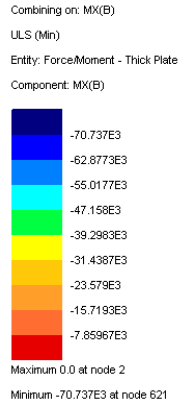


Using the RC Slab/Wall Design facility

 The RC Slab/Wall design facility enables K factor, bar size or steel reinforcement areas with the option for crack checking to be computed and contoured from Wood Armer moments for plate and shell elements. The effective depth is computed from the top and bottom reinforcement bar sizes and covers, which are then used to compute the chosen results quantities.



- Ensure that the **United Kingdom – BS8110** is selected from the dropdown list of design codes
- Ensure that the options for the **design of reinforcement** and **crack checking** are selected.
- Click **Next** to proceed to the Slab Properties.

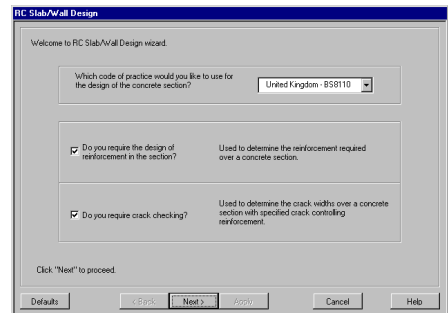

Slab Properties

Reinforcement Properties

Top Reinforcement

Bar Diameter in	Diameter	Spacing (mm)	
x	Layer 1	12 mm	150
y	Layer 2	12 mm	150

Bottom Reinforcement

Bar Diameter in	Diameter	Spacing (mm)	
x	Layer 1	12 mm	150
y	Layer 2	12 mm	150

Top Cover (mm) 20 Skew Angle (deg) 90

Bottom Cover (mm) 20 Steel Strength (N/mm²) 460

Calculation Factors

Gamma Factor 0.95

Kmax 0.156

Concrete Slab Properties

Slab Depth (mm) 200

Concrete Cube Strength (N/mm²) 40

Reinforcement Layout

The diagram shows a rectangular slab with reinforcement bars arranged in four layers. The top two layers are labeled 'Top Layer 1' and 'Top Layer 2', and the bottom two layers are labeled 'Bottom Layer 2' and 'Bottom Layer 1'. The bars are arranged in a grid pattern. The xDirection and yDirection are indicated by arrows pointing along the horizontal and vertical axes respectively.

Defaults < Back Next > Cancel Help

- Enter the slab properties as shown
- Click **Next** to proceed to the Reinforcement Contour Properties dialog.

Reinforcement Contour Properties

Select the contour and component required for the reinforcement design.

Contour
Wood Armer Component MX(B)

☒ **Steel Area** Used to determine the area of steel required over the concrete section.

☐ **Bar Size** Used to determine the required bar diameter.

☐ **K Factor** Used to determine if compression reinforcement is required in a concrete section.

Calculation Properties

For this calculation the following properties will be used :-
These properties can be altered by editing the previous form.

Kmax	= 0.156	Slab Depth	= 200.0 mm
Gamma Factor	= 0.95	Concrete strength	= 40.0 N/mm ²
Bottom layer - x direction	= Layer 1	Bottom Cover	= 20.0 mm
Steel Strength	= 460.0 N/mm ²	Skew Angle	= 90.0 deg
Assumed bar size for effective depth	= 12 mm		

Click "Apply" to plot contours of reinforcement calculations with the option to return to the wizard, to proceed click "Next".

Defaults
< Back
Next>
Apply
Cancel
Help

- Select the option to contour **Steel Area**
- Select the Wood Armer Component as **MX(B)**
- Click the **Apply** button.


This will close the RC Slab/Wall Design dialog and plot contours of bottom steel area in the X direction based on the active Loadcase (for a combination or an envelope)

By default the view is changed to a Page Layout view that includes a Window border. If this view is not required select View > Working mode to change the view, followed by Utilities > Annotation > Window Border to remove the border from the display.

Combining on: MX(B)

ULS (Min)

Contours of Steel Area (mm²/m width) for MX(B) Direction, Skew Angle=90.0

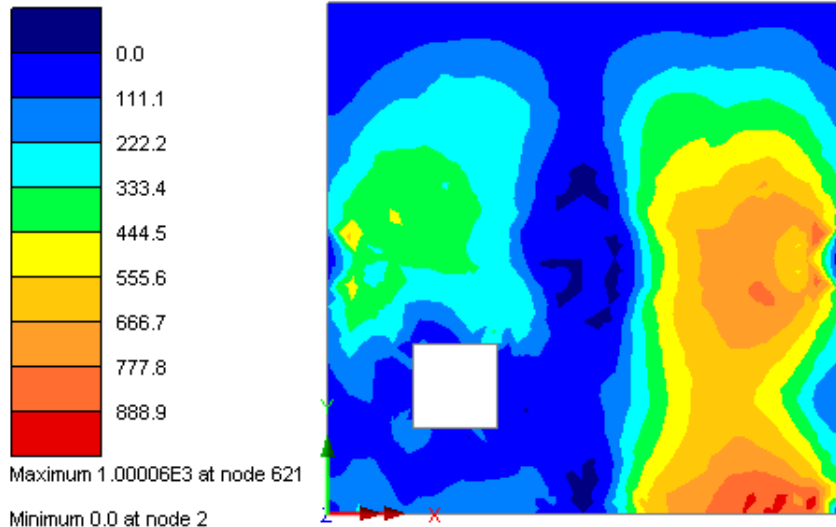

"RC Slab Design Wizard: Calculation based on Steel Area (mm²/m width) for MX(B) Direction, Skew Angle=90.0 "


"Slab Depth=200.0mm, Concrete Cube Strength=40.0N/mm², Steel Characteristic Strength=460.0N/mm²"

"Top : Cover=20.0mm, Maximum Bar Diameter x=12 mm, Maximum Bar Diameter y=12 mm"

"Bottom : Cover=20.0mm, Maximum Bar Diameter x=12 mm, Maximum Bar Diameter y=12 mm"

An RC Slab/Wall Design return button will appear that can be moved or docked.

To plot contours in the Y direction:

- Select **ULS (Min)** from the  Treeview with the right-hand mouse button and pick the **Set Active** option.
- Select **Force/Moment – Thick Plate** and **MY(B)** from the drop-down lists to combine applying the variable factors based on the moments about the Y axis and click the **OK** button.
- If requested to, click **OK** and acknowledge that the component specified from the Slab / Wall Design Wizard is not consistent with the active loadcase component.



Caution. The revised (and current) contour plot shows bending moment contours based upon the MY(B) ULS (Min) combination but the actual contours displayed are currently MY(B) - the selection last made by the RC Design wizard. To see the correct contours for bottom steel area in the Y direction the Wood Armer moment MY(B) needs to be selected on the RC Design dialog.




Click the **RC Slab/Wall Design** button to return to the Reinforcement Contour Properties dialog.

- Select the component as **MY(B)**
- Ensure that the option to contour **Steel Area** is selected.
- Click the **Apply** button to display contours of bottom steel area in the Y direction.

Combining on: MY(B)

ULS (Min)

Contours of Steel Area (mm²/m width) for MY(B) Direction, Skew Angle=90.0

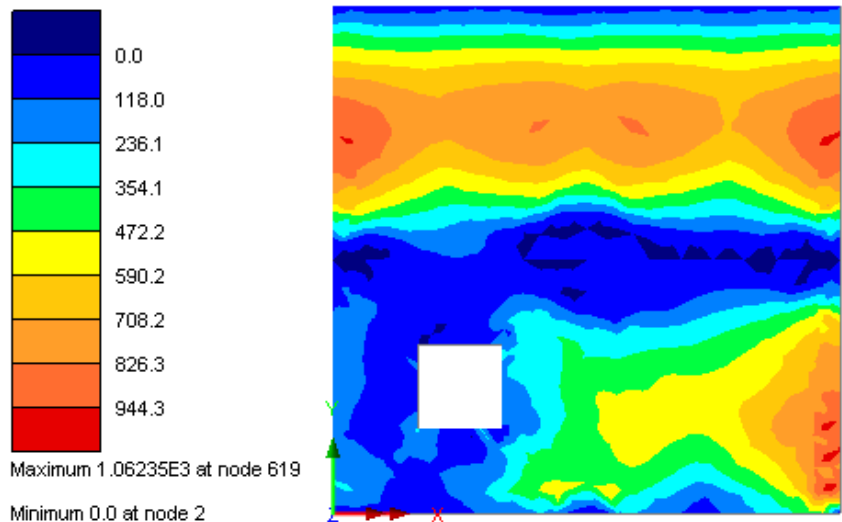

"RC Slab Design Wizard: Calculation based on Steel Area (mm²/m width) for MY(B) Direction, Skew Angle=90.0 "


"Slab Depth=200.0mm, Concrete Cube Strength=40.0N/mm², Steel Characteristic Strength=460.0N/mm²"

"Top : Cover=20.0mm, Maximum Bar Diameter x=12 mm, Maximum Bar Diameter y=12 mm"

"Bottom : Cover=20.0mm, Maximum Bar Diameter x=12 mm, Maximum Bar Diameter y=12 mm"

- The previous processes can also be repeated to plot contours of top steel reinforcement using the **ULS (Max)** combination for most adverse hogging moments **MX(T)** and **MY(T)**

Concrete crack checking

- Display contours of the bottom steel area in the X direction by selecting **ULS (Min)** from the  Treeview and with the right-hand mouse button and pick the **Set Active** option.

Simple Building Slab Design

- Select **Force/Moment – Thick Plate** and **MX(B)** from the drop-down lists to combine applying the variable factors based on the moments about the X axis and click the **OK** button.
- If requested to, click **OK** and acknowledge that temporarily the active loadcase component and the results component show different values. To correct this:



Click the **RC Slab/Wall Design** button to return to the Reinforcement Contour Properties dialog.

- Select the component as **MX(B)**

Select the **Next** button from the Reinforcement Contour Properties dialog defined.

- Enter the Crack Checking Properties as shown on the dialog.


A screenshot of the "Crack Checking Properties" dialog box. The dialog has a blue title bar and a gray background. It is divided into several sections. On the left, under "Modified Young's Modulus", there are three input fields: "Short term modulus - Concrete (kN/mm2)" with value 31, "Long term modulus - Concrete (kN/mm2)" with value 15.5, and "Modulus - Steel (kN/mm2)" with value 200.0. Below these are two radio buttons: "Calculate modified modulus using loadcases" (selected) and "Proportion modulus on loading". Under the first radio button, there are two dropdown menus for "Short term result loadcase/combination" and "Long term result loadcase/combination", both showing "FD (S) ULS". Under the second radio button, there are two input fields for "Proportion of short term loading (%)" with value 51.5 and "Proportion of long term loading (%)" with value 48.5. On the right, under "Calculation Properties", there is a dropdown for "Wood Armer Component" showing "MX(B)", a dropdown for "Bar Diameter controlling cracking (mm)" showing "12 mm", an input field for "Bar Spacing (mm)" with value 150, and an input field for "Distance from compression face to point of crack calculation, a' (mm)" with value 180. Below these is a checkbox for "Allowable crack width contour" which is unchecked, and an input field for "Allowable crack width (mm)" with value 0.25. At the bottom right is a diagram showing a rectangular cross-section of a slab. The top edge is labeled "Compression Face" in red. The bottom edge is labeled "Cracking level" in red. There are yellow circles representing reinforcement bars along both the top and bottom edges. A vertical dimension line on the right side of the slab is labeled "a'". At the bottom of the dialog are several buttons: "Defaults", "< Back", "Finish", "Apply", "Cancel", and "Help".

- Click the **Finish** button to plot contours of crack widths based on MX(B) with a reinforcement bar size of 12mm and spacing 150mm.

Combining on: MX(B)

ULS (Min)

Contours of Crack Widths (mm) for MX(B) Direction, Skew Angle=90.0, Bar Spacing=150mm

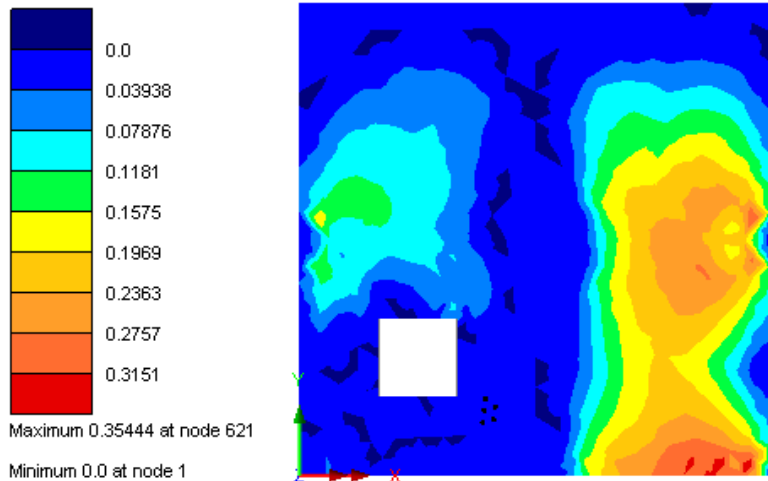

"RC Slab Design Wizard: Calculation based on Crack Widths (mm) for MX(B) Direction, Skew Angle=90.0, Bar Spacing=150mm"

"Slab Depth=200.0mm, Concrete Cube Strength=40.0N/mm², Steel Characteristic Strength=460.0N/mm²"

"Top : Cover=20.0mm, Maximum Bar Diameter x=12 mm, Maximum Bar Diameter y=12 mm"

"Bottom : Cover=20.0mm, Maximum Bar Diameter x=12 mm, Maximum Bar Diameter y=12 mm"

"Concrete : Short Term Modulus =31.0kN/mm², Long Term Modulus =15.5kN/mm², Steel Modulus=200.0kN/mm²"

"Crack Properties : Distance from Compression Face to Crack =180.0mm, Cracking Bar Size=12mm"



Note. The crack checking calculation is independent of the previous reinforcement design calculation. However, the effective depth is calculated from the information given in the Slab Properties dialog. Using the **Apply** Button will allow the contour to be drawn with the option to return to the Crack Checking Properties dialog so that the reinforcement can be changed if required.

Civil/Bridge
RC Design >
Off

This switches off all slab design annotation and options and returns the contour range to its default range of values.

Save the model

File
Save



Save the model file.




Note. When the model file is saved after results processing, all load combinations, envelopes, and graph datasets, if defined, are also saved and therefore do not have to be re-created if the model is amended and a re-analysis is done at a later date.

This completes the example.

Discussion

If the Evaluation Version of LUSAS was used to carry out this example with a reduced default mesh density of 4 divisions per line a reduced accuracy of results will have been obtained.

The following graph for ULS(Min) shows how Bending Moment (MX) along a horizontal 2D slice section through the central three columns typically varies with the number of line mesh divisions used.

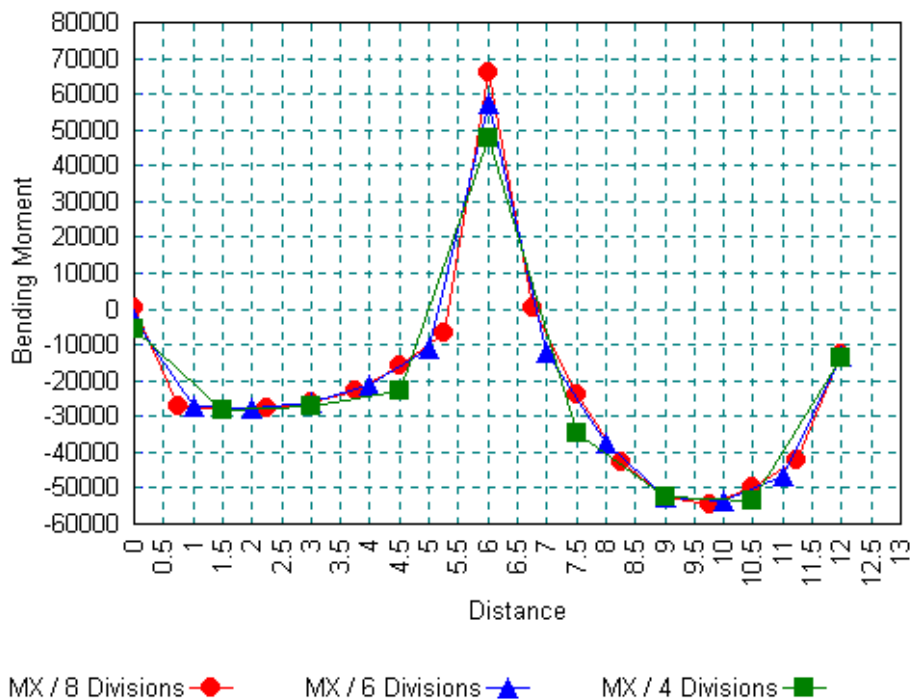

In general, more accurate results are obtained when using more line mesh divisions and hence more elements when modelling slabs of this type. Care should always be taken to use an appropriate number of elements together with a possible refinement of the mesh in areas of interest in order to obtain the best results.

Note

- This example demonstrates the use of the slab designer for a model using an irregular mesh of thick plate elements. Within the slab the reinforcement will generally be orthogonal for the layout demonstrated and for thick plate elements the results are output in global directions. If, in a real-life example, shell elements were inadvertently used for a model such as this, the use of an irregular mesh would mean that the results used for the Wood-Armer / slab calculations will have different orientations over the whole slab and hence be incorrect. In this circumstance a local coordinate set would need to be used to orientate the shell element results to be consistent with the global axes in order to obtain sensible components for use in the calculations.
- Global results are indicated by the uppercase X,Y and Z in the component names, whereas lowercase x,y and z (when seen) are used to denote local results or transformed results

Linear Analysis of a Post Tensioned Bridge

For software product(s):	LUSAS Civil & Structural or LUSAS Bridge
With product option(s):	None.


Description

A 3 span concrete post tensioned bridge is to be analysed. The bridge is idealised as a 1 metre deep beam with a tendon profile as shown in the half model of the bridge.

The initial post tensioning force of 5000 kN is to be applied from both ends. Tendons with a cross section area of $3.5\text{e}3\text{mm}^2$ are located every 2 metres across the section allowing the analysis to model a 2 metres effective width.

Three loadcases are to be considered; self-weight, short term losses, and long term losses.

Units of kN, m, t, s, C are used throughout the analysis. Note that tendon cross-sectional area is specified in mm^2 .

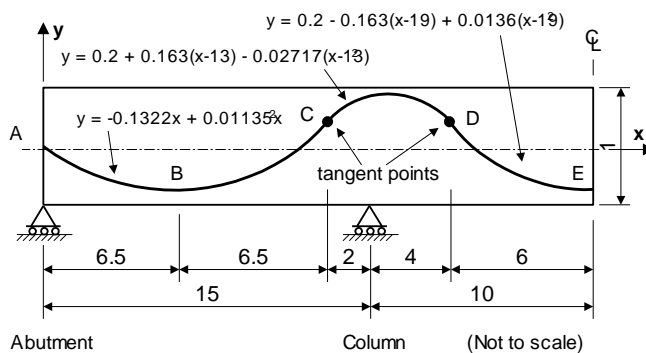

Objectives

The required output from the analysis consists of:

- ☐ The maximum and minimum long and short term stress in the concrete due to post tensioning.

Keywords

2D, Beam, Prestress, Post tensioning, Beam Stress recovery.

Associated Files



- ☐ **post_ten_modelling.vbs** carries out the modelling of the example.
- ☐ **post_ten_profile.csv** carries out the definition of the tendon.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.




Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

 
- Enter the file name as **post_ten**
- Use the **Default** working folder.
- Enter the title as **Post-tensioning of a bridge**
- Select units of **kN,m,t,s,C**
- Ensure the user interface is set to **Structural**
- Select the startup template **Standard**
- Select the **Vertical Y axis** option.
- Click the **OK** button.



Note. Save the model regularly as the example progresses. This allows a previously saved model to be re-loaded if a mistake is made that cannot be corrected easily.

Note also that the Undo button  may also be used to correct a mistake. The undo button allows any number of actions since the last save to be undone

Feature Geometry




Enter coordinates of **(0, 0)**, **(15, 0)** and **(25, 0)** to define two Lines representing half the bridge. Use the **Tab** key to move to the next entry field on the dialog.


- With all the coordinates entered click the **OK** button.



 - Select all the visible Points and Lines using the **Ctrl** and **A** keys together.



To make the manipulation of the model easier create a group of the bridge

- Enter the group name as **Bridge**
- In the  Treeview select the group **Bridge** with the right-hand mouse button and select the **Invisible** option to hide these features from the display.

Defining the tendon profile

When using the Prestress utility the tendon geometry is determined from a Line definition which, in practice, is usually a spline curve. The geometry of the tendon may be input into the model directly by manually entering the coordinates, or, as in this example, by copying values from a comma separated file (.csv) which has been opened in a spreadsheet application and pasting these values into the Point coordinates dialog in Modeller. This is done using standard Ctrl + C and Ctrl + V keys.



Note. To prevent the point representing the left-hand end of the bridge and the end point of the tendon profile from becoming stored as just a single point in the model the geometry should be made unmergable.




- On the Geometry tab select the **New geometry unmergable** option and click **OK**
- Read the file
`<LUSAS Installation Folder>\Examples\Modeller\post_ten_profile.csv` into a spreadsheet.


Linear Analysis of a Post Tensioned Bridge

- Select the top left-hand corner of the spreadsheet grid to select all the cells and use **Ctrl + C** to copy the data.
- Select the **3 Columns** option to show X, Y and Z columns.
- Select the top left-hand corner of the Enter Coordinates dialog and use **Ctrl + V** to paste the coordinates defining the tendon profile into the table. Note that the use of 'Paste' using a mouse button is not enabled. Click **OK**.

Geometry >
Point >
Coordinates...

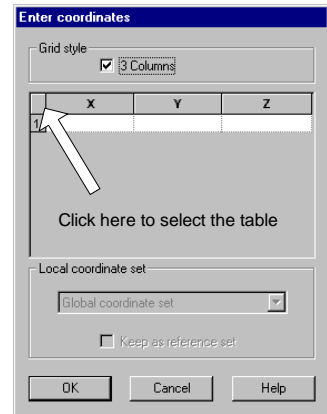

 The points defining the tendon profile should appear as shown.



File
Model Properties...

On the Geometry tab de-select the **New geometry unmergable** option and click **OK**

- Use **Ctrl** and **A** keys together to select all the visible Points.
- Click **OK** to define a spline that is defined in point selection order.

Geometry
Line >
Spline >
By Points...



- Use **Ctrl** and **A** keys together to select the spline line and points.

Geometry
Group >
New Group





 
Make the model definition easier by placing the prestress tendon into a group.

- Enter the group name as **Tendon** and click **OK**

Defining the Mesh

The concrete bridge is represented by 2D beam elements.



- In the  Treeview select **Bridge** and pick the **Set As Only Visible** option.
- Select **Thick Beam, 2 dimensional, Linear** elements, enter the dataset name as **2D Beam** and click **OK** to add the mesh dataset to the  Treeview.
- Use **Ctrl + A** to select all the features.
- Drag and drop the mesh dataset **2D Beam** onto the selection.




Defining the Geometric Properties


The beam idealisation represents a two metre width of the bridge which is one metre deep. A section of this size will be created and added to the local library for subsequent assigning to the model.


- Select the **Rectangular Solid Section (RSS)**
- Enter a depth (D) of **1** and a breadth (B) of **2** and click **OK** to add the section to the local library.

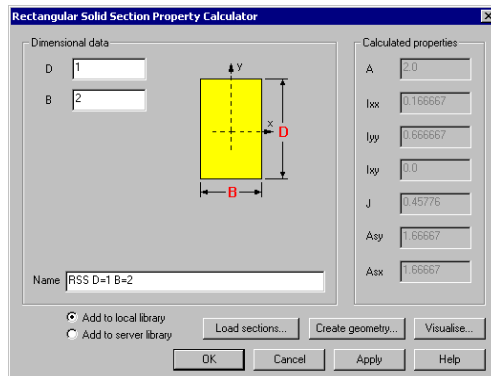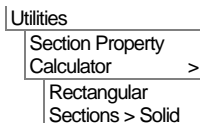

To add this section to the  Treeview:

 
- From the Usage section select **2D Thick Beam**
- Select **User Sections** from the top-most drop-down list, select **Local** library, then select **RSS D=1 B=2**
- Enter the attribute name as **Beam Properties** and click **OK**



- With the whole model selected drag and drop the geometric dataset **RSS D=1 B=2 Beam Properties (RSS D=1 B=2 major y)** from the  Treeview onto the selected features.



Select the Isometric button to view the visualised beam.

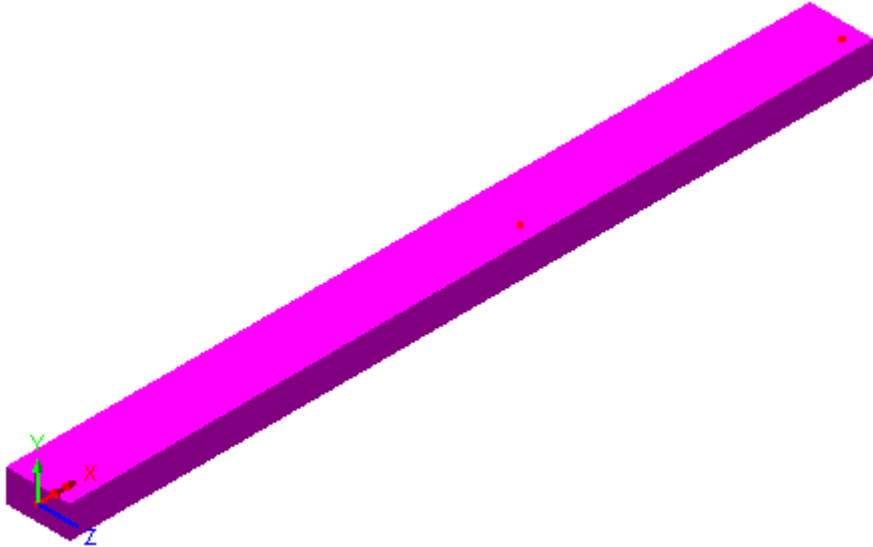



Select the fleshing on/off button to turn-off the geometric visualisation.




Select the Home button to return the model to the default view.

Defining the Material

- Select material **Concrete** of grade **Ungraded** from the drop down list and click **OK** to add the material dataset to the  Treeview.
- With the whole model selected (**Ctrl** and **A** keys together) drag and drop the material dataset **Iso1 (Concrete Ungraded)** from the  Treeview onto the selected features and assign to the selected Lines by clicking the **OK** button.

Defining the Supports

LUSAS provides the more common types of support by default. These can be seen in the  Treeview.

The bridge is supported with rollers at each of the abutments.

Attributes
Material >
Material Library...

- Select the point at the left-hand abutment and the point at the column. (Hold the **Shift** key to add to the initial selection)
- Drag the support dataset **Fixed in Y** from the Treeview and drop it onto the selected Points in the graphics window. Choose options to **Assign to points** for **All loadcases** and click **OK**
- Select the right-hand point on the centre line of the bridge.
- Drag the support dataset **Symmetry YZ** from the Treeview and drop it onto the selected Point in the graphics window. Choose options to **Assign to points** for **All loadcases** and click **OK**




Loading


Three loadcases are to be applied. The first represents self-weight of the structure. The second represents the prestress with short term losses only. The third represents the prestress with short and long term losses.

Defining the Self-weight

Attributes
Loading...

- Select the **Body Force** option, click **Next** and enter a value of **-9.81** for the linear acceleration in the Y direction. Name the dataset **Gravity** and click **Finish** to create a load dataset in the Treeview.
- Use **Ctrl** and **A** keys together to select all the visible features
- Drag and drop the load dataset Gravity from the Treeview onto the selection. Ensure the **Assign to lines** is selected and click **OK** to assign **Loadcase 1** with a factor of **1**

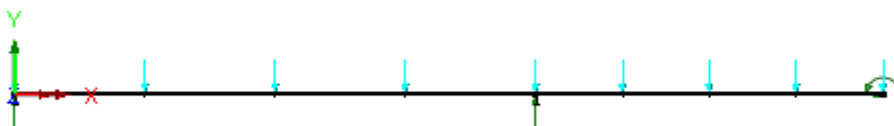



- Select **Loadcase 1** from the  Treeview with the right-hand mouse button and pick the **Rename** option and change the loadcase name to **Self Weight**




Rebuilding a model after a previous failed analysis

If a previous analysis of this example has failed you need to return to this point to continue after having run the supplied file stated.

Defining Prestress with Short Term Losses

- Change the loadcase name to **Short Term Loss** and click **OK**
- Select **Short Term Loss** from the  Treeview with the right-hand mouse button and pick the **Set Active** option.
- In the  Treeview select **Tendon** with the right-hand mouse button and select the **Visible** option.
- Select the spline Line representing the tendon followed by the 2 beams representing the concrete bridge. (Hold the **Shift** key to add the other 2 lines to the initial selection)

1. Select this tendon line first

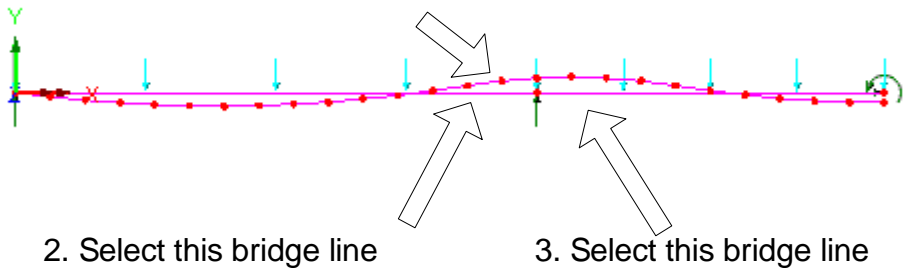


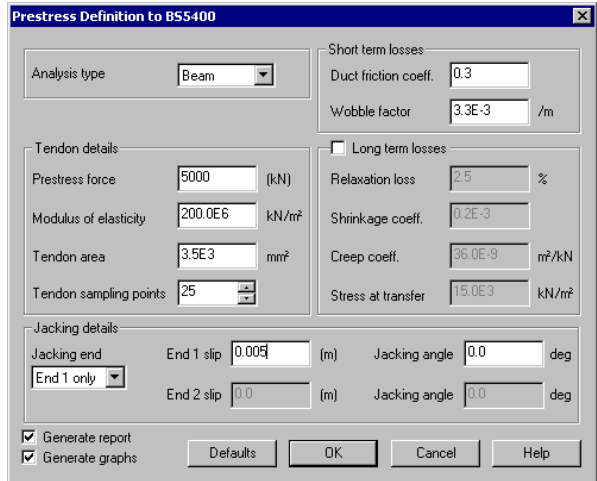
2. Select this bridge line

3. Select this bridge line

Utilities
Loadcase...

Civil/Bridge
 Prestress Wizard >
 Single Tendon >
 BS5400...

- Select the **Defaults** button.
- Ensure the Analysis type is set to **Beam**
- In the Tendon details section enter the Prestress force as **5000**
- Leave the Modulus of the elasticity of the tendon as **200E6**
- Enter the Tendon area as **3.5E3** (note that this is entered in mm²)
- Set the number of Tendon sampling points to **25**
- In the Short term losses section set the duct friction coefficient to **0.3**
- Ensure the **Long term losses** option is deselected.
- In the Jacking details section enter an End 1 (anchorage) slippage of **0.005**
- Click the **Generate report** option. This will generate a report in HTML format in the <Lusas Installation Folder>/Projects directory summarising the prestress tendon forces.
- Click the **Generate graphs** option. This generates graph datasets in the  Treeview for subsequent graphing to be carried out.
- Click **OK**



Prestress Definition to BS5400

Analysis type: **Beam**

Tendon details:

Prestress force: **5000** (kN)

Modulus of elasticity: **200.0E6** kN/m²

Tendon area: **3.5E3** mm²

Tendon sampling points: **25**

Short term losses:

Duct friction coeff: **0.3**

Wobble factor: **3.3E-3** /m

☐ Long term losses:

Relaxation loss: **2.5** %

Shrinkage coeff: **0.2E-3**

Creep coeff: **36.0E-9** m²/kN

Stress at transfer: **15.0E3** kN/m²

Jacking details:

Jacking end: **End 1 only**

End 1 slip: **0.005** (m)

End 2 slip: **0.0** (m)

Jacking angle: **0.0** deg

☒ Generate report

☒ Generate graphs

Defaults OK Cancel Help


Equivalent nodal loading is then calculated from the values entered on the Prestress Definition dialog.


On completion, an HTML report will be opened automatically in the default web browser. This report is also saved into the specified folder. The report is a complete summary of the tendon profile, properties and loading assignments made. On closing the report the tendon loading assignments on the model can be seen for the active loadcase.

 


Caution. Subsequent modification of the current tendon profile or beam lines will not update the calculated loading until the prestress wizard is run again.

- Click **OK** to dismiss the warning message displayed


Modeller will assign the datasets to the selected Lines representing the concrete beams for the current loadcase and will also add two load datasets to the  Treeview. By default tendon setting out information will be displayed in the view window. This will be turned-off.

- In the  Treeview double-click the **Utilities** entry and on the Tendon profile tab click the **None** button to stop the display of the tendon profile setting-out details.



Note. Tendon sampling points determine the number of points used when graphing and creating reports on short and long term losses.

Defining Prestress with Short and Long Term Losses

- Change the loadcase name to **Long Term Loss** and click **OK**
- Select **Long Term Loss** from the  Treeview with the right-hand mouse button and pick the **Set Active** option.
- Ensure the tendon profile and the two lines representing the bridge are still selected.


The values previously entered on the dialog will be retained.

- Select the **Long term losses** option. Leave all other values as they were set for the short term loss loadcase. Click **OK** to apply the prestress force to the current loadcase.

Equivalent nodal loading is calculated from the values entered on the Prestress Definition dialog.

- Click **OK** to dismiss the warning message about subsequent modification of the current tendon profile or beam lines not updating the calculated loading until the prestress wizard is run again.



Caution. When running the Prestress Wizard to calculate short term and long term tendon losses the correct Short Term or Long Term loadcase must be set active to ensure that the values are written into the correct Tendon Load assignment attributes as held in the  Treeview.

Utilities
Loadcase...

Civil/Bridge
Prestress Wizard >
Single Tendon >
BS5400...

Graphing of Prestress Force in the Tendon

When the Generate graphs option is selected on the Prestress dialog two graph datasets are created. One contains the distance along the beam and the other contains the force in the tendon at each point. To graph these:


Utilities
Graph Wizard...

- Select the **Specified datasets** option and click **Next**
- From the first drop down list select **Tendon Assignment 1 Distance** and from the second select **Tendon Assignment 1 - Short Term Losses** and click **Next**
- Click **Finish** to display the graph

Now add a graph of the Force after long term losses:

Utilities
Graph Wizard...

- Select the **Specified datasets** option and click **Next**
- From the first drop down list select **Tendon Assignment 1 Distance** and from the second select **Tendon Assignment 1 - Long Term Losses** and click **Next**
- Select the **Add to existing graph** option and click **Finish** to update the graph.

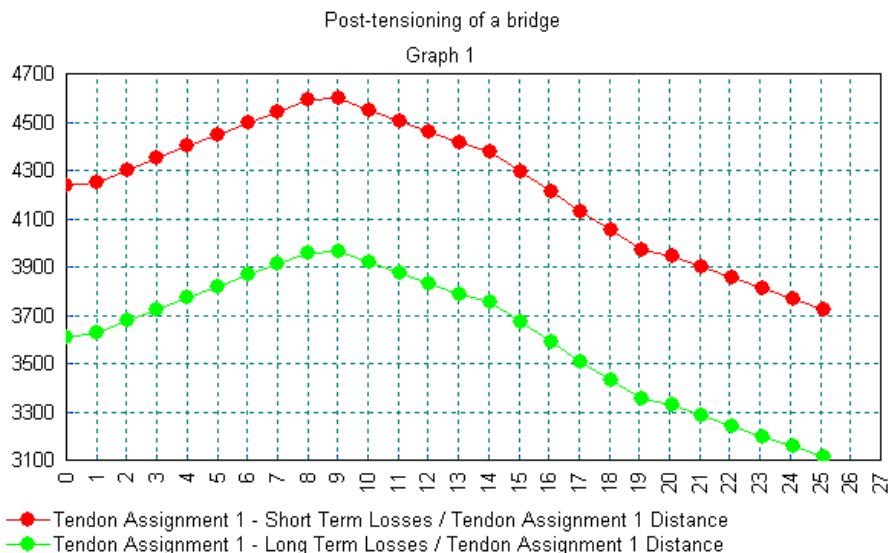

Close the graph window.

Saving the Model

 
File
Save



Save the model file.

Running the Analysis

With the model loaded:




A LUSAS data file name of **post_ten** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **post_ten.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **post_ten.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model


If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.



- ☐ **post_ten_modelling.vbs** carries out the modelling of the example up to the point of defining the prestress.



 Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.



- Enter the file name as **post_ten**

- To recreate the model up until the point of defining the prestress, select the file **post_ten_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.

Now return to the section entitled **Defining Prestress With Short Term Losses** earlier in this example and re-define the tendon properties.

Viewing the Results


Selecting the Results to be Viewed

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results for the first loadcase (the self weight loadcase) will be set to be active by default.

Deformed Mesh Plots

A deformed mesh plot helps highlight any obvious errors with an analysis before progressing to detailed results processing. The deformed shape will usually show up errors in loading or supports and may also indicate incorrect material property assignments (e.g. where the results show excessive displacements).

Deformed Mesh Plot for Self Weight

- If present, turn off the display of the **Geometry**, **Attributes** and **Mesh** layers from the  Treeview.
- With no model features selected, click the right-hand mouse button in the graphics window and select **Deformed mesh**
- Click the **OK** button to accept the default deformed mesh properties and display the deformed mesh for the self-weight alone.
- With no model features selected, click the right-hand mouse button in the graphics window and select **Values**
- Select entity **Displacement** and component **DY**
- Select the **Values Display** tab.
- Select the **Show values of selection** option.
- Change the number of significant figures to **3** and click **OK**

- Select the node on the centre line to add the value of vertical displacement at mid-span to the display.



Deformed Mesh Plot for Short Term Loss


- In the  Treeview right-click on **Short Term Loss** and select the **Set Active** option.



Defining a Basic Combination

Combinations can be created to view the combined effects of the self weight and short term loss loadcases on the structure.

The combination properties dialog will appear.

- Ensure **post_ten.mys** is selected from the drop down list.
- Select the **Self Weight** and **Short Term Loss** loadcases from those available and click the  button to add them to the load combination. Change the combination name to **Self Weight and Short Term** and click the **OK** button to finish.

Deformed Mesh Plot for Combination

- In the  Treeview right-click on **Self Weight and Short Term** and select the **Set Active** option.

The deformed mesh plot will show the effect of the combined loading on the structure.



Fibre Locations

Force/moment and stress diagrams can be plotted for pre-defined fibre locations on members. All sections created by the Section Property Calculator will have extreme fibre locations pre-defined. These fibre locations can be seen by expanding the Geometric Line entry **Beam properties (RSS D=1 B=2 major y)** in the Treeview, and they can be visualised by double-clicking the Geometric Line attribute name and then selecting the Visualise button on the dialog. In doing so, it can be seen that, by default, Fibre S1 is the active fibre and Fibre S1 and Fibre S4 are the upper and lower extreme fibres for which diagram and stress results plots should be created.

Diagram Stress Results at Fibre Locations

- Turn off the display of the **Values** layer from the Treeview.
- In the Treeview right-click on **Short Term Loss** and select the **Set Active** option.
- With no features selected right-click in a blank part of the graphics window and select **Diagrams** to add the diagrams layer to the Treeview.

The diagram properties will be displayed.

- Select **Stress - Thick 2D Beam** results of stress **Sx(Fx, Mz)** in the beam.
- Select the **Diagram Display** tab and select the **Label values** button.
- Change the angle of the text to **45**, set the number of significant figures to **4** and click **OK** to display the stress diagram at Fibre location S1 for the Short Term Loss loadcase

Diagram Results for Short Term Loss



Diagram Results for Combination


- In the Treeview right-click on the combination **Self Weight and Short Term** and select the **Set Active** option to display the stress diagram at Fibre location S1 for the Self Weight and Short Term combination



Diagram Results for Combination at Fibre 4

Once a loadcase has been set results can be plotted for any defined fibre location. In this example, because of their location and because of the applied loading, Fibre S1 and Fibre S2 will give the same results at the top of the beam. Fibre S3 and Fibre S4 will both also give the same results at the bottom of the beam – so only a diagram for Fibre S4 needs to be plotted.


With the combination **Self Weight and Short Term** still set active in the  Treeview:

- In the  Treeview expand Geometric Line entry **RSS D=1 B=2 major y beam** and right-click on **Fibre S4** and select **Set Fibre Active**.



The diagram display will update to show the stresses at Fibre S4:



 
Viewing Results on Fleshed Members

- As an alternative to plotting diagram results, stresses in beams can also be plotted on fleshed members.
- Turn off the display of the **Diagrams** layer from the  Treeview.

Contour Results for Short Term Loss

- In the  Treeview right-click on **Short Term Loss** and select the **Set Active** option.
- Click in a blank part of the Graphics Window to deselect the members.
- With no features selected right-click in a blank part of the graphics window and select **Contours** to add the contours layer to the  Treeview.
- Select **Stress – Thick 2D Beam** results of axial and moment results in the members **Sx(Fx Mz)** and click **OK**

Initially the contour properties will be displayed for the fibre location (Fibre S4) that is currently set active.




To see the stresses on the fleshed beam member:




Select the isometric button.




Select the fleshing on/off button to visualise the stress results for the fully fleshed cross-section.

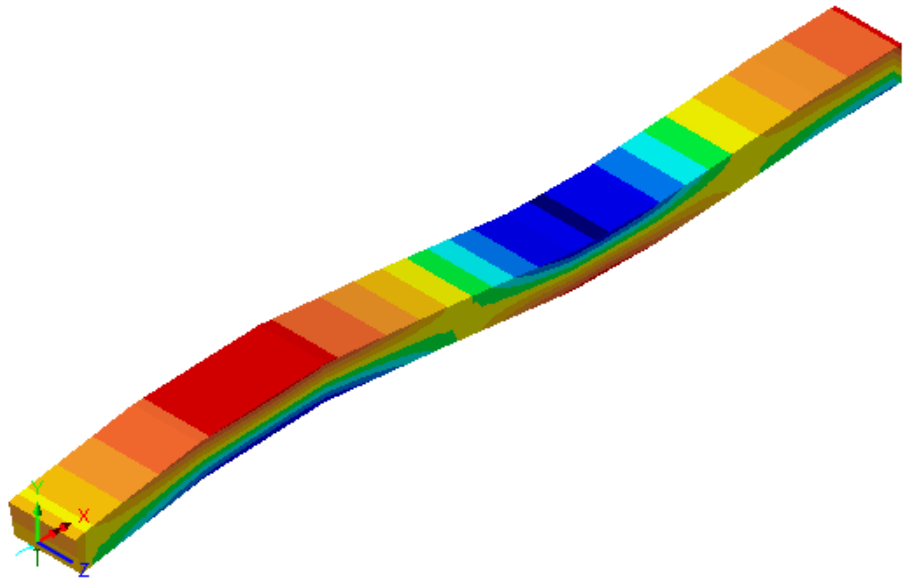

Contour Results for Combination

- In the  Treeview right-click on the combination **Self Weight And Short Term** and select the **Set Active** option.

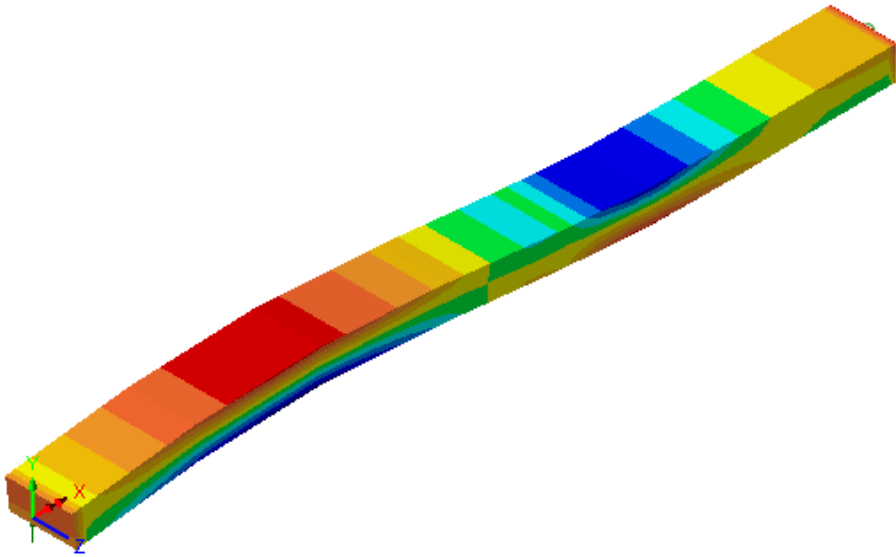

Note. Diagrams and contours may be displayed at the same time to show results for selected fibre locations.


This completes the example

Simple Grillage

For software product(s):	LUSAS Bridge.
With product option(s):	None.

Description

A bridge deck is to be analysed using the grillage method. The geometry is as shown below. All members are made of C50 concrete to BS5400. Section properties of the longitudinal beams and diaphragms are to be calculated using the Section Property Calculator facility.

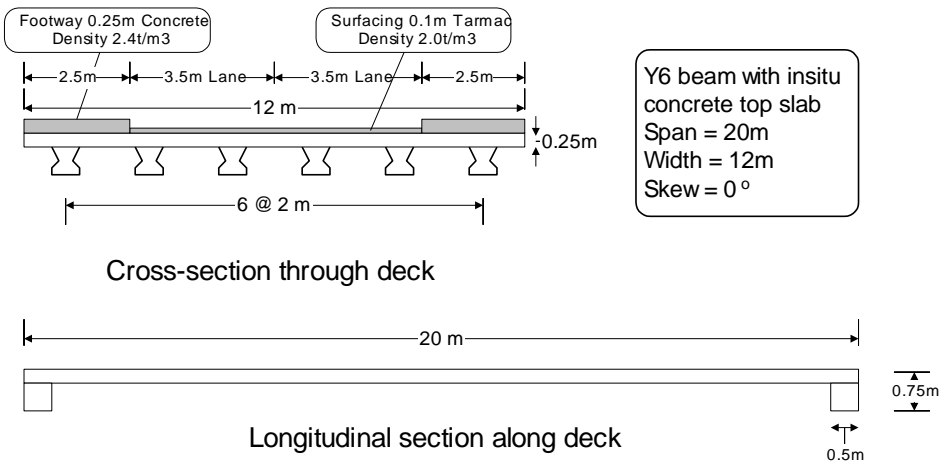

The structure is subjected to four loadcases: Dead load, Superimposed dead load, Lane loads in both lanes (UDL and KEL), and an abnormal load (HB) in the lower notional lane with a lane load (UDL and KEL) in the upper lane.

Units of kN, m, t, s, C are used throughout when modelling the grillage.

Units of N, mm, t, s, C are used in calculating the section properties of selected components.

Objectives

The required output from the analysis consists of:

- ☐ A deformed shape plot showing displacements caused by the imposed loading
- ☐ A diagram showing bending moments in the longitudinal members for the design load combination

Keywords

2D, Y6 Precast Section, Section Property Calculation, Local Library, Grillage, Basic Load Combination, Smart Load Combination, Enveloping, Deformed Mesh, Bending Moment Diagram, Print Results Wizard

Associated Files



- ☐ **grillage_modelling.vbs** carries out the modelling of the example.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Before creating the grillage model the section properties of the longitudinal beams and end diaphragms are to be computed using the section property calculator and stored for future use. Calculation of section properties requires section geometry to be drawn/defined in the XY plane.

Creating the Longitudinal Beam Model

- Enter the file name as **Y6**
- Use the **Default** working folder.
- Enter the title as **Y6 Precast Beam**
- Select units of **N,mm,t,s,C** from the drop down list provided.
- Ensure the **Structural** user interface is selected

- Ensure the startup template is set as **None**
- Ensure the **Vertical Z Axis** option is selected
- Click the **OK** button.

Defining Longitudinal Beam Geometry

Utilities
Section Property
Calculator >
Precast Section...

- From the **Y Beams** section series select a **Y6** section.
- Specify a slab depth of **250**
- Enter a slab width of **2000**
- Select the option to **Run Arbitrary Section Property Calculator** after section generation
- Click the **OK** button.

The section will be drawn and arbitrary section property calculator form will be displayed.

Calculating Longitudinal Beam Section Properties

- Select the option **Add to local library** so the calculated properties will be available from the local library when required.
- Click the **Apply** button to compute the section properties. These will be displayed in the greyed text boxes on the right hand side of the dialog and written to the local library.
- Click the **Cancel** button to close the dialog.

Creating the End Diaphragm Model




Create a new model and discard the changes to the previous model.

- Enter the file name as **diaphragm**
- Use the default working folder.
- Enter the title as **End diaphragm**
- Ensure units of **N,m,kg, s,C** are selected.
- Ensure the **Structural** user interface is selected
- Ensure the startup template is set as **None**
- Ensure the **Vertical Z Axis** option is selected
- Click the **OK** button.


Defining Diaphragm Geometry




Enter coordinates of (0,0), (0.5,0), (0.5,0.5), (1,0.5), (1,0.75), (0,0.75) to define a surface representing the end diaphragm and slab (which is to be represented by the end beam on the grillage model) and click **OK**

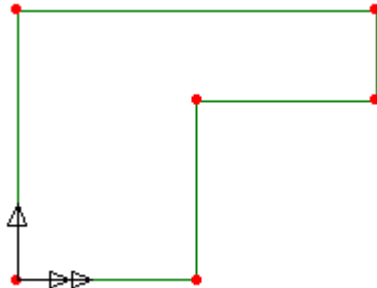

Calculation of End Diaphragm Section Properties

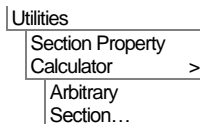


- Select the option **Add local library**
- Click the **Apply** button to compute the section properties. These will be displayed in the greyed text boxes on the right hand side of the dialog and written to the local library file for future use.
- Click the **Cancel** button to close the dialog.

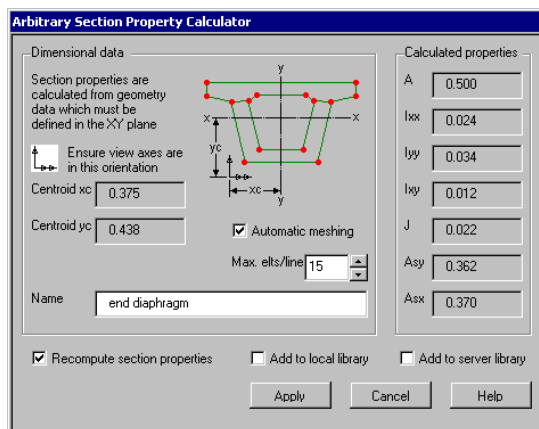

Creating the Grillage Model

 Now that the beam and diaphragm properties have been calculated the grillage model can be created.



Create a new model and discard the changes to the previous model.

- Enter the file name as **grillage**
- Enter the title as **Simple grillage analysis**
- Set the units as **kN,m,t,s,C**
- Ensure the **Structural** user interface is selected
- Ensure the startup template is set as **None**
- Ensure the **Vertical Z Axis** option is selected.
- Click the **OK** button.



Note. Save the model regularly as the example progresses. Use the undo button to correct any mistakes made since the last save.

Using the Grillage Wizard

In this example the grillage wizard is used to generate a model of the bridge deck. The grillage wizard defines the grillage geometry, assigns grillage elements to each of the

lines, and assigns supports to the end beams. It also creates Groups to ease member identification and the application of section properties.




Note. It is difficult to make absolute recommendations as to how individual structures should be modelled using a grillage. A few basic recommendations are however valid for most models:


- a) Longitudinal beams within the grillage should be coincident with the actual beams within the structure.
- b) Transverse beams should have a spacing which is similar or greater than that of the longitudinal beams and the total number of transverse beams should be odd to ensure a line of nodes occur at mid span.

Bridge
Grillage Wizard...

- Select the **Set defaults** button
- Ensure **Slab deck** is selected and click **Next**
- The grillage is **Straight** with **0** degrees skew so click **Next** again
- Enter the grillage width as **10** and the number of internal longitudinal beams as **6** . Select **evenly spaced** longitudinal beams and click **Next**
- Leave the number of spans set as **1**
- Enter the length of span as **20** and the number of internal transverse beams as **9**
- Click **Finish** to generate the grillage model.

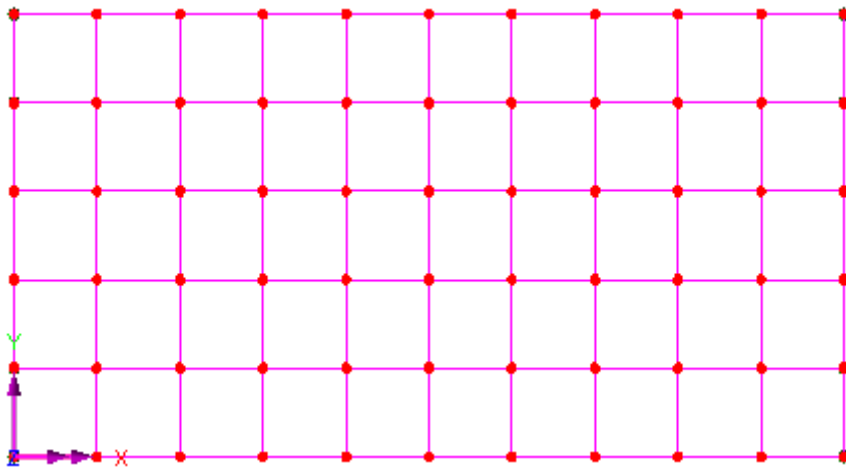


Calculation of Transverse Beam Section Properties

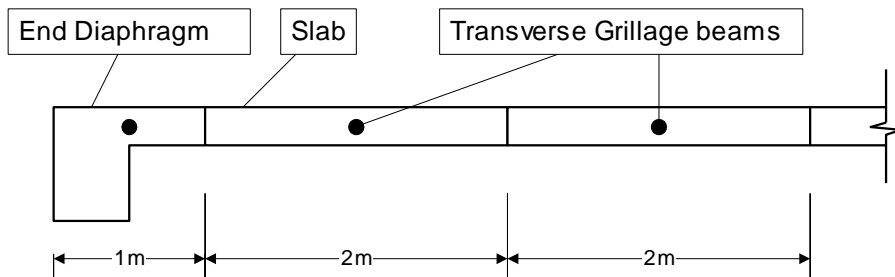


Longitudinal Section

The internal transverse beams each represent 2m of slab so the section properties are computed for an equivalent solid rectangular section.

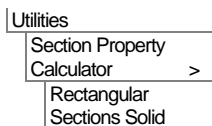

- Enter a depth of $D = 0.25$
- Enter a width of $B = 2$
- The section properties will be displayed in the greyed text boxes on the right hand side of the dialog. Note the torsion constant (J) is calculated as (0.0096). This will be required later in the example.
- A section name of RSS $D=0.25 B=2$ is automatically created from the entered dimensions.

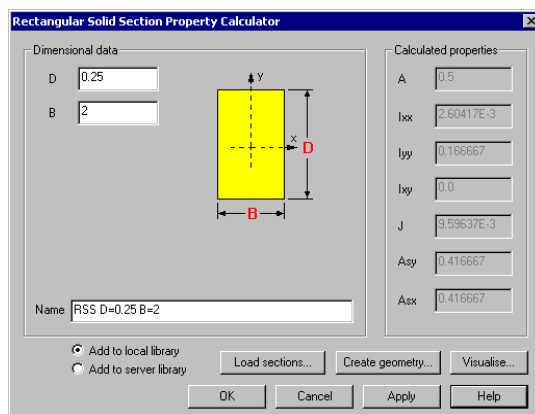


- Ensure the **Add to local library** option is selected and click **OK** to add the properties to the local section library.


Modifying Section Properties for Grillage Analysis

- For grillage analysis it is common practice to assume 50% of the torsion capacity of the slab is taken by the transverse beams and 50% by the longitudinal beams. So, when the transverse 0.25m deep x 2m wide slab and Y6 precast (longitudinal) beams are selected from the local section library their section properties will be adjusted. The torsion constant of the Y6 beam will be reduced by 50% of the torsion constant for the slab.

Adding Section Library Items to the Treeview


First, add the transverse slab section geometric attribute:

- Select the **User Sections** library from the upper drop-down list.
- Select the **Local** library type.
- Select the **RSS D=0.25 B=2** entry from the drop down list.
- Select the **Enter Properties** option and reduce the torsion constant to **0.005** i.e. 50% of the computed value.
- Enter an Attribute name of **Transverse Slab major z** and click **OK** to add the section properties to the  Treeview.
- Next, add the Y6 beam geometric attribute:

- Select the **User Sections** library from the upper drop-down list.
- Select the **Local** library type.
- Select **Y6 Precast Beam** from the name in the drop-down list.
- Select the **Enter Properties** option and modify the torsion constant to be **0.021** (The computed value of 0.026 less the 50% allowance of the torsion constant for the slab of 0.005)
- Enter an Attribute name of **Y6 Precast Beam major z** and click **OK** to add the section properties to the  Treeview.



Note. Even though the Y6 beam was defined in millimetres the units can be extracted from the library in metres. The units will be set to metres automatically as these were the units selected on the New Model dialog.

- Lastly, define the end diaphragm geometric attribute:
- Select the **User Sections** library from the upper drop-down list.
- Select the **Local** library type.
- Select **End diaphragm** from the drop down list.
- Click **OK** to add the section properties to the  Treeview.



Note. When a section is used from a library without amending section properties or the section's orientation (as just done for the End diaphragm) the library name is appended automatically to the automatic identifying name given in the dialog.

Assigning Geometric Properties to the Grillage Members



Use the Isometric View button to rotate the model so that the following assignment of the geometric properties can be seen.



Ensure the fleshing button is depressed in the toolbar menu.

Longitudinal members

The Y6 beam section properties are to be assigned to all the longitudinal members.

- In the Treeview select the **Y6 Precast Beam major z** entry and click on the copy button.
- In the Treeview select the **Edge Beams** group and click the paste button to assign the Y6 beam section properties to the edge beams.

Confirmation of the assignment will appear in the text window.

- Select the **Longitudinal Beams** group and click the paste button again to assign the Y6 beam section properties.

Transverse slab members

The slab section properties are assigned to the transverse members in a similar fashion.

- In the Treeview select the **Slab D=0.25 B=2 (m) major z** entry and click on the copy button.
- In the Treeview select the **Transverse Beams** group and click the paste button to assign the slab section properties.

Diaphragm members

The diaphragm section properties are assigned to the end diaphragms in a similar fashion.


- In the Treeview select the **End diaphragm (m) major z** entry and click on the copy button.
- In the Treeview select the **End Diaphragms** group and click the paste button to assign the slab section properties.


Simple Grillage

From the fleshed image it can be seen that the end diaphragm members for the far end are incorrectly displayed, and as a result the line directions of the lines to which they have been assigned need to be reversed.

- Select the 5 lines at the far end of the grillage

This reverses the line directions of the selected lines to give the following image.

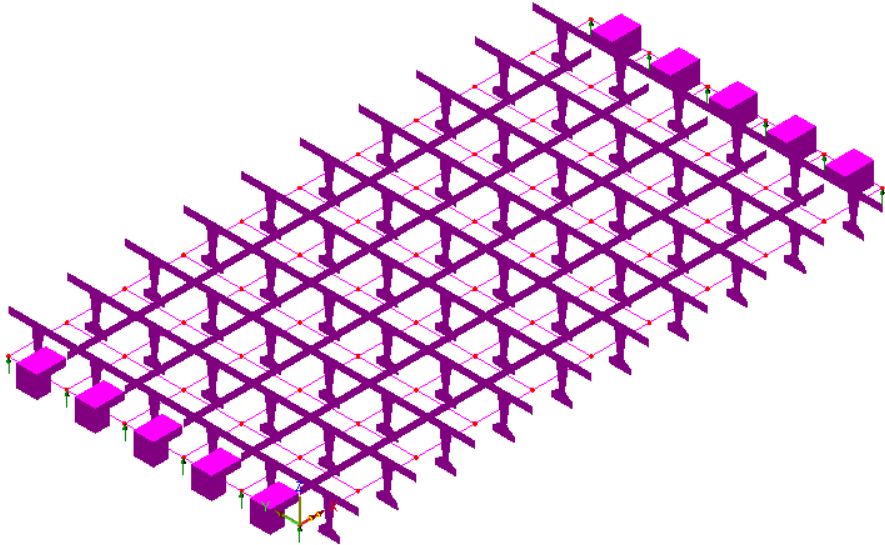



Note. You can also check assignments by right-clicking on a group name in the  Treeview and selecting Select Members.

Defining the Material



Note. In this example a single material property will be used. If deflections and rotations are of interest then separate analysis runs with short and long term properties may be appropriate.

- Select material **Concrete BS5400** from the drop down list, and **Short Term C50** from the grade drop down list.
- Click **OK** to add the material dataset to the  Treeview.
- With the whole model selected (**Ctrl** and **A** keys together) drag and drop the material dataset **Iso1 (Concrete BS5400 Short Term C50)** from the  Treeview onto the selected features and assign to the selected Lines by clicking the **OK** button.


Geometry
Line >
Reverse...

Attributes
Material >
Material Library...

Loading

In this example seven loadcases will be applied to the grillage. These will be enveloped and combined together to form the design combination.

Renaming the Loadcases

- In the  Treeview right click on **Loadcase 1** and select the **Rename** option.
- Rename the loadcase to **Dead Load** by over-typing the previous name.

Dead Load

Dead load is made up of the self-weight of the structure which is defined as an acceleration due to gravity.








Note. When a bridge deck is modelled by a grillage the slab is represented by both the longitudinal and transverse members. This means that when self-weight is applied the acceleration due to gravity should only be applied to the longitudinal members.



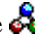

Turn off the display of the fleshed members

Bridge	
Bridge Loading	>
Gravity	

- A load dataset named **BFP1 Gravity -ve Z** will be added to the  Treeview.
- In the  Treeview select the **BFP1 Gravity -ve Z** entry and click on the  copy button.
- In the  Treeview select the **Edge Beams** group and click the  paste button.
- With the **Assign to lines** option selected click the **OK** button to assign the gravity loading to the **Dead Load** loadcase with a factor of **1**

The self-weight dead load will be displayed on the edge beams.


- In the  Treeview select the **Longitudinal Beams** group and click the  paste button to gravity loading.
- With the **Assign to lines** option selected click the **OK** button to assign the gravity loading to the **Dead Load** loadcase with a factor of **1**

The self-weight dead load on the internal longitudinal beams will be added to the display.


Superimposed Dead Load

Superimposed dead load consists of the surfacing loads. These represent the self-weight of the footways and the surfacing on the road.

Specify the surfacing loading for the footway:

- Leave the density as **2.4**
- Change the thickness to **0.25**
- Set the length to **20** and set the width to **2.5**
- Click the **Apply** button to add the loading to the  Treeview.

 
Now specify the tarmac highway surfacing load:

- Change the density to **2.0**
- Change the thickness to **0.1**
- Leave the length as 20 but change the width to **3.5**
- Click the **OK** button to add the loading to the  Treeview.

Discrete point and patch loads are positioned by assigning them to points which do not have to form part of the model.




Enter the coordinates of the mid point of each footway and each notional lane (10,0.25), (10,3.25), (10,6.75), (10,9.75) and click **OK**



On the status bar at the bottom of the display, click the Z axis button to return to a global Z direction view.


- Select the points at the centre of each footway by holding the **Shift** key down to select points after the initial selection.
- Drag and drop the discrete loading dataset **Pch2** **Surfacing** **20mx2.5m** **Skew=0.0** **Thickness=0.25m** **Density=2.4** **tm³** onto

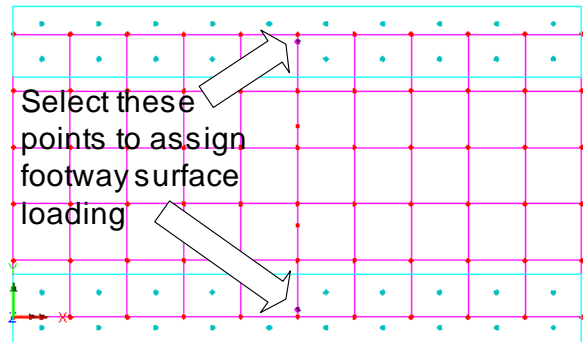


the selected points.


- Select **Include Full Load** from the drop down list. This will ensure the portion of the pavement load which is overhanging the edge of the grillage model is applied to the edge beams.
- Enter **Superimposed Dead Load** as the Loadcase and click **OK** to assign the loading.

The loading will be visualised.

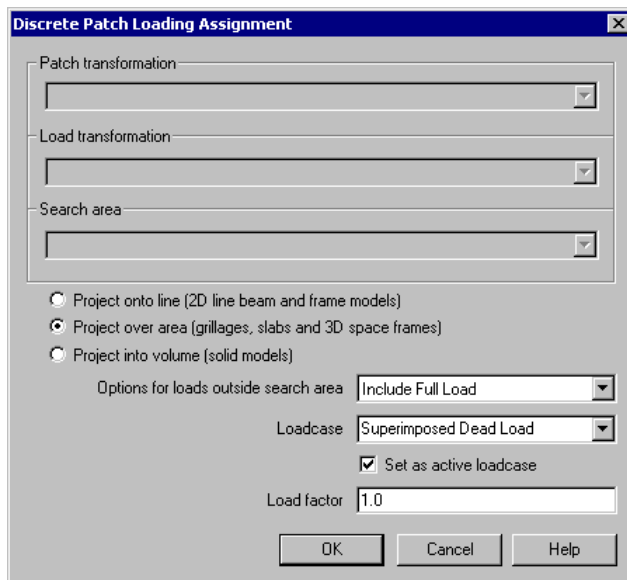


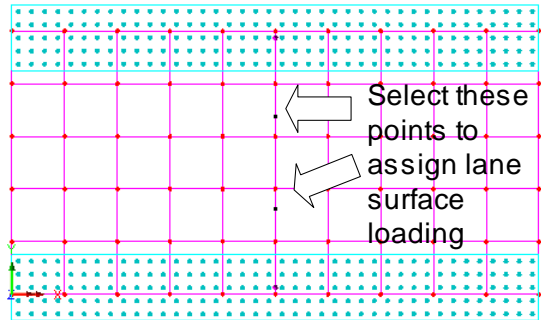
Patch load divisions

The Patch divisions object seen in the  Treeview controls the number of discrete point loads used to represent a patch load. By default a specified number of 10 divisions is used. However, for this example, and for most real life uses a greater number of divisions is required to accurately reflect the surfacing loading.

- In the  Treeview double-click the **Patch divisions** object
- Select the **Distance between loads** option and specify **0.5**. Click **OK** to update the patch divisions.




Now the road surfacing is to be assigned:

 
- Select the two points at the centre of each notional lane.
- Drag and drop the discrete load dataset **Pch3 Surfacing 20x3.5 Thickness=0.1 Density=2** from the  Treeview onto the selected points.
- Leave the loading option for loads outside the search area set as **Exclude All Load** because for this load type it is irrelevant whether include or exclude is used since the load length, which is positioned centrally, is the same length as the span length
- Select **Superimposed Dead Load** from the Loadcase drop down list.
- Click **OK** to assign the road surfacing load.





Vehicle Load Definition


HA loading is to be applied to each notional lane in loadcases 3 and 4. These loads are defined using the UK vehicle loading definitions supplied with LUSAS *Bridge*.

- Select the **Lane load (HA load)** button.
- Select loading code **BD 37/88**, change the length to **20** and select the **OK** button to add the load dataset to the  Treeview.
- Select the **Knife edge load (KEL load)** button.
- Leave the notional width as **3.5** and the intensity as **120** and click the **OK** button to add the load dataset to the  Treeview.
- Select the **Abnormal load (HB vehicle)** button.
- With the axle spacing set to **6** and **45** units of HB load select the **OK** button to add the load dataset to the  Treeview.
- Click the **Close** button to close the UK bridge loading dialog.






Assigning HA Loading

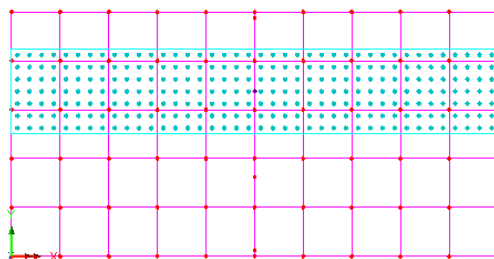- Select the point defined at the centre of the upper notional lane.
- Drag and drop the dataset **Pch4 HA BD37/88 20m x 3.5m Skew=0 (Centre)** from the  Treeview.
- Enter **HA upper** as the Loadcase, leave other values as their defaults, and click **OK**
- Select the point defined at the centre of the lower notional lane.
- Drag and drop the dataset **Pch4 HA BD37/88 20m x 3.5m Skew=0 (Centre)** from the  Treeview.
- Enter **HA lower** as the Loadcase, leave other values as their defaults, and click **OK**




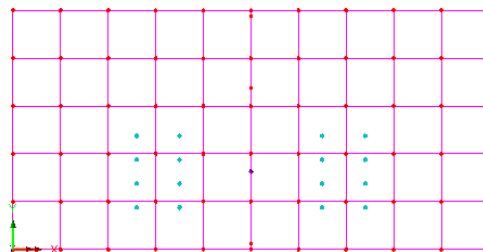
Assigning KEL Loading

- Select the point defined at the centre of the upper notional lane.
- Drag and drop the dataset **Pch5 KEL 120kN Width=3.5m Offset=0 Skew=0 (Centre)** from the  Treeview.
- Enter **KEL upper** as the Loadcase and click **OK**
- Select the point defined at the centre of the lower notional lane.
- Drag and drop the dataset **Pch5 KEL 120kN Width=3.5m Offset=0 Skew=0 (Centre)** from the  Treeview.
- Enter **KEL lower** as the Loadcase, leave other values as their defaults, and click **OK**

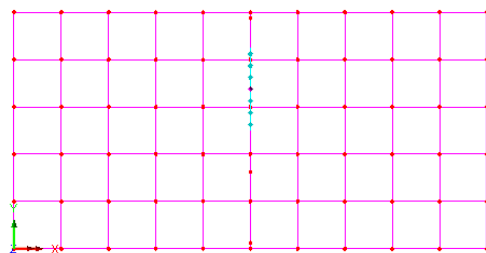

Assigning Abnormal HB Loading

- Select the point defined at the centre of the lower notional lane.
- Drag and drop the dataset **Pch6 HB 6m spacing 45 units** from the  Treeview onto the selected point.
- Enter **HB lower** as the Loadcase, leave other values as their defaults, and click **OK**



Save the model

File
Save



Save the model file.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...




A LUSAS data file name of **grillage** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish and click the **Yes** button to close any currently open results files.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **grillage.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **grillage.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




☐ **grillage_modelling.vbs** carries out the modelling of the example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **grillage** and click **OK**



To recreate the model, select the file **grillage_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.



Rerun the analysis to generate the results


Viewing the Results


Selecting the results to be viewed

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for the first load case will be set to be active by default.


Deformed Mesh and Summary Plot

A deformed mesh plot helps highlight any obvious errors with an analysis before progressing to detailed results processing. The deformed shape will usually show up errors in loading or supports and may also indicate incorrect material property assignments (e.g. where the results show excessive displacements).

- If present, turn off the display of the **Geometry**, **Attributes** and **Mesh** layers in the  Treeview.
- With no model features selected, click the right-hand mouse button in the graphics window and select the **Deformed mesh** layer. Select the **Specify factor** option and enter **300**. Click the **OK** button to display the deformed mesh for loadcase 1.

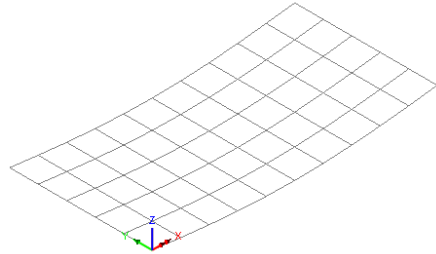

If necessary use the Isometric View button to rotate the model.

- Step through each of the loadcases in the  Treeview using the **Set Active** option and check each deformed shape looks correct for the supposed loading.

 Z: N/A

Return to the view from the global Z direction.

Defining Envelopes and Combinations

The design combination will consist of all dead loads and an envelope of all live loads factored by the appropriate adverse or relieving factor.

Loadcase name	Adverse Factor		Relieving Factor
	γ_{f1}	γ_{f3}	
Dead Load	1.15	1.10	1.0
Super Dead Load	1.75	1.10	1.0
HA alone	1.5 (*)	1.10	0
HA with HB	1.3 (*)	1.10	0

Table 1



Note. According to BS5400 part 1 two safety factors should be applied to adverse loading. γ_{f1} accounts for the uncertainty in the applied loading and γ_{f3} is a safety factor to allow for inconsistencies in the material properties.

 


Note. (*) When designing to BD 37/88 the HA lane loading factors also include additional lane factors. For a two lane structure these are noted in the tables which follow.

Defining a Basic Load Combination 1


A basic load combination to investigate HA and Knife Edge loads will be defined.

On the Basic Combination dialog:



Add loadcases (3) **HA upper**, (4) **HA lower**, (5) **KEL upper**, (6) **KEL lower**



Note. To add a number of loadcases all together select the first loadcase in the list, hold down the **Shift** key and select the last loadcase in the list (scrolling down the list if necessary) and click the  button.

Each loadcase selected then needs a corresponding lane factor to be specified.

- Select the **Grid** button and update the factors as shown in **Factor** column of the following loadcase combination table.

Loadcase name	Load Factor		Lane Factor	Lane Factor to be used
HA upper	1.5	1.10	0.956	1.6
HA lower	1.5	1.10	0.956	1.6
KEL upper	1.5	1.10	0.956	1.6
KEL lower	1.5	1.10	0.956	1.6


Table 2

- Click **OK** to return to the combination properties dialog.
- Change the combination name to **HA + KEL both lanes**
- Click **OK** to save the combination definition.

Defining a Basic Load Combination 2

A basic load combination to investigate HA, HB and Knife Edge loads will also be defined.

 Simple Grillage



On the Basic Combination dialog:



Add result loadcases **(3) HA upper, (5) KEL upper, (7) HB lower**

Each loadcase selected needs the factor to be specified.

- Select the **Grid** button and update the factors as shown in **Factor** column of the following loadcase combination table.

Loadcase name	Load Factor		Lane Factor	Lane Factor to be used
	7f1	7f3		
HA upper	1.3	1.10	0.956	1.4
KEL upper	1.3	1.10	0.956	1.4
HB lower	1.3	1.10	0.956	1.4

Table 3

- Click **OK** to return to the combination properties dialog.
- Change the combination name to **HB lower, HA + KEL upper**
- Click **OK** to save the combination definition.

Enveloping the Basic Live Load Combinations



On the Properties dialog:

- Change from the grillage.mys results file to **Model** in the drop down list



Add combinations **(8)HA+KEL both lanes and (9)HB lower, HA+KEL upper**

- Change the envelope name to **Live Load Envelope**
- Click **OK** to save the envelope definition.

 


Note. When either a Max or Min smart combination or envelope is modified the corresponding Max and Min dataset will be updated automatically.

Defining a Smart Combination

Smart load combinations take account of adverse and relieving effects for the loadcase being considered. The Self-weight, Superimposed Dead Load, and the Live Load

Envelope will all be combined using the Smart Load Combination facility to give the design combination.



On the Smart Combination dialog:



Add loadcase **(1)Dead load** and **(2)Superimposed DL** to the Included panel.

- Change from .mys results to **Model** in the drop down list



Add **(10)Live Load Envelope (Max)** and **(11)Live Load Envelope (Min)** to the Included panel.

Each loadcase/envelope selected needs the permanent and variable factors to be specified.

- Select the **Grid** button and update the **Permanent Factor** for the Live Load Envelopes to **0** and ensure the **Variable Factor** for all loadcases are as shown in the table.

Loadcase name	Variable Factor		Permanent (relieving) Factor	Variable Factor to be used
	γ_{f1}	γ_{f3}		
(1)Dead Load	0.15	0.10	1.0	0.265
(2)Superimposed DL	0.75	0.10	1.0	0.925
(10)Live Load Envelope (Max)	-	-	0	1.0
(11)Live Load Envelope (Min)	-	-	0	1.0


Table 4



Note. In this table the permanent factor is based upon the relieving factor from Table 1. The variable factor for Dead Load and for Superimposed Dead Load is based upon the product of the adverse factors for both from Table 1 minus the permanent (relieving) factor. The live load envelopes have already been factored in previous load combinations (Tables 2 and 3) and, as a result, only a unity factor is applied as a variable factor.

- Click **OK** to return to the combination properties dialog.
- Change the envelope title to **Design Combination**
- Click **OK** to save the smart combination.

Selecting Loadcase results






- In the  Treeview right-click on **Design Combination (Max)** and select the **Set Active** option.
- Select entity **Force/Moment – Thick Grillage** results of component **My** from the drop down lists to combine and apply the variable factors based on the moments about the Y axis and click the **OK** button.



Note. When activating a smart combination the selected component is used to decide if the variable factor should be applied. (The variable component is only applied if the resulting effect is more adverse) Viewing results for a component other than the selected component will result in display of the associated values (coincident effects). When the results of an envelope or smart combination are printed the column used to compute the combination or envelope is denoted with an asterisk in the column header.


Selecting Members for Results Processing

Results are to be plotted for selected longitudinal members of the grillage only. The grillage wizard automatically creates groups which are useful in the results processing.

- In the  Treeview select the **Longitudinal Beams** with the right hand mouse button and pick **Set as Only Visible**
- In the  Treeview select **Edge Beams** with the right hand mouse button and pick **Visible**
- Turn off the display of the **Deformed mesh** layer in the  Treeview.
- In the  Treeview double-click the **Mesh** option to add the mesh layer to the  Treeview.
- Click **OK** to accept the default properties.

Bending Moment Diagram

A plot showing the bending moment from the design combination is to be displayed for the selected members of the grillage.

- With no features selected, click the right-hand mouse button in a blank part of the graphics window and select the **Diagrams** option to add the diagram layer to the  Treeview.

The diagram properties will be displayed.

- Select entity **Force/Moment – Thick Grillage** results of component bending moment **My**

- Select the **Diagram Display** tab
- Select the **Label values** option.
- Select the **Orientate flat to screen/page** option.
- Set the **Label font** to size **12**
- Enter an **Angle** of **45** degrees
- Set the **Number of significant figures** to **4**
- Set **% of element length** to **60**
- Click the **OK** button to display the bending moment diagram.



Note. Results plots which are to be printed are best created in the page layout view. This provides a view that will appear similar to the printed output. Labels however may however be difficult to read in the page layout view since they reflect the size of the labels on the final printout. When this situation arises the zoom facility may be used to examine labels of interest more closely.

View
Page Layout Mode

- Switch to page layout view.

Utilities
Annotation >
Window border

- Add a border to the page which contains the title, date and version of the LUSAS software in use.

File
Page Setup...

- Ensure the orientation is set to **Landscape**. Change the page margins to enable the annotation to be added without obscuring the display. Set the left margin to **50**, the right margin to **15** and the top and bottom margins to **10**. Click **OK**

Utilities
Annotation >
Window
Summary

A summary of results will be added to the graphics window showing the loadcase name, diagram component, maximum and minimum diagram values, and element numbers in which the maximum and minimum moments occurs.

- Select the annotation by clicking over any piece of text and then drag it the summary text to an appropriate location on the plot.



Note. The location of any model feature, element or node can be found by using the Advanced Selection facility. This can be used to find the location of the maximum and minimum results values as the element number is output in the window summary text.

As well as creating a results plot, results can be printed for saving or copying to a spreadsheet using standard Windows copy and paste.

Printing results for the active loadcase

Results values may be output to the screen in a tabular listing format for the active loadcase or for any selected loadcase. With Design Combination (Max) currently set active:

Utilities
Print Results
Wizard...

- On the Results Wizard dialog ensure Loadcases **Active** is selected and click **Next**.
- On the Results Entity dialog, select entity **Force/Moment – Thick Grillage**, type **Component** and location **Gauss Point**. Ensure Primary component **My** is selected.
- Set the number of decimal places to **1** and click the **Finish** button to display the results.

LUSAS View: Forces and Moments in Element Local Axes

Loadcase = 12 Results File = ...

Element	Gauss point	Fz	Mx	My(*)	
1	Element	Gauss point	Fz	Mx	My(*)
2	1	1	-391.1	-20.8	21.7
3	1	2	-308.8	-10.8	-50.9
4	1	3	-304.2	-10.8	-112.3
5	1	4	-299.6	-10.8	-172.6
6	1	5	-295.1	-10.8	-232.1
7	1	6	-290.5	-10.8	-290.7
8	1	7	-285.9	-10.8	-348.3
9	1	8	-281.3	-10.8	-405.0
10	1	9	-276.7	-10.8	-460.8
11	1	10	-272.1	-10.8	-515.7
12	1	11	-267.5	-10.8	-569.7
13	2	1	-247.0	-10.1	-567.1
14	2	2	-242.4	-10.1	-616.1
15	2	3	-237.8	-10.1	-664.1

Model info

12:Design Combination (Max) (My)

Properties...

Sort Ascending

Sort Descending

Save as Microsoft Excel...

Copy

Print...

Ctrl+C

Ctrl+P



Note. When the active loadcase is an envelope or smart combination the results printed will show the primary component (**My** in this case) marked with an asterisk.



Note. Hovering over the contents of a cell will display a datatip showing location information and an associated value.

Saving printed results to a spreadsheet

When the Printed Results window is shown a context menu can be displayed allowing the printed results to have their number of significant figures or decimal places changed, be sorted in ascending or descending order, be saved to a spreadsheet or copied for pasting elsewhere.

- Right-click inside the Printed Results window and select **Save as Microsoft Excel...**
- Ensure the save option **All tabs** is selected and click **OK**.

Note that Microsoft Excel may impose limitations on the length of tab name permitted.


Printing results for selected loadcases

Results values may be printed for selected loadcases. To illustrate usage:

Utilities


Print Results
Wizard...

- On the Results Wizard dialog ensure Loadcases **Selected** is chosen and click **Next**.

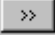- On the Loadcases dialog select results files or load combinations from the model and results panels and press the Add to button  to add them into the Included panel and click **Next**.

- On the Results Entity dialog, select entity **Force/Moment – Thick Grillage**, type **Component** and location **Gauss Point**. Ensure Primary component **My** is selected.

- Set the number of decimal places to **1** and click the **Finish** button to display the results.

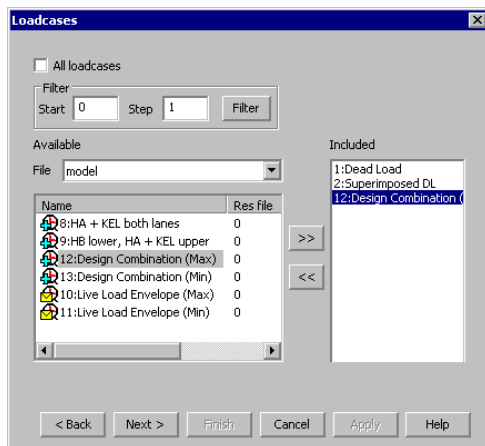

Save the model

File
Save



Save the model file.



Note. If the model file is saved after results processing, all load combinations, envelopes, and graph datasets, if defined, are also saved and therefore do not have to be re-created if the model is amended and a re-analysis is done at a later date.


This completes the example.

Simple Slab Deck

For software product(s):	LUSAS Bridge.
With product option(s):	None.

Description

A simply supported bridge structure consisting of an in-situ slab deck is to be analysed. The geometry of the deck is as shown. The slab has 0.5m thick carriageways and 0.4m thick footways.

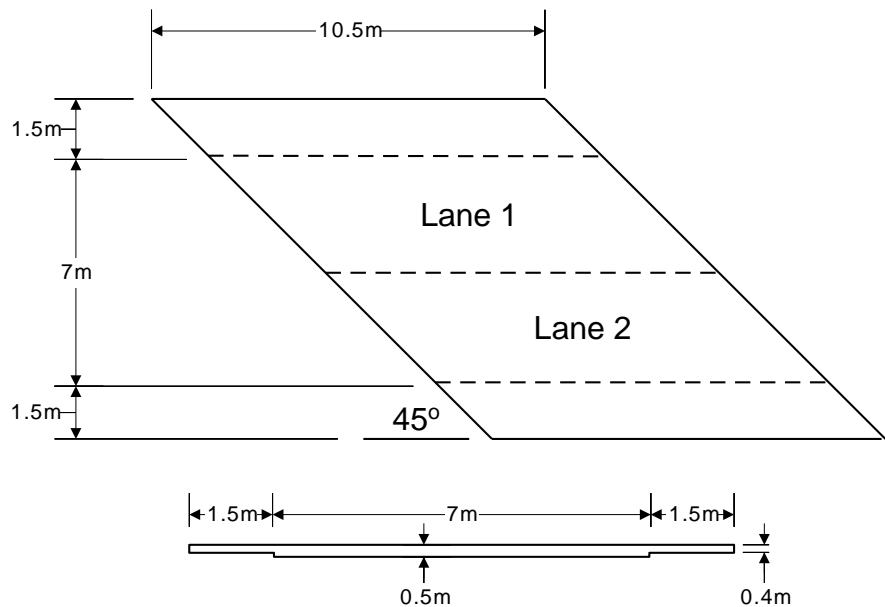

The structure is subjected to loading defined in the Departmental Standard BD 37/88 Loads for Highway Bridges.

The units of the analysis are kN, m, t, s, C throughout.

Objectives

The required output from the analysis consists of:

- ☐ A deformed shape plot showing displacements caused by the imposed loading
- ☐ A diagram showing the bending moments in the slab

Keywords

2D, Shell, Bridge Loading, Moving Load, Eccentricity, Basic Load Combination, Load Envelope, Peak Values, Deformed Mesh, Contours, Graphing, Wood Armer

Associated Files



- ☐ **bridge_slab_modelling.vbs** carries out the modelling of the example.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

 
Creating a new model

- Enter the file name as **bridge_slab**
- Use the **Default** working folder.
- Enter the title as **Simple Bridge Slab Analysis**
- Change the units to **kN,m,t,s,C**
- Ensure a **Structural** user interface is selected.
- Select the Startup template **Standard**.
- Select the **Vertical Z axis** option and click **OK**




Note. It is useful to save the model regularly as the example progresses. Use the undo button to correct a mistake. The undo button allows any number of actions since the last save to be undone.

Defining the Material




- Select material **Concrete** grade **Ungraded** from the drop down list and click **OK** to add the material attribute to the Treeview.
- Select the **Iso1 (Concrete Ungraded)** attribute from the Treeview with the right-hand mouse button and select **Set Default** to make concrete the default material for all newly created features.

 Feature Geometry




Enter coordinates of **(0, 0)**, **(10.5, 0)** to define the lower Line. Use the **Tab** key to move to the next entry field on the dialog. With all the coordinates entered click the **OK** button.

 - Select the line.




Sweep the line through a translation of **-1.5, 1.5, 0** and click **OK** to create a Surface which defines the lower footway.

 - Select the Line at the top of the footway.



Sweep the Line through a translation of **-7, 7, 0** and click **OK** to create a Surface which defines the carriageway.

 - Select the Line at the top of the carriageway.




Sweep the Line through a translation of **-1.5, 1.5, 0** and click **OK** to create a Surface which defines the upper footway.


Meshing

The slab deck will be meshed using a Surface mesh. The number of elements in the mesh can be controlled, by defining Line meshes, on the Lines defining the Surface boundary. Other methods of controlling mesh density are also available.

 
Defining a Surface Mesh



- Select a **Thick shell** element type which is **Quadrilateral** in shape with a **Linear** interpolation order.

- Ensure a **Regular Mesh** that will allow **Transition**, **Irregular** and **Automatic meshing** if possible.
- Enter the mesh attribute name as **Thick Shell**
- Click the **OK** button to add the mesh attribute name to the  Treeview.

To assign the mesh to the model all features must be selected:


- Select all the features of the model, (the shortcut is to press the **Ctrl** and **A** keys at the same time).
- Drag and drop the Surface mesh attribute **Thick Shell** from the  Treeview onto the selected features.


The mesh will be displayed with each Line being split according to a default number of divisions.




Note. One way of controlling the mesh density is by specifying the number of mesh divisions along each Line. Since Modeller is fully associative, this will control Surface mesh density.

Using Line Mesh Divisions

In this example 8 divisions per Line are required for the longitudinal Lines and transverse Line representing the carriageway. A number of Line mesh divisions are defined by default. These can be seen in the  Treeview.

- Select the 4 longitudinal Lines as shown. Hold the **Shift** key down after selecting the first Line to add the other Lines to the selection.
- Still holding the **Shift** key select the 2 transverse Lines of the surface representing the carriageways.
- Drag and drop the Line mesh attribute **Divisions=8** from the  Treeview onto the selected features.


Select these 6 Lines for 'Divisions=8'

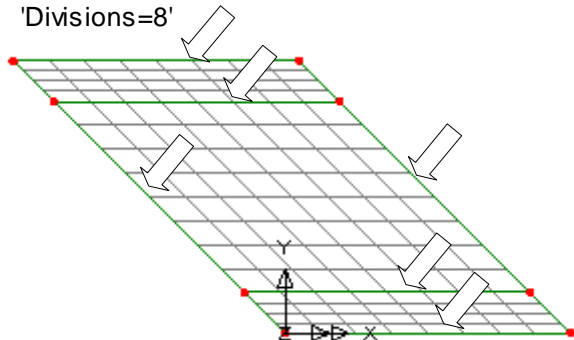


The mesh will be re-displayed to show 8 mesh divisions along each selected line.

Defining the Thickness and Eccentricity

 The slab is 0.5 m thick in the carriageway region and 0.4 m thick beneath the footways.




- Enter a thickness of **0.5** and leave the eccentricity field empty.
- Enter the attribute name as **Thickness 0.5**
- Click the **Apply** button to define the first geometry attribute and allow another dataset to be defined.
- Change the thickness to **0.4**

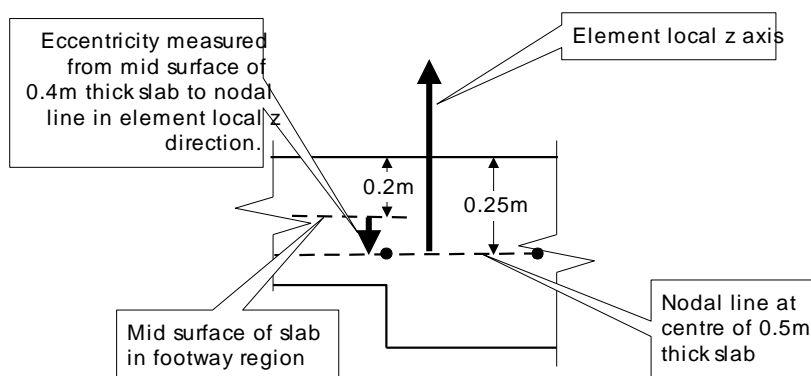


Note. The direction of the eccentricity is measured from the mid-surface of the slab to the nodal line in the local element direction which follows the local surface direction. Since in this example the mid-surface of the slab representing the footway is above the nodal line, and the element local Z axis direction is vertically up, the eccentricity is input as negative.

- Enter the eccentricity as **-0.05**
- Change the attribute name to **Thickness 0.4**
- Click the **OK** button to finish.

The thickness is now assigned to each Surface.

- Select the Surface representing the carriageway.
- Drag and drop the geometry attribute **Thickness 0.5** from the  Treeview onto the selected surface.

Geometric assignments are visualised by default.

- Select the two footway Surfaces, (hold down the **Shift** key to add the second Surface to the selection).
- Drag and drop the geometry attribute **Thickness 0.4** from the  Treeview onto the selected surfaces.



Select the isometric button to see the geometric visualisation on the members.



The Zoom in button can be used to check the eccentricity has been assigned correctly.




Select the Home button to return the model to the default view.




Select the fleshing on/off button to turn-off the geometric visualisation

Supports

The more common types of support are provided in the  Treeview by default. In this example the slab deck is to be restrained in the vertical and lateral direction at the abutment edges, Additionally, a single pinned support will be assigned to one point on the deck to prevent rigid body motion.


Before the supports can be assigned a local coordinate system needs to be defined so the lateral displacement can be restrained in the skew direction along the length of the abutment edges.

- Enter an angle of **45** for the rotation about the **Z-axis**.
- Enter the dataset name as **Skew** and click **OK** to add the Local coordinate attribute to the  Treeview.

To assign the abutment supports:

Attributes
Local Coordinate...

- Select the six transverse Lines representing the end diaphragms (ensure the **Shift** key is used to add to the initial selection)
- Drag and drop the local coordinate attribute **Skew** onto the selected Lines.

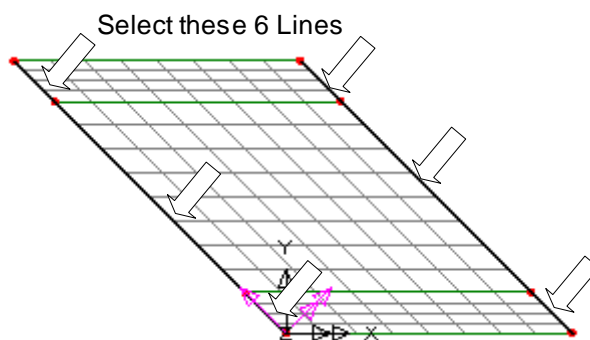


- Drag and drop the support attribute **Fixed in YZ** onto the selected Lines.

The Assign Support dialog will be displayed.

- Ensure that the attribute is assigned to **All loadcases**
- Click the **OK** button to finish.

To assign the pinned support:

- Select the single Point at the origin
- Drag and drop the support attribute **Pinned** onto the selected Point.

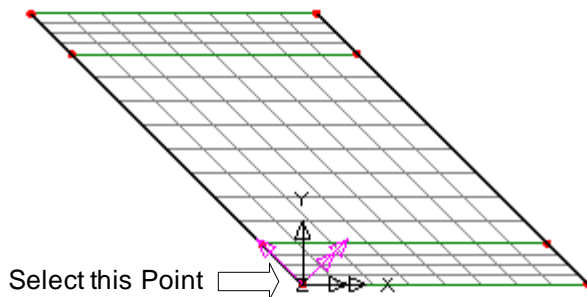

The Assign Support dialog will be displayed.

- Ensure that the attribute is assigned to **All loadcases**
- Click the **OK** button to finish.



Note. Since the slab is flat the in-plane rotation degrees of freedom for the thick shell elements can be eliminated from the element formulation by deselecting the following element option. This will remove ill-conditioning of the equations and reduce the problem size. It should however be noted that if moment supports are to be applied with this option deselected, rotation about the Z axis must be restrained to eliminate mechanisms in the solution.

File
Model Properties...

- Select the **Solution** tab and select the **Element Options** button. Deselect the option to **Assign 6 DOF to all thick shell element nodes** and click the **OK** button to return to the Model Properties, Click **OK** to return to the display.

Defining the Loads

Four loadcases will be defined:

- ☐ The self-weight of the slab (ignoring any surfacing loads).
- ☐ A patch load equivalent to a traffic load over the full length and width of the upper traffic lane.
- ☐ A knife edge load acting at mid-span of the upper lane.
- ☐ An HB vehicle in the lower lane.


Self-weight

The self-weight is defined as a gravity acceleration in the negative Z direction. The correct units are automatically calculated when the gravity loading is selected from the bridge menu.

Bridge
Bridge Loading >
Gravity

Lane Load


The second load will represent a lane load along the upper traffic lane.

- From the Vehicle Loading dialog select the **Lane load (HA Load)** button.
- Select loading code **BD37/88** from the pull-down list.
- Enter the loaded length as **10.5**, leave the notional width set as **3.5**, and set the skew angle as **-45** and click **OK** to add the lane load patch loading to the  Treeview.



Note. Setting a skew angle on this patch load does not skew the whole load – it only skews the ends of the patch load to match the angle of the skewed deck.


Knife Edge Load

- From the Vehicle Loading dialog select the **Knife edge load (KEL load)** button.
- Leave the skew angle as **0** and click **OK** to add the lane load patch loading to the  Treeview.

Bridge
Bridge Loading >
United Kingdom...

Abnormal Loading

- From the Vehicle Loading dialog select the **Abnormal Load (HB Vehicle)** button.
- Leave the **Axle spacing** as **6** and the **Number of HB units** as **45** and click **OK** to add the HB vehicle point load to the Treeview.
- Select **Close** to close the Vehicle Loading dialog.

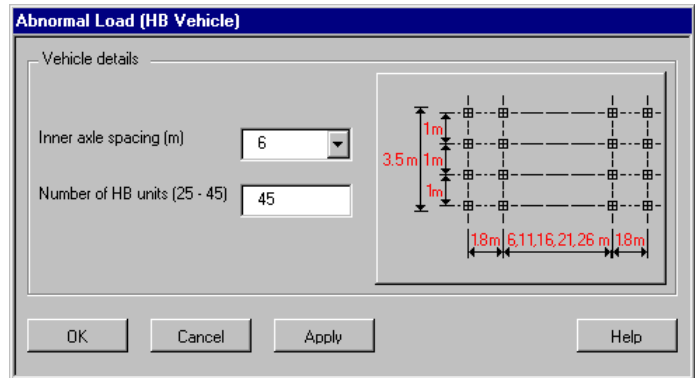

Assigning the Self-weight Load


- To assign the gravity loading select all active features using the **Ctrl + A** keys together and drag and drop the loading attribute **Gravity -ve Z** from the Treeview onto the selected features.

The Loading Assignment dialog will be displayed.

- Ensure that the **Assign to Surfaces** button is selected and click the **OK** button to assign the load to **Loadcase 1** with Load factor of **1**


The load visualisation for Loadcase 1 will be displayed.

- To rename Loadcase 1 in the Treeview select **Loadcase 1** with the right-hand mouse button and choose the **Rename** option. Overtyping the loadcase name with the name **Self Weight**

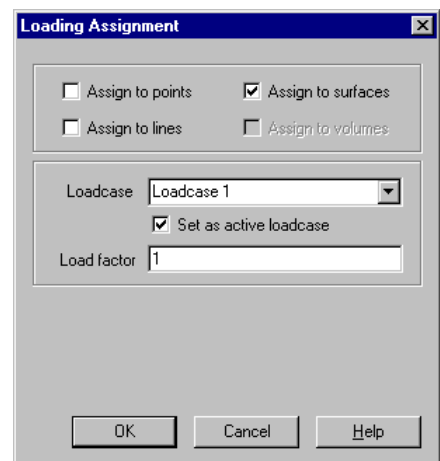


Assigning the Lane Load and Knife Edge Loads

 
Vehicle and lane loads are represented by patch loads that are assigned to Points which may form part of the model or may be defined specifically to locate the bridge loads as in this case:



Enter coordinates as **(-1.5, 6.75)** and click the **OK** button to create a new Point in the middle of the upper lane.

- In the  Treeview move the Geometry layer name down to sit beneath the Attributes layer so that the point defined can be seen.

The patch and knife edge loads can now be assigned to the Point that has just been defined.


- Select the Point defined at the centre of the upper traffic lane.
- Drag and drop the loading attribute **Pch2 (HA BD37/88 10.5m x 3.5m Skew=-45 (Centre) Patch 1)** from the  Treeview onto the selected Point.


The Loading Assignment dialog will appear.

The loading option to **Project over area** will have been automatically selected.


- Overtyping the name of the loadcase to be **HA & KEL upper** and leaving the Load Factor as **1**
- Click on the **OK** to complete the assignment.

The patch load will be visualised on the model.

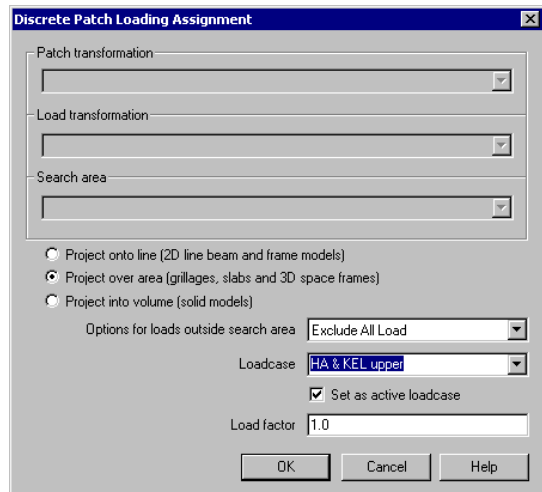

Note. The number of patch load divisions in the patch is set in the  Patch divisions object. By default ten patch divisions are used in the long direction of the patch. For more detailed information on discrete point and patch loads refer to the on-line help.

- Drag and drop the loading attribute **Pch3 (KEL 120kN Width=3.5m Offset=0 Skew=0 (Centre))** from the Treeview onto the selected Point.
- Select the loadcase name **HA & KEL upper** from the loadcase drop down list leave the Load Factor as **1** and click the **OK** button to assign the load.

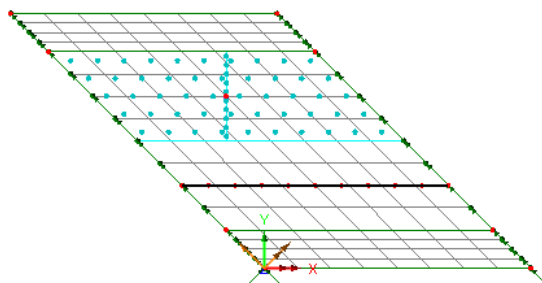

The assigned patch loading for the upper lane should be as shown.



Note. In this example the patch loading has been shaped to match the skew of the deck but it could have alternatively been defined oversize in length and when assigned to the model any loading outside of the model could have been excluded as necessary.



 
Rebuilding a model after a previous failed analysis

If a previous analysis of this example has failed you need to return to this point to continue after having run the supplied file stated.

Assigning the Moving HB Vehicle Load

The HB vehicle will be assigned to the points using the moving load generator. To use this facility a line defining the path of the vehicle must be created.

- Click on a blank area of the model window to clear the current selection.



Enter coordinates of **(-3.25, 3.25)** and **(7.25, 3.25)** to define a Line describing the path of the HB vehicle and click **OK**


- Select the Line just defined.
- Ensure the **Moving vehicle load** is set to **Pnt4: (HB 6m spacing 45 units)**
- Set the option **Move the vehicle along path in equal number of divisions** to **10** and click **OK** to generate loadcases 3 to 13 representing the HB load moving forward across the bridge.




The isometric view button can be used to rotate the model so the load directions can be visualised.

Checking loading

Loads on the model may be visually checked at any time by changing the active loadcase.

- From the  Treeview select **Load attribute=4 Line=17 Pos=6**, click the right-hand mouse button and select the **Set Active** option to see the mid-span position of the moving load.

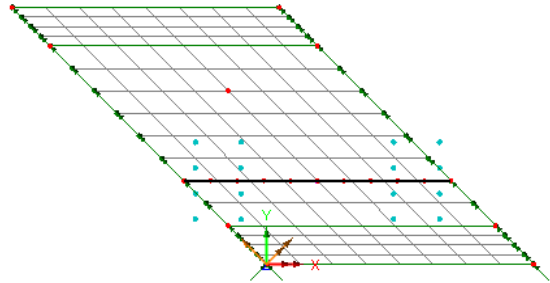

This process may be repeated for any loadcase.

Saving the Model

The model is now complete and the model data should be saved before running analysis.

File
Save



Save the model file.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...




A LUSAS data file name of **bridge_slab** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful

The LUSAS results file will be added to  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **bridge_slab.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **bridge_slab.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




- ☐ **bridge_slab_modelling.vbs** carries out the modelling of the example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **bridge_slab** and click **OK**



To recreate the model up to the point of defining the moving load, select the file **bridge_slab_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.


Now return to the section entitled **Assigning the Moving HB Vehicle Load** earlier in this example and continue from this point.

Viewing the Results

In this section the results produced by the analysis of the slab will be examined. There are a number of ways to do this in LUSAS, allowing users to choose the most appropriate way to present their results. For this problem the following are required:

- ☐ A plot of the deformed mesh.
- ☐ A colour-filled contour plot of bending moments in the X direction due to a load combination.
- ☐ A graph showing the variation of bending moment along a section of the slab.
- ☐ A contour plot of Wood-Armer reinforcement moments in the slab.

Selecting the results to be viewed

Loadcase results can be seen in the  Treeview. If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for the first loadcase (self weight) are set active by default..


Using Page Layout Mode


The model was created using a Working Mode view which allows a model of any size to be created. Results could be viewed using this mode of operation, but in order to allow additional information to be added without obscuring the model, Page Layout Mode can be used instead.

The graphics window will resize to show the model on an A4 size piece of paper in landscape orientation.

- Ensure that left, right top and bottom margins are set to **60, 10, 10** and **10** respectively and click **OK**


To plot a deformed mesh the Attributes and Mesh layers will be hidden.

- Click the right-hand mouse button on the **Attributes** entry in the  Treeview and select the **On/Off** option. The geometry will be hidden from the display.
- Repeat to turn off the Mesh layer.

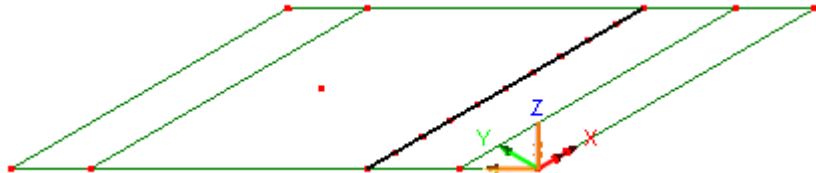

If necessary, use the Isometric view button to rotate the model to the view shown.





Note. When required, the local coordinate system axes can be turned off by deselecting the Show Definition option for the Skew entry in the  Treeview.

 
This page layout view can be saved for subsequent re-use with other models.

Window
Save View...

Enter the view name as **Landscape Page Layout** and click **OK**

Displaying the deformed shape


- In the  Treeview turn-off the display of the **Geometry** layer.
- With no features selected click the right-hand mouse button in a blank part of the Graphics Window and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview.
- Click the **OK** button to accept the default deformed mesh properties values.




The deformed mesh plot for the first loadcase will be displayed.

Contour Plots


Results can be plotted as colour line or filled contour plots. Here, longitudinal bending moments will be plotted as colour filled contours.

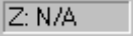 Z: N/A Return the model to the default starting view by pressing the Z axis field on the status bar at the bottom of the graphics window.

- With no features selected click the right-hand mouse button in a blank part of the graphics window and select the **Contours** option to add the contours layer to the  Treeview.


The contours properties dialog will be displayed.

- Select Entity **Force/Moment - Thick Shell** Component moments in the X direction **Mx**
- Click the **OK** button to display contours of moments in the X direction.

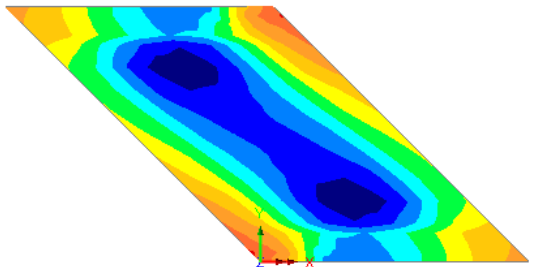


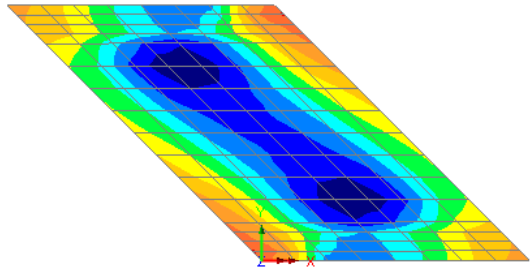
Re-ordering the display of the layers



Note. The order of the layers in the  Treeview governs the order in which the layers are displayed in the graphics window with layer names at the top of the list drawn to the screen first. To see the mesh layer on top of the contours layer the mesh layer

needs to be moved down the  Treeview to a position after the contours layer.

- In the  Treeview select the **Deformed mesh** layer, click the right-hand mouse button and select the **Move Down** option. (This can also be done by dragging and dropping a layer name on top of another layer name).



Note. Contours of results may


be displayed which are either, averaged at the nodes to give a smoothed contour display, or unaveraged to contour on an element by element basis. Unaveraged nodal results are useful for checking for sufficient mesh refinement (since they will display inter-element discontinuities in the solution). They are also used to prevent the averaging of stresses across elements with dissimilar material or geometric properties.

Moving information on the annotation layer

Text and other objects such as the contour key may be moved after their initial placement.

- Click on one of the items of text on the contour key. (This will select the key and enable it to be moved).
- Click and drag the object to a new position on the left-hand margin of the page.


Marking Peak Values

- With nothing selected click the right-hand mouse button in a blank part of the graphics window and select the **Values** option to add the values layer to the  Treeview.

The values properties dialog will be displayed.

- Select **Force/Moment - Thick Shell** contour results of bending moment **M_x**
- On the same dialog, select the **Values Display** tab and ensure the **Maxima** and **Minima** check boxes are selected to display the top 1% of results.
- Set the number of significant figures to 4
- Change the angle to **45** degrees
- Select the **Choose Font** button and set the text size to **16** and click **OK**


- Click the **OK** button to redisplay the contours with peak values marked. Note that on the diagram shown above the mid-span values have been artificially coloured white in order to be visible when printed.

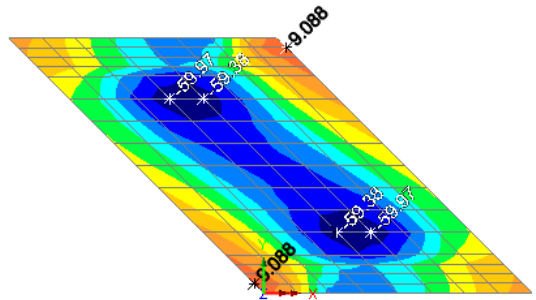


Defining an Envelope

Envelopes are used to automatically assemble the worst effect from a selection of loadcases, combinations, or other envelopes. In this example an envelope is to be assembled to show the worst effect from the moving HB vehicle.

Utilities
Envelope

Two envelope attributes will be created in the  Treeview.

To include just the moving load loadcases in the envelope:

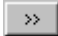- With **bridge_slab.mys** selected from the drop-down list select **(3) Load attribute=4 Line 17 Pos=1 Dir=Fwd** from the loadcase panel. To select all HB moving loadcases hold down the **Shift** key, scroll down the list and select **(13) Load attribute=4 Line 17 Pos=11 Dir=Fwd** and click on the  button to add all the selected datasets to the Included panel.
- Change the name to **Moving load lower** and click **OK**




Note. Changing the properties of the max or min envelope will change the definition of both envelopes.


Defining a Combination


Combinations can be used to view the combined effects of several results loadcases, combinations or envelopes.

Utilities
Combination >
Basic

A combination attribute **Combination 1** will be created in the  Treeview.

The combination properties dialog will appear. Loadcases Self Weight, HA & KEL upper and the moving load envelope are to be included in the combination.

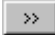- With the **bridge_slab.mys** file selected from the drop-down list select both **Self Weight** and **HA & KEL upper** and click the  button to add the loadcases to the combination dataset with a factor of **1**

- Change from **bridge_slab.mys** to the **model** file in the drop down list.
- Select the envelope **Moving load lower (Max)** and click the  button to add the loadcase to the combination dataset




Note. By default loadcases are added to the combination with a factor of 1. This factor may be changed by selecting the loadcase in the Included panel and changing the load factor in the text box provided. Alternatively the factors may be changed in a grid by selecting the Grid button.

- Change the combination name to **Max Design Combination** and click the **OK** button to finish.




Note. To obtain the correct effect from the combined loads the combination should only include one occurrence of each loadcase. Envelope and Combination definitions are held with and saved when a model file is saved.


Selecting and Viewing the Combination Results

- In the  Treeview right-click on **Max Design Combination** and select the **Set Active** option.
- Select **Force/Moment - Thick Shell** results of component **Mx** and click **OK**

The contour plot for Mx from the load combination will be displayed.



Note. The values layer is still listed in the  Treeview so the maximum and minimum values of Mx for the load combination will also be shown.

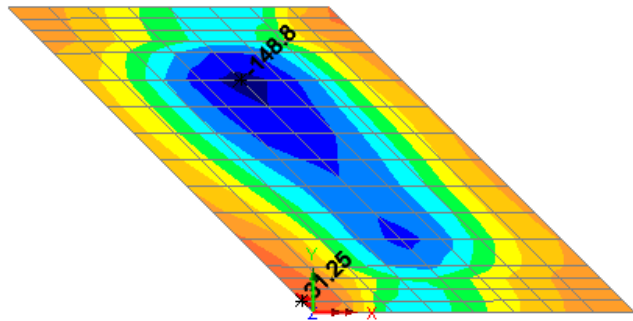

Graphing the Results of a Slice

A graph is to be plotted showing the variation in bending moment through a specified section of the slab.

If the model is in the XY plane the By Cursor dialog will appear.

- Ensure that **Snap to grid** is selected with a grid size of **1**

- Click the **OK** button.
- Click and drag the cursor along the centre of the lower lane (Y=3) to define the location of a section slice through the slab.



Note. The Y ordinate of the slice can be seen in the status bar **Y:3**. The X and Y scales on the sides of the window will also help this selection.

The graph X axis values of distance through the deck are defined by the slice section. The graph Y axis results now need to be specified on the slice data dialog.

- Select **Force/Moment - Thick Shell** results for Bending Moment in the X direction **Mx** and click the **Next >** button.

The graph Y axis results have now been defined and title information for the graph can be added.


- Enter the graph title as **Bending Moment Mx along lower lane**
- Leave the graph X and Y axis names blank.
- Click the **Finish** button to display the graph.



Note. If the graph axes labels are left unspecified default names will be used.



Note. The graph properties can be modified by clicking the RH mouse button in the graph window and selecting the Edit Graph Properties option.

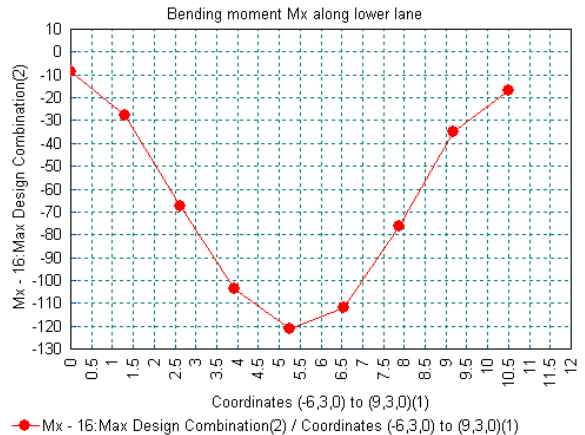


Close the graph window.




Click on the selection mode button to return to normal cursor mode.

Wood Armer Reinforcement Plots

- In the  Treeview double-click on the **Contours** layer.

The contour properties dialog will be displayed.

- With the **Force/Moment - Thick Shell** entity selected, select Component **My(B)** to display results of Wood Armer moments in the Y direction in the bottom of the slab.
- Click the **Wood Armer** button.
- On the Wood Armer Options dialog enter a **Reinforcement skew angle** of **135** degrees.
- Click the **OK** button to return to the contour properties dialog.
- Click the **OK** button to display a plot of Wood Armer contours of My(B) for the active combination.

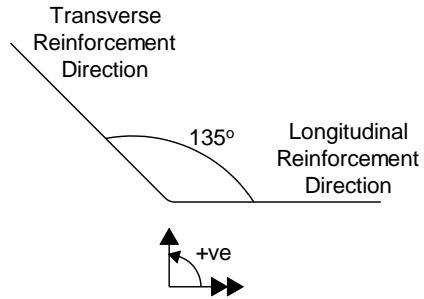

Note. Specifying the distance from top or bottom surface to centre of top or bottom reinforcement is only used when plotting contours of M[UtilB] or M[UtilT]



Caution. The selected results component (My(B)) is different to that being used to compute smart combinations and/or envelopes (Mx) and therefore the results displayed will be coincident effects.

- Click the **OK** button to accept this.



Caution. The contour plot will show bending moment contours My(B) but the Values layer will currently show values of bending moments in the X direction. i.e. Mx since these were specified previously.

- Click **Yes** to change the values layer to show maxima and minima values of My(B).


Save the model



Save the model file.



Note. When the model file is saved after results processing, all load combinations, envelopes, and graph datasets, if defined, are also saved and therefore do not have to be re-created if the model is amended and a re-analysis is done at a later date.

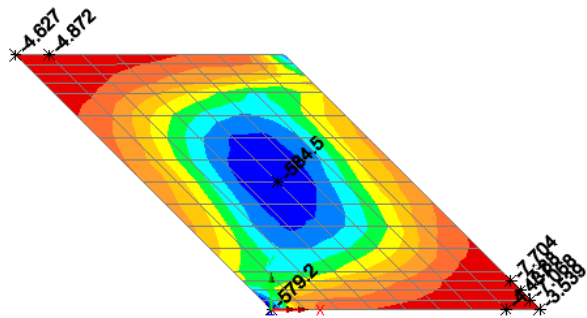

File _____
Save _____

This completes the example.



Note. A separate example covers Wood Armer slab assessment in more detail.

Wood-Armer Bridge Slab Assessment

For software product(s):	LUSAS Bridge.
With product option(s):	None.


Description

A Wood Armer slab assessment is to be carried out on a 15m long, 9.8m wide single span, reinforced concrete bridge deck. The deck has a skew angle of 11.3 degrees and is 0.9m deep.

A load combination comprising self weight, upper and lower lane loads, and upper and lower knife edge is to be created from the results obtained. Slab

reinforcement is to be arranged orthogonally and has capacities of 1700 and 300 kNm in the chosen Mx and My directions.

Units of kN, m, t, s, C are used throughout.

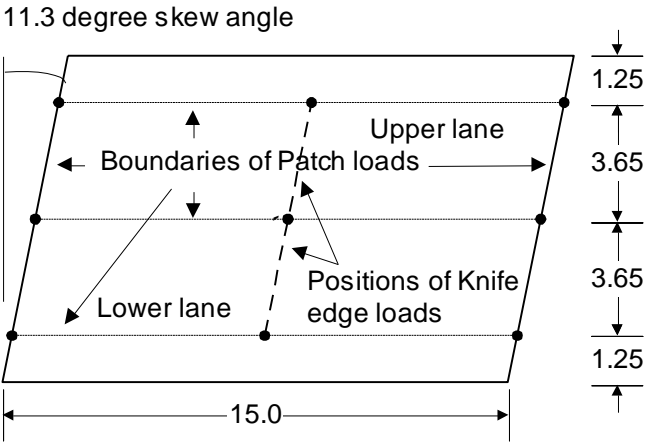

All dimensions in metres



Note. In order to create a generic example, no reference is made to any particular design code or loadcase type.

Keywords

2D, Simple Slab, Skew Angle, Wood-Armer Reinforcement, Wood-Armer Assessment, Safety Factors, Self Weight, General Loading, Knife Edge Loading, General Patch Loading, Combination, Contour Plotting, Display Peak Values.

Associated Files



- ❑ **wood_armer_modelling.vbs** carries out the modelling of the example.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **wood_armer**
- Use the **Default** working folder.
- Enter the title as **Wood Armer Slab Example**
- Select units of **kN,m,t,s,C** from the drop-down list provided.
- Ensure the **Structural** user interface is selected.
- Ensure the **Standard** startup template is selected
- Select the **Vertical Z axis** option
- Click the **OK** button.



Note. Save the model regularly as the example progresses. Use the Undo button to correct any mistakes made since the last save was done.

Feature Geometry


Geometry
Surface >
Coordinates...



Enter coordinates of (0, 0), (15, 0), (16.96, 9.8) and (1.96, 9.8) and click **OK** to define the slab as a single Surface.

Next, the edge of carriageway and lane widths will be defined by copying the lower Line of the main span.

- Select the lower horizontal Line of the model.

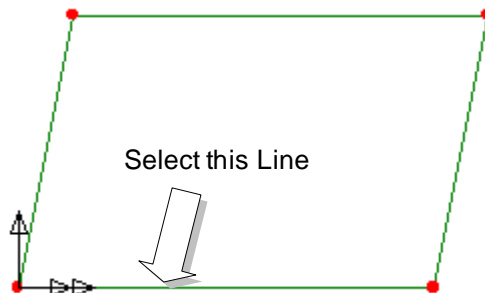

Geometry
Line >
Copy...



Enter the **X** translation as **0.25** [this is derived from $1.25 * \tan(11.3 \text{ degrees})$]

- Enter the **Y** translation as **1.25** metres, and click the **OK** button.

The edge of the lower carriageway will be drawn.

To define 2 notional lane widths of 3.65 metres.


- Select the Line just drawn.

Geometry
Line >
Copy...




Enter the **X** translation as **0.73** [this is derived from $3.65 * \tan(11.3 \text{ degrees})$]

- Enter the **Y** translation as **3.65** metres.
- Enter the number of copies as **2**
- Click the **OK** button to finish.

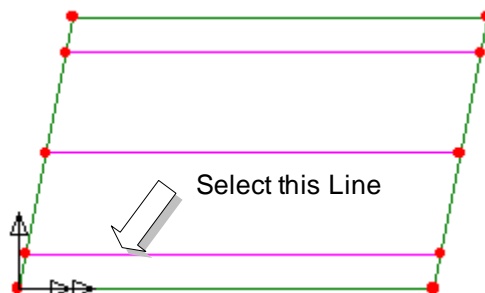


Meshing


- Select **Thick plate, Quadrilateral**, elements with **Linear** interpolation.
- Deselect the automatic divisions option and enter **10** divisions in the local **X** direction and **7** divisions in the local **Y** direction.
- Enter the attribute name as **Thick Plate** and click the **OK** button to finish.

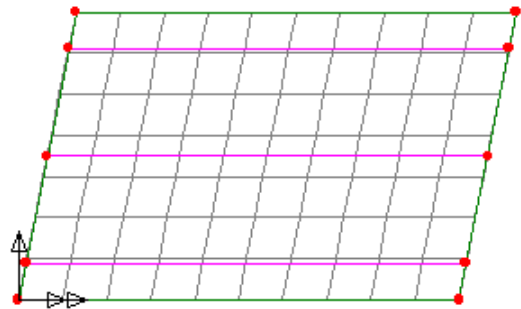

LUSAS will add the Surface mesh attribute to the  Treeview.



- Select the whole model using the **Ctrl** and **A** keys together.
- Drag and drop the Surface mesh attribute **Thick Plate** from the  Treeview onto the selected features.



Note. At any time the mesh (and other features) displayed in the Graphics area may be turned on or off by right-clicking on the layer name in the  Treeview and selecting the On/Off option.

- Turn off the display of the **Mesh** as just described.

Geometric Properties

 
- Enter a thickness of **0.9** metres. Enter the attribute name as **Thickness 0.9**. Click **OK** to add surface geometry attribute to the  Treeview.
- Select the whole model.
- Drag and drop the geometry attribute **Thickness 0.9** from the  Treeview onto the selected features.



Select the fleshing on/off button to turn-off the geometric visualisation. If at any time during the example you wish to visualise the geometry select this button.

Attributes
Mesh >
Surface...

Attributes
Geometric >
Surface...



Material Properties


- Select material **Concrete** from the drop down list, leave grade as **Ungraded** and click **OK** to add the material attribute to the Treeview.
- With the whole model selected, drag and drop the material attribute **Iso1 (Concrete Ungraded)** from the Treeview onto the selected features, ensuring that **Assign to surfaces** is selected click **OK**

Supports

LUSAS provides the more common types of support by default. These can be seen in the Treeview. Both inclined edges of the slab are to be simply supported in the Z direction.

Assigning the Supports

- Select the 2 inclined Lines at either end of the slab. (hold the Shift key down to add to the first selection).
- Drag and drop the support attribute **Fixed in Z** from the Treeview onto the selected features.
- Ensure **Assign to lines** and **All loadcases** are selected and click **OK**

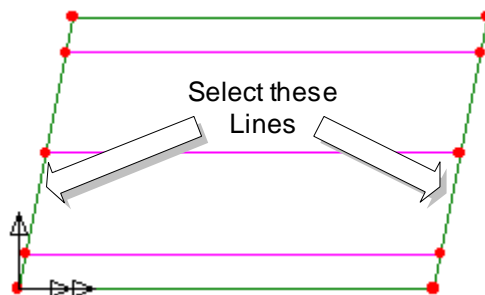

The supports will be visualised.

Loading


Five loadcases will be considered, with an additional two combinations of these loads created at the results processing stage.

Modifying the Geometry to assign loading

To position knife edge loads additional Points are required at mid-span positions.

- Select the 3 horizontal Lines that define the traffic lane boundaries. (Hold the **Shift** key down to add to the selection)
- For each Line enter the number of divisions required as **2**
- Ensure the **Delete original lines after splitting** option is selected and click **OK**

Additional Points will be created at mid-span and existing Lines will be broken into 2 new Lines. The new Points will be used later to define the position of the mid-span knife edge loads for each traffic lane.

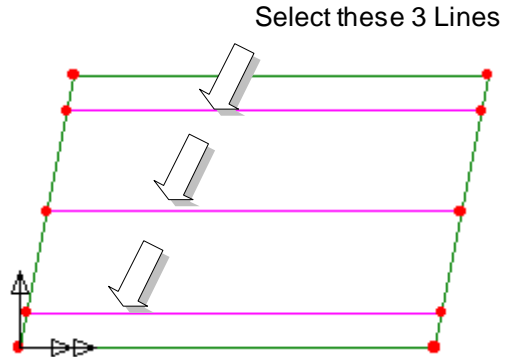


Loadcase 1 - Self weight

- Select the **Body Force** option and click **Next**
- Define the linear acceleration due to gravity in the **Z** direction as **-9.81**
- Enter the attribute name as **Self Weight** and click **Finish**
- With the whole model selected, drag and drop the loading attribute **Self Weight** from the Treeview onto the selected features ensuring the loading is assigned to Surfaces as **Loadcase 1** with a load factor of **1** and click **OK**

The self weight loading will be displayed.

- In the Loadcases Treeview right click on **Loadcase 1** and select the **Rename** option.
- Rename **Loadcase 1** to **Self Weight**

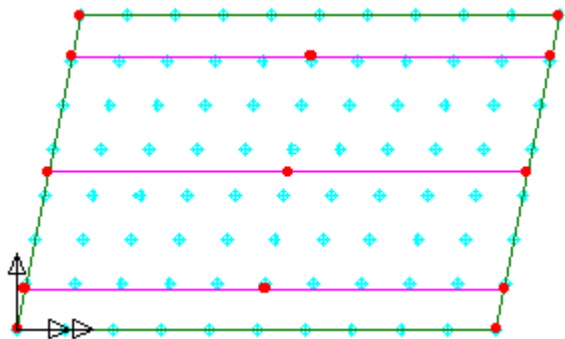


Loadcase 2 - Lane load (lower lane)

- Select the first point, hold down the **Shift** key and select point 2, 3 and 4 in the order shown to define the patch area.

- In the Discrete panel select the **Patch** option and click **Next**

The coordinates of the Points selected will be inserted into the coordinate fields.

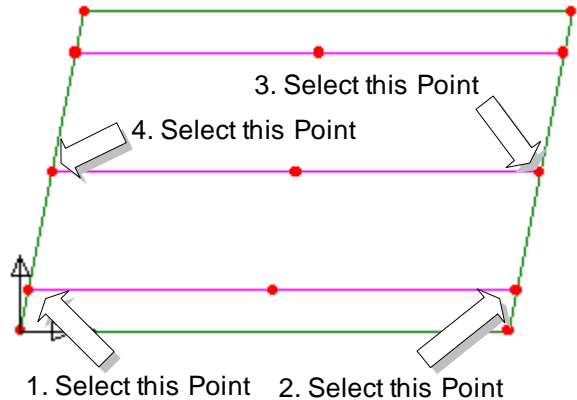


- Enter a load value of **-15** (kN/m^2) for each coordinate.
- De-select the Use default button in the Patch load divisions panel and enter **15** in the x direction and **0** in the y direction so that the number of loading points in the patch y direction will be computed automatically from the aspect ratio of the patch.
- Enter the attribute name as **Lane load (lower)** and click **Finish**



Note. The order in which the Points are selected determines the local x and y directions of the patch load. The local x direction is from the first Point to the second Point selected. The local y direction is from the second to the third Point.

- Select the Point shown at the origin of the structure.
- Drag and drop the loading attribute **Lane load (lower)** from the Treeview onto the selected Point.
- Ensure **Options for loads outside search area** is set to **Exclude all load**

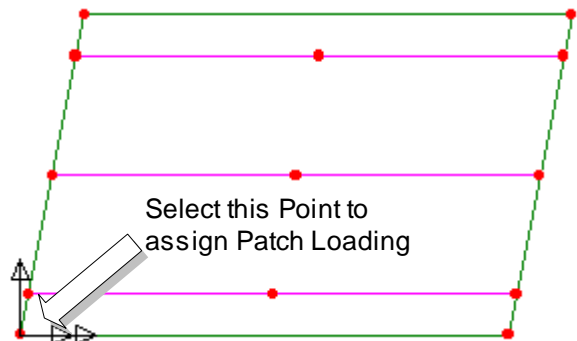

- Enter the loadcase as **Lane load (lower)** with a load factor of **1** and click **OK**

The loading will be displayed.




Note. Because the coordinates of the patch load were taken from the coordinates of the Points, the patch load must be assigned to the Point at the origin of the structure.

Loadcase 3 - Lane load (upper lane)

- Select the Points in the order shown to define the patch area for the upper lane.
- In the Discrete panel select the **Patch** option and click **Next**

The coordinates of the Points selected will be inserted in the coordinate fields.

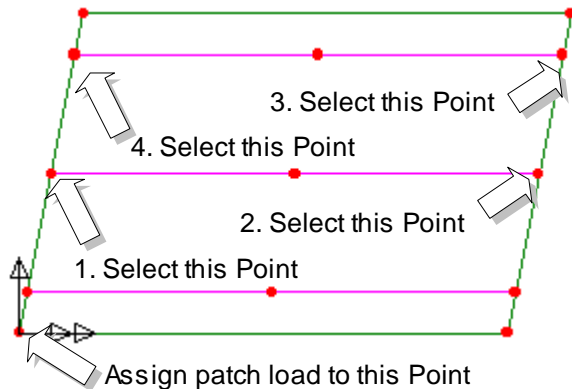


- Enter a load value of **-15** (kN/m²) for each coordinate.
- De-select the Use default button in the Patch load divisions panel and enter **15** in the x direction and **0** in the y direction.
- Enter the attribute name as **Lane load (upper)** and click **Finish**
- With the Point at the origin of the structure selected, drag and drop the loading attribute **Lane load (upper)** from the Treeview onto the selected Point.
- Ensure **Options for loads outside search area** is set to **Exclude all load**
- Enter the loadcase as **Lane load (upper)** with a load factor of **1** and click **OK**

Loadcase 4 - Knife edge load (lower lane)

- Select the Points in the order shown to define the knife edge load position for the lower lane.
- In the Discrete panel select the **Patch** option and click **Next**
- Select the **Straight Line** option.

The coordinates of the Points selected will be inserted in the coordinate fields.

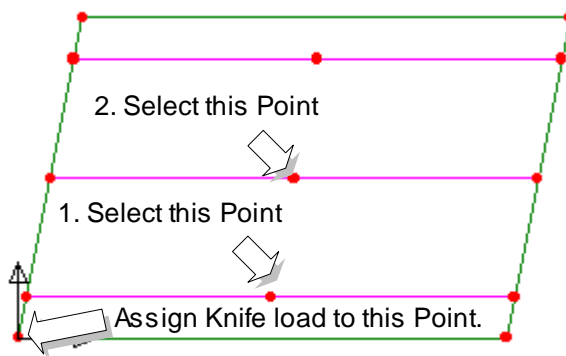

- Enter a load value of **-32.24** (kN/m²) for each coordinate.
- De-select the Use default button in the Patch load divisions panel and enter **15** in the x direction.
- Enter the attribute name as **Knife edge load (lower)** and click **Finish**




Note. The order in which the Points are selected determines the local X direction of the knife edge load. The Local X direction is from the first Point to the second Point selected.


- With the Point at the origin selected, drag and drop the loading attribute **Knife edge load (lower)** from the Treeview onto the selected Point.
- Enter the loadcase as **Knife edge load (lower)** with a load factor of **1** and click **OK**

Load case 5 - Knife edge load (upper lane)


- Select the Points in the order shown to define the knife edge load position for the upper lane.
- Select the **Discrete Patch** option and click **Next**
- Select the **Straight Line** option.


The coordinates of the Points selected will be inserted in the coordinate fields.

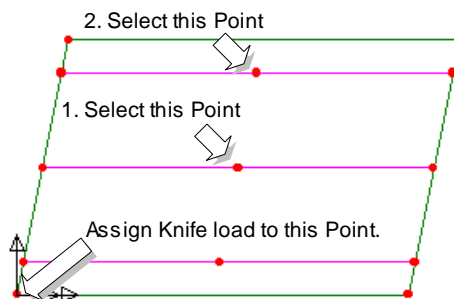


- Enter a load value of **-32.24** (kN/m²) for each coordinate.
- De-select the Use default button in the Patch load divisions panel and enter **15** in the x direction.
- Enter the attribute name as **Knife edge load (upper)** and click **Finish**
- With the Point at the origin selected, drag and drop the loading attribute **Knife edge loading (upper)** from the  Treeview onto the selected Point.
- Enter the loadcase as **Knife edge load (upper)** with a load factor of **1** and click **OK**

Visualising Loadcases

Loadcases can be visualised at any time by activating each loadcase in the  Treeview.

- From the  Treeview select the **Lane load (lower)** loadcase, click the right-hand mouse button and select the **Set Active** option.

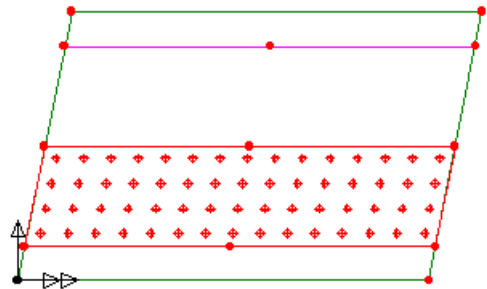

Saving the model

File
Save



Save the model file.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...




A LUSAS data file name of **wood_armer** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **wood_armar.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **wood_armar.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




- ☐ **wood_armar_modelling.vbs** carries out the modelling of the example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **wood_armar** and click **OK**



- To recreate the model, select the file **wood_armar_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.



Rerun the analysis to generate the results.

Viewing the Results

Combinations

A combination will be created to apply the ultimate limit state (ULS) factors and lane factors to loadcases 1 to 5. Typical ULS and lane factors can be found in relevant design codes.

Dead load factor ULS combination


- ☐ Dead load factor $\gamma_{fl} = 1.15$
- ☐ Additional factor $\gamma_{f3} = 1.1$

Live load factors for ULS combination


- ☐ Lane factors $\beta_1 = 1.0$ and $\beta_2 = 1.0$
- ☐ Live load factor $\gamma_{fl} = 1.5$
- ☐ Additional factor $\gamma_{f3} = 1.1$

Loadcase	Factor Calculation	Factor
Self weight	$\gamma_{fl} \times \gamma_{f3}$	1.265
Lane load (lower)	$\beta_1 \times \gamma_{fl} \times \gamma_{f3}$	1.65
Lane load (upper)	$\beta_2 \times \gamma_{fl} \times \gamma_{f3}$	1.65
Knife edge load (lower)	$\beta_1 \times \gamma_{fl} \times \gamma_{f3}$	1.65
Knife edge load (upper)	$\beta_2 \times \gamma_{fl} \times \gamma_{f3}$	1.65

Defining a Combination

Combinations can be created to view the combined effects of multiple loadcases on the structure. A combination dataset **Combination 1** is to be created in the  Treeview

The combination properties dialog will appear. All 5 loadcases should be included in the load combination panel.

- Select loadcase **Self Weight** hold the **Shift** key down, scroll down, and select **Knife edge load (upper)**.
- Click the  button to add the loadcases to the combination dataset.



Note. To obtain the correct effect from the combined loads in this example the Combination should only include one occurrence of each loadcase.

Assigning load factors

- In the Included panel on the Combination dialog, select the **Self Weight** loadcase and enter load factor of **1.265** in the load factor text box.

- For each of the other 4 loadcases, select each loadcase in turn and enter a factor of **1.65**
- Select the **Grid** button to check all the factors are entered correctly and click **OK** to return to the combination dialog.
- Click **OK** to create the combination dataset.

Selecting Loadcase results

- In the Treeview right-click on **Combination 1** and select the **Set Active** option.
- If present in the Treeview turn off the **Geometry** and **Attributes** layers.
- Turn on the display of the **Mesh** layer in the Treeview.

Contour Plots

- With no features selected click the right-hand mouse button in a blank part of the graphics window and select the **Contours** option to add the contours layer to the Treeview.

The contour properties dialog will be displayed.


Moments in the X direction

- Select **Force/Moment - Thick Plate** contour results.
- Select the **MX** component.
- Click the **OK** button to display contours of MX for Combination 1.
- To display the mesh on top of the contours, select the **Mesh** entry in the Treeview and drag on drop it on top of the **Contours** entry in the Treeview.

Marking Peak Values


- With nothing selected click the right-hand mouse button in a blank part of the graphics window and select the **Values** option to add the values layer to the Treeview.


The properties dialog of the values layer will be displayed.

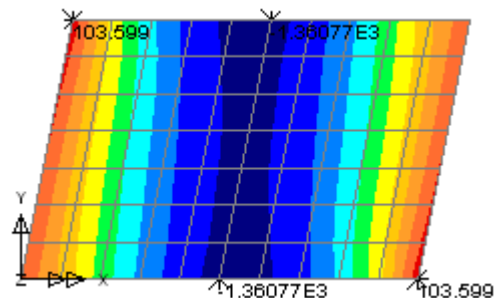

- Select the **Force/Moment – Thick Plate** entity.
- Select the **MX** component.
- Select the **Values Display** tab and set **Maxima** and **Minima** values to display the moments for the top 0% of results.
- Click the **OK** button to redisplay the contours with peak values marked.

Moments in the Y direction


- In the  Treeview double-click on the **Contours** layer.
- Select the **Force/Moment – Thick Plate** entity.
- Select the **MY** component.
- Click the **OK** button to display contours of MY for Combination 1.

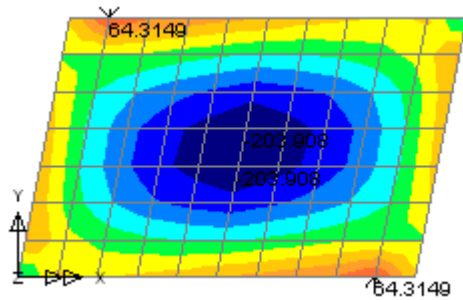


Note. The values layer is currently displaying results for MX.

- Select **Yes** to change the values layer results to match those of the contours layer.

Moments in XY direction

- In the  Treeview double-click on the **Contours** layer.
- Select the **Force/Moment – Thick Plate** entity.
- Select the **MX** component. Click the **OK** button.
- Select **Yes** to change the values layer results to match those of the contours layer.

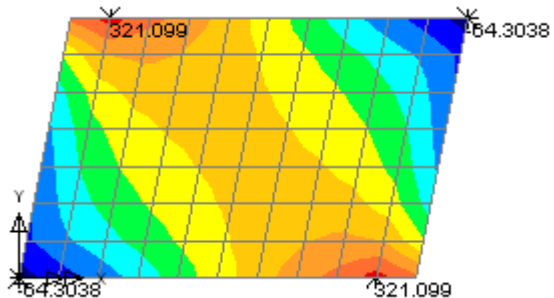


Wood-Armer Reinforcement Moments




Note. For the following section, it is assumed that you are familiar with the theory of Wood Armer as an explanation is beyond the scope of this example. If additional

information is required consult the LUSAS Theory Manual. Initially, Wood Armer reinforcement moments $M_x(B)$ in the bottom surface of the slab will be calculated.

Wood Armer Moments in X direction of the bottom of the slab


- In the  Treeview double-click on the **Contours** layer.
- Select the **Force/Moment - Thick Plate** entity.
- Select the **$M_x(B)$** component to view contour of Wood Armer moments in the X direction for the bottom of the slab. Click the **OK** button.
- Select **Yes** to change the values layer results to match those of the contours layer.

From the resulting Wood Armer plot it can be seen that the maximum value of $M_x(B)$ is 1545 kNm. This value is compared with the maximum slab capacity (1700 kNm) to determine the safe load carrying capacity. In this case the slab passes the assessment.

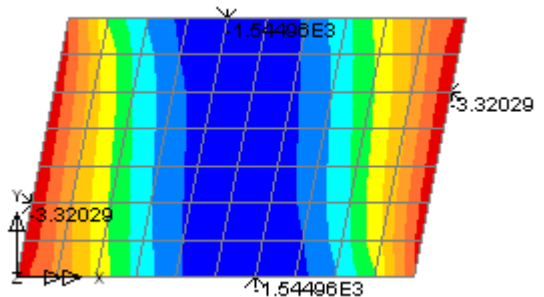

Wood Armer Moments in Y direction of the bottom of the slab


The Wood Armer moments in the direction of the reinforcement on the bottom Surface $M_y(B)$, are now to be examined.

- In the  Treeview double-click on the **Contours** layer.
- Select the **Force/Moment - Thick Plate** entity.
- Select the **$M_y(B)$** component to view contours of Wood Armer moments in the Y direction for the bottom of the slab.
- Click the **OK** button.
- Select **Yes** to change the values layer results to match those of the contours layer.

The plot indicates a maximum applied sagging Wood Armer moment $M_y(B)$ of 389 kNm. This exceeds the slab capacity of 300 kNm and therefore this slab fails assessment.



Note. Normally the analysis would be continued to calculate the reduction in live load that would be necessary to obtain a situation where the applied moment $M_y(B)$ equals the capacity of the slab $M_y^*(B)$. This would result in a restriction in the load carrying capacity of the slab.

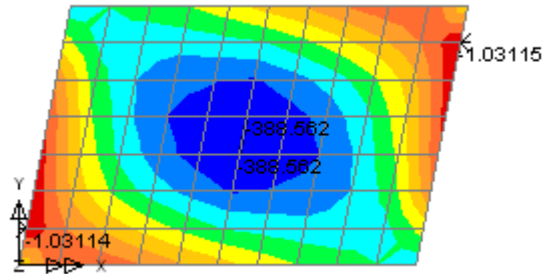

Wood Armer - Discussion

It is generally accepted that the Wood Armer equations when used in the assessment of the load carrying capacity of slabs provide a safe but conservative estimate of the structural capacity. It is possible to obtain significant improvements using alternative equations based on the fundamental principles of Wood Armer.



Note. A detailed explanation of the modified equations is beyond the scope of this example, however the user may find it beneficial to consult the following references:

- ❑ **Concrete Bridge Design to BS5400.** L.A Clark. Published by Construction Press. Appendix A. Equations For Plate Design.
- ❑ **The Assessment of Reinforced Concrete Slabs.** S.R Denton, C.J Burgoyne. The Structural Engineer. Vol. 74. No. 9. May 7.


In outline, the method adopts a safety factor approach, where the user inputs the slab capacity of the reinforcement and the reinforcement skew angle. Since the slab can potentially fail in flexure about any axis in the plane of the slab, the method examines the applied moment field (M_x , M_y , M_{xy}) against the moment capacity field (M_x^* , M_y^* , M_{xy}^*) for all possible reinforcement skew angles.


The method returns minimum safety factors for top (hogging) and bottom (sagging) reinforcement for each nodal position.



Note. Top and bottom safety factors are possible at any single position due to the application of mixed moment fields.


Wood Armer Assessment

- In the  Treeview delete the **Values** layer.

- In the  Treeview double-click on the **Contours** layer and select the **Force/Moment – Thick Plate** entity.
- Select the **MUti(B)** component to select contours of Utility factors in the bottom of the slab.
- Click the **Wood Armer** button.
- On the Wood Armer Options dialog ensure the **Reinforcement skew angle** is set to **90** and the Distances to the centre of the reinforcement are set to **0**.

The moment capacity of the slab in the sagging and hogging zones needs to be entered.

- Enter the Resistive moment in the x direction (top) as **1700**
- Enter the Resistive moment in the y direction (top) as **300**
- Enter the Resistive moment in the x direction (bottom) as **1700**
- Enter the Resistive moment in the y direction (bottom) as **300**
- Click the **OK** button to return to the contour dialog.
- Click the **OK** button to display contours of safety for the moment capacities entered.

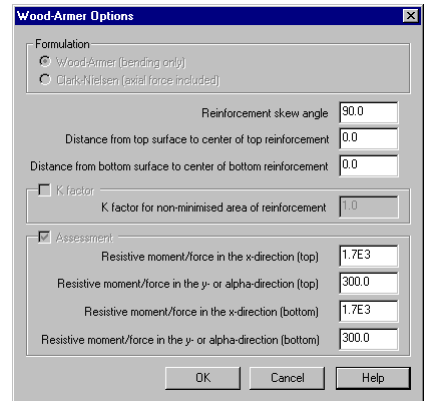

Wood-Armer Options

Formulation:

- ☒ Wood-Armer (bending only)
- ☐ Clark-Nielsen (axial force included)

Reinforcement skew angle: 90.0

Distance from top surface to center of top reinforcement: 0.0

Distance from bottom surface to center of bottom reinforcement: 0.0

☐ K factor

K factor for non-minimised area of reinforcement: 1.0

☒ Assessment

Resistive moment/force in the x-direction (top)	1.7E3
Resistive moment/force in the y- or alpha-direction (top)	300.0
Resistive moment/force in the x-direction (bottom)	1.7E3
Resistive moment/force in the y- or alpha-direction (bottom)	300.0

OK Cancel Help




Note. Specifying the Distance from top or bottom surface to centre of top or bottom reinforcement is not applicable for Thick Plate elements. It is only used with Shell and Ribbed Plate Elements.



Note. In the Wood Armer dialog, hogging moment capacity values are entered as +ve (positive) values and the sagging moment capacity values are entered as -ve (negative) values.


Changing the Contour range

If a utility factor plot shows values of less than 1.0, the slab is deemed to satisfy the reinforcement criteria and

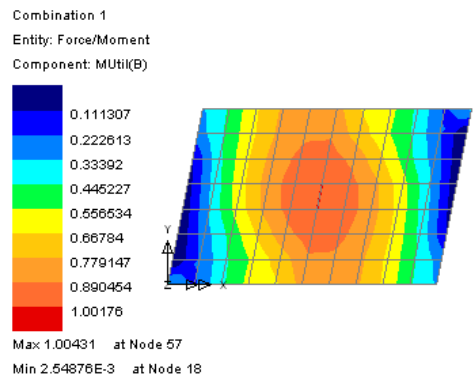


no live load reduction is necessary.

To help clarify whether any regions of the slab have failed the assessment the contour range will be modified.

- In the  Treeview double-click on the **Contours** layer and select the **Contour Range** tab.
- Set the contour **Interval** as **0.2** and the **Value to pass through** as **1**
- Click the **OK** button to finish.

Contours of utility factors from 0 to 1 will be displayed showing a small region in the centre of the slab that has failed the assessment according to the moment capacities used.

This completes the example.

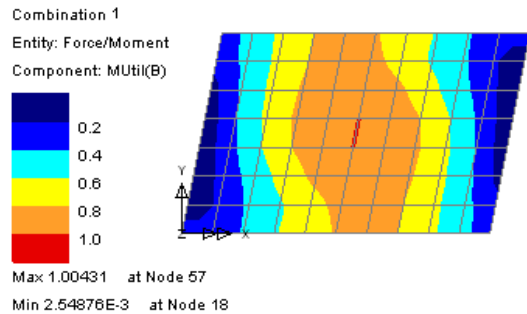


Grillage Load Optimisation

For software product(s):	LUSAS <i>Civil & Structural</i> or LUSAS <i>Bridge</i> .
With product option(s):	Autoloader.
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

This example illustrates how the vehicle load optimisation facility is applied to grillage models.

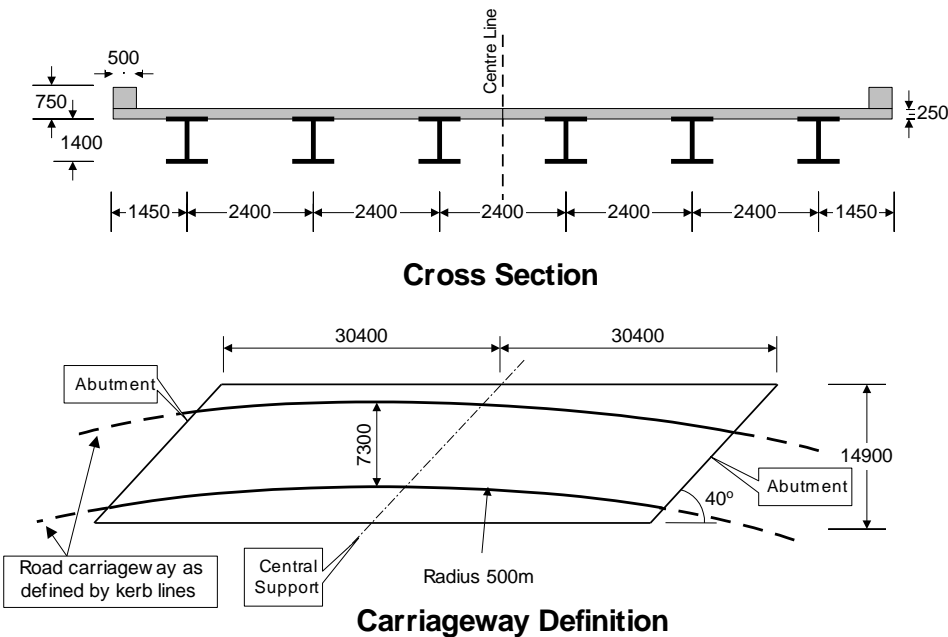

The structure to be analysed consists of steel plate girders supporting an in-situ reinforced concrete deck slab. Two spans of 30.4m each (skew span measurement) span between the centreline of the support bearings.

The parapet beams are cast onto the structure after the deck slab has cured. This will make the edge beam properties different from the internal beams however for simplicity this will be ignored in this example. This assumption makes both the internal and edge beam properties the same. The properties are computed assuming 6 transverse beams in each span.



Note. Autoloader is an optional software product for LUSAS *Bridge*. It extends the vehicle loading capabilities in LUSAS *Bridge* and produces worst-case load effects for particular supported design codes more easily than by manual methods. Autoloader generates live load patterns and estimates the live load effect for the worst combination of load for a given parameter at a given location in a bridge deck or structure based upon influence surfaces and influence lines.



Note. The section properties stated are for the composite sections ignoring shear lag effects, i.e. taking into account the full width of the slab. The composite sections have been transformed using short term concrete moduli and are stated in “steel” units in the table below.

Section Property Table	Area m ² (Asz m ²)	Iyy m ⁴ (Izz m ⁴)	J m ⁴
Edge Beam/Internal Beams (Uncracked)	0.12359	0.03777	0.697E-3
Edge Beam/Internal Beams (Cracked)	0.04151	0.01387	5.366E-6
Transverse Beams	0.1188	0.5012E-3	0.997E-3
Skew Beam	0.0684	0.2886E-3	0.575E-3
Diaphragms	0.05775	0.029E-3	0.107E-3

The structure will be designed to carry full HA loading and 30 units of HB loading as derived from BD37/88.

Units of kN, m, t, s, C are used throughout.

Objectives

The required output from the analysis consists of:

- ☐ ULS and SLS values for selected locations on the structure.

Keywords

2D, Grillage, Autoloader, Load optimisation, Load visualisation, Influence surface, Basic Load Combination, Smart Load Combination, Envelope

Associated Files



- ☐ **spaced_beam_geometry.vbs** carries out the definition of the section properties.
- ☐ **spaced_beam_modelling.vbs** carries out the modelling of the example without the loading applied.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **spaced_beam**
- Use the **Default** working folder.
- Enter the title as **Two span grillage analysis with load optimisation**
- Select the units as **kN,m,t,s,C**
- Select the **Structural** user interface
- Ensure the startup model template is set to **None**
- Select the **Vertical Z axis** option.
- Click the **OK** button.




Note. It is useful to save the model regularly as the example progresses. This allows a previously saved model to be re-loaded if a mistake is made that cannot be corrected easily by a new user.

Feature Geometry

The grillage geometry will be created using the Grillage Wizard.

- Select the **Set defaults** button
- Select **Spaced beam and slab deck** and click **Next**
- The grillage is **Straight** with **40** degrees skew. Click **Next**
- Select an **Orthogonal** grillage arrangement and click **Next**
- Enter the width of grillage as **12** and the number of longitudinal beams including edge beams as **6**. Ensure **Evenly spaced** beams are used and click **Next**
- Change the number of spans to **2**
- For each span enter the length of span as **30.4** and change the number of internal transverse beams to **6**
- Click **Finish** to generate the grillage model.

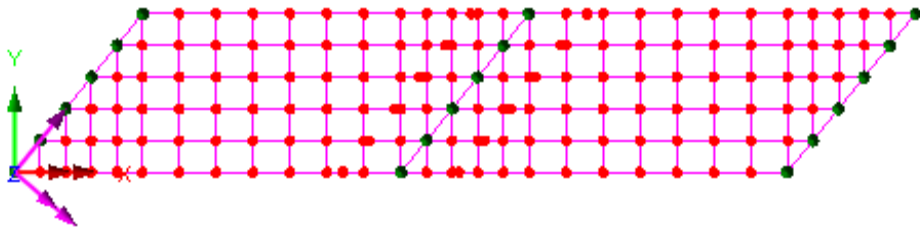





Defining the Geometric Properties


The geometric properties for this model are listed in the section property table at the beginning of this example. However, for ease of use they will be read in using a file that is supplied.

Open the file **spaced_beam_geometry.vbs** which is located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.





















Assigning Geometric Properties

This is best done by using copy and paste in the  and  Treeview panes.



- Select the **Edge Beam/Internal Beams (Uncracked)** properties from the  Treeview and click on the  button.

- In the  Treeview select the **Longitudinal Uncracked Section** group and click on the  button.

Confirmation of the assignment will appear in the text window.



- Select the **Edge Beam/Internal Beams (Cracked)** properties from the  Treeview and click on the  button.
- In the  Treeview select the **Longitudinal Cracked Section** group and click on the  button.
- Select the **Transverse Beams** properties from the  Treeview and click on the  button.
- In the  Treeview select the **Transverse Intermediate Beams** group and click on the  button.
- In the  Treeview select the **Transverse Central Beams** group and click on the  button.
- Select the **Skew Beams** properties from the  Treeview and click on the  button.
- In the  Treeview select the **Transverse Skew Beams** group and click on the  button.
- Select the **Diaphragms** properties from the  Treeview and click on the  button.
- In the  Treeview select the **Internal Diaphragms** group and click on the  button.
- In the  Treeview select the **End Diaphragms** group and click on the  button.

Checking for correct geometric assignment

- Turn off the display of the **Mesh** layer from the  Treeview.
- Double click on the **Geometry** layer in the  Treeview and select **Assignment** from the Colour by drop down list.

- Click the **Set** button and select **Geometric** from the Attribute Type drop down list.
- With the **Generate key** option selected click the **OK** button to return to the Geometry properties dialog and **OK** again to display the geometry coloured by geometric assignment with the key annotated.

Geometric Key

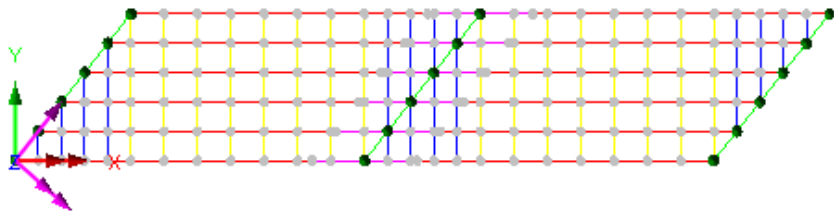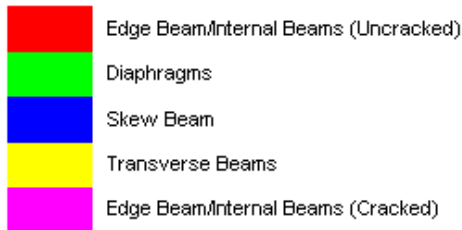

- To remove the 'Colour by Attribute' assignment double click on **Geometry** in the Treeview, select **Own Colour** from the Colour by drop down list and click **OK** to update the display.

Defining the Material

- Select material **Mild Steel** of type **Ungraded** from the from the drop-down list and click **OK** to add the material dataset to the Treeview.
- With the whole model selected (**Ctrl** and **A** keys together) drag and drop the material dataset **Iso1 (Mild Steel Ungraded)** from the Treeview onto the selected features.



Note. Because the geometric properties provided are transformed section properties (as mentioned in the example's description) Mild Steel properties are assigned to the complete model.

Supports

 
The deck is supported in the vertical direction at each of the diaphragms. Since there are no in-plane degrees of freedom no in-plane supports are required. The grillage

wizard automatically restrains the grillage from vertical displacement at each diaphragm.



Note. If in-plane effects such as braking forces are to be considered the grillage elements should be replaced by 3D beam elements and the appropriate properties and supports should be assigned.


Self-Weight



This command adds **Gravity -ve Z** to the Treeview.

- With the whole model selected, drag and drop the loading dataset **BFP1 (Gravity -ve Z)** from the Treeview onto the selected features. Ensure the **Assign to lines** option is selected and click **OK** to assign to **Loadcase 1** with a load factor of **1**

The gravity loading will be visualised on the model.

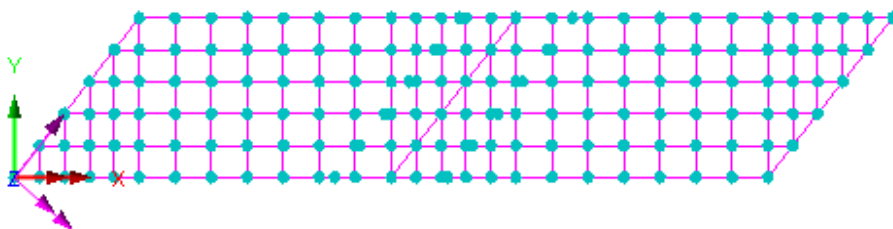

- Using the right hand mouse button select **Loadcase 1** from the Treeview and select the **Rename** option. Change the loadcase name to **Self Weight**

Loading the model using the Vehicle Load Optimisation (Autoloader) facility.

In order to use the vehicle load optimisation facility the locations at which the optimised load combinations are to be calculated and the parameter to be computed must be chosen. To do this, influence attributes are defined and assigned to the model. LUSAS then calculates the influence surfaces for any specified position in the structure using the Muller-Breslau principle whereby the mesh is automatically “broken” at each specified node and automatically constrained to act in the required manner. An influence surface is generated for each of the chosen locations and parameters.


For this example three influence surfaces will be defined.

Defining Influence Attributes

Influence Point 1

The first influence attribute will be used to investigate the reaction at the left hand abutment.

- Select a **Reaction** influence type for a **Vertical axis** influence direction for a **Positive** displacement direction. Enter the influence attribute name as **Reaction Support 1** and click **OK**.

The influence attribute will be added to the  Treeview.

Influence Point 2

The second influence attribute will be used to investigate mid span bending in the first span.



- Select a **Moment** influence type **About Transverse** axis direction for a **Negative** displacement direction (because we are interested in the maximum sagging moment). Enter the influence attribute name as **Bending Span 1** and click **OK**.

Influence Point 3

The third influence surface attribute will be used to investigate the hogging moments at the central pier.

- Select a **Moment** influence type **About Transverse** axis direction for a **Positive** displacement direction (because we are interested in the maximum hogging moment). Enter the influence attribute name as **Bending Internal Support** and click **OK**.



Note. Longitudinal and Transverse directions are specified using the  **Direction definition** object in the  Treeview . In this example the longitudinal direction is defined to be the Global X direction, and the transverse direction is always assumed to be orthogonal to the longitudinal direction.

Turning loading visualisation on and off






At any time during this example any applied loading can, for reasons of clarity, be turned on and off by selecting the Loading on /off button.

Assigning Influence Attributes


Influence attributes can be assigned to nodes or points. When modelling grillages created by the grillage wizard there will always be a node at a point on the model, so influence attributes could be assigned to points. But, in general usage, and for slab

analysis especially, influence attributes are better assigned to nodes. Influence attributes can be assigned to as many nodes (or points) on the model as necessary. So, for example, the Sagging Span 1 influence attribute could be assigned to all nodes in the first span to specify influences for every node even though all nodes do not necessarily need to be examined for particular influence surface examinations. However, for this example, and for speed and clarity, only one node will be selected for each influence attribute.


- Turn off the display of the **Geometry** layer in the  Treeview.
- Turn on the display of the **Mesh** layer in the  Treeview
- If necessary turn off any loading visualisation.

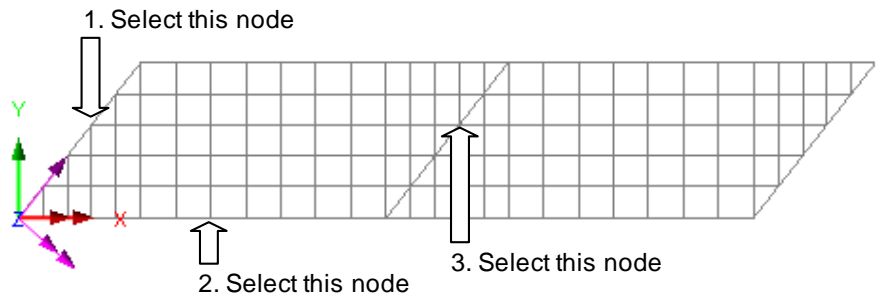


The first influence attribute will investigate the reaction near the centre of the left hand abutment.

- Select the node on the end diaphragm as shown.
- Drag and drop the influence attribute **Reaction Support 1** from the  Treeview onto the selected feature.

The second influence attribute will investigate edge mid-span bending in span 1.

- Select the mid-span node at the edge of span 1 as shown.
- Drag and drop the influence attribute **Bending Span 1** from the  Treeview onto the selected feature

The third influence attribute will investigate hogging near the centre of the internal support.

- Select the node at the internal support as shown.
- Drag and drop the influence attribute **Bending Internal Support** from the  Treeview onto the selected feature


Visualising the Defined Influence Points

Influence attribute assignments are visualised as they are assigned to the model. To check that the influence attribute orientations are correct (meaning that the correct influence directions have been defined) an isometric view of the model should be used.



Select the isometric button.

- Ensure that the influence visualisations are as shown

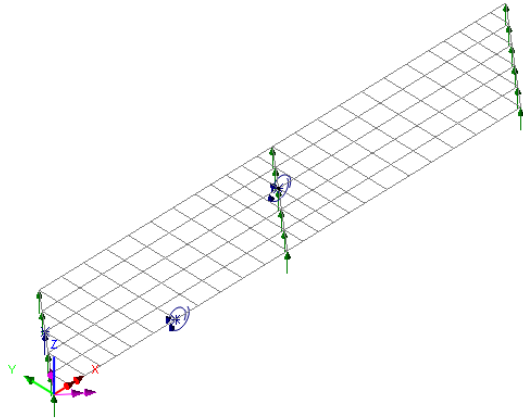


Using the Vehicle Load Optimisation facility to calculate the worst case loading patterns.

The vehicle load optimiser (Autoloader) automates the creation of load datasets in accordance with the chosen loading code for the locations and effects specified.

Before invoking the Vehicle Load Optimisation Wizard the kerb lines need to be defined. This can be done by specifying coordinates but is best done by defining kerb lines on the model.





Select the Home button to return the model to the default view.


- In the  Treeview turn on the display of the **Geometry** layer.

Defining Kerb Lines

- Specify the first point as **(-5, 1)** the second point as **(75, 1)**. Define the third point as **(35, 20)** and select the **Direction** option for the third point.
- Enter the radius as **500** and ensure that **Minor Arc** is selected.
- Click **OK** to define the first kerb line.
- Specify the first point as **(-5.584, 8.2766)** and the second point as **(75.584, 8.2766)**. Define the third point as **(35, 20)** and set the **Direction** option for the third point.
- Enter a radius of **507.3** and ensure that **Minor Arc** is selected

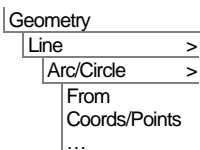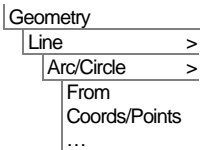

- Click the **OK** button to define the second kerb line.
- **Select the first and second kerb line.** (Use **Shift** to add to the initial selection)

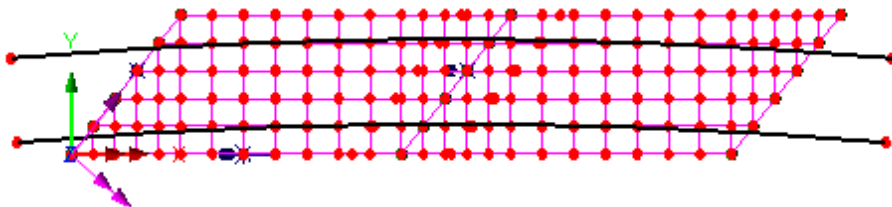

Save the model

File _____
Save _____



Save the model file.



Rebuilding a model after a previous failed analysis

If a previous analysis of this example has failed you need to return to this point to continue after having run the supplied file stated.

Vehicle Load Optimisation

- Ensure the two kerb lines are selected.

With the kerbs selected the vehicle load optimisation can begin.

- Select the **Defaults** button to reset any settings from any previous vehicle load optimisation runs.
- Enter the results filename as **spaced_beam**
- Select **United Kingdom** from the Country drop down list.
- Select **BD37/88** from the Design code drop down lists.
- Select the **Optional code settings** button.

The BD37/88 optional code settings will appear.

- Ensure the options **Use HA Loading**, **Use HB Loading** and **Use KEL Loading** are selected.
- Set the number of HB units to **30**
- Deselect the option to **Use cusping**
- Click **OK** to set the selected options and return to the main vehicle load optimisation dialog.



Note. Some of the lesser used code options such as the partial load factors may be modified by editing the advanced options.

- Select the **Optional loading parameters** button to display the optional loading parameters dialog.
- Ensure the vehicle library is set as <<**Lusas Installation Folder>\Programs\Scripts\atl\VehicleFiles\autoload.vec**
- Select **HB** from the drop down Vehicles list.
- Set **Longitudinal increment** to **0.25** and **Transverse increment** to **0.25**
- Ensure vehicle direction is set to **Both** and click **OK** to set the options and return to the main vehicle load optimisation dialog.



Note. By selecting 'Edit Advanced Code Options' on the Optional code settings dialog and clicking the Advanced button some of the lesser used loading options may be modified.

Having specified the loading options the carriageway positions need to be defined. In this example the carriageway positions are defined from the selected kerb Lines.

- Select the **Define carriageways** button.
- Select the **Kerbs from selection** option and click **Apply** to define the carriageways and return to the main dialog.

Finally the influence surfaces to be utilised must be defined.

- Select the **Set influence surfaces** button.
- Ensure **Generate all influence surfaces** is selected.
- Ensure the increment for influence surfaces is set to **0.25**
- Ensure the loaded influence area is set to **Positive** in the drop down list. This will instruct Autoloader to solve for the worst positive effects on each of the specified influence surfaces.
- Click **OK** to set the influence data and return to the main dialog.

The optimisation parameters are now set-up.

- Ensure the **Generate influence surfaces**, **Generate optimised loading** and **Run analysis** options are all selected and click **OK** to carry out the load optimisation.

LUSAS Modeller will run the Solver to generate each of the three influence surfaces, run Autoloader to compute the worst position of vehicles for each influence surface,

generate the loadcases in Modeller, and run the Solver again with the worst loading applied.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding the Model

If errors have been made in defining the model that for some reason you cannot correct, a file is provided to re-create the model information correctly.




- ❑ **spaced_beam_modelling.vbs** carries out the modelling of the example up to the point of using the vehicle load optimisation facility.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **spaced_beam** and click **OK**



To recreate the model up to the point of using the vehicle load optimisation facility, select the file **spaced_beam_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.

Now return to the section entitled **Vehicle Load Optimisation** earlier in this example and continue from that point.

Viewing the Results


If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the results for the first results loadcase (Self Weight) is set to be active by default.




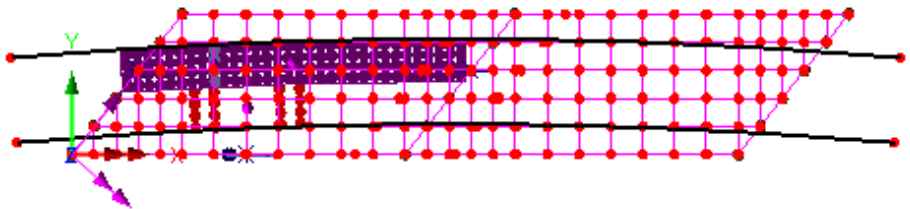
Note. Because each influence attribute may be assigned to many nodes the coordinates of the node to which an attribute is assigned are also included in the loadcase name in order to make it unique.

Load Visualisation

If it is required to visualise the load pattern for a particular loadcase this can be done by setting the results loadcase to be active.




If the **Attributes** layer is present and the  Loading on/off button is depressed (signifying it is 'on') the loading patterns for the various results loadcases can be displayed:

- In the  Treeview right-click on the model loadcase **Bending Span 1 - (x,y) - ULS1/Positive (4)** and select the **Set Active** option to display the load pattern.



Reactions at Influence Point 1

A plot showing the reactions is to be displayed.


- Turn off the display of the **Geometry** and **Attributes** layers in the  Treeview.
- In the  Treeview right-click on the results loadcase **Reaction Support 1 - (x,y) - ULS1/Positive (2)** and select the **Set Active** option.
- With no features selected, click the right-hand mouse button in a blank part of the graphics window and select the **Values** option to add the values layer to the  Treeview.


The values properties will be displayed.


- Select entity **Reaction** results for the component vertical reaction **FZ**
- Select the **Values Display** tab
- Plot the top **10%** of the maxima values
- Set the **Number of significant figures** to **4**
- Select the **Choose Font** button
- Select a font **Arial** style **Bold** size of **12**

- Click **OK** to return to the values properties dialog and **OK** again.

The design reaction at the fixed bearing (previously selected for influence surface analysis) for the current loadcase **Reaction Support 1 – (x,y) - ULS1/Positive (2)** will be displayed.

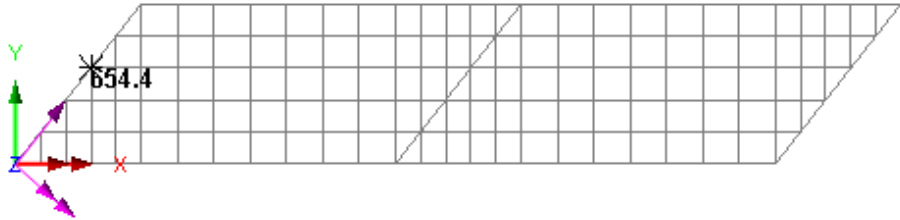

- In the  Treeview, right-click on the **Reaction Support 1- (x,y) - ULS2/Positive (8)** loadcase and select the **Set Active** option to display the design reaction value.

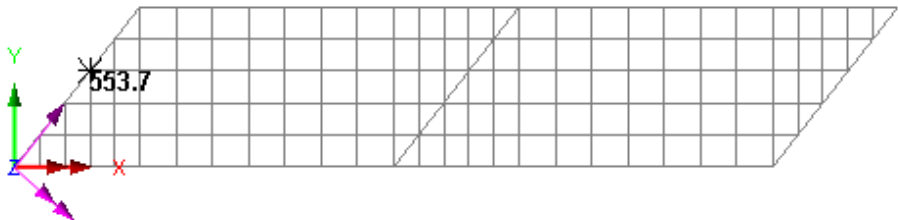

- Select the remaining Reaction Support 1 results loadcases in turn and choose **Set Active** to display the other corresponding SLS reaction values which are shown in the following table:

Location (Group name)	Quantity	ULS1	ULS2	SLS1	SLS2
Reaction Support 1 (End diaphragms)	Vertical reaction (FZ)	654.4	553.7	553.7	503.4

Moments at Influence Point 2




To view the bending moments in an edge beam the groups facility will be used.

- In the  Treeview right-click on **Edge Beams** group and select the **Set as Only Visible** option.



Caution. The values layer should not be used to investigate bending moments at points in the grillage because the values given would be average values for any number

of grillage elements coming together at a node and not a unique value for the end of each grillage member. Instead, the Diagrams layer must be used.

- Turn off the display of the **Values** layer in the  Treeview
- In the  Treeview, right-click on the **Bending Span 1 - (x,y) – ULS1/Positive (4)** loadcase and select the **Set Active** option
- Add the **Diagrams** layer to the  Treeview
- Select entity **Force/Moment – Thick Grillage** results for the bending moment **My**
- Select the **Diagram Display** tab
- Select the **Label values** option, **Label only if selected** option, **Orientate flat to screen/page** option and the **Window summary** option. Set the % of element length to **50**, the label font to be size **20**, the font Angle to **45** and the significant figures to **4**
- Click **OK** to finish.

The window summary shows the maximum and minimum values.

- Use the Zoom in button to enlarge the left-hand end of the lower-beam.
- Drag a box around the beams of interest to view moment values on the beam.

Scale: 1: 402.095

Zoom: 242.782

Eye: (0.0, 0.0, 1.0)

Linear/dynamic analysis

Loadcase: 4:Bending Span 1 - (15.878, 0.0, 0.0) - ULS1/Positive (4)

Results file: spaced_beam.mys

Diagram entity: Force/Moment - Thick Grillage

Diagram component: My

Diagram maximum 581.785 at Gauss point 1 of element 163

Diagram minimum -1.53267E3 at Gauss point 1 of element 24



Diagram scale: 1: 3.91474E-3



By changing the active loadcase this table of results for the design of the edge beam can be generated.

Location (Group name)	Quantity	ULS1	ULS2	SLS1	SLS2
Lower edge beam (Edge Beams)	Bending moment (My)	-1533	-1297	-1297	-1179

Moments at Influence Point 3

- In the  Treeview right-click on **Longitudinal Cracked Section** group and select the **Set as Only Visible** option.
- In the  Treeview, right-click on the **Bending Internal Support - (x,y) - ULS1/Positive (7)** loadcase and select the **Set Active** option.
- Drag a box around the beams of interest to view hogging moment values on the beam.

Scale: 1: 158.261

Zoom: 100.0

Eye: (0.0, 0.0, 1.0)

Linear/dynamic analysis

Loadcase: "7:Bending Internal Support - (36.4415, 7.2, 0.0) - ULS1/Positive (7)"

Results file: spaced_beam.mys


Diagram entity: Force/Moment - Thick Grillage

Diagram component: My

Diagram maximum 1.60122E3 at Gauss point 1 of element 198

Diagram minimum -522.973 at Gauss point 11 of element 200

Diagram scale: 1: 3.74714E-3

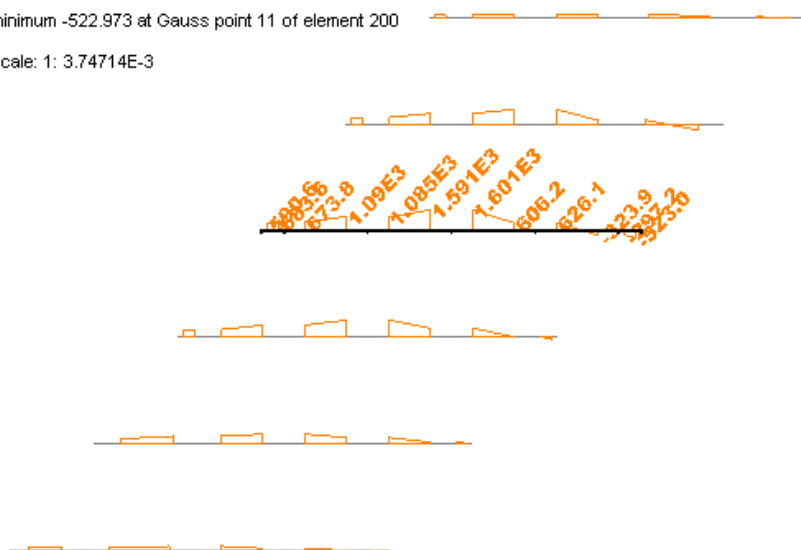

By changing the active loadcase the remaining ULS and SLS results for the design of the longitudinal beam over the support can be generated.

Location (Group name)	Quantity	ULS1	ULS2	SLS1	SLS2
Central pier (Longitudinal Cracked Beams)	Bending moment (My)	1601	1355	1355	1232


This completes the example.

Bridge Slab Traffic Load Optimisation

For software product(s):	LUSAS <i>Bridge</i> .
With product option(s):	LUSAS Traffic Load Optimisation (TLO).
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

This example uses the LUSAS TLO software option to aid in the linear static analysis of a 3-span curved concrete bridge deck subject to Eurocode traffic loading.

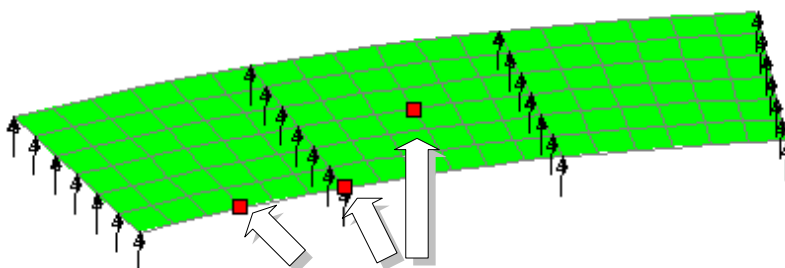

Points of interest for influence surface generation

The structure is modelled using thick plate elements, representing a deck of inner radius 75m, outer radius 86m and thickness 0.7m. The deck has a width of 11m consisting of a 10m wide carriageway region and two 0.5m wide verges. The live loading is to be calculated for three defined influence surfaces using the LUSAS TLO software option.

Units used are kN, m, t, s, C throughout.



Note. LUSAS TLO is a software option for LUSAS *Bridge*. It extends the vehicle loading capabilities in LUSAS *Bridge* and produces worst-case traffic load effects more easily and much faster than by manual methods. LUSAS TLO generates the most onerous traffic load patterns according to a selected code of practice, based upon influence surfaces for specified load effects (moments, shears, reactions, stresses etc) at selected locations in the structure. A number of Eurocode National Annexes are

supported. This example analyses a bridge deck using EN1991-2 Recommended Values. Subsequent analysis for comparison purposes is carried out using the UK and Swedish National Annex options.

Modelling Objectives

The operations in the creation of the model are as follows:

- ☐ Sweep a curved deck from a line.
- ☐ Mesh the Surfaces with thick plate elements (regular mesh).
- ☐ Define and assign geometric properties to describe the slab thickness.
- ☐ Define and assign material properties.
- ☐ Define and assign bearing supports.
- ☐ Define and assign dead loading.
- ☐ Define three influence surfaces which will allow calculation of the most onerous traffic load pattern for:
 1. Mid-span bending, inner curve, first span.
 2. Mid-span bending, mid-node, second span.
 3. Reaction at the first internal support.
- ☐ Use LUSAS TLO to calculate the most onerous traffic load pattern for the three influence surfaces.

Keywords

2D, Slab, Modelling, Eurocode, Element Axes, Influence Surface, LUSAS TLO, Vehicle Load Optimisation, Load Combination, Bending Moments, Reactions, Transformed Results, Peak Values

Associated Files



- ☐ **deck_modelling.vbs** carries out the modelling of the slab deck for subsequent use with the LUSAS TLO software option.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **deck**




Note. When saving a model for use with Autoloader a filename of 8 or less characters must be specified.

- Enter the title as **Deck analysis using traffic load optimisation**
- Use the **Default** working folder.
- Set the units as **kN,m,t,s,C**
- Select the **Structural** user interface.
- Select the model template **Standard**
- Select the **Vertical Z axis** option.
- Click **OK**



Note. Save the model regularly as the example progresses. This allows a previously saved model to be re-loaded if a mistake is made that cannot be corrected easily.

The Undo button  may also be used to correct a mistake. The undo button allows any number of actions since the last save to be undone.

Geometry

In this model, one span of the complete bridge deck is modelled in its entirety (including specifying geometric properties, material, supports, etc.) before it is then copied to form the complete 3-span structural model.

Geometry	
Line	>
Coordinates...	



Enter coordinates of **(0,75)** and **(0,86)** to define a Line representing the end of the deck.


- Click the **OK** button to finish.
- Select the Line just drawn.

Geometry
Surface >
By Sweeping...



Select the **Rotate** option and enter an angle of **-7.5** degrees to rotate about the **Z-axis** about the origin **0,0**


- Click **OK** to sweep the Line to create a surface

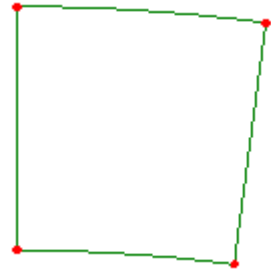


Meshing

This analysis will consider only out-of-plane bending effects, and no in-plane behaviour therefore plate elements will be used.

Attributes
Mesh >
Surface...

- Select **Thick plate, Quadrilateral, Linear** elements.
Do not specify any mesh discretisation parameters, this will be controlled by the mesh divisions on the lines.
- Enter the dataset name as **Thick plates** and click **OK**
- With the whole model selected, drag and drop the surface mesh dataset **Thick plates** from the  Treeview onto the selected features.

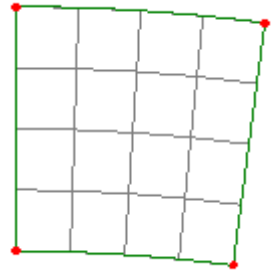


The default number of line mesh divisions of 4 divisions per line will be drawn. This gives a somewhat coarse mesh so the default number of line mesh divisions will now be changed.

File
Model Properties...

- With the **Meshing** tab selected, set the default number of mesh divisions to **6** and click **OK**

The new mesh divisions will be displayed.

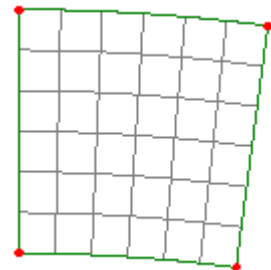


Geometric Properties


- Enter a thickness of **0.7**

The eccentricity box should, in this case, be left blank. Using an eccentricity would infer some in-plane effects, when, as described above, this analysis is intended to consider only out-of-plane effects. In 3D structures where behaviour is dependent upon both flexural and membrane effects— shell elements may be used.

Attributes
Geometric >
Surface...

- Enter the dataset name as **Slab thickness** and click **OK**
- With the whole model selected, drag and drop the geometric dataset **Slab thickness** from the  Treeview onto the selected features.



Geometric property assignments are visualised by default.

- In the  Treeview re-order the layers so that the **Attributes** layer is at the top, the **Mesh** layer is in the middle, and the **Geometry** layer is at the bottom.





Material Properties


Attributes	
Material	>
Material Library...	

- Select material **Concrete** of type **Ungraded** and click **OK** to add the material dataset to the  Treeview.
- With the whole model selected (**Ctrl** and **A** keys together) drag and drop the material dataset **Iso1 (Concrete Ungraded)** from the  Treeview onto the selected features and assign to the selected surfaces by clicking the **OK** button.

Supports

LUSAS provides the more common types of support by default. These can be seen in the  Treeview. In this example the deck is to be simply supported so the **Fixed in Z** support will be used.

- Select the 2 support Lines shown.
- Drag and drop the support dataset **Fixed in Z** from the  Treeview onto the selected Lines.
- Ensure the **Assign to lines** and **All loadcases** options are selected and click **OK**

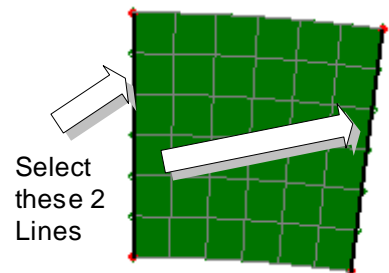

The supports will be visualised on the model.

To check the location and direction of the supports:



Use the isometric view button to rotate the model.



- To complete the full model of the bridge deck select the whole model using the **Ctrl** and **A** keys together.




Select the **Rotate** option and copy the features selected through an angle of **-7.5** degrees about the **Z-axis** and about the origin **0,0**


- Enter the number of copies as **2** and click the **OK** button.

The full 3-span model of the bridge deck will be created.

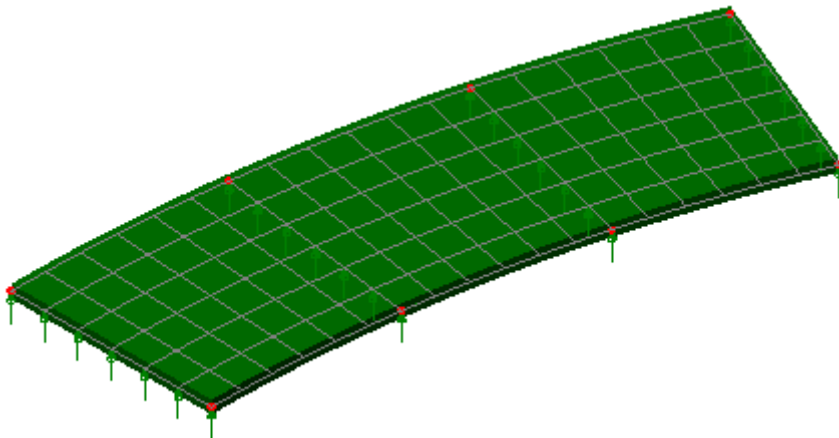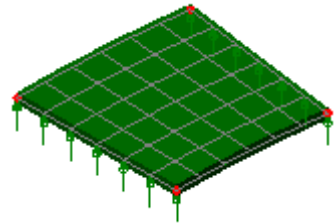


Self-Weight

This command adds **Gravity -ve Z** to the  Treeview.

- With the whole model selected, drag and drop the loading dataset **BFP1 Gravity -ve Z** from the  Treeview onto the selected features. Ensure the **Assign to surfaces** option is selected and click **OK** to assign to **Loadcase 1** with a load factor of **1**

Geometry
Surface >
Copy...

Bridge
Bridge Loading >
Gravity

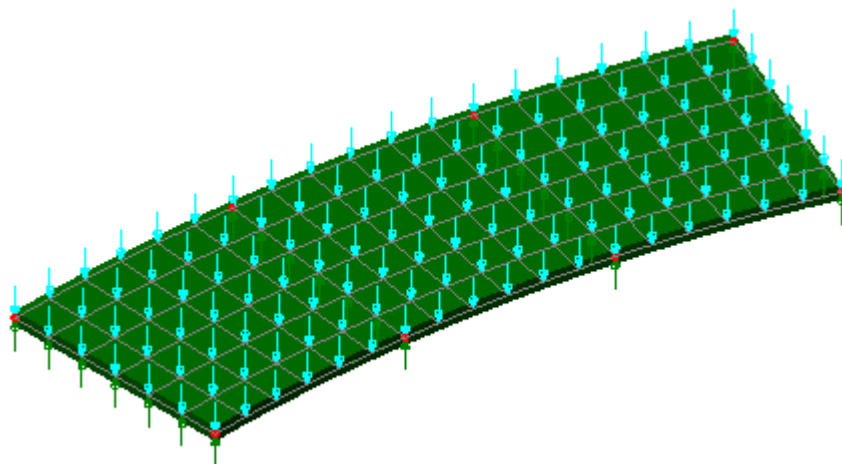

The gravity loading will be visualised on the model.

- Using the right hand mouse button select **Loadcase 1** from the Treeview and select the **Rename** option. Change the loadcase name to **Self Weight**

Defining a local coordinate system

Since this model is a curved deck a cylindrical local coordinate system will be used to define the local direction.

Attributes
Local Coordinate...

- Select the **Cylindrical** option and ensure that the Z-axis option is set. Enter a dataset name of **Cylindrical about Z-axis** and click **OK**

To use this local coordinate system:

Utilities
Direction definition...

- In the longitudinal section of the dialog set the local axis to be **Cylindrical about Z-axis** for **Theta** and click **OK**.

Influence Attributes

In order to use the traffic load optimisation facility, it is necessary to identify what quantity is to be optimised and at what location in the structure. This is achieved by specifying appropriate influence surfaces - by defining and assigning influence attributes to the model. LUSAS generates influence surfaces for each of the chosen locations and load effects, using the Muller-Breslau (reciprocal) theorem.

To make it easier to select the nodes required to define the influence parameters the geometric and load visualisation will be removed from the display.



Select the fleshing on/off button to turn-off the geometric visualisation.




Select the loading on/off button to turn-off the loading visualisation


- Turn off the display of the **Geometry** layer in the  Treeview.



For this example three influence surfaces will be defined.

Influence Surface Definition - Edge Mid-span Bending

The first influence attribute to be defined will be used to investigate mid span edge bending in the first span.

- Select a **Moment** influence type **About transverse** influence direction for a **Negative** displacement direction (because we are interested in the maximum sagging moment).
- Enter the influence attribute name as **Bending span 1** and click **OK**.
- Select the mid-span node at the inside edge of the first span.
- Drag and drop the influence attribute **Bending span 1** from the  Treeview onto the selected node.

This adds an influence assignment (with a corresponding coordinate) to the  Treeview.

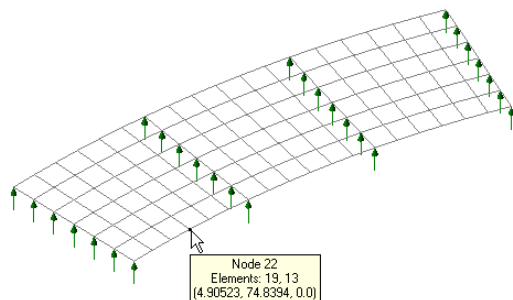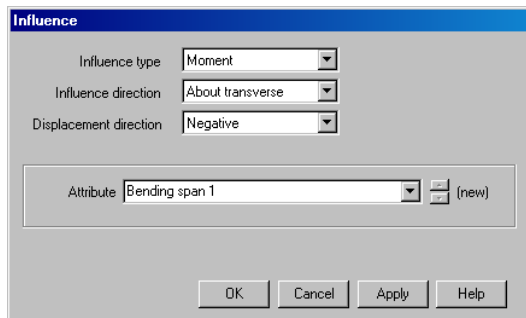


Note. Influence attributes can be assigned to as many nodes or points on the model as necessary. So, for example, the Bending span 1 influence attribute could be assigned to all nodes in the first span to specify influences for every node (even though not all nodes are necessarily required to be examined). However, for this example, and for speed and clarity reasons, only one node will be selected for each influence attribute.


Influence Surface Definition – Mid-span Bending Span 2

The second influence attribute to be defined will be used to investigate mid-span bending in the middle of the slab in the second span.

Attributes

Influence...

- Select a **Moment** influence type **About transverse** influence direction for a **Negative** displacement direction (because we are interested in the maximum sagging moment).
- Enter the influence attribute name as **Bending span 2** and click **OK**.
- Select the node at mid-span of the second span.
- Drag and drop the influence attribute **Bending span 2** from the  Treeview onto the selected node.

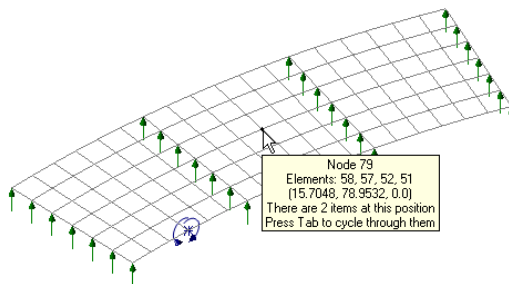

This adds the influence assignment to the  Treeview.


Influence Surface Definition - Maximum Reaction


The third influence attribute to be defined will be used to investigate the maximum reaction at the inner edge of the second line of supports.

Attributes

Influence...

Select a **Reaction** influence type in the **Vertical axis** influence direction for a **Positive** displacement direction.

- Enter the influence attribute name as **Reaction support 2** and click **OK**.
- Select the node at the edge of the first support as shown.
- Drag and drop the influence attribute **Reaction support 2** from the  Treeview onto the selected node.

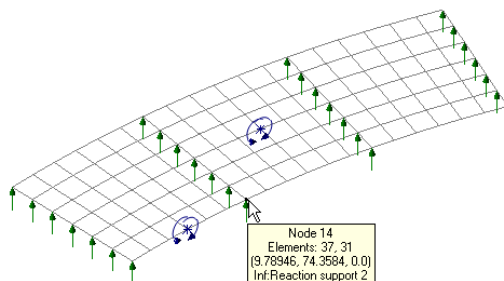


Visualising the Defined Influence Points

Influence attribute assignments are visualised as they are assigned to the model. To check that the influence attribute orientations are correct (meaning that the correct influence directions have been defined) a plan view of the model should be used in this case



Select the Home to return the model view to a plan view.

- Ensure that the influence visualisations are in the orientations shown.

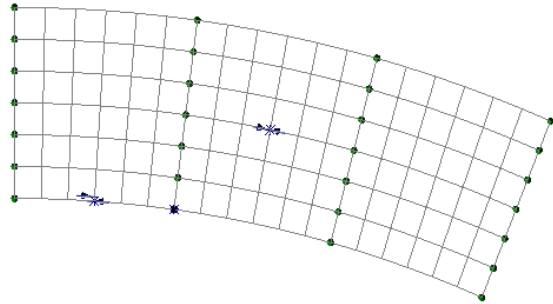

Define the Kerb Lines

- Turn on the display of the **Geometry** layer in the Treeview.
- Select the Point at the left-bottom corner of the deck



Enter a translation of **0.5** in the **Y** direction.

- Select the Point just created




Enter a translation of **10** in the **Y** direction.

- Select the two Points that have been created



Select the **Rotate** option and enter an angle of **-22.5** degrees to rotate about the **Z-axis** about the origin **0,0**

- Click **OK** to sweep the Points to create a two lines representing the kerbs

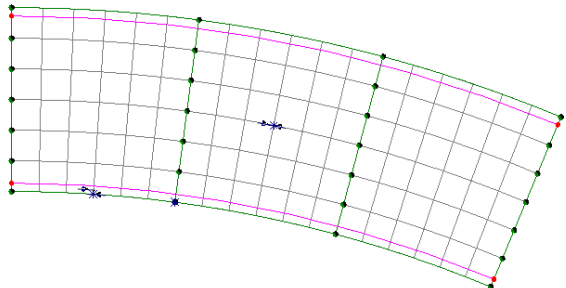


Save the model



Save the model file.

This completes the preparation of the model for influence analysis.



Tip. Giving influence attribute names that relate to each span and support (rather than just defining one influence attribute called 'Bending' or 'Reaction' enables easier identification of the influence results in the  Treeview.

Rebuilding the Model

If errors have been made in the modelling of this example that for some reason you cannot correct, a file is provided to re-create the model information correctly, allowing a subsequent analysis to be run successfully.

 
 


- ☐ **deck_modelling.vbs** carries out the modelling of the example including the loading.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.


- Enter the file name as **deck**
- To recreate the model, select the file **deck_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.



Using the Vehicle Load Optimisation (LUSAS TLO) facility to calculate the most critical loading patterns


The LUSAS TLO software option automates the creation of traffic load patterns in accordance with a selected Eurocode National Annex for locations specified on the model. The example as written uses EN1991-2 Recommended Values. Other EN1991-2 National Annexes may be chosen. Results for selected other National Annexes are shown at the end of the example.

Select the kerb lines


- In the  Treeview turn on the display of the **Geometry** layer.

Prior to running the vehicle load optimisation the kerb positions defining the extent of the loadable area must be selected.

- Select the two lines representing the kerb positions / extent of the traffic lanes

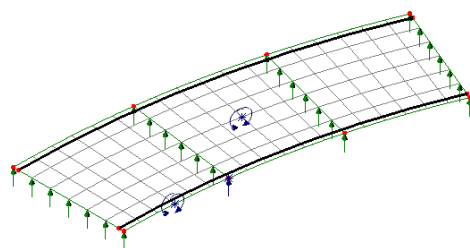

- First select the **Defaults** button to reset any settings from any previous use.
- Enter the results filename as **deck**
- Select **Europe** from the Country drop down list.
- Select **EN1991-2 Recommended Values** from the Design code drop down list.

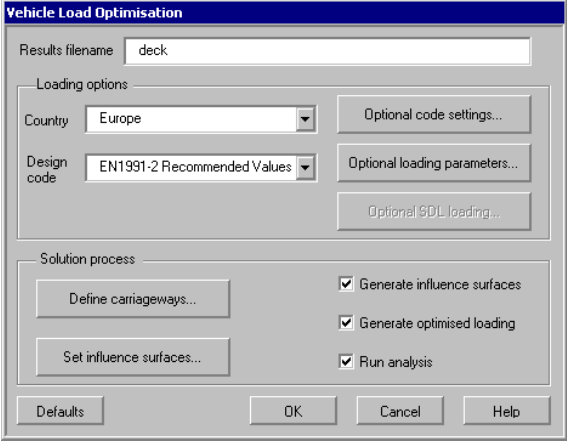


The 'Vehicle Load Optimisation' dialog box has a title bar with the same text. It contains the following elements:

- Results filename:** A text box containing 'deck'.
- Loading options:**
 - Country:** A dropdown menu set to 'Europe'.
 - Design code:** A dropdown menu set to 'EN1991-2 Recommended Values'.
 - Buttons:** 'Optional code settings...', 'Optional loading parameters...', and 'Optional SDL loading...'.
- Solution process:**
 - Buttons:** 'Define carriageways...', 'Set influence surfaces...', 'Generate influence surfaces' (checked), 'Generate optimised loading' (checked), and 'Run analysis' (checked).
- Bottom buttons:** 'Defaults', 'OK', 'Cancel', and 'Help'.

- Select the **Optional code settings** button and the optional loading parameters dialog will appear for the design code selected.

On this dialog any representative values that are required and load groups that are to be included can be specified. Special vehicle types can be specified and advanced settings can be defined. No changes are required for this example.

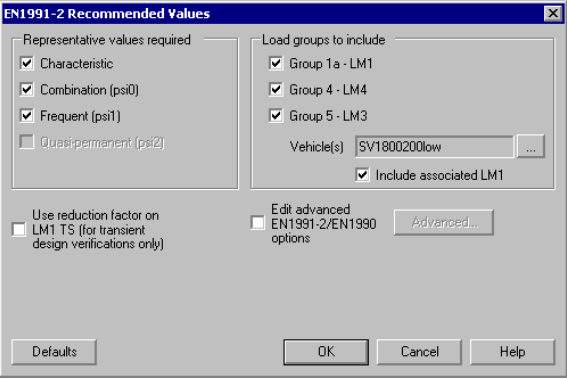


The 'EN1991-2 Recommended Values' dialog box has a title bar with the same text. It contains the following elements:

- Representative values required:**
 - ☒ Characteristic
 - ☒ Combination (psi0)
 - ☒ Frequent (psi1)
 - ☐ Quasipermanent (psi2)
- Load groups to include:**
 - ☒ Group 1a - LM1
 - ☒ Group 4 - LM4
 - ☒ Group 5 - LM3
 - Vehicle(s):** A text box containing 'SV1800200low' and an ellipsis button.
 - ☒ Include associated LM1
- Use reduction factor on LM1 TS (for transient design verifications only):** ☐
- Edit advanced EN1991-2/EN1990 options:** ☐ and an 'Advanced...' button.
- Bottom buttons:** 'Defaults', 'OK', 'Cancel', and 'Help'.

Note that a single special vehicle (**SV1800200low**) is specified as a default in these recommended values and that a vehicle(s) appropriate to the structure being designed should be specified in practice.

- Click the **OK** button to accept the default values and return to the main VLO dialog
- On the main VLO dialog, select the **Optional loading parameters** button
- On this Options dialog ensure the **Longitudinal increment** is set to **0.25**, the **Transverse increment** is set to **0.25** and the Vehicle direction is set to **Both**.
- Click **OK** to return to the main Vehicle Load Optimisation dialog.

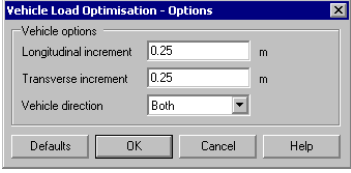


The 'Vehicle Load Optimisation - Options' dialog box has a title bar with the same text. It contains the following elements:

- Vehicle options:**
 - Longitudinal increment:** A text box containing '0.25' and a unit dropdown set to 'm'.
 - Transverse increment:** A text box containing '0.25' and a unit dropdown set to 'm'.
 - Vehicle direction:** A dropdown menu set to 'Both'.
- Bottom buttons:** 'Defaults', 'OK', 'Cancel', and 'Help'.


- On the main VLO dialog, select the **Define carriageways...** button.

Because the kerb lines have been selected the carriageway shape and angle of carriageway are known.

- Click **OK** to return to the main Vehicle Load Optimisation dialog.

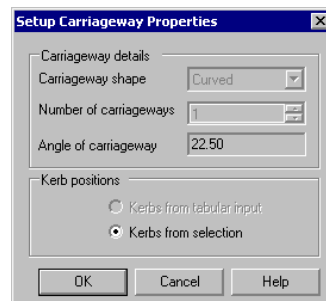

- On the main Vehicle Load Optimisation dialog, select the **Set influence surfaces** button.
- Ensure the **Generate all influence surfaces** option is selected.
- Ensure the **Increment for influence surfaces** is set to **0.25**
- Ensure the **Loaded influence area** is **Positive**
- Click **OK** to return to the main load optimisation dialog.

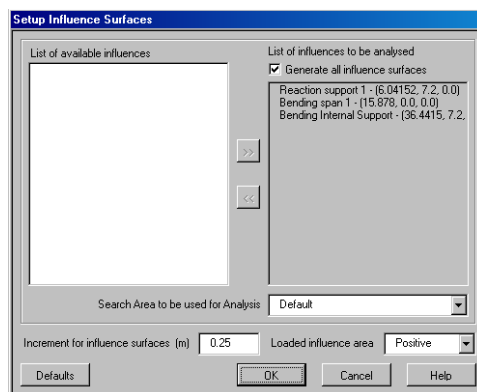

Important. The definition of the data for the load optimisation is now complete but **before** selecting the final **OK** button (which would run the load optimisation analysis) for the purposes of this example the influence surfaces will be visualised:

Visualising Influence Surfaces






With the main Vehicle Load Optimisation dialog displayed:

- Deselect the **Generate optimised loading** option and click the **OK** button.


The LUSAS Solver will solve for each influence surface in turn. When complete the Treeview will contain one results file for each influence surface.




Note. If the model has not been saved at some point prior to solving for influence surfaces, error messages may occur.

- If present, turn off the display of the **Mesh** and **Geometry** layers from the  Treeview.
 - In the graphics window, with no features selected, click the right-hand mouse button and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview. Click **OK** to accept the default properties and display the influence surface of the current loadcase.
 - In the  Treeview double-click on the Attributes entry, click the **Supports** tab, and select the **All** button. Select the option **From results file** and click **OK**.
-  Rotate the model to an isometric view.
- From the  Treeview right-click on each results loadcase and select the **Set Active** option to view each influence surface.


Bending span 1 (moment)
influence surface

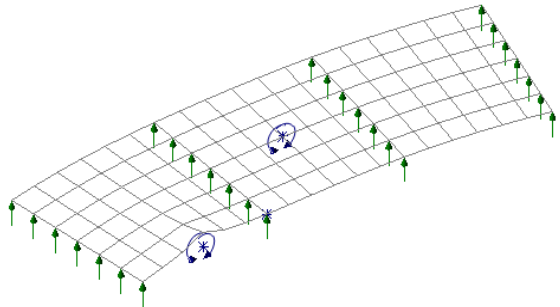


Bending span 2 (moment)
influence surface

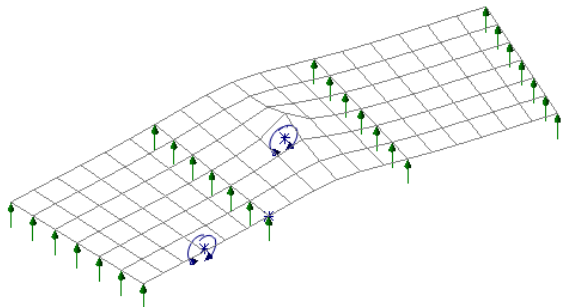

Reaction support 2 (reaction)
influence surface

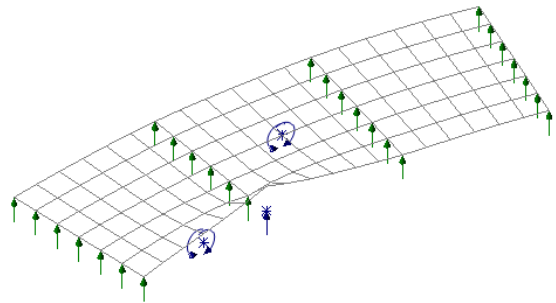

- After checking the influence surfaces, in the Treeview right-click on one of the Results folders and select **Close All Results Files** prior to generating optimised loading for the model.
- Click **Yes** to close all results files.

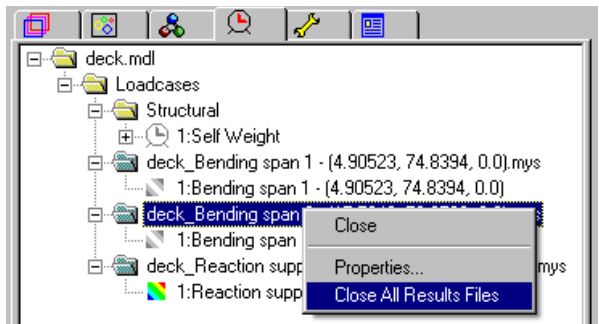


Running the Analysis

Generating Optimised Loading Definitions

- Deselect the **Generate Influence Surfaces** option to make use of the previously generated influence surfaces
- Select the **Generate optimised loading** option (which also selects the Run analysis option)
- Click **OK** to run the vehicle optimisation process.



Note. On projects, it may be required to add further loadcases after the traffic load optimisation has been carried out, before solution. In such a case, the 'Run Analysis' option should be deselected and the analysis run using the Solve Now  button.


Bridge
Vehicle Load
Optimisation...





Note. This load optimisation will take just a few seconds on modern personal computers. An indication of the time remaining can be attained by observing the progress bar at the bottom of the screen.

Viewing the Results

Visualising Load Definitions

Characteristic, Combination and Frequent loadcases will appear for each influence surface in the  Treeview. The results for loadcase 1 (Self Weight) are set active by default.

- In the  Treeview turn off the display of the **Deformed Mesh** layer.
- In the  Treeview turn on the display of the **Mesh** layer.




Select the loading on/off button to **turn-on** the loading visualisation



If necessary, select the supports on/off button to **turn-on** the support visualisation


The load definition may be visualised for each loadcase as follows:

Viewing Characteristic Loading for Edge Mid-span 1


- In the  Treeview right-click on the loadcase **Bending span 1 - (x,y) – Characteristic** and pick the **Set Active** option.

Here, it can be seen that Group 1a dominates and the load pattern is made up of LM1 tandem systems and LM1 udl patches. The 10m carriageway width


accommodates three 3m wide lanes. With reference to EN1991-2:2003 table 4.2 and clause 4.2.4 (4), Lane Number 1, with the heaviest tandem and udl loads, is positioned adjacent to the influence definition on one side of the deck. Moving away from the location of interest, lanes 2 and 3 appear in order. The remaining area (1m wide) appears on the far side of the bridge deck. Spans 1 and 3 only are loaded (span 2 is not part of the adverse area).

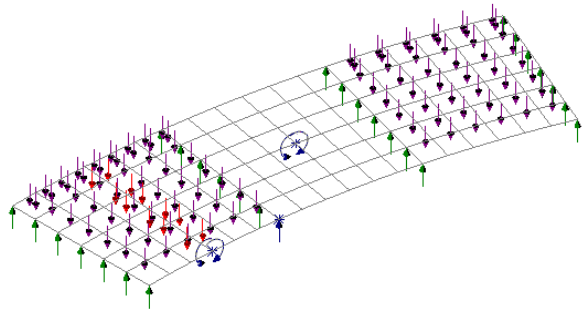


Viewing Characteristic Loading for Mid-span Bending Span 2

- In the  Treeview right-click on the loadcase **Bending span 2 - (x,y) - Characteristic** and pick the **Set Active** option.


Here, again, Group 1a dominates and the load pattern is made up of LM1 tandem systems and LM1 udl patches. Lane Number 1, with the heaviest tandem and udl loads, is positioned adjacent to the influence definition, near the middle of the deck. Lanes 2 and 3 appear each side of Lane 1 and the 1m wide remaining area appears on the opposite side of the bridge deck compared to that when considering the previous loadcase. This illustrates how the ranking and location of lanes is modified as appropriate (EN1991-2:2003 clause 4.2.4(2)). Span 2 only is loaded (spans 1 & 3 are not part of the adverse area).

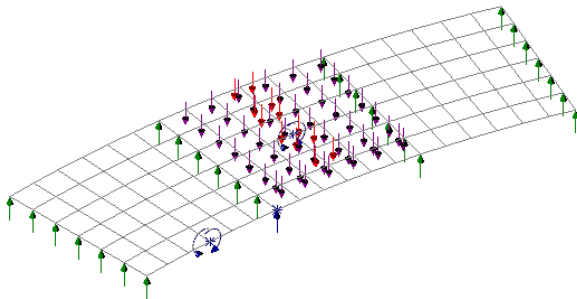

Viewing Characteristic Loading for Reaction at Support 2

- In the  Treeview right-click on the loadcase **Reaction support 2 - (x,y) - Characteristic** and pick the **Set Active** option.

In this last example, giving maximum reaction at the inner support, Group 5 dominates and the load pattern is made up of LM3 with associated LM1 tandems and udl patches. The SV1800/200 is positioned adjacent to the influence definition, near the edge of the deck over spans 1 and 2. This is considered to be Lane Number 1 (EN1991-2:2003 Annex A clause A.3). Lanes 2 and 3 appear on the far side of the deck and are loaded only in the adverse area which happens to be in span 3. The 1m wide remaining area appears between lanes 1 and 3, illustrating yet another arrangement of lane rank and location, used to generate the most onerous traffic load pattern.

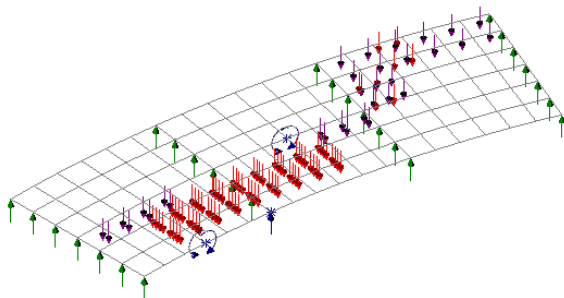


Viewing Load Combinations

The LUSAS TLO facility outputs a design value – Characteristic, Combination or Frequent, with the meaning of each given in the TLO Help. In this example the vehicle loading is assumed to be the dominant effect and all other variable actions (wind, snow,



temperature etc.) are being ignored. For this case, and in accordance with EN1990 6.4.3.2(3) equation 6.10, the loads can be combined as $\gamma_G \cdot [\text{dead loads}] + \gamma_Q \cdot [\text{traffic loads}]$. According to clause A2.3.1(4), for the design of structural members not involving geotechnical actions, the γ factors can be found in Table A2.4(B) as $\gamma_G = 1.35$ and $\gamma_Q = 1.5$ for traffic. So, to define a basic combination:

Utilities	
Combination	>
Basic	




On the Combination Properties dialog:

- From the **deck.mys** results listing add **Self Weight** to the included panel.
- Change the drop down menu to list the entries for **Model** data and add **Bending span 1 - (x,y) - Characteristic** to the included panel.
- Click the Grid button and enter factors of **1.35** for self weight loadcase and **1.5** for the Bending span 1 loadcase
- Change the combination name to **Combination Bending Span 1** and click the **OK** button to update the combination in the  Treeview.

Plotting Contours or Moment and Peak Values


- In the  Treeview right-click on the loadcase **Combination Bending span 1** and pick the **Set Active** option.
- With no features selected click the right-hand mouse button in a blank part of the graphics window and select the **Contours** option to add the contours layer to the  Treeview.

The contours properties dialog will be displayed. Because we wish to look at radial results along the deck the cylindrical local coordinate system must be selected in order to make the appropriate results components available for selection.

- Select the **Transformed** button and select the **Local coordinate** option. Ensure **Cylindrical about Z-axis** is selected in the drop down list. Leave the **Shell plane for resultants** as **tz** and click **OK**
- Now, select Entity **Force/Moment - Thick plate** and Component moments in the theta direction **Mt**
- Click the **OK** button to display contours of moments in the longitudinal direction.
- To display the mesh on top of the contours, select the **Mesh** entry in the  Treeview and drag and drop it onto/below the **Contours** entry in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the graphics window and select the **Values** option to add the values layer to the  Treeview.

The values properties dialog will be displayed.

- Select Entity **Force/Moment - Thick plate** and Component moments in the theta direction **Mt**
- Select the **Values Display** tab.
- Deselect the **Symbols** display option.
- Deselect the **Maxima** option and select the **Minima** option since the sagging moment is negative. Change the percentage of values to display to **1**
- Set the number of significant figures to **4**
- Click the **OK** button to display contours of moments in the longitudinal direction with the bending moment value displayed.

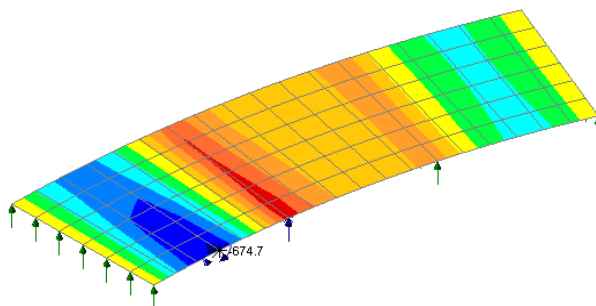

Plotting stress contours and peak values for other load combinations and for other influence points of interest may be obtained in a similar manner to that described above.

Save the model

File
Save



Save the model file.



Note. When the model file is saved after results processing, all load combinations, envelopes, and graph datasets, if defined, are also saved and therefore do not have to be re-created if the model is amended and a re-analysis is done at a later date.

This completes the example.

Traffic Load Optimisation for EN1991-2 design codes


To illustrate general usage this example analysed traffic load optimisation to EN1991-2 using the Recommended Values design code option.

By re-selecting the lines representing the kerbs on the Geometry layer and selecting an appropriate design code on the main Vehicle Load Optimisation dialog and re-running


the traffic load optimisation analysis, the results for other supported EN1991-2 Design Code and National Annexes values can be similarly obtained. When re-running the LUSAS TLO facility on the existing model care should be taken to ensure that the correct loadcase is included in the load combination and that the correct load factor has been specified.

Traffic Load Optimisation for EN1991-2 UK


By following a similar procedure to that previously described the optimised load definitions for EN1991-2 UK (using a single SV80 special vehicle) can be obtained along with a contour plot for a basic combination of self weight and combination results for bending in span 1, as shown in the following images.

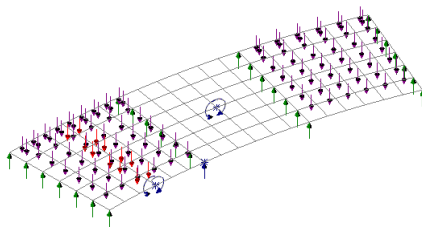


Optimised Characteristic Loading for Influence Point at Edge Mid-span 1

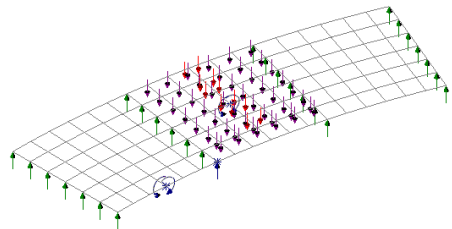

Optimised Characteristic Loading for Influence Point at Mid-span Bending Span 2

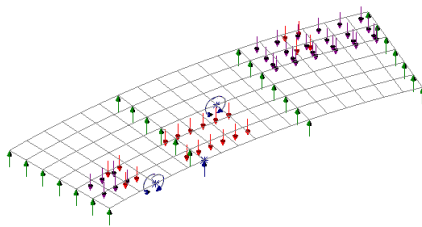

Optimised Characteristic Loading for the Influence Point at Reaction at Support 2

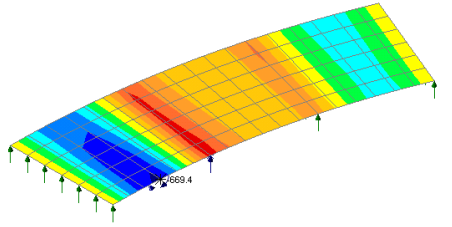


Combination results for Influence Point at Edge Mid-span 1

Here, the two bending influences show Group 1A loading to be dominant. The LM1 tandem and LM1 udl are however different in value to those in the earlier example due to the use of the appropriate adjustment factors from NA to BS EN1991-2 Table NA.1. The reaction influence shows the Group 5 to be dominant. The UK SV80 appears in Lane Number 1, with associated LM1 also appearing in Lane Number 1, with a minimum 5m distance from the SV to the first axle of the LM1 TS. Lane rank and location are similar to those described in the earlier example.


Traffic Load Optimisation for EN1991-2 Sweden

By following a similar procedure to that previously described the optimised load definitions for EN1991-2 Sweden (using all Complementary load model loads from 'a'


to '1') can be obtained along with a contour plot for a basic combination of self weight and combination results for bending in span 1, as shown in the following images.

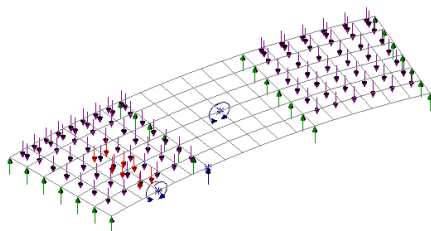


Optimised Characteristic Loading for the Influence Point at Edge Mid-span 1

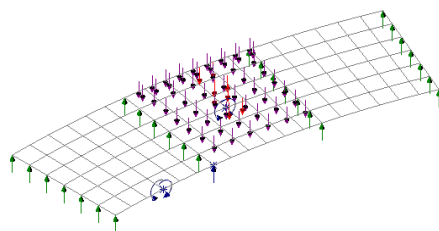

Optimised Characteristic Loading for the Influence Point at Mid-span Bending Span 2

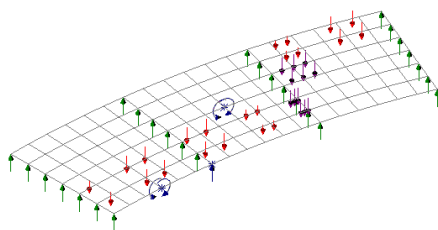

Optimised Characteristic Loading for the Influence Point at Reaction at Support 2

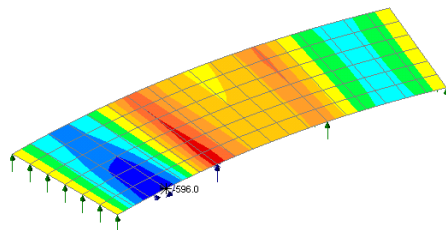

Combination results for the Influence Point at Edge Mid-span 1

Here, the two bending influences show Group 1A loading to be dominant. In accordance with SIS/PAS NA to EN 1991-2:2003 clause 4.3.2(3) and VVFS 2009:19 Chapter 6, clause 4, Table 7.1, adjustment factors for the LM1 tandem and LM1 udl are applied – hence there is no LM1 tandem in Lane Number 3 (factor $\alpha_{q3}=0$). Other comments on the EN1991-2 load patterns above also apply here. The reaction influence shows the Swedish Complementary Load Model to be dominant. Type L vehicles appear in Lanes 1 & 2, with udl q appearing in Lane 3 and no loading in the “remaining area”. Lane rank and location are similar to those described in the earlier example.


BRO Slab Analysis

For software product(s):	LUSAS <i>Bridge</i> .
With product option(s):	None
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

This example uses a previously created LUSAS bridge model that contains Swedish BRO loadings and loadcases. The BRO load combination wizard is used to investigate worst case positive and negative effects.

The structure is modelled using thick plate elements, representing a deck of inner radius 75m, outer radius 86m and thickness 0.7m. The deck has a width of 11m consisting of a 10m wide carriageway region and two 0.5m wide verges.

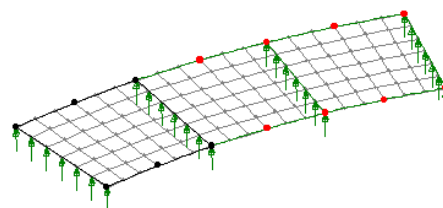

Objectives

- ☐ Generation of load combination in accordance with Swedish bridge code BRO

Keywords

2D, Slab, BRO Load Combinations, BRO Wizard, Positive Effects, Negative Effects

Associated Files



- ☐ **deck_comb_loaded.mdl** Model file of the structure.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Creating a new Model





Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog. Select the **Cancel** button. Select the menu command **File>Open** and then browse to the \<Lusas Installation Folder> \Examples\Modeller directory and select the **deck_comb_loaded.mdl** file.

Open the read-only file **deck_comb_loaded.mdl** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.

Loadcases considered


The model in use was created using the Swedish BRO startup template. When using a country-code specific template such as this, a number of blank loadcases are created in the  Treeview. These are the characteristic loadcases that are considered possible within the Swedish code of practice BRO. Individual vehicle and lane loadings have also been created in the  Treeview and assigned to these loadcases. The BRO load combination wizard will combine them in accordance with the Swedish code.

The following characteristic loadcases have been assigned to the model:

- Dead Load
- Surfacing
- Support yielding 1
- Support yielding 2
- Support yielding 3
- Support yielding 4
- Temperature 3
- Equivalent load 1 to Equivalent load 10
- View the BRO loadings and loadcases in the  and  Treeviews.
- In the \<LUSAS Installation Folder>\Projects\ folder create a new directory called **deck_comb_loaded**
- Save the model into this new folder as **deck_comb_loaded** This helps keep all relevant files separate from other analyses and is good practice.



Note. Loadcases would normally be defined using the **Bridge > Bridge Loading > Sweden** menu entry which would display the dialog shown. However, because the purpose of this example is to concentrate on showing the use of the BRO Combination Wizard these loadcases have already been defined and assigned to the model that is in use.

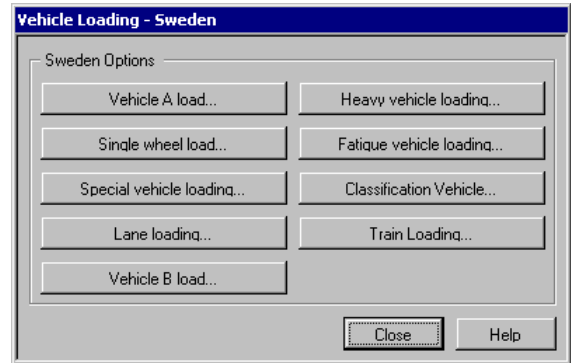

Running the Analysis

With the model loaded:




A LUSAS data file name of **deck_comb_loaded** will be automatically entered in the Filename field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file loadcase data will be added to the  Treeview.

In addition, two files will be created in the directory where the model file resides:



- ☐ **deck_comb_loaded.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **deck_comb_loaded.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

Viewing the Results

BRO Combinations

The BRO combination wizard allows you to choose which loads to combine into combinations. By selecting the combination type i.e. Comb4A (Combination 4A), the wizard defaults the load coefficients to the correct values as stated in table 22-1 of

BRO. Once all the required permanent, variable and live loads have been selected the resultant combination can be produced. The resultant combination will be formed by combining a combination of permanent loads, support yielding combination or envelope, a combination of variable loads and envelopes of live loading.

Note. The BRO combination wizard can only be used if the BRO loadcase template has been specified to define the characteristic loadcases at the Model Startup stage.



The BRO Combination Wizard dialog will appear.

- Select the **Set defaults** button.
- Select combination **Comb 4A**
- Ensure the **Number of variable loadcases** is set to 4
- Click **Next**

- For the permanent load type selection ensure the **Dead load** and **Superimposed dead: Deck surfacing** options are selected
- Click the **Next** button to continue.

- In the Support yielding section select the **Combine envelope of loadcases** option.
- Click the **Next** button to continue.

BRO Combination Wizard

Load type selection

Support yielding: ☐ Combine loadcases selectively
☒ Combine envelope of loadcases

Support yielding case 1	<input checked="" type="checkbox"/>	Support yielding case 6	<input checked="" type="checkbox"/>
Support yielding case 2	<input checked="" type="checkbox"/>	Support yielding case 7	<input checked="" type="checkbox"/>
Support yielding case 3	<input checked="" type="checkbox"/>	Support yielding case 8	<input checked="" type="checkbox"/>
Support yielding case 4	<input checked="" type="checkbox"/>	Support yielding case 9	<input checked="" type="checkbox"/>
Support yielding case 5	<input checked="" type="checkbox"/>	Support yielding case 10	<input checked="" type="checkbox"/>

< Back Next > Cancel Help

- No user defined permanent loads have been defined for this analysis so ensure the dialog is left blank and click **Next** to continue.

BRO Combination Wizard

Load type selection

User: Permanent load 1	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 2	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 3	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 4	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 5	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 6	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 7	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 8	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 9	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>
User: Permanent load 10	<input type="checkbox"/>	Permanent factor	<input type="text" value="1"/>	Variable factor	<input type="text" value="0"/>

< Back Next > Cancel Help

- For the variable load type selection pick **Temperature** type **Temp 3**
- Click **Next** to continue.

The dialog box is titled "BRO Combination Wizard". It contains a section "Variable load type selection" with a grid of checkboxes for various load types. The "Temperature" checkbox is selected, and within its sub-section, "Temp 3" is also selected. At the bottom are buttons for "< Back", "Next >", "Cancel", and "Help".

Variable load type selection	
Surface load	<input type="checkbox"/>
Fatigue load	<input type="checkbox"/>
Braking force	<input type="checkbox"/>
Lateral force	<input type="checkbox"/>
Ice and current	<input type="checkbox"/>
Snow	<input type="checkbox"/>
Wind loading	<input type="checkbox"/>
Temperature	<input checked="" type="checkbox"/>
Water pressure	<input type="checkbox"/>
Temp 1	<input type="checkbox"/>
Temp 2	<input type="checkbox"/>
Temp 3	<input checked="" type="checkbox"/>
Surcharge	<input type="checkbox"/>
Accident loads	<input type="checkbox"/>


< Back Next > Cancel Help


- No user defined variable loads have been defined for this analysis so ensure the dialog is blank and click **Next** continue.

The dialog box is titled "BRO Combination Wizard". It contains a section "Load type selection" with a table for user-defined loads. All checkboxes are unchecked, and the factor values are set to 0 for permanent and 1 for variable. At the bottom are buttons for "< Back", "Next >", "Cancel", and "Help".

Load type selection			
User: Variable load 1	<input type="checkbox"/>	Permanent factor	0
User: Variable load 2	<input type="checkbox"/>	Permanent factor	0
User: Variable load 3	<input type="checkbox"/>	Permanent factor	0
User: Variable load 4	<input type="checkbox"/>	Permanent factor	0
User: Variable load 5	<input type="checkbox"/>	Permanent factor	0
User: Variable load 6	<input type="checkbox"/>	Permanent factor	0
User: Variable load 7	<input type="checkbox"/>	Permanent factor	0
User: Variable load 8	<input type="checkbox"/>	Permanent factor	0
User: Variable load 9	<input type="checkbox"/>	Permanent factor	0
User: Variable load 10	<input type="checkbox"/>	Permanent factor	0
		Variable factor	1
		Variable factor	1
		Variable factor	1
		Variable factor	1
		Variable factor	1
		Variable factor	1
		Variable factor	1
		Variable factor	1
		Variable factor	1
		Variable factor	1

< Back Next > Cancel Help

- Finally, enter the **Equivalent loads** as attributes **1:54-64** (see the )
- Leave the **Maintenance and emergency vehicles** blank.
- Select **Finish** to generate the BRO Resultant combinations.

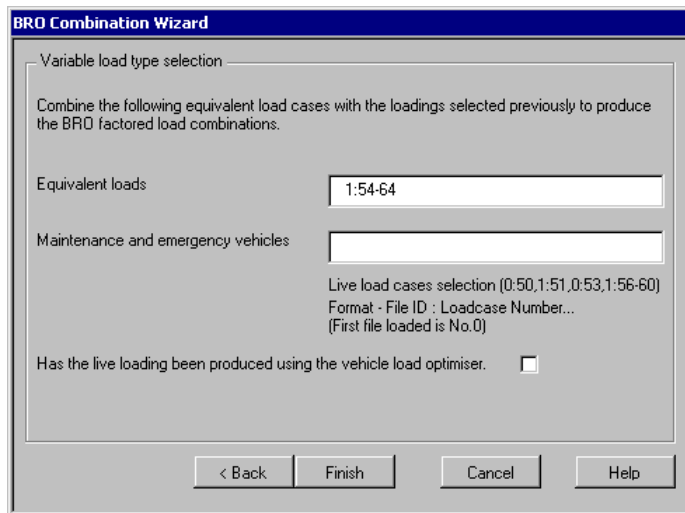

BRO Combination Wizard

Variable load type selection

Combine the following equivalent load cases with the loadings selected previously to produce the BRO factored load combinations.

Equivalent loads:



Maintenance and emergency vehicles:

Live load cases selection (0:50,1:51,0:53,1:56-60)
Format - File ID : Loadcase Number...
(First file loaded is No.0)

Has the live loading been produced using the vehicle load optimiser. ☐

< Back Finish Cancel Help

Displaying contours for BRO Max and Min Effects

 
- If present, turn-off the display of the **Geometry** and **Attributes** layers in the  Treeview.
- With no features selected, click the right-hand mouse button in a blank part of the graphics area and select the **Contours** option to add the contours layer to the  Treeview.

The contours properties dialog will be displayed.


- Select Entity **Force/Moment - Thick Plate** component moments in the X direction **MX** and click **OK**


The Contour results for Loadcase 1 - Dead Load will be displayed. (By selecting Page Setup and changing the left-margin to 45mm the contour key may be repositioned to the side of the results plot).

Loadcase: 1:Dead Load
Entity: Force/Moment - Thick Plate
Component: MX




Maximum 195.326 at node 19
Minimum -157.065 at node 21

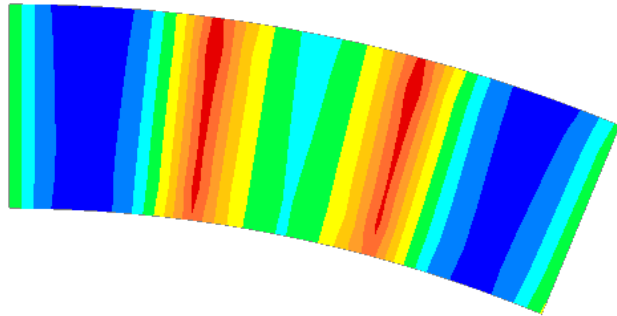


- In the  Treeview right-click on **BRO Combination 4A:Resultant(Max)** and select the **Set Active** option to view the worst positive effects (i.e. hogging moments and reactions). Click **OK** to verify that one or more loadcases are not currently loaded. (See the explanatory note at the end of the example) Select entity **Force/Moment - Thick Plate** and component **MX** to be used to assess the relieving or adverse affects when processing the combinations and click **OK**. To continue with partial results click **OK**

 Combining on: MX
 BROCombination 4A:Resultant (73) (Max)
 Entity: Force/Moment - Thick Plate
 Component: MX




Maximum 774.934 at node 8
 Minimum -110.523 at node 21

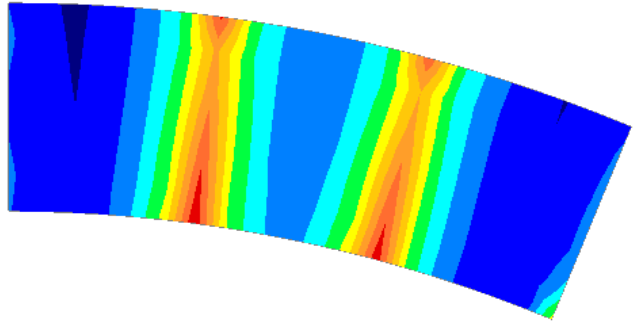


- Set combination the **BRO Combination 4A:Resultant(Min)** active to view worst negative effects (i.e. sagging moments and vertical displacements). Click **OK** to verify that one or more loadcases are not currently loaded. Select entity **Force/Moment - Thick Plate** and component **MX** to be used to assess the relieving or adverse affects when processing the combinations and click **OK**. To continue with partial results click **OK**

 Combining on: MX
 BROCombination 4A:Resultant (73) (Min)
 Entity: Force/Moment - Thick Plate
 Component: MX



Maximum 32.3628 at node 56
 Minimum -1.07678E3 at node 52

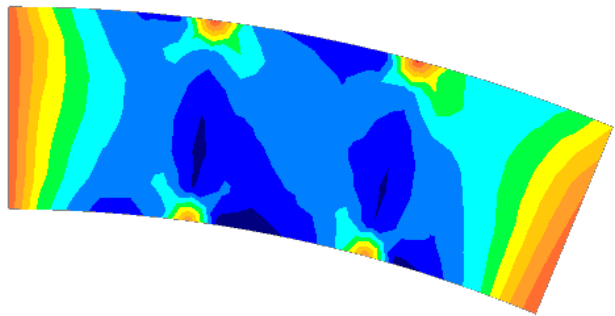

Additional results processing can be carried out in a similar manner to that described in the Simple Slab example.



Note. The warning message “One or more loadcases are not currently loaded. Results will be generated with these loadcases omitted” will appear whenever a smart results combination includes loadcases that have been provided for use by the BRO startup template but that have not been assigned a loading by the user – because they are not required, for example. In this example the loadcase **BRO Combination**

4A:Resultant(Max) includes loadcases that, in turn, include a number of allocated but un-used Support Yielding loadcases.

Save the model



Save the model file.



Note. When the model file is saved after results processing, all load combinations, envelopes, and graph datasets, if defined, are also saved and therefore do not have to be re-created if the model is amended and a re-analysis is done at a later date.

This completes the example.


Section Slicing of a 3D Shell Structure

For software product(s):	Any Plus version.
With product option(s):	None

Description

This example uses the Slice Resultants Beams/Shells facility to investigate the behaviour of a bridge deck modelled using thick shell elements. The results are converted into forces and moments of an equivalent beam using this facility.

Units used are N, m, kg, s, C throughout.

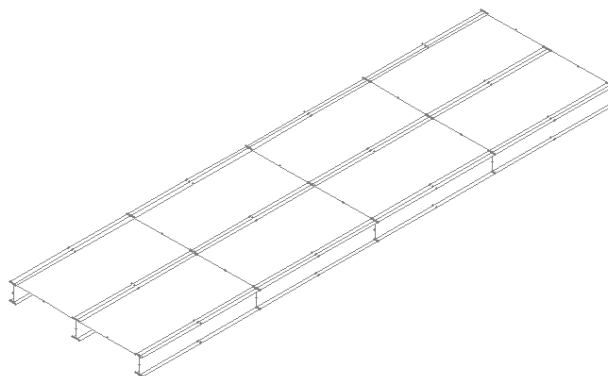

Objectives

The output requirements of the analysis are:

- ☐ Forces and bending moments along length for whole structure
- ☐ Forces and bending moments associated with central girder effective width

Keywords

Force, Bending moments, Slicing, Shells.

Associated Files



- ❑ **shell_slicing.mdl** Model file of the structure.


Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.

Creating a new Model

- To create the model, open the file **shell_slicing.mdl** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.

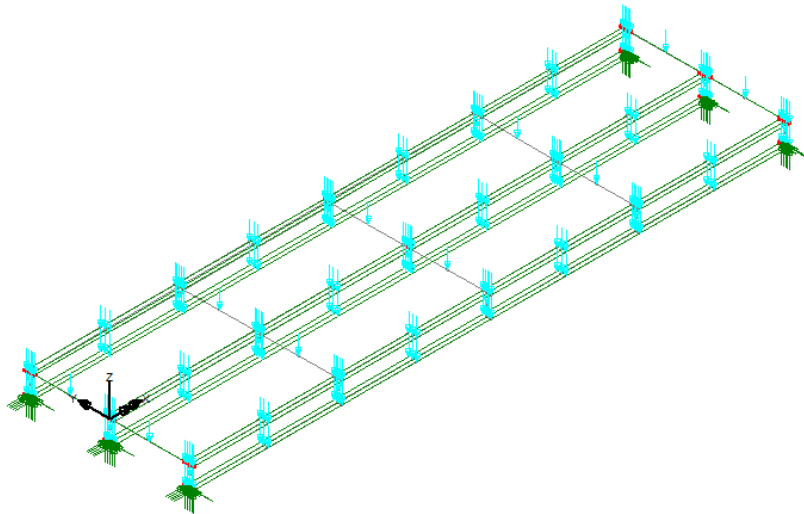

If necessary, click the isometric button to view the model in 3D




If necessary, turn-on the display of the supports.



If necessary, turn-on the display of the loading.

File
Save As...

- Save the model to your local projects folder to prevent overwriting the model in the examples directory.

In the  Treeview two load cases can be seen. One corresponds to the self-weight of the structure and the other to an applied load of a United Kingdom HB vehicle. For the post-processing, a combination has also been defined which combines these two load cases.


Turning off all layers other than the mesh allows visualisation of the general layout of the model. The deck is 4.21m wide and consists of a concrete slab and three steel girders as indicated in the following figures. The mesh discretisation of the model is extremely coarse for the purpose of this example.



Note. When carrying out this type of slicing on realistic models it is recommended that a much finer mesh discretisation is used to accurately capture the response of the structure, particularly if 3- and 4-noded shell elements are being used for the modelling.

Idealisation of the Bridge Structure

For this example the idealisation of the bridge structure into the analysis model has been done using only shell elements.

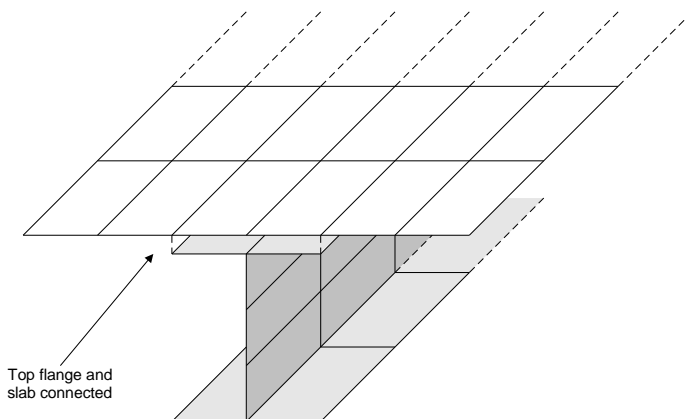


Shell element modelling of the whole structure

Shell elements have been used for the girder components and also the concrete slab as illustrated. For the modelling, discrete features have been defined for the top flange and the slab since their materials are not identical. The slab has an eccentricity to define a bending plane that is not coincident with the top flange and these two components are combined using an equivalence attribute. This is just one of many ways that the idealisation for this type of bridge structure can be undertaken.


Section Slicing of a 3D Shell Structure

Based upon this idealisation method the whole model showing element discretisation is as shown:

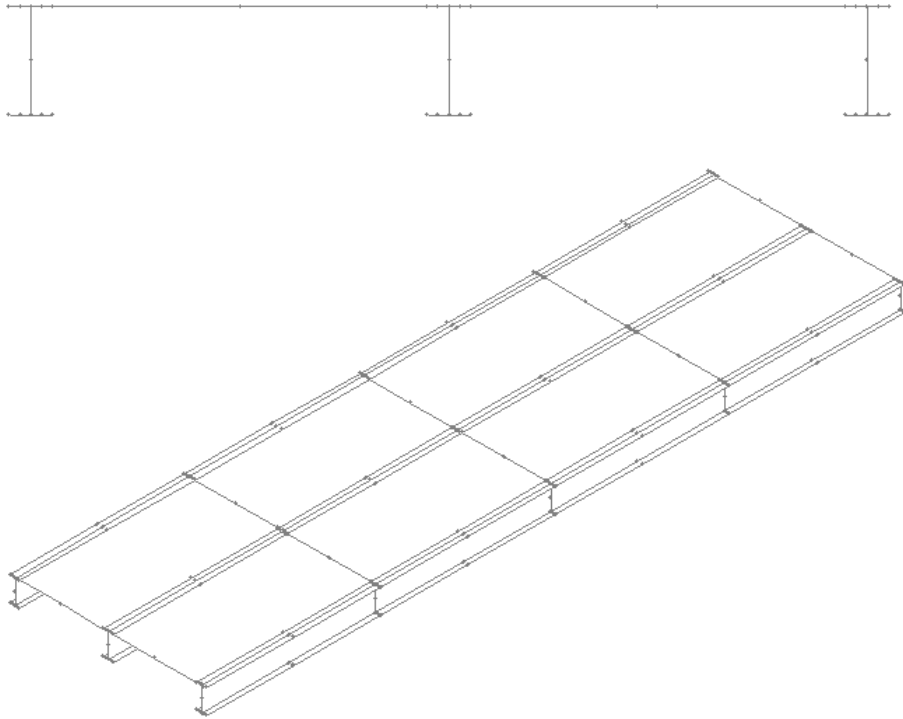


Alternative idealisations

The following figure shows the same structure but this time the shell elements representing the top and bottom flanges of the girder have been replaced by beam elements running along the top and bottom of the girder with the appropriate properties for the flange members.

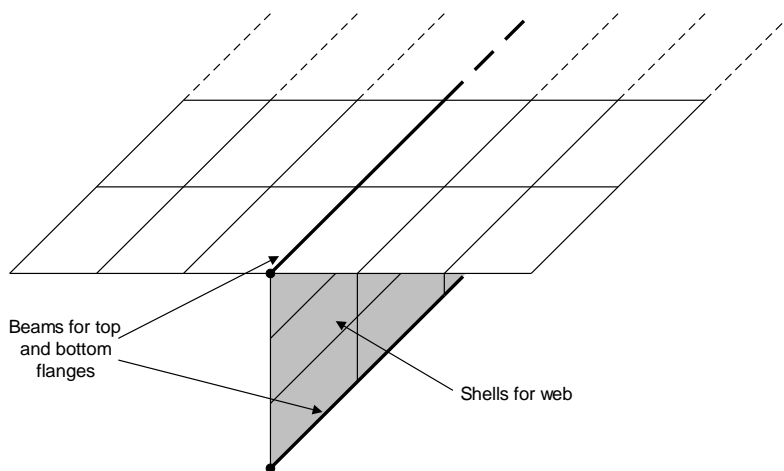

Beam element modelling of flanges

In the last figure the whole girder has been replaced by beam elements with appropriate geometric properties and an eccentricity to offset the bending plane of the beams.

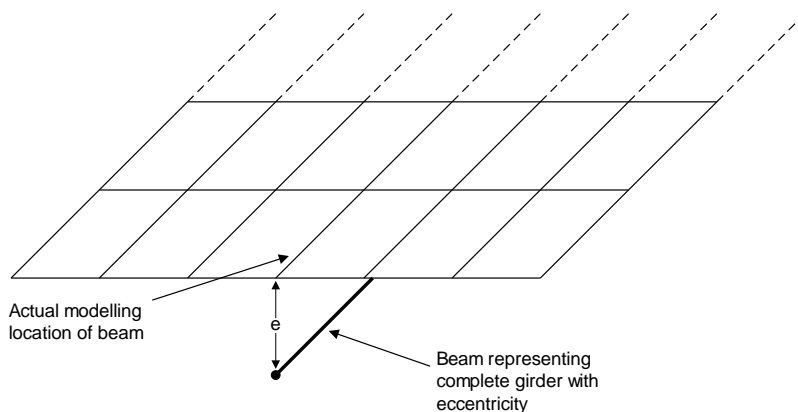

Beam element modelling of the whole girder

The choice of which analysis idealisation should be used depends upon what is required from the results of the analysis. For instance, if a curved girder analysis is being performed and the lateral forces in the top and bottom flanges are required then Shell element modelling of the whole structure or beam element modelling of the flanges (as shown in the first two figures) are suitable but beam element modelling of the whole girder (as shown in the last figure) is not.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...



A LUSAS data file name of **Shell_Slicing** will be automatically entered in the File name field.



- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

Viewing the Results





If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results `shell_slicing.mys` for the self-weight loadcase will be set to be active by default.

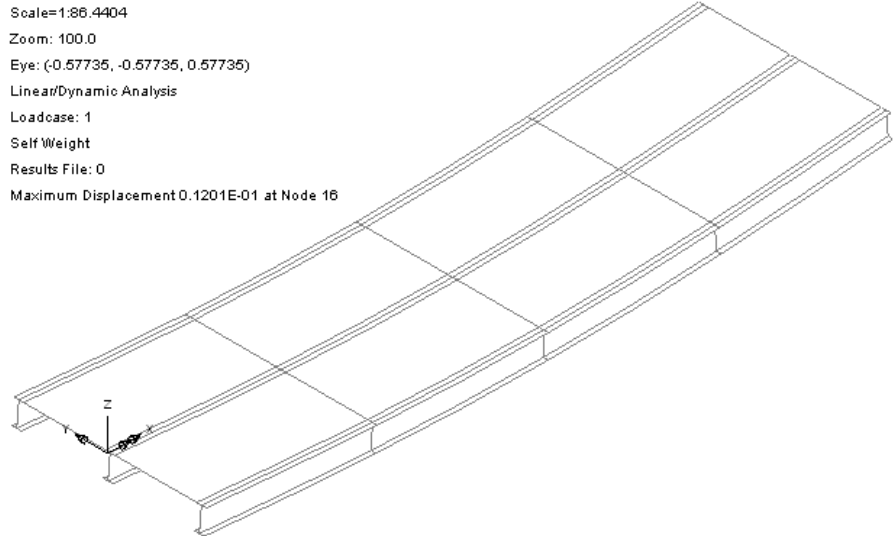Plotting Deformed Shapes


- Ensure the **Mesh**, **Geometry** and **Attributes** layers are present and turned off in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the Graphics area and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview. In the deformed mesh dialog box select the **Window summary** option and click the **OK** button to accept the remaining default values and display the deformed mesh for the self-weight loadcase.



Computing Forces And Bending Moments For Combination


- Turn off the **Deformed Mesh** and **Annotation** layers in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the Graphics area and select the **Mesh** option to add the mesh layer to the  Treeview. In the mesh dialog box click the **OK** button to accept the default values.
- With no features selected click the right-hand mouse button in a blank part of the Graphics area and select the **Geometry** option to add the geometry layer to the  Treeview. In the geometry dialog box click the **OK** button to accept the default values.
- In the  Treeview right-click on **Combination** and select the **Set Active** option. The results for the combined effects of the factored self weight and HB vehicle load will now be available.
- Select the centre line of the model (Line 24). This line will be used to define the path along which the slicing will take place.

Select the centre line of the model

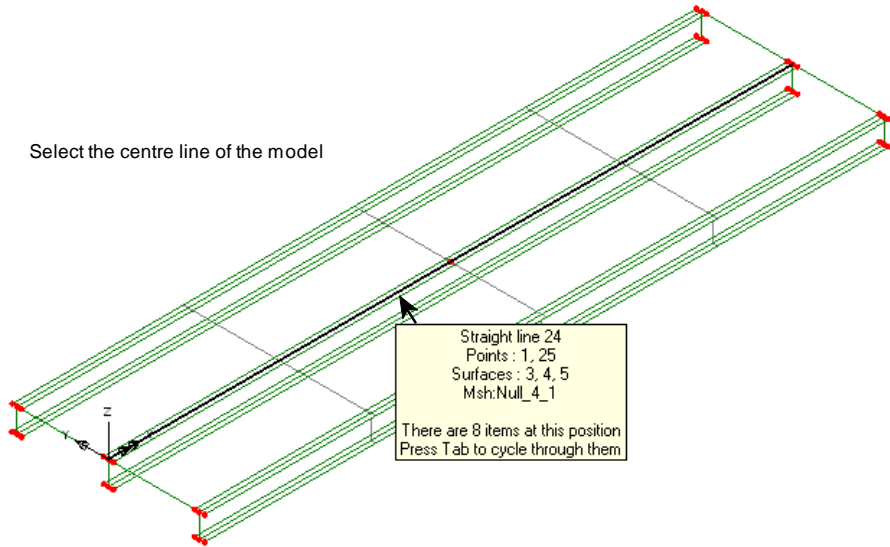

- **Z: N/A** Set the view axis to be along the global Z-axis by pressing the Z-axis button at the bottom of the graphics area.

The current Modeller window should look as follows:

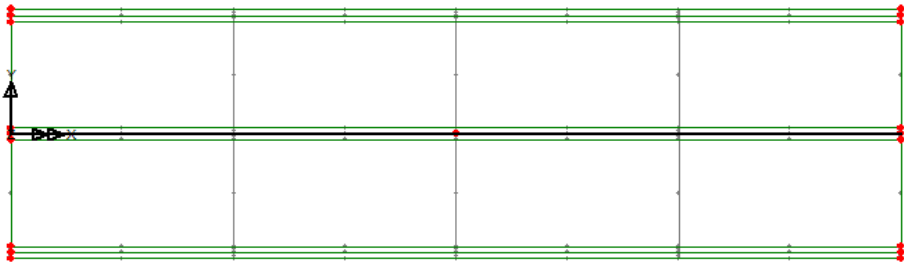

Note. Whilst visualisation of the model can be done using an isometric view the definition of the slice cutting planes must, for this example at least, always be done with the model viewed along the global Z-axis.

With the centre line of the model (Line 24) still selected:

Utilities

Slice Resultants
Beams/Shells

The slicing dialog will be displayed.

- Select the **Incremental distance from start of path** option.
- Enter **0;15@1** into the associated box which will cut slices at the start of the line (0m) and every 1m up to and including 15m.
- Set the **Distance from reference origin to start of path (chainage)** to **0**
- Select the **Neutral axis** option to calculate the forces and moments about the sliced section neutral axis.

- Ensure that the **Effective width** option is deselected.
- Set the slice **Slicename prefix** to **Slice** . This will be the prefix for the naming of the sliced sections.
- Click the **OK** button to start the automated slicing the model.



Note. Three methods are available for the definition of the slice locations. **From points or nodes in selection** allows the definition of the slicing locations by projection of the points/nodes onto the slicing path. **Incremental distances from start of path** allows the definition of progressive slice distances governed by the supplied increments. These increments can be positive or negative so long as the accumulated distance is within the path length. The **Absolute distances from start of path** allows the definition of known distances along the slicing path for slices to be taken.



Note. **Smooth corners on path** is used to traverse sharp corners in the defined slicing path. If smoothing is selected then the orientation of the slice plane is set to be at an angle of half the path angle change at the connection if this location coincides with a slice. If smoothing is not selected, two slices will be taken at a sharp corner with angles taken from both lines/arcs at the connection.


The forces and moments for the slices are output in a grid as indicated in the following figure. The output is relative to the slice axes and consists of the following information:


Section Slicing of a 3D Shell Structure

Slice title, distance associated with slice location, the global coordinates of the sliced section neutral axis, shear forces (Px and Py), axial force (Pz), bending moments (Mx and My) and torsion (Mz). If moments are calculated about the path intersection then the coordinates will be equal to the location on the path associated with the distances selected.


Slice Output											
	A	B	C	D	E	F	G	H	I	J	K
1	Title	Dist	X	Y	Z	Px	Py	Pz	Mx	My	Mz
2	Slice 1	0.0	0.0	0.0	0.0413928	6.0132E-6	-1.78959E6	1.37817E-3	-389.893E3	0.0685263E-3	-0.0872636E-3
3	Slice 2	1.0	1.0	0.0	0.0413928	5.9878E-6	-1.54248E6	1.79772E-3	-1.82672E6	0.0797165E-3	-0.0818528E-3
4	Slice 3	2.0	2.0	0.0	0.0413928	5.96206E-6	-1.29537E6	2.21727E-3	-3.26355E6	0.0909064E-3	-0.0764406E-3
5	Slice 4	3.0	3.0	0.0	0.0413928	5.93661E-6	-1.04826E6	2.63682E-3	-4.70038E6	0.102097E-3	-0.0710294E-3
6	Slice 5	4.0	4.0	0.0	0.0413928	5.60701E-6	-518.628E3	0.160675E-3	-5.83074E6	0.116992E-3	-0.0291121E-3
7	Slice 6	5.0	5.0	0.0	0.0413928	5.62708E-6	-316.449E3	0.539391E-3	-6.03675E6	0.115474E-3	-0.0260047E-3
8	Slice 7	6.0	6.0	0.0	0.0413928	5.64714E-6	-114.269E3	0.918108E-3	-6.24277E6	0.113952E-3	-0.022897E-3
9	Slice 8	7.0	7.0	0.0	0.0413928	5.66718E-6	87.9102E3	1.29682E-3	-6.44878E6	0.112431E-3	-0.0197892E-3
10	Slice 9	8.0	8.0	0.0	0.0413928	5.37092E-6	-87.9102E3	1.00211E-3	-6.44185E6	0.10699E-3	0.0571254E-3
11	Slice 10	9.0	9.0	0.0	0.0413928	5.31604E-6	114.269E3	0.86258E-3	-6.24085E6	0.0796455E-3	0.0593478E-3
12	Slice 11	10.0	10.0	0.0	0.0413928	5.26112E-6	316.449E3	0.723043E-3	-6.03985E6	0.0523059E-3	0.0615703E-3
13	Slice 12	11.0	11.0	0.0	0.0413928	5.20609E-6	518.628E3	0.583505E-3	-5.83885E6	0.0249609E-3	0.0637926E-3
14	Slice 13	12.0	12.0	0.0	0.0413928	4.99844E-6	1.04826E6	3.40763E-3	-4.69432E6	0.014193E-3	0.0144469E-3
15	Slice 14	13.0	13.0	0.0	0.0413928	4.94566E-6	1.29537E6	2.81432E-3	-3.26285E6	0.0101565E-3	0.0224079E-3
16	Slice 15	14.0	14.0	0.0	0.0413928	4.89257E-6	1.54248E6	2.221E-3	-1.83139E6	6.12229E-6	0.030368E-3
17	Slice 16	15.0	15.0	0.0	0.0413928	4.83973E-6	1.78959E6	1.62769E-3	-399.92E3	2.08845E-6	0.0383278E-3


This grid can be resized and the results copied and pasted using the **Ctrl + C** and **Ctrl + V** keys into an application such as Microsoft Excel to generate force and bending moment diagrams as illustrated.

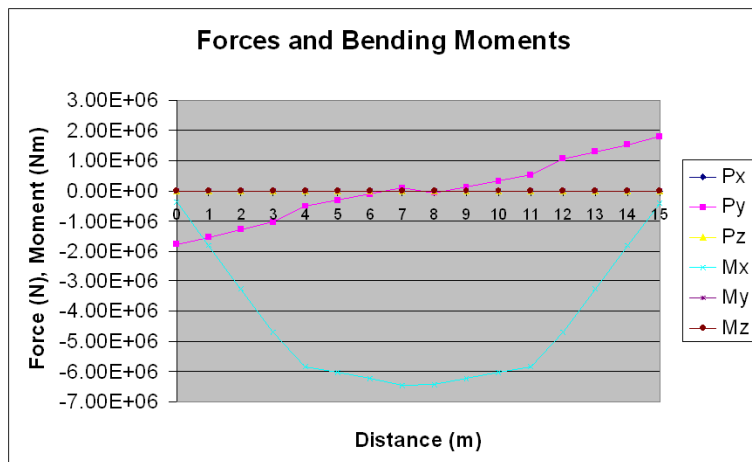


- Click the **Cancel** button to close the slice output grid.
- Turn on the Annotation layer in the  Treeview.

The locations of the slices are indicated on the model as illustrated below. These annotations include the physical location of the slice, its title and a local coordinate set indicating the axes of the slice. If the option to calculate the forces and moments about the neutral axis has been selected this local coordinate set will be defined at the neutral axis location. If however the option to calculate the forces and moments about the slice path has been selected, the local coordinate set will be defined at the intersection between the slice path and the slice plane.

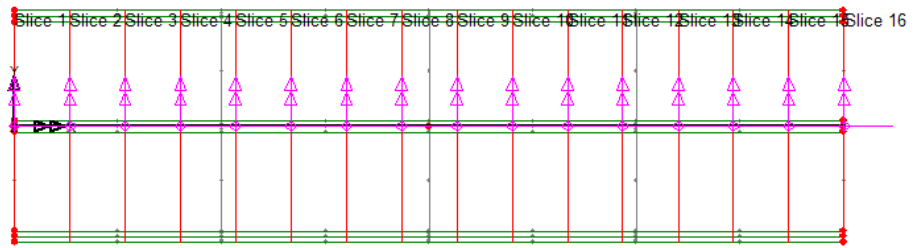

- Click on the  isometric button to view the model in 3D to view the extents of the slices.

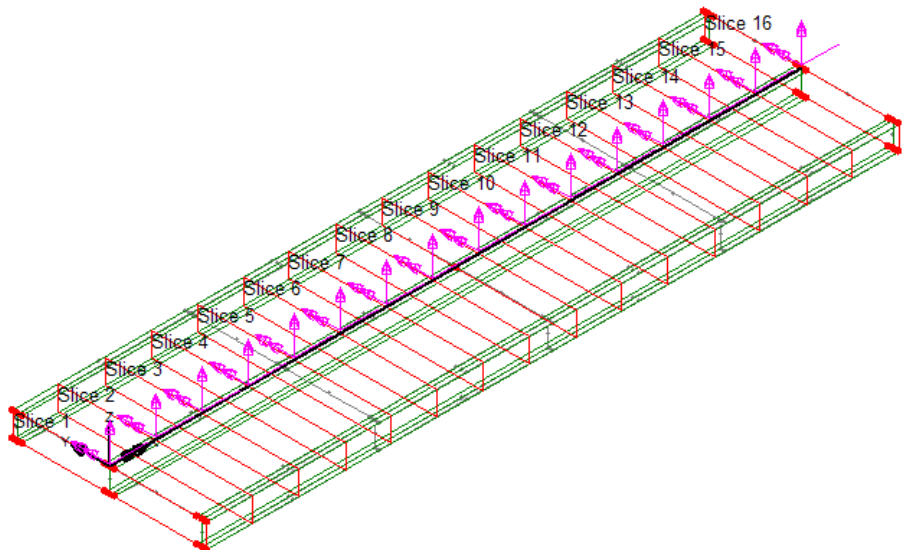




Note. Whilst visualisation of the slices generated is possible in an isometric view the definition of the slice cutting plane must, for this example at least, always be done with the model viewed along the global Z-axis.

- Delete the current slice annotations.

Computing Forces and Bending Moments for Girder Effective Width

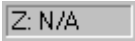-  Set the view axis to be along the global Z-axis


With the centre line of the model (Line 24) still selected:

The slicing dialog will be displayed.

- Select the **Absolute distances from start of path** option.

Note. List separators vary according to your PC's regional locale settings. For example, English (UK) and English (US) settings use a comma as a list separator. French, Swedish and other language settings use a semi-colon.

Please enter whatever is appropriate to your region. In this example an English (UK) list separator is shown.

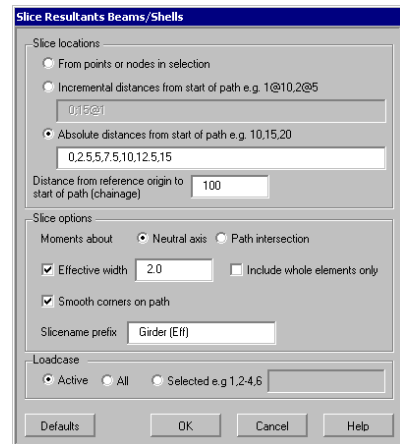


- Enter **0,2.5,5,7.5,10,12.5,15** (using an appropriate list separator for your regional settings) into the associated box. This will cut slices at the start of the line (0m) and every 2.5m up to and including 15m.
- Set the **Distance from reference origin to start of path (chainage)** to **100** . The start of the slicing path will therefore have a distance/chainage of 100m and the end of the slicing path will have a distance/chainage of 115m.
- Select the **Effective width** option and enter **2.0** in the associated box. This will set the effective width to be 2.0m centred on the slicing path (i.e. 1.0m either side)
- Set the slice **Slicename prefix** to **Girder2 (Eff)** . This will be the prefix for the naming of the sliced sections.
- Click the **OK** button to start slicing the model.

The forces and moments for the slices are output in a grid as shown:

Slice Output											
	A	B	C	D	E	F	G	H	I	J	K
1	Title	Dist	X	Y	Z	Px	Py	Pz	Mx	My	Mz
2	Girder2 (eff) 1	100.0	0.0	0.079855E-15	0.0622785	-5.50705E-6	-753.004E3	-108.222E3	-27.2035E3	-2.50777E-6	-0.0113935E-3
3	Girder2 (eff) 2	102.5	2.5	0.079855E-15	0.0622785	-6.95906E-6	-442.901E3	-616.876E3	-1.45781E6	0.0218353E-3	-0.013383E-3
4	Girder2 (eff) 3	105.0	5.0	0.079855E-15	0.0622785	0.584106E-6	-75.0993E3	-1.19305E6	-2.19555E6	0.0353779E-3	-5.02519E-6
5	Girder2 (eff) 4 (-Z)	107.5	7.5	0.079855E-15	0.0622785	6.37182E-6	96.495E3	-1.38373E6	-2.30662E6	0.0419643E-3	-3.7045E-6
6	Girder2 (eff) 4 (+Z)	107.5	7.5	0.079855E-15	0.0622785	9.95355E-6	-102.1E3	-1.39343E6	-2.30187E6	0.0429377E-3	8.30915E-6
7	Girder2 (eff) 5	110.0	10.0	0.079855E-15	0.0622785	9.85971E-6	71.0146E3	-1.17398E6	-2.20406E6	0.0169816E-3	6.9976E-6
8	Girder2 (eff) 6	112.5	12.5	0.079855E-15	0.0622785	6.67232E-6	415.529E3	-508.673E3	-1.48865E6	4.83058E-6	0.010497E-3
9	Girder2 (eff) 7	115.0	15.0	0.079855E-15	0.0622785	2.43091E-6	694.615E3	120.01E3	-157.693E3	0.65744E-6	7.08318E-6


Copying these results into a spreadsheet application and generating the graphs gives the force and bending moment diagrams as shown:

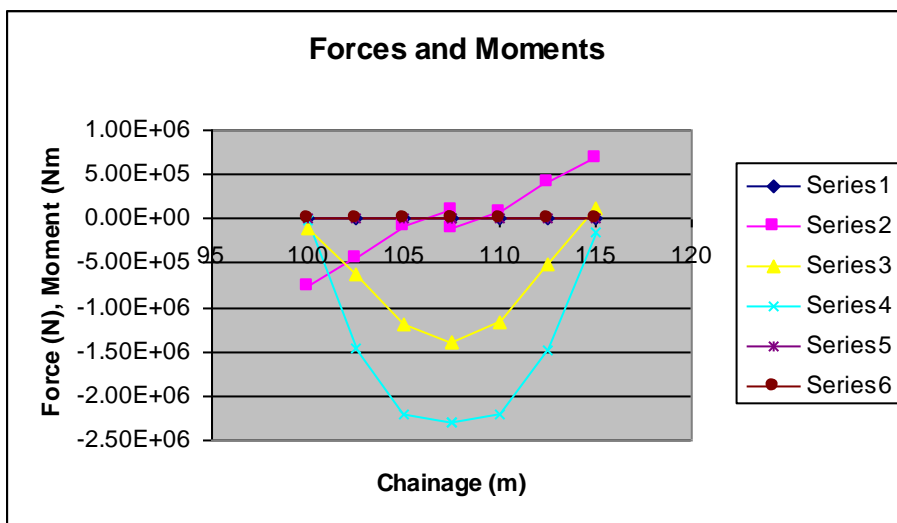


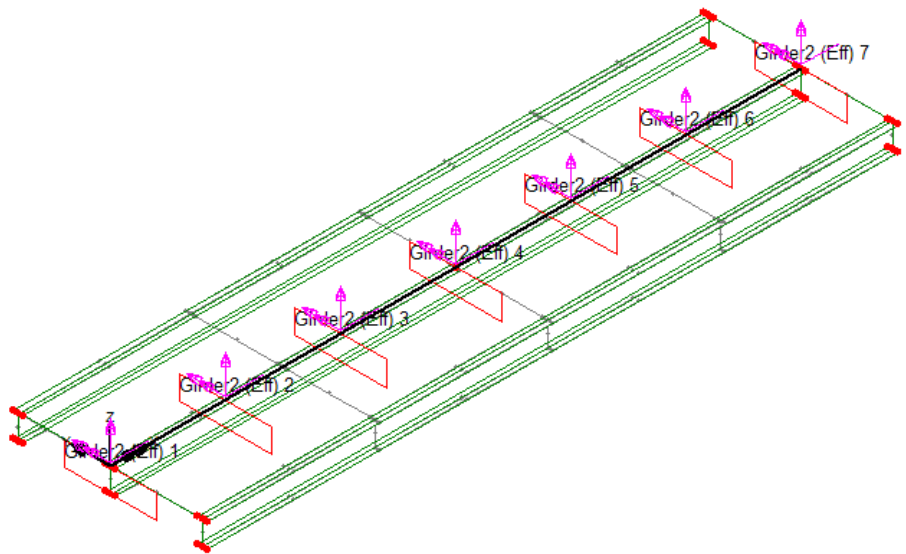
- Click the **Cancel** button to close the slice output grid.

The locations and extents of the slices through the bridge are indicated on the model as illustrated below. These annotations include the physical location, title and local axes as before.

Section Slicing of a 3D Shell Structure

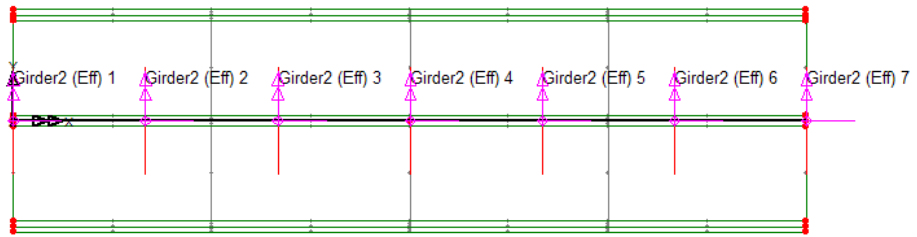

- Click on the  isometric button to view the model in 3D to view the extents of the slices.



Utilities
Remove
Beam/Shell Slice
Annotations

- Delete the current slice annotations.

This completes the example.



Note. Curved structures can also be sliced using this facility.

Seismic Response of a 2D Frame (Frequency Domain)

For software product(s):	All (except LT versions)
With product option(s):	None.


Description

This example examines the Spectral Response analysis of a 2D braced tower frame. The geometry is simplified to a wire-frame or stick representation, with each of the structural members being represented by Point and Line features only.

The model is comprised of thick beam elements for the concrete column, beam members, and steel diagonal bracing members which have pinned end connections. The structure is fully restrained against displacement and rotation at ground level.

Since the global response of the structure is required, the model of the tower is further simplified by meshing each Line with a single element. This will effectively avoid the extraction of local panel modes for individual beams and columns. These local modes could be investigated independently in a more detailed analysis.

The spectral response analysis is performed in three distinct stages. Firstly a natural frequency analysis is performed. This is used here to calculate the first 10 natural

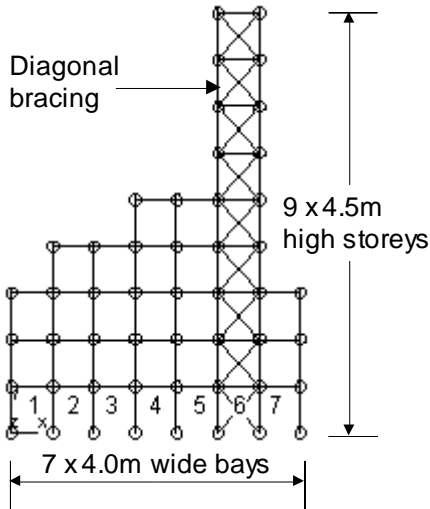

modes of vibration of the structure. The eigenvalues, frequencies and eigenvectors (mode shapes) are stored and used in the subsequent spectral response analysis. Although the natural frequencies are obtained from an eigenvalue analysis any information regarding the magnitudes of deformations or moments is non-quantitative.

The second phase of the analysis is the spectral response calculation, in which the spectral response computation is performed interactively as a results processing operation using the Interactive Modal Dynamics (IMD) facility. This is an alternative to performing a non-interactive spectral response analysis in LUSAS.

In a spectral response analysis, the structure is subjected to a support condition excitation. In this example this is assumed to be the effect of Seismic/Earthquake motion although any support motion could be envisaged. The excitation is specified as a spectral curve, in terms of displacement, velocity or acceleration and represents an envelope of these effects over a measured frequency range. Damping may also be specified at this stage.

From the spectral analysis participation factors are obtained which indicate, for each mode, the degree of structural response associated with this applied excitation.

The last phase of the analysis considers self weight in conjunction with the spectral response and to this end two load combinations are defined from which worst case force/moment envelopes may be obtained.

Units used are N, m, kg, s, C throughout.

Keywords

2D, Plane Frame, Beam, End Releases, Fleshing, Natural Frequency, Eigenvalue, Spectral Response, Seismic, Axial Force, Shear Force, Bending Moment Diagrams, Participation Factors, Modal Dynamics, Interactive Modal Dynamics (IMD), Modal Response, Global Response, Graphing, Animation, Load Combination.

Associated Files



- ☐ **tower_modelling.vbs** carries out the example modelling.
- ☐ **tower_spectrum.vbs** defines a typical spectral curve excitation.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **tower**
- Use the **Default** working folder.
- Enter the title as **Tower**
- Set the units to **N,m,kg,s,C**
- Ensure the **Structural** user interface is selected.
- Select the **Standard** startup template.
- Select the **Vertical Y Axis** option.
- Click the **OK** button.



Note. Save the model regularly as the example progresses. Use the Undo button to correct any mistakes made since the last save was done.

Defining the Column and Beam Members



Note. In eigenvalue analyses (and dynamic analyses in general) it is important to work in strict SI units (N, m, kg). Care must be taken to ensure that these units are used when specifying parameters, such as feature coordinates, geometric and material properties and loading values.

Geometry >
Line >
Coordinates...



Enter coordinates of **(0, 0)**, **(0, 4.5)**, **(4, 4.5)** and **(4, 0)** and click **OK** to define the first bay of the ground level storey.




Note. Sets of coordinates must be separated by commas or spaces unless the 'Grid Style' method is chosen. The **Tab** key is used to create new entry fields. The arrow keys are used to move between entries.

Meshing - Columns and Beams

As the global response of the structure is required only one beam element need be used along each Line. This will prevent LUSAS from picking up any panel modes caused by local vibration of the columns and beams.

- Select **Thick Beam, 2 dimensional, Linear** elements.
- Enter the number of divisions as **1**
- Enter the attribute name as **Thick Beam** and click **OK**
- With the whole model selected, drag and drop the Line mesh attribute **Thick Beam** from the Treeview onto the selected features.

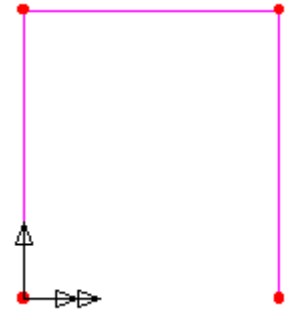

Geometric Properties - Columns and Beams



- From the Usage section select **2D Thick Beam** from the drop down list and change the values on the dialog to match those shown in the table for a column member.
- Enter the attribute name as **Concrete Column** and select the **Apply** button to create the attribute and re-use the dialog.


	Column Member	Beam Member
Cross-sectional area	0.1	0.08
Second moment of area about z axis Izz)	0.833e-3	0.533e-3
Effective Shear Area in Y Direction (Asy)	0.1	0.08
Offset in y direction (Ry)	0	0

- Change the values on the dialog to match those shown in the table for a beam member.
- Change the attribute name to **Concrete Beam** and click **OK**




Note. Whilst in practice column sizes would vary with height and beam sizes may vary throughout the structure, in this example, for simplicity, all of the concrete columns and beam sections are of the same size and assumed to be of solid square section.

- Select the 2 vertical Lines representing the column members. (Hold the **Shift** key down to add to the initial selection).
- Drag and drop the geometry attribute **Concrete Column** from the  Treeview onto the selected features.
- Select the horizontal Line representing the Beam.
- Drag and drop the geometry attribute **Concrete Beam** from the  Treeview onto the selected Line.

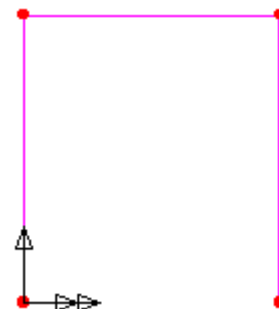


Geometric property assignments are visualised by default. In general the diagrams in this example will not show geometric visualisations.

Material Properties - Columns and Beams


- Select material **Concrete** from the drop down list, leave the grade **Ungraded** and click **OK** to add the material attribute to the  Treeview.

The columns and beams are made of concrete.

 
- Select the whole model by either using the **Ctrl** and **A** keys to select all features or by dragging a box around the model.
- Drag and drop the material attribute **Iso1 (Concrete Ungraded)** from the  Treeview onto the selected features.

Copying the Column and Beam Members



Now that one bay has been fully defined it will be copied to form the other 6 bays of the ground storey of the tower. With the whole model selected:

 Enter a translation in the **X** direction of **4** metres.

- Enter the number of copies required as **6**
- Click the **OK** button to create 6 additional bays.



  Bay 6 of the structure requires diagonal bracing to be added with the ends of both members being free to rotate about the Z direction in order to model a pinned connection.



Defining the Bracing Members

- Select 2 diagonally opposite Points in bay 6. (Hold the **Shift** key down to add to the selection).



The line will be drawn.

- Repeat for the other pair of diagonally opposite Points.

Meshing - Bracing Members

 
Only one beam element is to be used along each bracing member. However, the ends of the bracing members must be free to rotate about the Z direction in order to model a pinned connection, therefore the existing mesh dataset (as used for the beam and column members) cannot be used. A new mesh dataset must now be created from the existing one.

- In the Treeview double-click the **Thick Beam** attribute name.
- Click the **End releases** button and set the **First node end releases** and **Last node end releases** to allow **Rotation about Z** by selecting the option.
- Click the **OK** button to return to the Line mesh dialog.
- Change the dataset name to **Thick Beam (Pinned Ends)** and click the **OK** button.
- With the 2 Lines representing the bracing members selected. Drag and drop the Line mesh attribute **Thick Beam (Pinned Ends)** from the Treeview onto the selected features.



Note. The visualisation of the beam end releases is shown by default. If it is required to turn-off their visualisation select the

Treeview and double click on **Mesh**, select the Visualise tab and deselect the **Beam end releases** option.



Geometric Properties - Bracing members



For the purposes of this example the bracing members are to be defined as Universal Beams.

The standard sections dialog will appear.

- In the Usage section ensure that **2D Thick Beam** is selected

Geometry
Line >
Points...



Attributes
Geometric >
Section Library...

- From the **UK Sections** library select the **Universal Beams (BS4)** section type and select the **254x146x43kg UB** section.
- Enter an attribute name of **Bracing Member** and click the **OK** button to add the Universal Beam attribute to the  Treeview.
- Select the 2 diagonal Lines representing the bracing members.
- Drag and drop the geometry attribute **Bracing member (254x146x43kg UB major y)** from the  Treeview onto the selected features.



Select the fleshing on/off button to turn-off the geometric visualisation. If at any time during the example you wish to visualise the geometry select this button.

Material Properties - Bracing Members

- Select material **Mild Steel** from the drop down list, leave the grade **Ungraded** and click **OK** to add the material attribute to the  Treeview.
- With the 2 bracing members selected, drag and drop the Material attribute **Iso2 (Mild Steel Ungraded)** from the  Treeview onto the selected features.

The first bay of the ground storey of the tower is now completely defined. The support conditions are not defined or assigned yet because this bay will be copied upwards to create other storeys where supports will not be required.

Copying the Model Features

The other storeys of the tower can now be generated by copying selected features through specified distances in the Y direction.

 
 
- Select the whole model using the **Ctrl** and **A** keys together.



Enter a translation in the **Y** direction of **4.5** metres. Enter the attribute name as **Y=4.5**. Click the **Save** button to save the attribute for re-use. Enter the number of copies required as **2** and click the **OK** button to finish to generate two additional storeys.



Note. All attributes assigned to the features on the ground level storey, for example, line mesh, geometric and material properties, will be duplicated on the other storeys automatically when the new features are created by copying.




- Drag a box around the bays shown to create the next level of the structure.



Select the attribute **Y=4.5** from the drop down list and click the **OK** button to create **1** copy of the features selected.

Drag a box to select only these bays

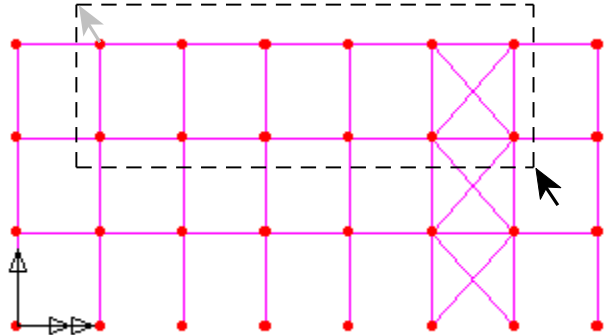


- Drag a box around the bays shown to create the next level of the structure.




Select the attribute **Y=4.5** from the drop down list and click the **OK** button to create **1** copy of the features selected.


Drag a box to select only these bays

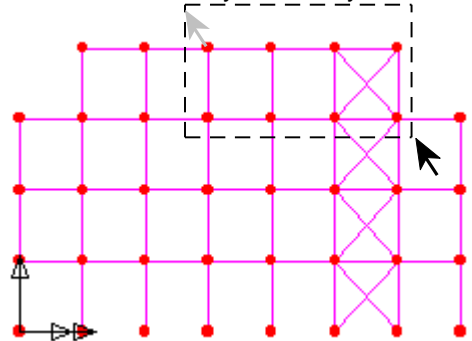

- Drag a box around the bay shown which will be used to create the remaining levels of the structure.

 Drag a box to select only this bay

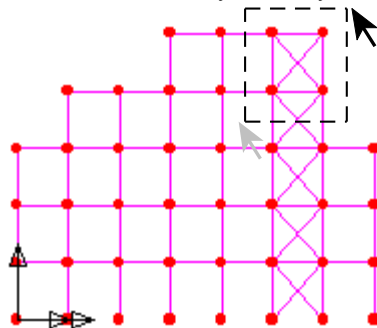


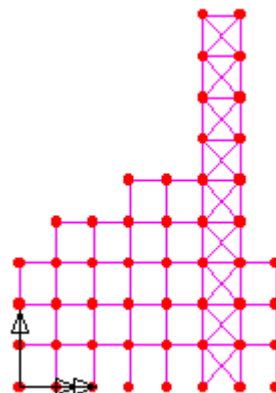


Select the attribute **Y=4.5**


- Change the number of copies to 4
- Click the **OK** button to create the remaining levels.

Supports


LUSAS provides the more common types of support by default. These can be seen in the  Treeview. The tower must be fully restrained at the base, therefore 3 degrees of freedom (U, V and rotation about the Z axis) must be restrained. A fully fixed support type is therefore required.



Assigning the Supports

- Drag a box around the 8 Points along the base of the structure.
- From the  Treeview drag and drop the support attribute **Fully Fixed** onto the selected features, ensure the **All loadcases** option is selected and click **OK**

The model geometry is now complete.

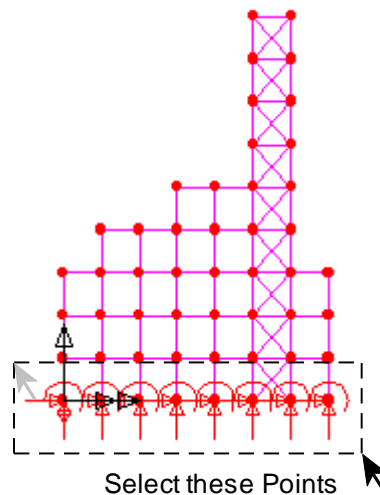

Loading



Note. No static structural loading is required for the first part of this analysis because the spectral combination is carried out during results processing using the results from the natural frequency analysis which is independent of applied loading. The modelling will now be completed by defining the controls necessary to extract the natural frequencies.


Eigenvalue Analysis Control

Since the first stage of a spectral response analysis involves a computation of the natural modes of vibration an initial eigenvalue extraction analysis must be carried out. The solution parameters for eigenvalue analysis are specified using an eigenvalue control dataset. In this example the first 10 natural modes of vibration of the tower are computed.

Eigenvalue analysis control properties are defined as properties of the loadcase.

- In the  Treeview, right-click on **Loadcase 1** and select **Eigenvalue** from the **Controls** menu.

The Eigenvalue dialog will appear.

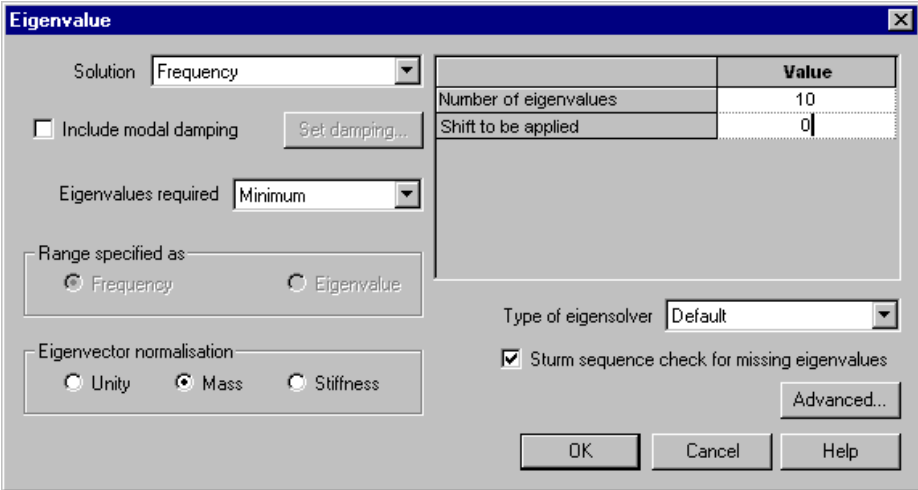

The Eigenvalue dialog box is shown with the following settings:

- Solution:** Frequency
- ☐ Include modal damping (Set damping... button)
- Eigenvalues required:** Minimum
- Range specified as:** ☒ Frequency ☐ Eigenvalue
- Eigenvector normalisation:** ☐ Unity ☒ Mass ☐ Stiffness
- Number of eigenvalues:** 10
- Shift to be applied:** 0
- Type of eigensolver:** Default
- ☒ Sturm sequence check for missing eigenvalues
- Buttons:** OK, Cancel, Help, Advanced...

The following parameters need to be specified:

- Set the **Number of eigenvalues** as **10**
- Ensure the **Shift to be applied** is set as **0**
- Ensure the **Type of eigensolver** is set as **Default**



Note. Eigenvalue normalisation is set to **Mass** by default. This is essential if the eigenvectors are to be used for subsequent IMD analysis when results processing.

- Click the **OK** button to finish.

 
Saving the model



Save the model file.

Running the Analysis

With the model loaded:




A LUSAS data file name of **tower** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **tower.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **tower.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.



- ☐ **tower_modelling.vbs** carries out the modelling of the example.






Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

- Enter the file name as **tower**

 - To recreate the model, select the file **tower_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.





Rerun the analysis to generate the results.




Viewing the Results


If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for each eigenvalue can be seen in the Load Case layer with Eigenvalue 1 set to be active by default.

Plotting Mode Shapes

- Turn off the display of the **Mesh**, **Geometry** and **Attributes** layers in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the Graphics area and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview.
- Click the **OK** button to accept the default values and display the deformed mesh for Eigenvalue 1.

To see other mode shapes:

- In the  Treeview right-click on **Eigenvalue 2** and select the **Set Active** option. The deformed mesh plot for Eigenvalue 2 will be displayed.
- By setting each Eigenvalue to be active the deformed mesh can be seen for all mode shapes.

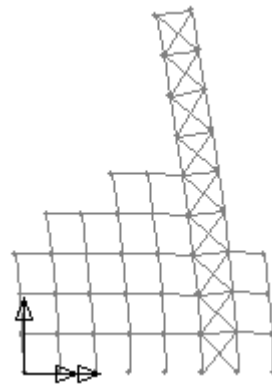

Note. The mode shape for eigenvalue 1 may be inverted. This is because the sense is arbitrary since during vibration deformed shape will appear in both directions.

Printing Eigenvalue Results

Eigenvalue results for the whole structure can be displayed in the Text Output window.

Utilities

Print Results
Wizard...

Select **None** from the Entity drop down list. Ensure **Eigenvalues** is displayed in the Type drop down list and click **Finish**. The Eigenvalue results will be printed to the Text Output window. Error norms may vary.





Results File	= L:\models\tower.mys	ID	0
MODE	EIGENVALUE	FREQUENCY	ERROR NORM
1	147.296	1.93160	0.945062E-12
2	1527.44	6.22017	0.252379E-12
3	7481.98	13.7667	0.992755E-13
4	12463.9	17.7683	0.261939E-12
5	16464.9	20.4221	0.968822E-13
6	26008.4	25.6671	0.346929E-12
7	31861.1	28.4087	0.455993E-10
8	33854.1	29.2837	0.157390E-07
9	34920.0	29.7411	0.110320E-06
10	35963.4	30.1822	0.499202E-06



Note. The frequency in Hertz can be obtained by dividing the square root of the eigenvalue by 2π . The period of vibration in seconds is obtained using the reciprocal of frequency ($1/\text{frequency}$). Values of error norm may vary from those shown.



Caution. The system eigenvectors have been normalised (in this case with respect to mass) therefore any derived quantities such as displacement and moment are also normalised and are not true design values.

-  Close the text window by selecting the close button in the top right hand corner of the window.
- Use the maximise button    to increase the size of the graphics window.

Spectral Response Analysis

Spectral response calculations are performed using the IMD (Interactive Modal Dynamics) facility. Setting up the spectral response results involves the following steps:

- ☐ Define the Spectral Excitation curve.
- ☐ Define the dynamic excitation type (support motion acceleration in this example), direction, and specify the type of results required using a CQC (Combined Quadratic Combination) for spectral response.
- ☐ Set the IMD loadcase to be active.


The spectral combination results can be displayed using a deformed shape plot or force and moment diagrams.




Note. Additional damping information may also be set. Unlike results from a natural frequency analysis, the output values obtained from a spectral combination are design values.

Stage 1 - Defining a Spectral Excitation Curve

Values for the spectral excitation curve need to be specified. For this analysis Acceleration versus Period values are to be used with a damping value of 5%.

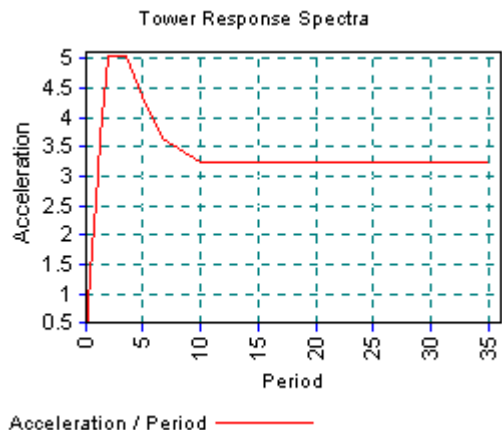

Note. The Utilities>Response Spectra command would normally be used to define response spectra data. However, to simplify entering the required data, the full response spectrum definition for this example is contained in a command file.


- In the \<LusasInstallationFolder>\Examples\Modeller directory select the file **tower_spectrum.vbs** and click **OK**
- A response spectra dataset **TOWER** and corresponding graph datasets containing the spectral data for period and acceleration will be created in the  Treeview.

Stage 2 - Defining the Dynamic Excitation


File
Script
Run Script...

Utilities
IMD Loadcase...


- Select **Support Motion** from the Excitation drop down list and **Spectral** from the Results drop down list. Ensure the **Use all modes** option is selected.
- Change the IMD loadcase name to be **IMD Spectral Response**

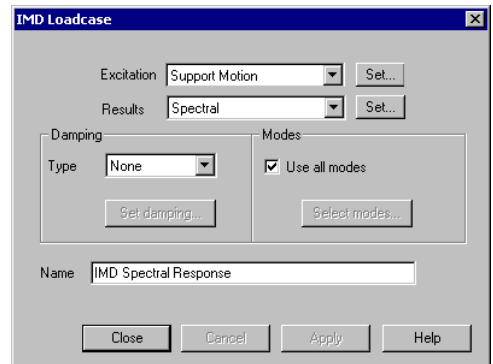

- Click the Excitation **Set** button.
- On the Support Motion dialog select **Acceleration** support motion option in the **X** direction which is **Relative**
- Click the **OK** button to return to the IMD loadcase dialog.

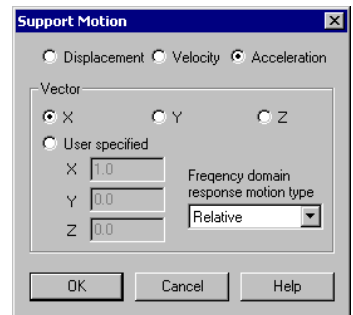

- On the IMD loadcase dialog click the Results **Set** button.
- On the Spectral Response dialog set the type of spectral response to **CQC Combination** with the damping variation correction set as **None**. The response spectrum **TOWER** read in from the command file will already be selected in the drop down list.
- Click the **OK** button to return to the IMD loadcase dialog.
- Click the **OK** button to finish.

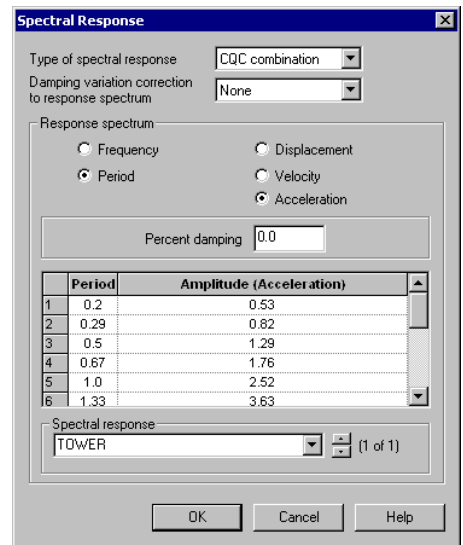

Selecting the IMD Results Loadcase

- In the  Treeview right-click on the **IMD Spectral Response** loadcase name and select the **Set Active** option.

The spectral combination results are now activated. Any subsequent results plots, such as deformed shapes or moments, will be for the spectral combination results only.

Using Page Layout Mode

The model was created using a Working Mode view which allows a model of any size to be created. Whilst previous results have been viewed using this mode of operation, in order to allow additional information to be added without obscuring the model, Page Layout Mode will be used instead.

The graphics window will resize to show the mesh layer on an A4 size piece of paper.



View
Page Layout Mode

Set the page layout to **Portrait** and click **OK**


File
Page Setup...

Displaying Results for Spectral Combination


A plot showing the tower deformed shape, bending moment and axial force for the spectral combination is to be displayed.

- Delete the **Deformed Mesh** layer from the  Treeview.
- Add the **Mesh** layer to the  Treeview.

Axial Force Diagram

- With no features selected, click the right-hand mouse button in a blank part of the Graphics area and select the **Diagrams** option to add the Diagrams layer to the  Treeview.
- Select **Force/Moment - Thick 2D Beam** results of axial force **Fx** in the members.
- Select the **Diagram Display** tab, select the **Label values** option and choose the **Label only if selected** option
- Click the **OK** button to finish.

Results will be calculated for the active IMD spectral response loadcase and an axial force diagram of stresses in each member will be displayed.

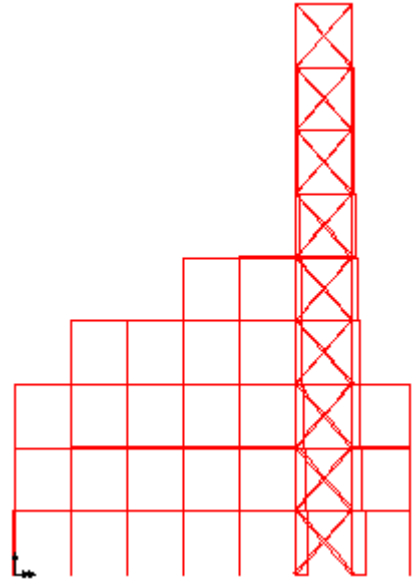

Displaying results on selected members


- Hovering over a member with the cursor will display previously chosen results information for gauss points along that member.
- Selecting a member will display results for that member. Remember more than one member can be selected by holding down the **Shift** key.




If necessary, use the Zoom in button to view results information.


These type of element results can also be plotted in isolation on selected model features. This is covered later in the example.

Shear Force Diagram


- In the  Treeview double-click on the **Diagrams** layer. The diagram properties will be displayed.
- Select **Force/Moment - Thick 2D Beam** results of shear force **Fy** in the members.
- Click the **OK** button to finish.
- A shear force diagram of stresses in each member will be displayed.

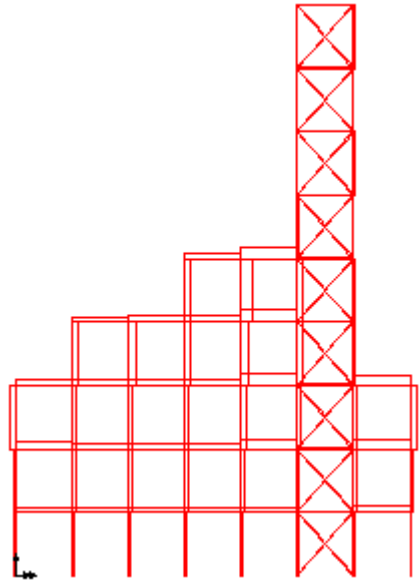

Bending Moment Diagram

- In the  Treeview double-click on the **Diagrams** layer. The diagram properties will be displayed.
- Select **Force/Moment - Thick 2D Beam** results of bending moment **Mz** in the members.
- Click the **OK** button to finish.


A bending moment diagram of stresses in each member will be displayed.

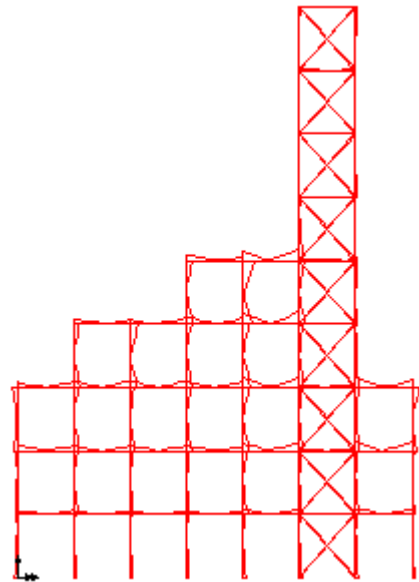

Printing Results




 Note. Text and border annotation may be added to the display from the Utilities> Annotation menu.




To add a border to the display.

 Now view how the results would print.




This shows how the bending moment results for the whole model will appear on printed output.

 - Click the **Close** button to exit the print preview window.



To remove the border from the display.

 Plotting Results for a Selected Part of the Model



The graphics window will resize to show the model in normal working mode.



Note. Changing from Page Layout to Working Mode will resize and reposition any displayed annotation. Page layout mode should be used when preparing a view for printing. Working Mode should be used when viewing on the screen.

If results are to be plotted for a selected part of the structure only, a Group may be created of the area of interest. For example, to plot results of just the top 4 storeys of the tower:


- In the  Treeview double-click the **Mesh** layer, select **Visualise** tab and de-select the option to visualise **Beam end releases**. Click the **OK** button.

Seismic Response of a 2D Frame (Frequency Domain)


- Drag a box around the upper 4 storeys of the tower as shown.




Enter **Upper 4 storeys** for the group name. Click the **OK** button to complete creation of the group.

- Click the right-hand mouse button on the **Upper 4 storeys** group in the  Treeview, and select the **Set as Only Visible** option to turn on the display of this group only.

Drag a box around these features

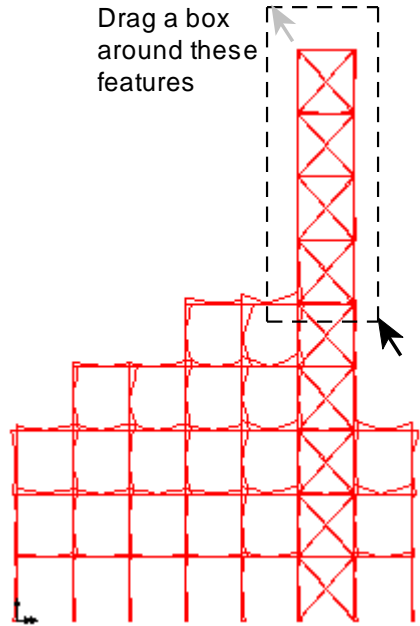

The results for just the upper 4 storeys will be displayed.


- To add values to selected members double click on the **Diagrams** layer in the  Treeview and select the **Diagram Display** tab.
- Ensure that the options to **Label values** and **Label only if selected** are chosen.
- Set the number of significant figures to **4**
- Choose the **Label Font** button and change the size to **11** and click **OK**
- Change the Angle to **25**
- Select the **Scale** tab and set the magnitude to **10**
- Click **OK** and the diagram will be displayed without any values because no elements have been selected.
- Select the horizontal elements and the labels of M_y (as previously selected) will appear.



Note. Holding down the **Shift** key after the first selection will enable labels on more than one element to be visualised.

Re-display the Whole Model

To re-display the whole model in working mode:

- Select the  Treeview and click the right-hand mouse button on **tower.mdl**, and select the **Visible** option to turn on the display of all groups. Select **Yes** to act on subgroups as well.

Frequency Versus Participation Factor Graphs

A graph of Participation factors (for the X and Y directions) versus Frequency is to be plotted. For the current spectral combination, where the applied ground motion is in the X direction, the graph will show to what extent each structural mode is excited in the X and Y directions. A large modal participation factor indicates a significant response in that direction.

Using the Graph Wizard

The graph wizard provides a step-by-step means of selecting which results are to be plotted on the X and Y axes of the graph. The X axis is always defined first.

Utilities

Graph Wizard...

- Ensure the **Time history** option is selected and click the **Next** button.
- Select the **Named** option and click the **Next** button.
- Select **Natural Frequency** from the drop down list and click the **Next** button.

The Y axis results to be graphed are now defined.

- Select **Named** results and click the **Next** button.
- Select **Participation Factor X axis** and click the **Next** button.

Additional information for the graph may now to be added.


- Enter the Y axis title as **Participation Factor X axis**
- Ensure that the **Show symbols** button is selected.
- Click the **Finish** button to display the graph.



Note. If no graph or axis titles are entered default names will be used.



Note. The sign of the participation factor displayed on the graph is arbitrary as the mode shape from which it is derived can have a positive or negative amplitude.

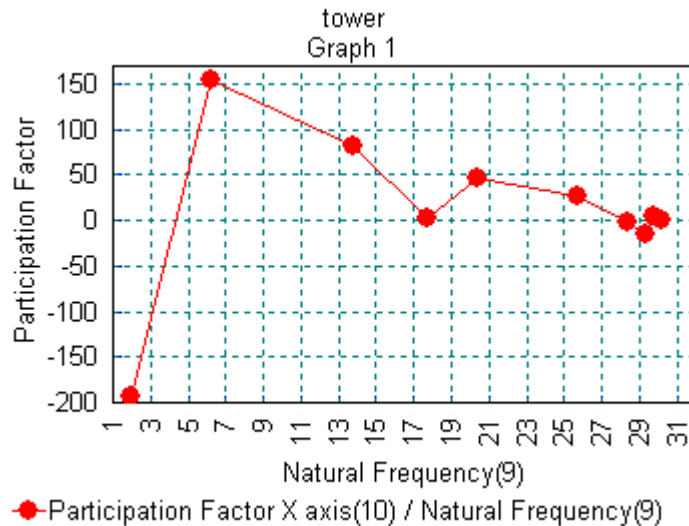

LUSAS will create the graph in a new window and display the values used in an adjacent table. To see the graph at the best resolution enlarge the window to a full size view.

From the graph it can be seen that the first 3 modes are dominated by the motion in the X direction.

A graph of Participation factor in the Y direction will now be plotted on top of the existing graph.

Utilities
Graph Wizard...


- Ensure the **Time history** option is selected and click the **Next** button.
- Select the **Previously Defined** option. Click the **Next** button.
- Select **Natural Frequency** results. Click the **Next** button.

The Y axis results to be graphed are now defined.

- Select **Named** results and click the **Next** button.
- Select **Participation Factor Y axis**. Click the **Next** button.

The results are to be plotted on top of the existing graph so no additional title information is to be added.

- Select the **Add to existing graph** option and ensure that the previous graph name **Graph Number 1** is selected.
- Click the **Finish** button.

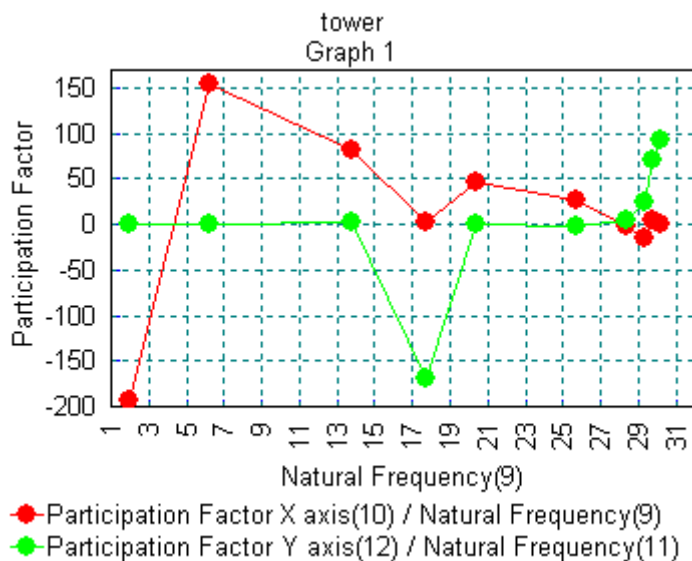

The Participation factors for the Y axis are superimposed on the graph.

From the graph it can be seen that the fourth mode shape is dominated by motion in the Y direction.




Note. The graph properties may be modified by clicking the right-hand mouse button in the graph display area and selecting the **Edit Graph Properties** option.

To change the symbols on the second graph dataset:




Edit
Graph Properties...

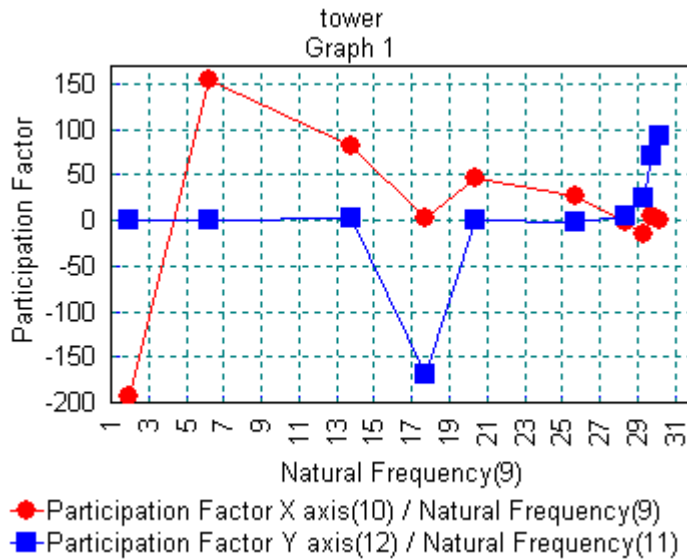- Select the **Curves** tab and the second dataset **Participation Factor Y / Natural Frequency** from the dropdown list.
- Change the symbol to **Square**
- Select the **Symbol Start Colour** and select **dark blue**
- Select the **Line Colour** and select the same **dark blue**
- Click **OK** to action the change.




Creating Animations of Mode Shapes

The dominant mode shapes (Eigenvalue results 1, 2, 3 and 4) caused by the applied response spectra will now be animated. To see the deformations in the structure the deformed mesh layer must be displayed.

- Re-select the window containing the model data and use the maximise button  to increase the size to fill the graphic area.
- Turn off the display of the **Mesh**, **Diagram** and **Annotation** layers in the  Treeview.
- Add the **Deformed mesh** layer and **OK** the dialog properties.
- In the  Treeview right-click on Results File **Eigenvalue 1** and select the **Set Active** option.

The deformed shape for Eigenvalue 1 will now be displayed.

- Ensure the **Active loadcase** button is selected and select the **Next** button.
- Use a **Sine** deformation with **14** frames. Set the deformation magnitude of **6** mm for the range **0 to 1**
- Click **Finish** to build and display the animation.

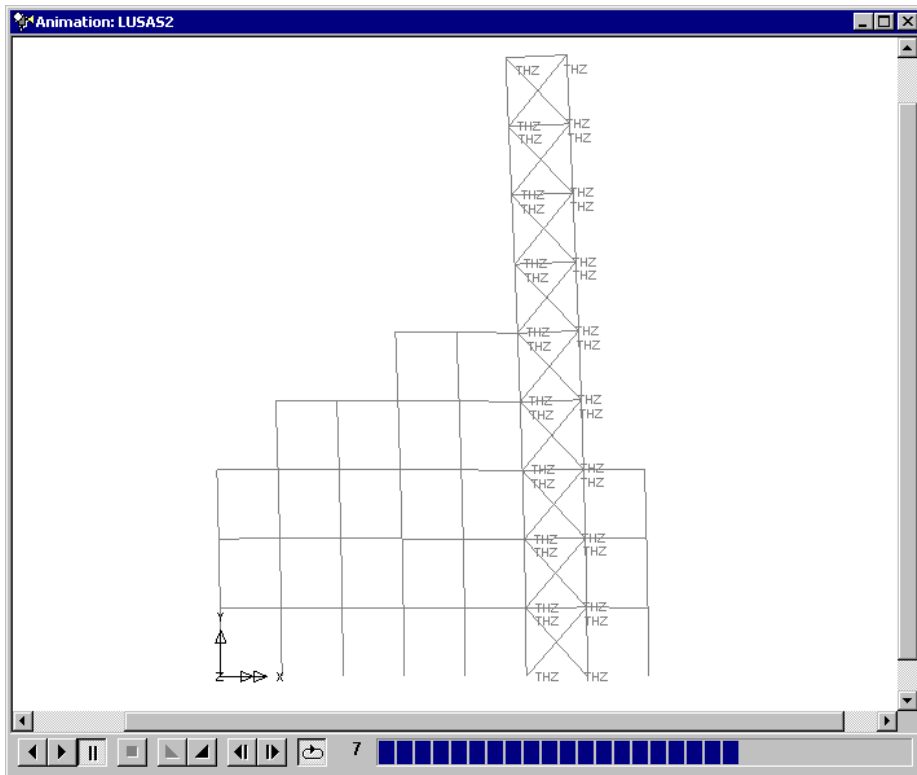

- To see the animation at the best resolution enlarge the window to a full size view.

The buttons at the bottom of the window may be used to slow-down, speed-up, pause, step through frame by frame, or stop the animation.

Saving Animations

Animations may be saved for replay in LUSAS at any time or saved for display in other windows animation players.

- Ensure the animation window is the active window.
- Save the animation to your projects folder and enter **tower_1** for the animation file name. An **.avi** file extension is automatically appended to the file name.
- Animations can be compressed to save disk space. A number of compression formats are available depending on what is installed on the system. **Microsoft Video 1** has been found to provide reliable results. Click **OK**

File

Save As AVI...

- Repeat the animation sequence for the other dominant modes.

Save the model.



Viewing the effects of self weight and spectral response

 
Spectral loadcases can be combined with other loadcases to provide results which include dead and live loads but since spectral loadcases are computed from an eigenvalue analysis the sign of the spectral displacements is always positive. The most adverse results can, however, be obtained using load combinations.

To illustrate this, the current model will be saved as a new model file and existing results files will be closed. Changes will be made to existing loadcases before a new self weight loadcase is defined and assigned, an analysis is run and suitable load combinations are set-up.

- Save the model as **tower_linear**

Loadcase changes are to be made.

First, close all open results files.



Next, delete the eigenvalues controls object.

- In the  Treeview right-click on the **Eigenvalue** controls object and select **Delete**

Finally, rename Loadcase 1 in readiness for the self weight loading.

- In the  Treeview right-click on **Loadcase 1** and rename it to be **Self Weight**


Self weight loading

 
- In the  Treeview ensure the **Geometry** layer name is present and turned **On**.

- Select the **Body Force** option and click **Next**

- Enter a value of **-9.81** for a linear acceleration in **Y** direction

- Enter **Gravity** for the attribute name and click **Finish**

- Select the whole model (use Ctrl + A keys) and drag and drop the loading attribute **Gravity** from the  Treeview onto the selected lines, for the **Self Weight** loadcase with a load factor of **1.0**



File
Save



Save the model file.

Running the Analysis

File
LUSAS Datafile...



If selecting the menu item, a LUSAS data file name of **tower_linear** will be automatically entered in the File name field. Ensure that the options **Solve now** and **Load results** are selected. Click the **Save** button to finish.

Viewing the Results

After a successful analysis the Self Weight results file will be added to the Treeview.

Load eigenvalue results

File
Open...


- Select the eigen results file (**tower.mys**) and select **Load on top of current model**.

Defining Self weight and Spectral load combinations

Two basic load combinations will now be created to view the combined effects of the self weight and spectral results; one for self weight plus the spectral results and one for self weight minus the spectral results.


Utilities
Combination >
Basic

The combination properties dialog will appear.

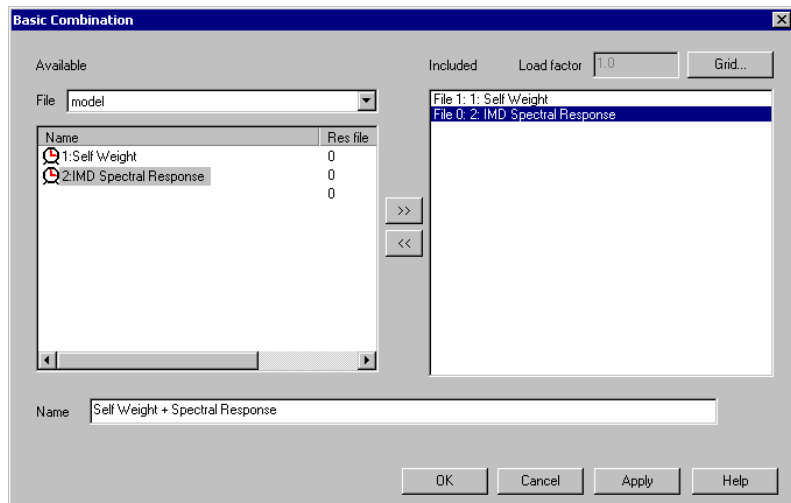

- Ensure results file **tower_linear.mys** is selected from the drop down list.
- Select **Self Weight** and click the button to add the loadcase to the load combination. Leave the load factor set as 1.0

Seismic Response of a 2D Frame (Frequency Domain)

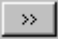- Then ensure that **model** is selected from the drop down list.
- Select all **IMD Spectral Results** and click the  button to add the Spectral results loadcase to the load combination. Leave the load factor set as 1.0
- Enter **Self Weight + Spectral Response** for the combination name
- Click the **OK** button to finish.



Note. The IMD Spectral Results loadcase references the eigenvalues held in the tower.mys results file.

The previous procedure is repeated to create a second basic load combination.

From the **tower_linear.mys** results file include the **Self Weight** loadcase with a load factor set to 1.0

From the **model** file include all the **IMD Spectral Results** and set the load factor for as **-1.0**

 
- Enter **Self Weight - Spectral Response** for the combination name
- Click the **OK** button to finish.




Save the model file. This also saves any created load combinations with the model.


By setting a Self Weight and Spectral Response load combination active, shear force and bending moments can be viewed for each combination.

Use or modify the Diagrams layer to view values on the frame.



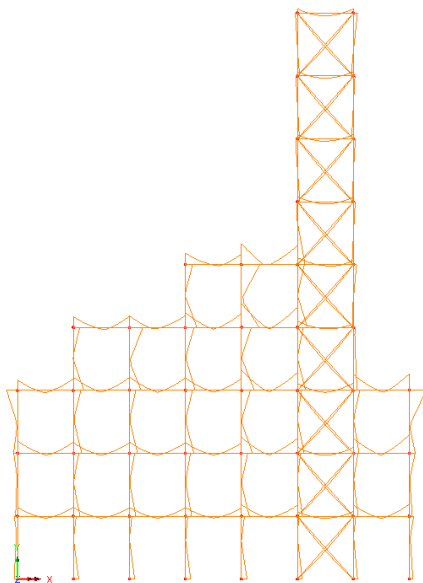

Self Weight + Spectral Response

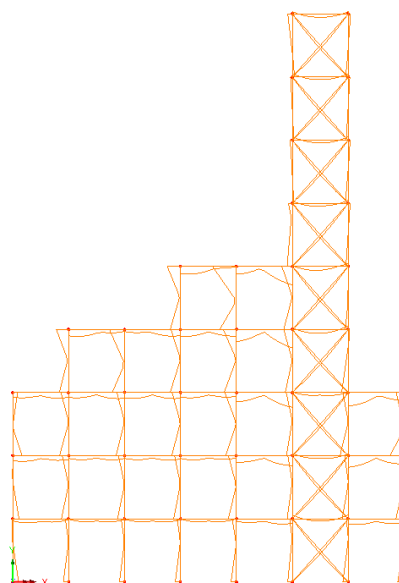

Self Weight - Spectral Response

This completes the example.


Seismic Response of a 3D Frame (Frequency Domain)

For software product(s):	All (except LT versions)
With product option(s):	None.
Note: This example exceeds the limits of the LUSAS Teaching and Training version.	

Description

This example examines the spectral response of a 2-storey 3D frame. The geometry of the structure has been simplified to a wire-frame or stick representation with each of the members of the structure being represented by a line feature only.

Units used are N, m, kg, s, C throughout.

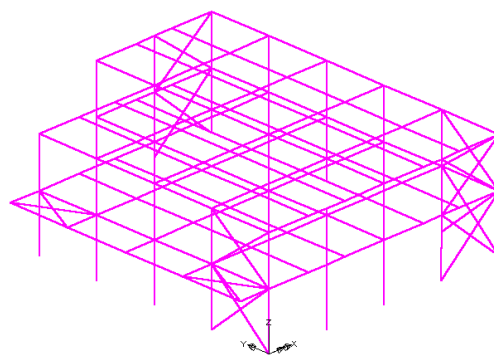

Objectives

The required output from the analysis consists of:

- ☐ Axial force and bending diagram from a CQC combination.

Keywords

Seismic, Spectral, Response, Mass Participation, Interactive Modal Dynamics, Excitation, Eigenvalue, CQC Combination.

Associated Files



- ❑ **3D_frame.mdl** Model of the structure.
- ❑ **3D_frame_spectrum_EC8.vbs** defines a typical spectral curve to Eurocode 8

Discussion

The mesh definition used on a dynamic analysis is somewhat different from that used on a static stress analysis. In a static analysis, and with experience, it is usually not too difficult to estimate where the high stresses are likely to occur. These estimates can then be used to develop a meshing strategy with a fine mesh in high stress locations and a coarse mesh in less critical locations. For a dynamic analysis the interaction between the stiffness and inertia forces will lead to deflected shapes which can be very different from those expected in a static analysis.

In a dynamic analysis both stiffness and mass distribution has to be considered. Generally, the best strategy for a dynamic analysis is to have a uniform mesh over the entire structure but in stiff regions a more coarse mesh can be used. In regions that are more flexible, or where heavy masses are located, the mesh can be more refined.

In this example the global behaviour of the building is being considered for earthquake response. The lower frequencies will be dominant in this analysis and a relatively coarse mesh will suffice. If the higher frequencies are important, or if a local response due to panel modes for individual beams and columns is to be considered, a revised mesh with more elements would need to be considered.

The spectral response analysis is performed in two distinct stages:

1. A natural frequency analysis is performed. This is used here to calculate the first 30 natural modes of vibration of the structure. The eigenvalues, frequencies and eigenvectors (mode shapes) are stored and used in the subsequent spectral response analysis. In order to carry out a spectral analysis the modes must be normalised with respect to the mass. Although natural frequencies are obtained from an eigenvalue analysis any information regarding the magnitudes of deformations or moments is non-quantitative.
2. A spectral response calculation is performed interactively as a results processing operation using the Interactive Modal Dynamics (IMD) facility. This is an alternative to performing a non-interactive spectral response analysis in LUSAS Solver.

In a spectral response analysis, the structure is subjected to support excitation. In this example this is assumed to be the effect of seismic motion although any support motion could be envisaged. The excitation is specified as a spectral curve, in terms of period

versus acceleration. Damping, implicitly included in the spectral curve, may also be specified at this stage.

From the eigen analysis, participation factors indicate, for each mode, the degree of structural response associated with an applied excitation. In the spectral analysis a mode combination is calculated from which a worst-case displacement/moment envelope may be obtained.

Modelling

Running LUSAS Modeller


For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.

Building and loading the model

For this example a model file is provided:

File _____
Open... _____

To create the model, open the read only file **3d_frame.mdl** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.

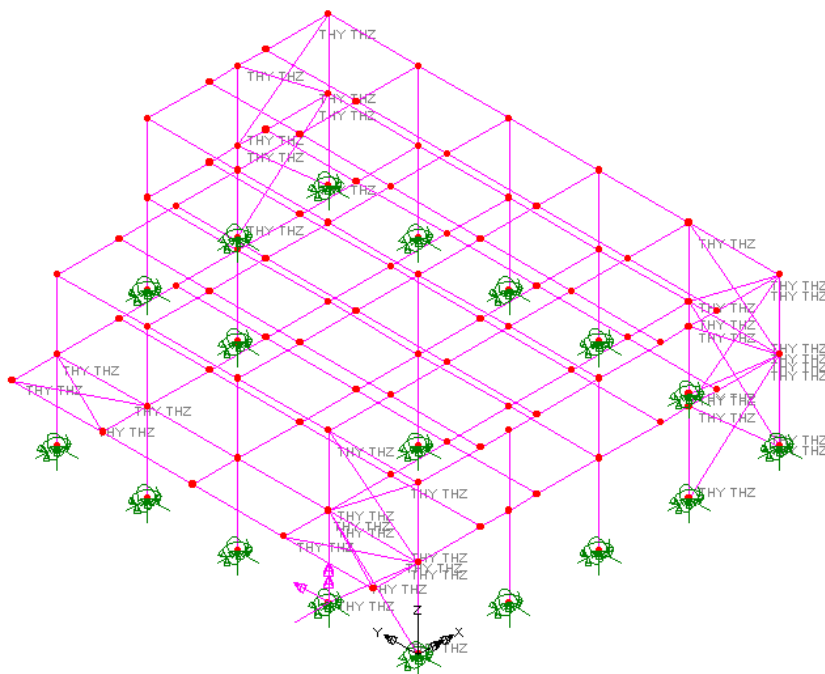



If necessary, select the isometric button to view the frame in 3D.

Save the model



Save the model file to the \<Lusas Installation Folder> \Projects directory.

File
Save As



Note. No static structural loading is required for this analysis because a spectral combination is carried out during results processing using the results from the natural frequency analysis which is independent of applied loading.

The modelling will now be completed by defining the controls necessary to extract the natural frequencies.

Defining Eigenvalue controls

Eigenvalue controls are defined as properties of the loadcase.

- In the Treeview right-click on **Loadcase 1** and select **Eigenvalue** from the **Controls** menu.

The Eigenvalue dialog will appear.

The following parameters need to be specified:

- Set the **Number of eigenvalues** as **30**
- Ensure the **Shift to be applied** is set as **0**
- Ensure the **Type of eigensolver** is set as **Default**



Note. Eigenvector normalisation is set to **Mass** by default. This is essential if the eigenvectors are to be used for subsequent IMD analysis in results processing as they are in this case.

- Click the **OK** button to finish.



Save the model file.

File
Save

Running the Analysis

With the model loaded:



A LUSAS data file name of **3d_frame** will be automatically entered in the File

File
LUSAS Datafile...

name field.



- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

Viewing the Results

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results for each eigenvalue can be seen in the Loadcase layer. Eigenvalue 1 is set to be active by default.

Plotting Mode Shapes


- Turn off the display of the **Mesh**, **Geometry** and **Attributes** layers in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the Graphics area and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview. Select the **Window summary** option. Select the Visualise tab and, if selected, de-select the **Beam end release** option. Click the **OK** button to accept the remaining default values and display the deformed mesh for Eigenvalue 1.

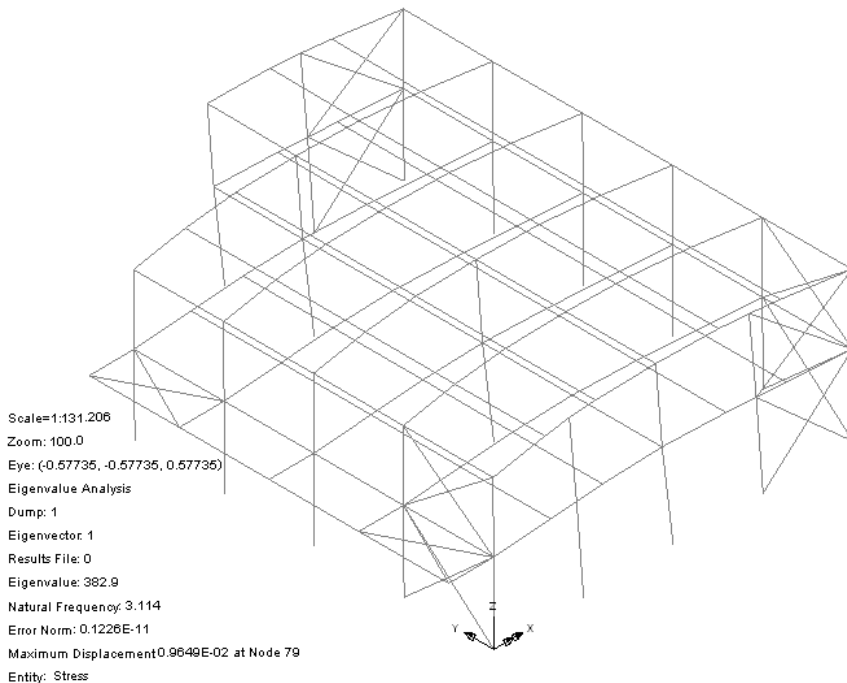

Note. The window summary displays the values of the eigenvalue and the natural frequency and also a value for displacement at a node. It should be noted that the displacement value is non-quantitative and is related to the amount of mass in a particular mode using the mass normalisation technique. Therefore the only items that can be found using a basic eigenvalue analysis are the frequency and the mode shape.



Note. The mode shape may be inverted from that shown above. This is because the sense is arbitrary since during vibration deformed shape will appear in both directions.

- In the  Treeview right-click on **Eigenvalue 2** and select the **Set Active** option. The deformed mesh plot for Eigenvalue 2 will be displayed.

By setting each Eigenvalue to be active the deformed mesh can be seen for all mode shapes.

Printing Eigenvalue Results

Eigenvalue results for the whole structure can be displayed in the Text Output window.

- Choose **Selected** loadcases and click **Next**.
- Select the **All loadcases** option and click **Next**.

- Select **None** from the Entity drop down list. Ensure **Eigenvalues** is displayed in the Type drop down list and click **Finish**.

The Eigenvalue results will be printed to the Text Output window. For inspection only the first 10 modes will be printed here.

Results File = \<LUSAS Installation Folder>\Projects\
3D_Frame.mys ID=0 Eigenvalues

MODE	EIGENVALUE	FREQUENCY	ERROR NORM
1	382.904	3.11433	0.168140E-11
2	1011.29	5.06126	0.774353E-12
3	1599.54	6.36527	0.431202E-12
4	1891.32	6.92154	0.236809E-12
5	2336.34	7.69287	0.571844E-12
6	2525.21	7.99777	0.384185E-12
7	3924.31	9.97015	0.421926E-12
8	4153.57	10.2572	0.260236E-12
9	4183.07	10.2936	0.248550E-12
10	6658.98	12.9874	0.380041E-12



Note. The frequency in Hertz can be obtained by dividing the square root of the eigenvalue by 2π , and the period of vibration in seconds is obtained using the reciprocal of frequency (1/frequency). Values of error norm may vary from those shown.



Caution. The system eigenvectors have been normalised (in this case with respect to mass) therefore any derived quantities such as displacement and moment are also normalised and are not true design values.

- Close the text window by selecting the close button in the top right hand corner of the window.

Checking the Mass Participation Factor



Note. In order to carry out a successful response analysis you should ensure that a significant proportion of the total mass has been accounted for in the analysis. This requires checking that around 90% of the total mass is in the global x and y directions. Failure to check that a significant proportion of the total mass has been accounted may

lead to important modes being missed and subsequent errors in the resulting response analysis results.

Utilities
Print Results
Wizard...

- Ensure **Selected** loadcases is chosen and click **Next**.
- Ensure the **All loadcases** option is selected and click **Next**.
- Select **None** from the Entity drop down list. Ensure **Sum Mass Participation Factors** is displayed in the Type combo box and click **Finish**. The Sum Mass Participation Factors results will be printed to the Text Output window.

For inspection only modes 20 to 30 will be printed here. It can be seen that the 90% value has been achieved in mode 22.

```
Results File = \<LUSAS Installation Folder>\Projects\  
3D_Frame.mys ID=0 Eigenvalues
```

MODE	SUM MASS X	SUM MASS Y	SUM MASS Z
20	0.861201	0.933385	0.122995E-01
21	0.870885	0.937375	0.123688E-01
22	0.945303	0.937380	0.123710E-01
23	0.945422	0.937388	0.130555E-01
24	0.945428	0.937470	0.304988
25	0.945451	0.937589	0.308786
26	0.945451	0.937844	0.309070
27	0.945603	0.937844	0.311113
28	0.945603	0.937844	0.311840
29	0.945657	0.938366	0.311848
30	0.945672	0.938456	0.312244

- Close the text window by selecting the close button in the top right hand corner of the window.
- Use the maximise button to increase the size of the graphics window.

Spectral Response Analysis

Spectral response calculations are performed using the IMD (Interactive Modal Dynamics) facility. This involves defining the spectral curve and excitation and specifying the results required in an IMD loadcase. The spectral results can then be interrogated by setting the IMD loadcase active.


With spectral response analysis additional damping information may also be set. Unlike results from a natural frequency analysis, the output values obtained from a spectral combination are design values.


Stage 1 : Defining a Spectral Excitation Curve

Values for the spectral excitation curve need to be specified. For this analysis Acceleration versus Period values are to be used.



 3d_frame_spectrum_ec8.vbs defines response spectrum to Eurocode EC8.



- Select the file **3d_frame_spectrum_ec8.vbs**, which is located in the \<LUSAS Installation Folder>\Examples\Modeller directory. Click **OK**
- A response spectra dataset **3D_frame_spectrum** containing the spectral data for period and acceleration will be created in the  Treeview.

Stage 2 : Defining the Dynamic Excitation



An Interactive Modal Dynamics loadcase **IMD 1** will be added to the Treeview.

- Select **Support Motion** from the Excitation drop down list and **Spectral** from the Results drop down list. Ensure the **Use all modes** option is selected.
- Click the Excitation **Set** button.
- Ensure the **Acceleration** support motion option is set to a **User specified** direction which is **Relative**. In the box next to the X direction enter the value of **1.0** and in the box next to the Y direction enter the value of **0.6**.
- Click the **OK** button to return to the IMD loadcase dialog.



Note. Using the user-specified option a single earthquake response can be applied in multiple directions at the same time. In this case 100% of the earthquake response is being applied in the X direction at the same time as 60% of the earthquake response is being applied in the Y direction. In real-life situations, in the absence of additional data, and depending upon the design code being used, a percentage of the horizontal earthquake response could also be applied in the vertical Z-direction.

- Click the Results **Set** button.
- On the Results dialog ensure the type of spectral response is **CQC Combination** with the damping variation correction set as **None**. The response spectrum **3D_frame_spectrum** read in from the supplied VBS file will already be selected in the drop down list.

- Click the **OK** button to return to the IMD loadcase dialog.
- Click the **OK** button to finish.




Note. There are a number of different methods of carrying out modal combinations:


1. If the natural frequencies are well separated the square root of the sum of the squares (SRSS) has been shown to produce acceptable results.
2. For a situation where the modes have close separation of natural frequencies then an absolute sum (AbsSum) is taken on the assumption that they can peak in phase with each other.
3. Alternatively a complete quadratic combination (CQC) method can be used (as in this example) which effectively combines both the SRSS and AbsSum methods as it accounts for the separation between modes.




Note. If the defined damping differs from that inherent in the spectral curve a correction may be applied. There are a number of damping variation correction options available for use. For more details on these see the *Theory Manual*.

Stage 3: Selecting the IMD Results Loadcase


In the  Treeview right-click on the **IMD 1** loadcase name and select the **Set Active** option.

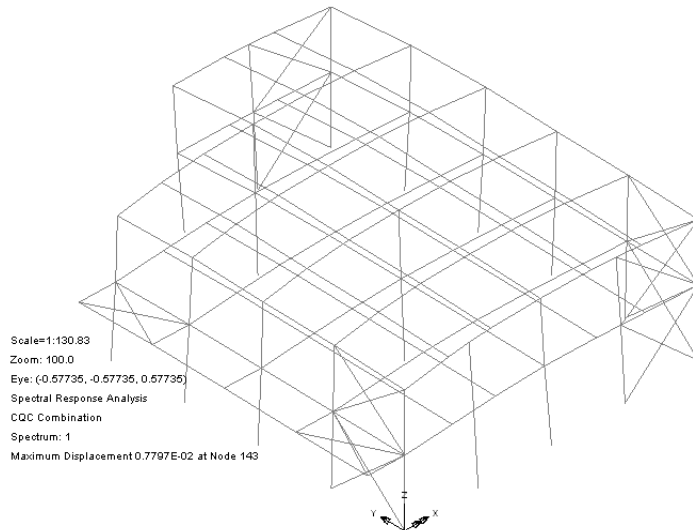


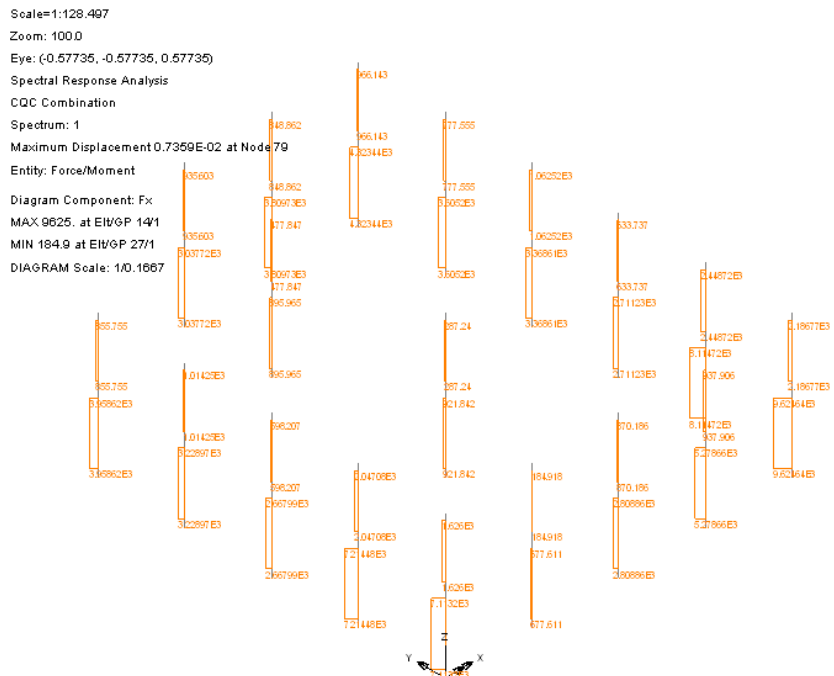

Seismic Response of a 3D Frame (Frequency Domain)

Results will be calculated for the active IMD load case and an axial force diagram of force in each member will be displayed. If necessary, use the Zoom in button to view results information. These type of results can also be plotted in isolation on selected model features.

- In the  Treeview double-click the **Diagram** layer to view its properties.
- Select **Force/Moment - Thick 3D Beam** results of axial force **My** in the members. Click the **OK** button to finish.

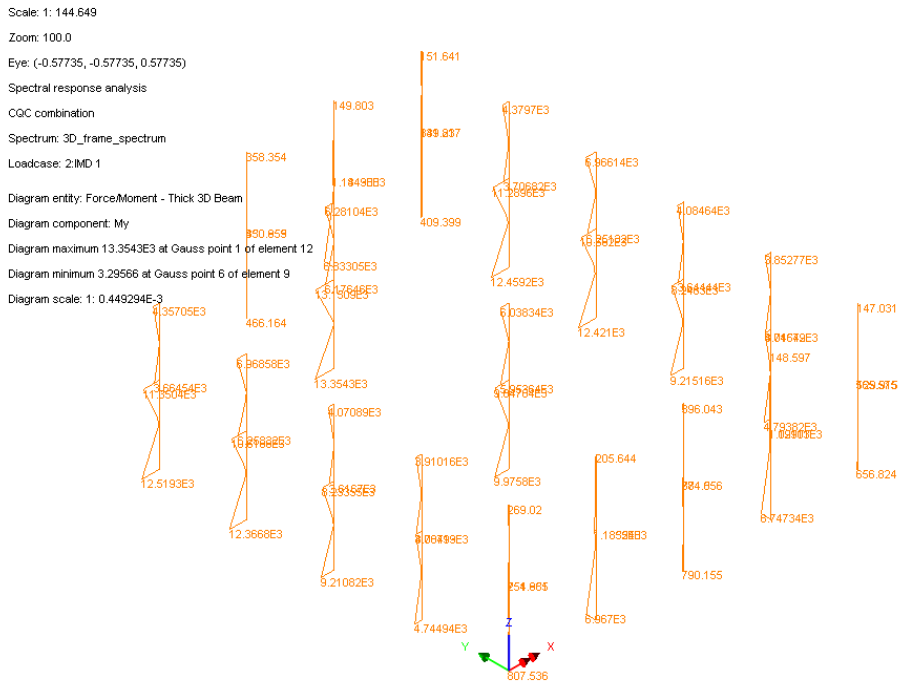

Note that Orientate by element axes is the default diagram display option for all components other than Fx. This can be changed by selecting the Diagram display tab and selecting Orientate flat to screen / page as necessary.

File
Save



Save the model file.

This completes the example.

Buckling Analysis of a Plate Girder


For software product(s):	Any Plus version.
With product option(s):	None.
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

The buckling behaviour of a steel plate girder with web stiffeners is to be examined.

The girder is supported at both ends by fixed and roller bearing supports. A cross-slab connection to the girder provides a partial lateral restraint. A distributed load representing transverse steel decking is applied to a selected part of the web of the girder. The steel plates are modelled using thin shell (QSL8) elements.

Units of kN, m, t, s, C are used throughout the example.

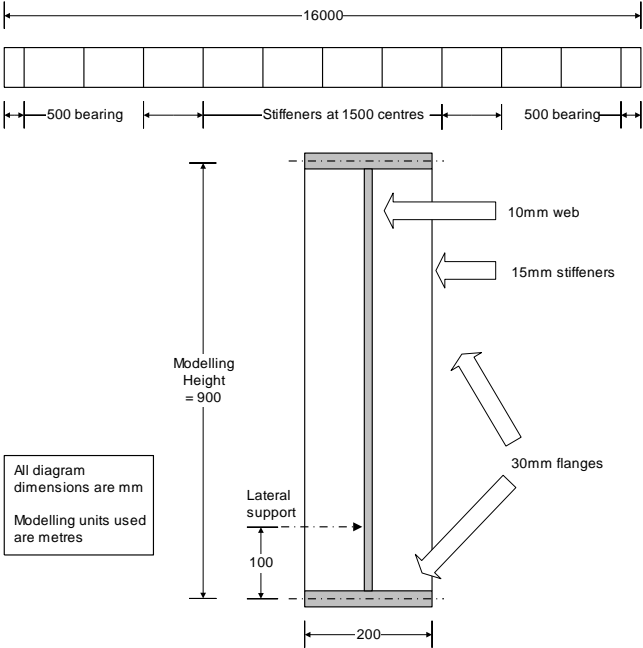

Objectives

The required output from the analysis consists of:

- ☐ A deformed shape plot showing displacements caused by the imposed loading.
- ☐ Animation
- ☐ Buckling load

Keywords

Simple Geometry, Plate Buckling, Linear Buckling, Eigenvalue Buckling, Deformed Mesh Plot, Printing Eigenvalues.

Associated Files



- ☐ **plate_girder_modelling.vbs** carries out the modelling of the example. After creating a new model and running this file, the example can be continued from the section titled *Running the Analysis*.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.


Creating the Longitudinal Beam Model

- Enter the file name as **plate_girder**
- Use the **Default** working folder.
- Enter the title as **Buckling analysis of a plate girder**
- Select units of **kN,m,t,s,C** from the drop down list provided.
- Ensure the **Structural** user interface is being used.
- Select the **Standard** startup template.
- Select the **Vertical Y axis** option.


- Click the **OK** button.


A cross-section of the girder is created initially and swept and copied into a half-model before mirroring to create the full plate girder model.

Feature Geometry


 Enter coordinates of $(-0.1,0)$, $(0,0)$ and $(0.1,0)$ to define Lines representing the bottom flange of the girder. Click the **OK** button.


- Drag a box around all the features just drawn.

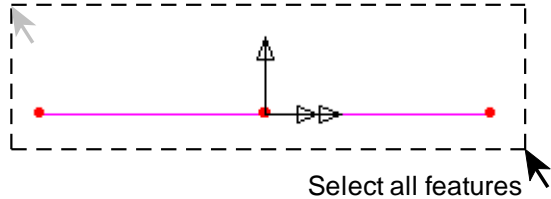

 Enter translation value of **0.1** in the **Y** direction to create surfaces that will define part of the end stiffener. Click the **OK** button to finish.

- Drag a box around the 2 line features shown.


 Enter a translation value of **0.8** in the **Y** direction and click **OK** to create surfaces that will define part of the end stiffener.

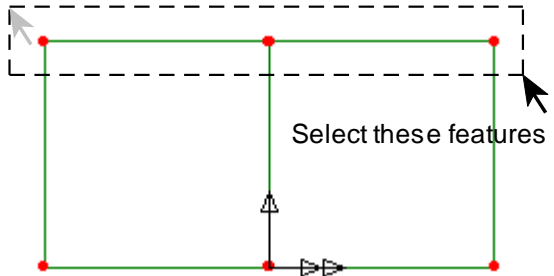


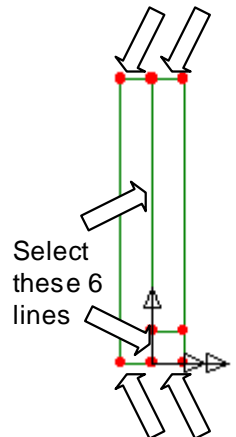
The girder has a 500mm long bearing region at the end which will be created first.

- Select the 6 Lines representing the cross-section of the girder as shown.

Geometry

 Enter a translation value of **0.5** in the **Z** direction. Click the **OK** button to finish.

 **Note.** Save the model regularly as the example progresses. The Undo button may be used to correct any mistakes made since the last save.






Use the Isometric button to view the model to a similar view to that shown

The bearing region has a stiffener either side of it.

- Select the 4 surfaces representing the 2 web stiffeners.



Enter a value of **0.5** in the **Z** direction to copy the surfaces to define the web stiffeners. Click **OK** to finish.

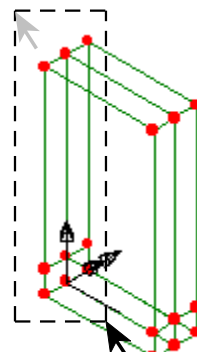


Select these 4 surfaces

The girder has 1500mm long internal panel sections along its length.


- Select the 6 Lines representing the cross-section of the girder. If necessary use the Zoom facility to simplify the selection.




Enter a translation value of **1.5** in the **Z** direction. Click the **OK** button to finish.

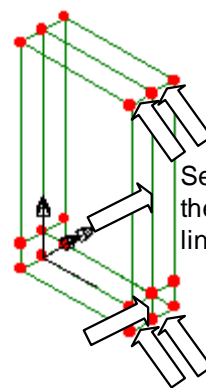


Select these 6 lines

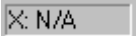-  Change the view on the model so that you are now looking sideways on by selecting the **X** coordinates readout display in the Status bar.
- Hold down the **Shift** key on the keyboard and select the **X** coordinate readout panel again to obtain the reverse view looking along the X-axis.
- Drag a box around all the features shown to select the first panel section and web stiffener.

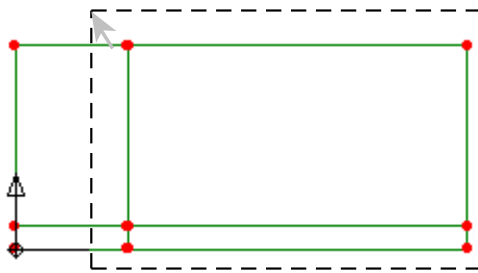


Select these features

 


Enter a value of **1.5** in the **Z** direction to copy the surfaces used to define the web and stiffener.

- Enter the number of copies as **9** and click the **OK** button.


Finally, the other bearing end to the girder has to be created.

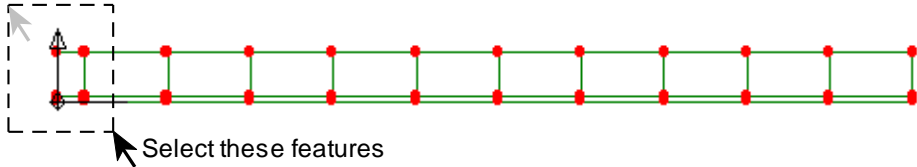

 - Drag a box around all the features shown to select the bearing end of the girder and web stiffener.



 Enter a value of **15.5** in the **Z** direction to copy the surfaces used to define the web and stiffener. Click **OK** to finish.



Meshing the web stiffeners

Line mesh divisions will be used to control the surface mesh density for the plates. All Lines defined so far have 4 Line mesh divisions by default. Certain Lines require different divisions to be specified.



Select the home button to view the girder end on.


Line mesh

The Lines representing the top flange, lower flange, and part of the web and web stiffeners require 1 mesh division to be assigned to them. These could be selected individually in order to assign the line mesh division to them but LUSAS provides some advanced selection / deselection tools for this type of work.

- Hold down the **L** key on the keyboard and drag a box around the area shown to only select the Lines within the box.
- Then, with the lines still selected, hold down the **Control** key and drag separate boxes around each of the 3 points shown.



Note. Using the **Control** key in the manner described deselects the lines going into the screen from the previous box-selection. These lines will therefore remain meshed with 4 line divisions.

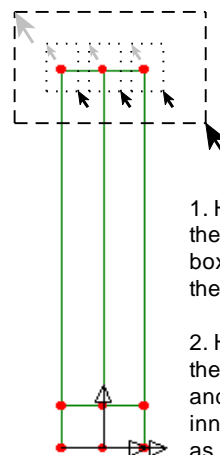


1. Hold down the L key and box select these features
2. Hold down the Control key and select the 3 inner features as shown



Selection of lines can be checked by using the Isometric button.


Only the lines shown in the diagram should appear highlighted to show that they have been selected.

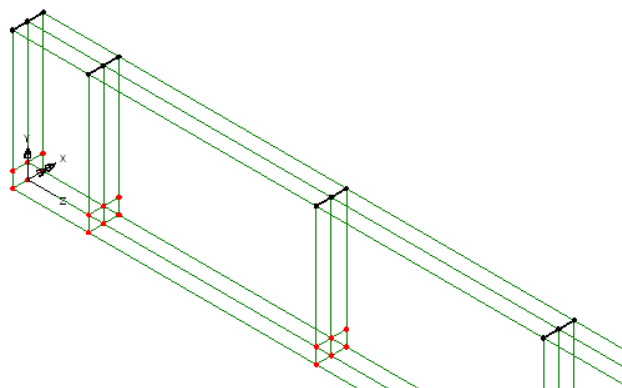

After checking, select the Home button to return the model to its initial view.

- With the lines selected drag and drop the Line mesh attribute **Divisions=1** from the Treeview onto the selected features.

- In a similar fashion to that done for the top flange, hold down the L key and drag a box around the area shown to select all the Lines within.
- Then, with the lines still selected, hold down the **Control** key, and drag separate boxes around each of the 6 points shown to deselect the lines going into the screen from the initial selection.
- Drag and drop the Line mesh attribute **Divisions=1** from the Treeview onto the selected features.

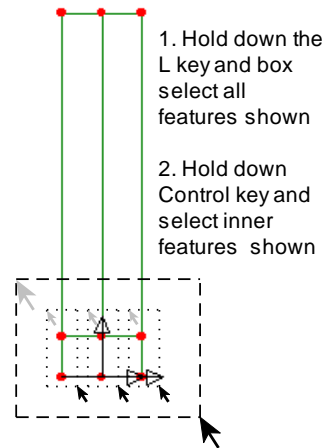

Surface mesh

- Select **Thin shell, Quadrilateral** elements with **Quadratic** interpolation. LUSAS will select QSL8 elements.
- Enter the attribute name as **Thin Shells (QSL8)** and click **OK** to finish.
- Select the whole model (**Control** + **A** keys)
- Drag and drop the surface mesh attribute **Thin Shells (QSL8)** from the Treeview onto the selected features.

The mesh will be drawn. Note that, by default, the mesh nodes as shown on these accompanying diagrams are not displayed.



Use the Isometric button to view the mesh on the model.




Use the Zoom in button to check the mesh definition.



Use the resize button to show the whole model



Use the Cursor button switch back to the normal cursor tool.

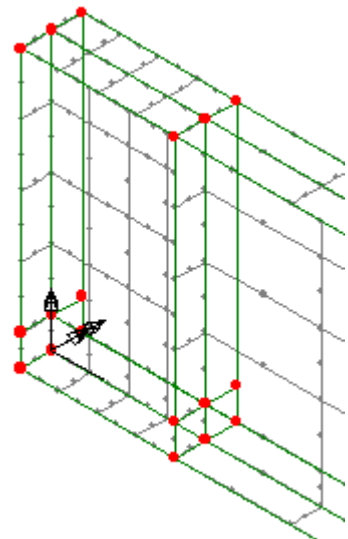

Geometric Properties

Three steel thicknesses are required to model the web, flanges and web stiffeners.

Attributes	
Geometric	>
Surface...	

- Enter a value of **0.01** for the thickness. The eccentricity can be left blank. Enter the attribute name as **Thickness=0.01m**. Click the **Apply** button to create the attribute.
- Amend the thickness to **0.015**. Change the attribute name to **Thickness=0.015m**. Click the **Apply** button to create the attribute.
- Amend the thickness to **0.03**. Change the attribute name to **Thickness=0.03m**. Click the **OK** button to finish.




Select the home button to view the beam end on.


- Select the whole model (**Control + A** keys)
- Drag and drop the geometry attribute **Thickness=0.015m** from the Treeview onto the selected features.




Select the fleshing on/off button to turn-off the geometric visualisation.

- Select the Surfaces representing the top and bottom flanges.
- Drag and drop the geometry attribute **Thickness=0.03m** from the Treeview onto the selected features.

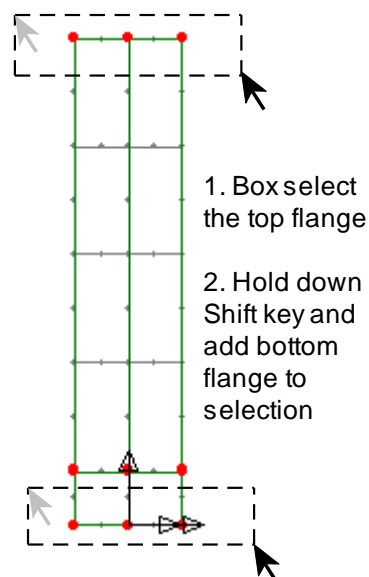

- Select the Surfaces representing the web.
- Drag and drop the geometry attribute **Thickness=0.01m** from the  Treeview onto the selected features.
- Once done, click on a blank part of the graphics window to deselect the web surfaces.

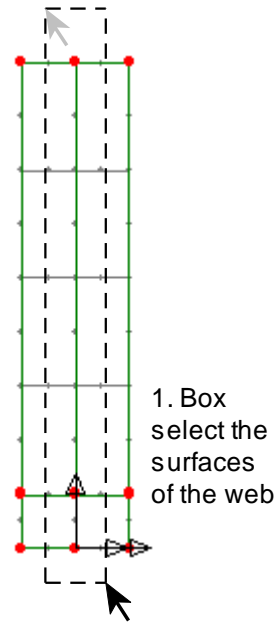


Checking attribute assignments



Note. Once assigned to the model, attributes such as geometry may be visualised.


Geometric Key


Red	Thickness 0.03
Green	Thickness 0.01
Blue	Thickness 0.015

- In the  Treeview click the right-hand mouse button on the **Geometry** layer and select **Properties**.
- On the Colour by drop-down menu select **Assignment** then select the **Set** button. Change the attribute type to show **Geometric** attributes and click **OK**. Finally, select **Solid** on the geometry properties box and click **OK**





Use the Isometric button to view the model to a similar view to that shown.

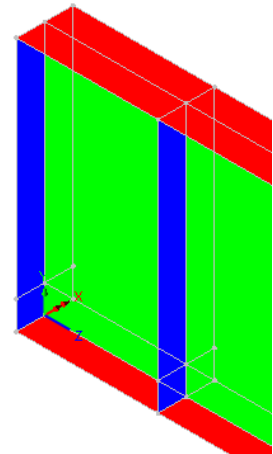


- Check that the geometry assignments have been correctly assigned and then switch off the visualisation. In the  Treeview click the right-hand mouse button on the **Geometry** layer and select **Properties**.
- On the Colour by drop-down menu select **Own colour** then Finally, de-select **Solid** on the geometry properties box and click **OK**

 Material Properties




Select material **Mild Steel** from the drop-down list, leave the grade as **Ungraded** and click **OK** to add the material attribute to the  Treeview.

- With the whole model selected, drag and drop the material attribute **Iso1 (Mild Steel Ungraded)** from the  Treeview onto the selected features. Click **OK** ensuring it is assigned to all surfaces.

Supports

 Three support conditions are required. A fixed bearing, a rolling bearing, and a lateral restraint to the flange of the girder.



Set the translation in the **X** and **Z** directions to **Fixed**. Set the spring stiffness in the **Y** direction to **200e8** and specify that the Spring stiffness distribution is **stiffness/unit area**. Enter the attribute name as **Fixed Bearing**. Click the **Apply** button to reuse the dialog for the other support conditions.

- Set the translation in the **Z** direction to **Free** and leave all other translations as specified previously. Enter the attribute name as **Rolling Bearing**. Click the **Apply** button to reuse the dialog for the next support condition.
- Set the spring stiffness in the **X** direction to **100e8**. Set the translation in the **Y** and **Z** directions to **Free**. Ensure that the Spring stiffness distribution is **stiffness/unit length**. Enter the attribute name as **Lateral Support**. Click the **OK** button to finish.



Use the Zoom in button to enlarge the view of the left-hand end support.




Use the Cursor button switch back to the normal cursor tool.

- Select the 2 flange Surfaces shown. Take care to not select the lowest web surface by mistake.



Note. For features lying underneath others in the Graphics Window, continually clicking on a feature will cycle through selecting different features in turn.

- Drag and drop the support attribute **Fixed Bearing** from the  Treeview onto the selected features. Click **OK** ensuring that it is assigned to **Surfaces**.




Use the resize button to show the whole model.




Use the Zoom in button to enlarge the view of the right-hand end support.



Use the Cursor button switch back to the normal cursor tool.

- Select the equivalent 2 lower Surfaces for the right-hand support.
- Drag and drop the support attribute **Rolling Bearing** from the  Treeview onto the selected features. Click **OK** ensuring that it is assigned to **Surfaces**.

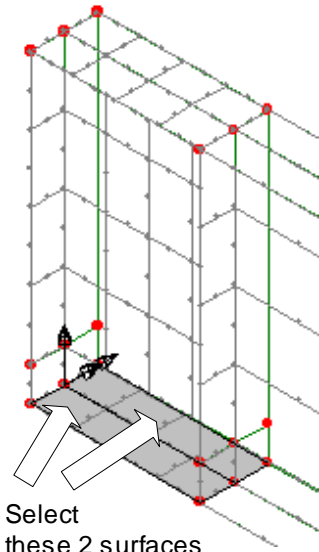



To help assign the lateral supports return the model to the default home view.


- Drag a box around the Point shown (All Lines in the same plane will be selected).
- Drag and drop the support attribute **Lateral Support** from the Treeview onto the selected features, Click **OK** ensuring that the support attribute is assigned to **Lines**.

Loading

In addition to the self-weight, a uniformly distributed load is to be applied to the flange of the beam.

Select the **Body Force** option and click **Next**


- Enter a linear acceleration of **-9.81** in the **Y** direction. Enter the attribute name as **Self Weight**. Click the **Apply** button to create the loading attribute.
- Click **Back** to return to the previous dialog.
- Select the **Global Distributed** option and click **Next**
- Enter a load of **-10** in the **Y** direction and specify that the load distribution be **Per Unit Area**. Enter the attribute name as **Imposed Loading** and click the **Finish** button.
- Select the whole model
- Drag and drop the loading attribute **Self Weight** from the Treeview onto the selected features. Click **OK** assigning it to **Surfaces** as **Loadcase 1**.

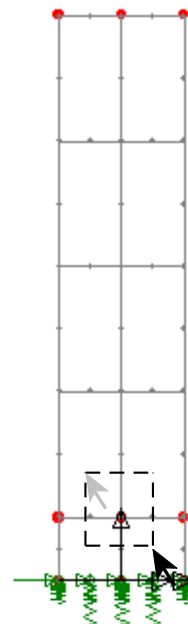

Select this Point

Attributes

Loading...


- Select the Surfaces of the top flange as shown
- Drag and drop the loading attribute **Imposed Loading** from the  Treeview onto the selected features. Click **OK** assigning it to **Surfaces** as **Loadcase 1**
- Click in a blank area of the view window to deselect any currently selected features


This completes the modelling of the girder.

Eigenvalue Analysis Control

By default an eigenvalue analysis extracts the natural modes of vibration of a structure. It can also be used to solve buckling load analysis problems. The solution parameters for buckling analysis are specified using an eigenvalue control attribute. In this example only the 1st natural mode of buckling of the girder is to be investigated.

Eigenvalue analysis control is defined as a property of a loadcase.

- In the  Treeview right-click on **Loadcase 1** and select **Eigenvalue** from the **Controls** menu.
- Select a **Buckling Load** solution for the **Minimum** number of eigenvalues.
- Enter the **Number of eigenvalues** to be calculated as **1**
- Enter the **Shift to be applied** as **0**
- Ensure the type of eigensolver to be used is the **Default** one
- Click the **OK** button.

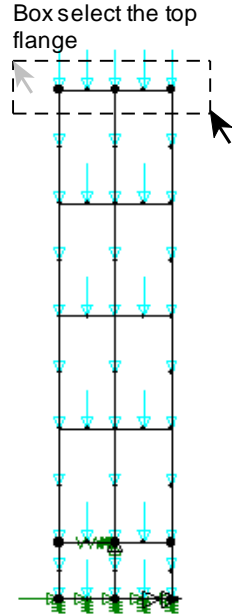

Saving the model

File
Save



To save the model file.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...




A LUSAS data file name of **plate_girder** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish and click the **Yes** button to close any currently open results files.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **plate_girder.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **plate_girder.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




- ☐ **plate_girder_modelling.vbs** carries out the modelling of the example.




Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **plate_girder**



 
To recreate the model, select the file **plate_girder_modelling.vbs** which is located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.



Rerun the analysis to generate the results.

Viewing the Results


If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for each eigenvalue (in this case just the one) can be seen in the  Treeview.




Select an isometric view of the model.

- Turn off the display of the **Attributes**, **Geometry** and **Mesh** layers in the  Treeview.

Deformed Mesh Plot

- With no features selected, click the right-hand mouse button in a blank part of the Graphics area and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview.
- Update the magnitude to **25** mm. Select the **Mesh** tab and ensure the **Show nodes** option is unselected. Click the **OK** button to display the first eigenmode shape.

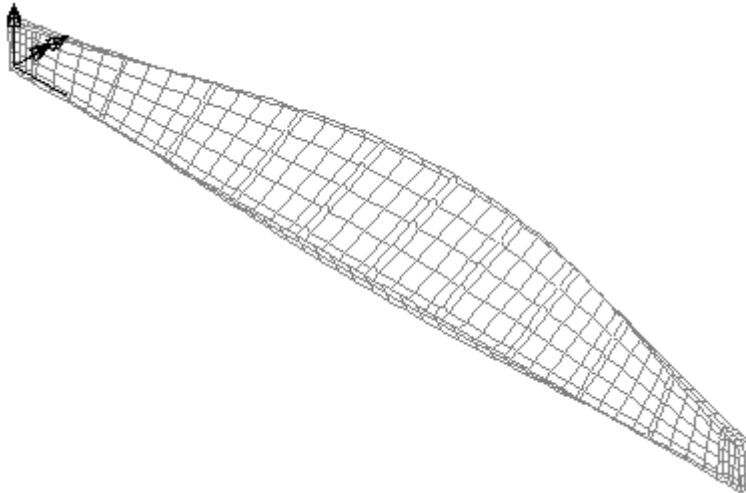

Printing the Buckling Load Factors


In an eigenvalue buckling analysis, the load factors are equivalent to the eigenvalues. Load factors are the values by which the applied load is factored to cause buckling in the respective modes. Eigenvalue results for the whole model can be displayed in the text window.

Utilities

Print Results
Wizard...

- Change the entity type to **None**, ensure that results type **Eigenvalues** is selected and click the **Finish** button.

The Eigenvalue results will be printed to the text window with the Load factors being given in the eigenvalue results column. Error norms may vary.

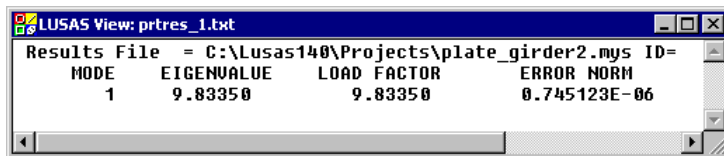

MODE	EIGENVALUE	LOAD FACTOR	ERROR NORM
1	9.83350	9.83350	0.745123E-06

Calculating the Critical Buckling Load

The applied load must be multiplied by the first load factor (9.833) to give the value of loading which causes buckling in the first mode shape. The initial buckling load is therefore 9.8335 x the applied dead and live load.



Note. An applied load of unity could be used in an eigenvalue analysis - in which case the eigenvalues produced would also represent the critical loads at which the structure would buckle. However, to prevent potential convergence problems with the analysis it is more usual to apply actual in-service loading and multiply the applied load by the eigenvalue to give the critical buckling load for each eigenvalue.

This completes the example.

Important Notes Relating to Buckling Analysis

This example has taken you through the process of carrying out a linear buckling analysis on a plate girder. Linear buckling analysis is a technique that can be used to estimate the load that can be supported by a structure prior to structural instability or collapse. However a number of points should be considered when carrying out this type of analysis:

- Buckling analysis is dependent on applied loading. All the loads on the structure must be applied in a single loadcase, this being loadcase 1. In addition, load factors appropriate to the analysis should be included when the loads are assigned.
- Buckling analysis is dependent on the initial model geometry being considered. A perfectly straight (and undeformed) model will provide different answers from a model with imperfect geometry. If required, an imperfection can be built into the initial model either by manually defining the appropriate geometry or by using the deformed mesh from one analysis as the starting point for a further analysis. To do the latter, use **Utilities > Mesh > Use Deformations** menu item with the results file of a previously solved model loaded.

- An eigenvalue buckling analysis actually requires the use of elements with geometrically nonlinear capabilities in order to create additional stress terms in the stiffness matrix. Some elements do not have a non-linear capability. Refer to the finite element library before such an analysis is commenced.
- The eigenvalue buckling analysis of the structure can only be used to provide the mode shape of the structure and the critical buckling load. The stresses and displacements that are obtained are relative to the unit normalised eigenvector and are generally of no practical use. To obtain member forces for the girder it is necessary to perform a further linear static analysis with the same combination of loading on the structure. The stresses and displacements in the structure when the critical load is applied may be obtained simply by performing a linear static analysis with the loads factored to the buckling load previously derived. These may be compared to other limit state criterion to determine the load carrying capacity of the structure. The critical buckling stress for the mode under consideration will be obtained from the same analysis. If required this can then be used with reference to design codes to calculate the value of the slenderness parameter for lateral torsional buckling λ_{LT} and the limiting compressive stress σ_{lc} .
- This analysis type will provide both local and global buckling modes. However, engineering judgement is necessary to determine which buckling mode is critical in order to select the appropriate buckling load factor.
- If a load factor very close to unity is derived, it would normally be prudent to carry out further investigation, removing some of the assumptions in the initial analysis and perhaps carrying out a nonlinear analysis.

Staged Construction of a Concrete Tower with Creep


For software product(s):	Any Plus version.
With product option(s):	Nonlinear and Dynamic.

Description

A 20m high concrete tower of a type that could be used for a cable stayed bridge is to be constructed in four stages, each 5 metres high. The formwork is struck 14 days after each stage is cast and the casting sequence between each stage is 60 days.

The geometry has been made unrealistically simple to allow the example to concentrate on the definition of the creep properties and running a creep analysis.

Units used are N, mm, t, s, C throughout.

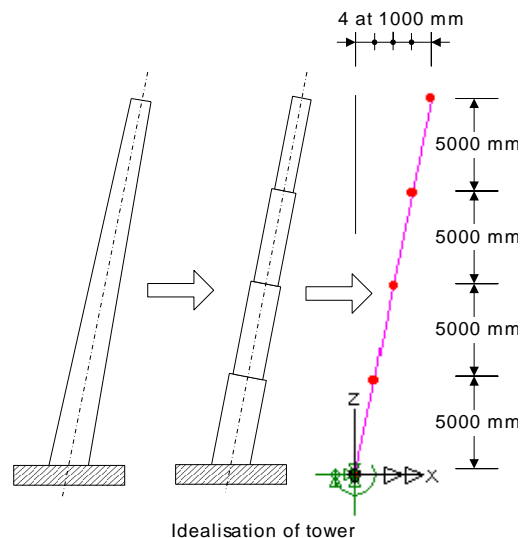

Objectives

The required output from the analysis consists of:

- ☐ A comparison of the moments at the base of the tower after each construction stage.
- ☐ Maximum displacement of the tower after each construction stage and the change in the maximum displacement value due to long-term creep.

Keywords

Birth, Death, Staged Construction, Activate, Deactivate, Long-Term, Creep, CEB-FIP Concrete Model, Age, Casting,

Associated Files



- ☐ **concrete_tower_modelling.vbs** carries out the modelling of the example.
- ☐ **concrete_tower_geometric_properties.vbs** generates geometric datasets for the tower.
- ☐ **concrete_tower_material_properties.vbs** generates material datasets for the tower.

Discussion

Concrete is generally unique among structural materials in that it interacts with its environment undergoing unavoidable physical and chemical volume changes. The process of hydration and the molecular structure of concrete give it certain characteristics such as ageing, creep and shrinkage. These characteristics as a group are known as time dependent deformations.

When building large bridges and structures from concrete it is often necessary to consider a staged construction process, which may often take months if not years to be completed. In doing so, the same basic analysis problems arise; the characteristics of the first concrete placed are much changed when the last section of concrete is placed. It is this combination of staged construction with the time-dependent effects that needs to be considered when designing these large structures.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **concrete_tower**
- Use the **Default** working folder.
- Enter the title as **Concrete creep example to model code CEB-FIP 1990**
- Select units of **N,mm,t,s,C**
- Ensure the **Structural** user interface is selected.
- Leave the startup template as **None**
- Select the **Vertical Y Axis** option.
- Click the **OK** button.



Note. Save the model regularly as the example progresses. Use the Undo button to correct any mistakes made since the last save was done.

Defining the Geometry

Geometry >
Line >
Coordinates...



Enter coordinates of **(0, 0)**, and **(1000, 5000)**, to define the first lift of column.

 
- Select the line just drawn.

Geometry
Line >
Copy...




Enter a translation in the **X** direction of **1000** and in the **Y** direction of **5000**

- Enter the number of copies required as **3** and click **OK**



Defining and Assigning Mesh Attributes

- The tower is to be modelled with **Thick nonlinear beam** elements (BTS3 elements) with **6** divisions.
- Enter the dataset name as **Thick nonlinear beam Div = 6** and click **OK**.
- Select all lines on the model and drag and drop the **Thick nonlinear beam Div = 6** mesh from the Treeview onto the selected features.
- Click **OK** to assign a default element orientation using a beta angle of 0.

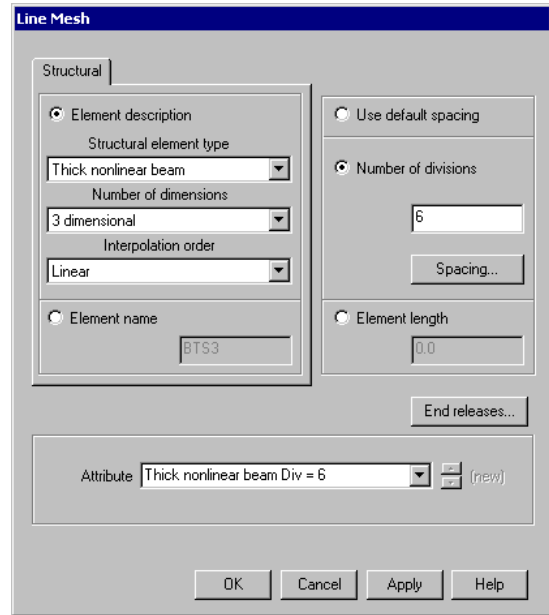


Geometric Properties

In this example, the tower is formed in four separate lifts/stages and each lift is considered as a separate construction stage in the analysis model. Each of the stages has different section property to represent the tower tapering from a larger section at the bottom to a smaller section at the top. Section properties for each stage are calculated using the standard section property calculator (available from the Utilities menu). In practice, each construction stage may well consist of a number of elements of reducing cross-section size as they go up the tower and these would be grouped together to represent each stage. The Multiple Varying Section facility would be used in conjunction with a reference path to model this more accurately.

In this example the geometric properties of the tower will be defined by a command file and then assigned to the model.

- Select the file **concrete_tower_geometric_properties.vbs** which is located in the \<LUSAS Installation Folder>\Examples\Modeller directory and click **OK**
- From the Treeview assign each geometric attribute to a line on the model with the largest section attribute RSS D=3000 B=2000 (mm) assigned to the line at the bottom on the first stage and the next largest to the second stage and so on. To do this, select each line in turn in the Graphics Window and drag and drop the attribute from the Treeview onto the Graphics Window.

 If the geometric attributes were to be defined manually the following menu command would be used and the following details entered:




Stage 1 – 3000mm x 2000mm	A = 6E6 Iyy = 4.5E12 Izz = 2E12 J = 4.69531E12 Asz = 5E6 Asy = 5E6
Stage 2 - 2300mm x 1600mm	A = 3.68E6 Iyy = 1.62227E12 Izz = 785.067E9 J = 1.79087E12 Asz = 3.066667E6 Asy = 3.066667E6
Stage 3 – 1600mm x 1300mm	A = 2.08E6 Iyy = 443.733E9 Izz = 292.933E9 J = 593.735E9 Asz = 1.73333E6 Asy = 1.73333E6
Stage 4 – 1000mm x 1000mm	A = 1E6 Iyy = 83.3333E9 Izz = 83.3333E9 J = 140.833E9 Asz = 833.333E3 Asy = 833.333E3

Material Properties

For this particular example a different material assignment has to be produced for each section because the nominal size of the section is a material parameter which changes as the tower reduces in size from bottom to top. All other values remain unchanged.

 The CEB-FIP creep material properties of the tower will be defined by a command file and then assigned to the model.



- Select the file **concrete_tower_material_properties.vbs** which is located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory and click **OK**

Staged Construction of a Concrete Tower with Creep

- To view the material properties defined, double-click on the dataset **Concrete CEB-FIP creep stage 1** in the Treeview and click the **Close** button to return to Modeller.
- Assign each material property to a line on the model assigning Creep Stage 1 to the line at the bottom representing the first stage and Creep Stage 2 to the line representing the second stage and so on.

If the material properties were to be defined manually the following menu command would be used resulting in the dialog shown being displayed:

- The **Young's modulus at 28 days, Poisson's ratio, mass density, and coefficient of thermal expansion** would be specified as shown on the dialog in the same way as for a linear isotropic material.
- In addition, the **mean compressive strength at 28 days, relative humidity** and **cement type** are required.

Concrete Creep CEB-FIP (1990)

Component	Value
Young's modulus at 28 days	30e3
Poisson's ratio	0.2
Mass density	2.4e-9
Coefficient of thermal expansion	0.01e-3
Mean compressive strength at 28 days	50
Cement type	Normal or rapid hardening
Relative humidity	70
Nominal size	1.2e3

☒ Include shrinkage


Attribute: Concrete CEB-FIP creep stage 1 (N mm t s C) (new)

OK Cancel Apply Help

- The **Include shrinkage** box must also be checked.
- Lastly, the **nominal size** needs to be entered. This is computed as $2A/u$ where A is the area of the cross-section (mm^2) and u is the length of the perimeter of the cross-section that is in contact with the atmosphere (mm). For the section on stage 1 the section is 2000mm by 3000mm resulting in a nominal size of **1200** mm.


Attributes
Support...

Supports

- A fully fixed support is required therefore all degrees of **Translation** and **Rotation** in the **X, Y** and **Z** axes must be set as **Fixed**, as well as the **Hinge Rotation** but not the Pore pressure. Enter a attribute name of **Fully Fixed** and click **OK**
- Select the point at the base of the tower and from the  Treeview drag and drop the support attribute **Fully Fixed** onto the selected feature, ensure the **All loadcases** option is selected and click **OK**

Loading

Self weight could be applied as a body force to selected features at relevant stages in the modelling process but in this example the self weight loading due to gravity is best applied as a property of each loadcase. This simplifies the process significantly because it does not then have to be assigned to features each time.

- In the  Treeview, right-click on **Loadcase 1** and select **Gravity**



Note. Gravity loading is defined in accordance with the vertical axis direction that was specified either initially on the New Model dialog or subsequently on the Vertical Axis dialog accessed using the **Utilities > Vertical Axis** menu item. No visualisation of gravity loading on the model is provided for gravity defined as a property of a loadcase. However, the general loadcase icon will change to include a loading arrow symbol to show that gravity is included for a particular loadcase.

Age

The age of section within a creep analysis is important because the material properties are dependent upon it. The age of a section is specified in days between the casting of the section and when it is first activated in the analysis.


In this example the age of each section is taken as 14 days. Sections are also activated at 14 days. This represents concrete being cast in-situ and the first loading taking place 14 days after the concrete is cast. (i.e. when the formwork is struck)



Creating and Assigning an Age Attribute

Attributes
Age...

- It is assumed that all sections in the tower will be cast and the formwork struck **14** days after the component was first activated. (If this was not the case separate age attributes would be created and assigned to each section as required)

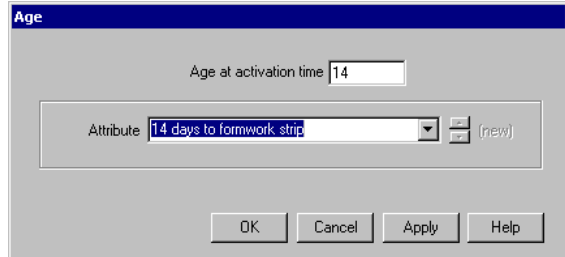

- Name the attribute as **14 days to formwork strip** and click **OK**
- Assign the age attribute to all lines on the model.



Note. If a construction includes precast sections, the age of a component might be 80 days, while the component may be activated at day 28 in the analysis for example.


Creating Activation and Deactivation datasets

In order to carry out a creep analysis on the model the construction stages are modelled using the birth and death facility within LUSAS.


Attributes
Birth & Death ...


- Select the **Activate** option and click **Next**
- Enter the attribute name as **Activate** and click **Apply**. Then click **Back** so the dialog can be reused to define the deactivate attribute.
- Select the **Deactivate** option and click **Next**
- Enter the attribute name as **Deactivate**, leave the percentage to redistribute as **100%** and select **Finish**

Modelling of Construction Stage 1


- In the  Treeview rename **Loadcase 1** to be **Stage 1** by selecting Loadcase 1 with the right-hand mouse button and using the rename option.


All elements in the model not required for the first stage analysis need to be de-activated.

- In the graphics window select the top three stages of the tower.
- From the  Treeview and with the top three stages selected, assign the deactivation attribute **Deactivate** ensuring that it is assigned to loadcase **Stage 1**

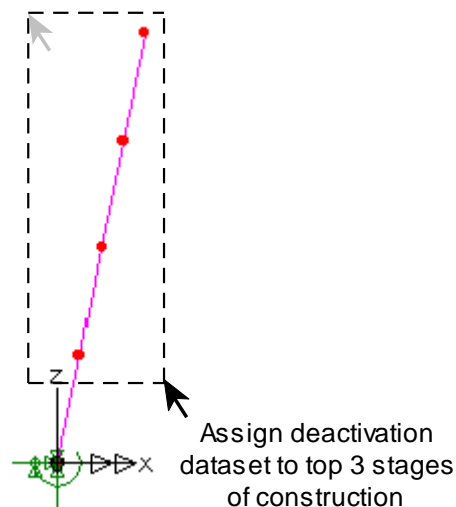

Defining loadcase properties

- In the  Treeview select **Stage 1** using the right-hand mouse button and select the **Nonlinear & Transient** option from the **Controls** menu.
- On the Nonlinear & Transient dialog select the **Nonlinear** option in the top-left hand corner and leave the incrementation type as **Manual**
- Select the **Time domain** option half-way down the dialog on the left. Select a **Viscous** time domain from the drop-down options. Enter the initial time step as **4**, the total response time as **60**, ensure the automatic time stepping option is not selected and set the maximum number of time steps or increments as **15**
- In the incremental LUSAS file output section enter a **Plot file** value of **15** to write out the results every 15 increments. This will simplify the viewing of the results in the loadcase Treeview.
- Click **OK** to return to the Modeller working window.

A  Nonlinear and Transient object will be added to the Treeview. Double-clicking on this object will allow any changes to be made to the control properties.



Note. The total response time of 60 represents the 60-day time interval until the next stage of the analysis is activated.

Nonlinear & Transient

Incrementation

- ☒ Nonlinear
- Incrementation:
- Starting load factor:
- Max change in load factor:
- Max total load factor:
- ☒ Adjust load based on convergence
- Iterations per increment:
-

Solution strategy

- ☐ Same as previous loadcase
- Max number of iterations:
- Residual force norm:
- Incremental displacement norm:
-

Incremental LUSAS file output

- ☐ Same as previous loadcase
- Output file:
- Plot file:
- Restart file:
- Max number of saved restarts:
- Log file:
- History file:

Time domain

- ☒ Time domain
-
- Initial time step:
- Total response time:
- ☐ Automatic time stepping
-

Common to all

Max time steps or increments:

- Having set all the Nonlinear & Transient options select **OK** to return to the Modeller working window.

Construction Stages 2 to 4

Stages 2 to 4 require loadcases to be generated to specify the duration of the construction process. Lines on the model must be selected according to the construction stage being considered and activation datasets must be assigned to these lines.

Stage 2


The elements in the second construction stage must be activated

Utilities

Loadcase...

- Enter the Loadcase name as **Stage 2**, select **Automatically add gravity to this loadcase** and select **OK**
- In the Treeview select **Stage 2** using the right-hand mouse button select **Set Active**
- In the graphics window select the second stage of the tower.
- With the second stage selected, assign the activation attribute **Activate** from the Treeview ensuring that it is assigned to loadcase **Stage 2**

Assign activation dataset to the 2nd stage of construction

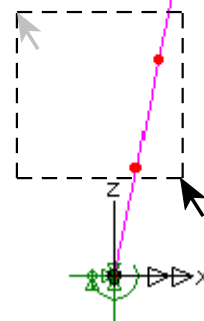

Defining loadcase properties

- In the Treeview select loadcase **Stage 2** using the right-hand mouse button and select the **Nonlinear & Transient** option from the **Controls** menu.
- Set the incrementation type to **Nonlinear** with **Manual** control. Select the **Time domain** option and select a **Viscous** time domain. Enter the initial time step as **4**, the total response time as **120** (to represent two stages of the 60-day casting sequence) and the maximum number of time steps as **15**. Select **OK** to return to the Modeller working window.

Verifying activation assignments



- If you need to verify loading assignments or check when particular lines (and hence elements) become active in an analysis select a line on the model using the right-hand mouse button and select **Properties**. Select the **Activate Elements** tab. Note that the 'greyed-out' loadcase is simply the current loadcase and may not be the actual loadcase that the properties are assigned to. Selecting the **Activate** entry in the table of Assigned properties will show the loadcase to which the activation is assigned.

Stage 3


The elements in the third construction stage now need to be activated.

Utilities


Loadcase...

- Enter the Loadcase name as **Stage 3**, select **Automatically add gravity to this loadcase** and select **OK**
- In the  Treeview select **Stage 3** using the right-hand mouse button select **Set Active**
- In the graphics window select the third stage of the tower.
- With the third stage selected, assign the activation attribute **Activate** from the  Treeview by clicking **OK** ensuring that it is assigned to loadcase **Stage 3**

Assign activation dataset to the 3rd stage of construction

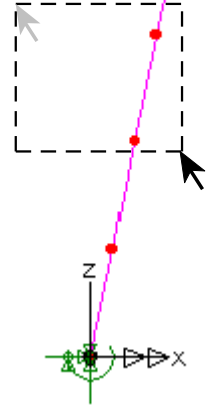

Defining loadcase properties



- In the  Treeview select loadcase **Stage 3** using the right-hand mouse button and select the **Nonlinear & Transient** option from the **Controls** menu.
- Set the incrementation type to **Nonlinear** with **Manual** control. Select the **Time domain** option and select a **Viscous** time domain. Enter the initial time step as **4**, the total response time as **180** (to represent three stages of the 60-day casting sequence) and the maximum number of time steps as **15**
- Click **OK** to return to the Modeller working window.


Stage 4

The elements in the fourth construction stage need to be activated.


Utilities

Loadcase...

- Enter the Loadcase name as **Stage 4**, select **Automatically add gravity to this loadcase** and select **OK**
- In the  Treeview select **Stage 4** using the right-hand mouse button select **Set Active**
- In the graphics window select the fourth stage of the tower.
- With the fourth stage selected, assign the activation dataset **Activate** from the  Treeview ensuring that it is assigned to loadcase **Stage 4** when clicking **OK**

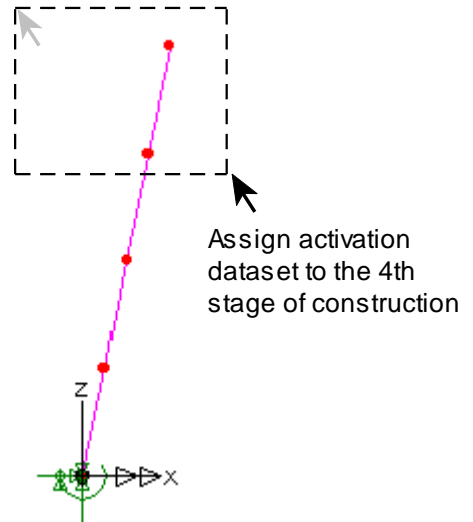


Defining loadcase properties

- In the  Treeview select loadcase **Stage 4** using the right-hand mouse button and select the **Nonlinear & Transient** option from the **Controls** menu.
- Set the incrementation type to **Nonlinear** with **Manual** control. Select the **Time domain** option and select a **Viscous** time domain. Enter the initial time step as **4**, the total response time as **240** and the maximum number of time steps as **15**
- Click **OK** to return to the Modeller working window.

Long-term loadcase

This investigates long-term effects on the tower over time.

- Enter the Loadcase name as **Long-term**
- In the  Treeview select **Long-term** using the right-hand mouse button and select the **Nonlinear & Transient** option from the **Controls** menu. Set the incrementation type to **Nonlinear** with **Manual** control. Select the **Time domain** option. Select a **Viscous** time domain. Enter the initial time step as **1**, the total response time as **1000** (days) and the maximum number of time steps as **20**
- Select the **Automatic time stepping** option and then select the **Advanced** button


Utilities

Loadcase...

- On the Advanced time step parameters dialog select the **Exponent for increasing time step (CEB-FIP)** option and leave the value set as **3**
- Having set all the Nonlinear & Transient options select **OK** to return to the Modeller working window.



Note. Specifying an exponent to increase the time step as an analysis progresses is very useful when considering long-term effects. In the early stages creep strains increase at a faster rate and a smaller time step is beneficial for more accurate solutions. With concrete the rate of increase in creep strain reduces with time and hence larger time steps can be taken for a more economical solution without losing accuracy.

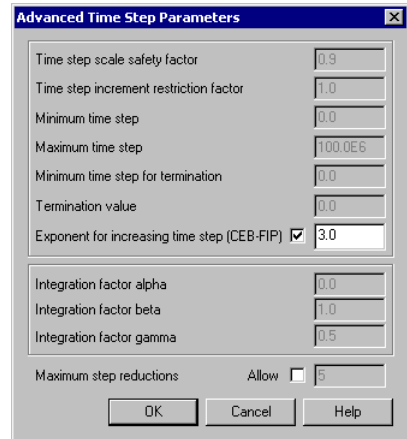

Note. All lines in the model are now activated so no activation dataset needs to be assigned to the model for this loadcase. Also, because no additional self-weight loading is to be applied to the model the self-weight loading from Stage 4 will be used by default.

File
Save



Save the model file.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...




A LUSAS data file name of **concrete_tower** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **concrete_tower.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **concrete_tower.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




- ☐ **concrete_tower_modelling.vbs** carries out the modelling of the example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **concrete_tower**



- To recreate the model, select the file **concrete_tower_modelling.vbs** located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.






Rerun the analysis to generate the results.

Viewing the Results

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for each time step can be seen in the Loadcase layer. The time step results for the first loadcase are set to be active by default.


Bending moments of M_z at the base of the tower are to be investigated for each stage of the construction process, that is, after 60 days, 120 days, 180 days, 240 days and for a long-term loadcase. A summary of results on each results plot also allows a comparison of maximum displacements for each stage.

Stage 1 results


- Turn off the **Geometry** and **Attributes** layers in  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the Graphics window and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview. Click the **Window summary** option. Select the **Mesh** tab and click the **Show activated only** option. Click the **OK** button to display the deformed mesh for Time step 15.
- With click the right-hand mouse button in a blank part of the Graphics window and select the **Diagrams** option. On the dialog, select **Force/Moment - Thick 3D Beam** contour results from the entity drop down list and component **M_z** . Select the **Diagram Display** tab and select the **Deform** option. Click **OK** to display the diagrams layer.
- Add the **Values** layer to the  Treeview. On the dialog, select **Force/Moment - Thick 3D Beam** contour results from the entity drop down list and component **M_z** . Ensure **Averaged at nodes** is selected. Select the **Values Display** tab and select the **Deform** option. Ensure the **Maxima** option is selected to show the top 1% of results and click **OK**

Scale: 1: 28.4285
Zoom: 100.0
Eye: (0.0, 0.0, 1.0)
Nonlinear analysis
Loadcase: 16:Time Step 15 Time = 60.0000
Results file: concrete_tower.mys
Response time: 60.0
Maximum displacement 0.0936256 at node 2
Deformation exaggeration: 1.90636E3


Diagram entity: Force/Moment - Thick 3D Beam
Diagram component: M_z
Diagram maximum 303.463E6 at node 1 of element 1
Diagram minimum 3.33476E6 at node 7 of element 6
Diagram scale: 1: 19.7718E-9
Peak/value entity: Force/Moment - Thick 3D Beam
Peak/value component: M_z
Peak range(%): 1.0
Peak/value maximum 303.463E6 at node 1
Peak/value minimum 3.33476E6 at node 2

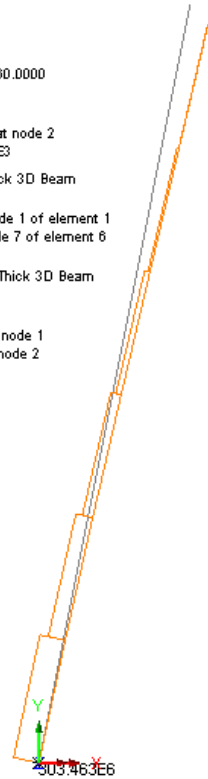


Stage 2 results

- In the  Treeview right-click on **Time step 30 Time = 120.000** (days) and select the **Set Active** option.


Scale: 1: 56.8569
 Zoom: 100.0
 Eye: (0.0, 0.0, 1.0)
 Nonlinear analysis
 Loadcase: 31:Time Step 30 Time = 120.000
 Results file: concrete_tower.mys
 Response time: 120.0
 Maximum displacement 0.740515 at node 14
 Deformation exaggeration: 471.598
 Diagram entity: Force/Moment - Thick 3D Beam
 Diagram component: Mz
 Diagram maximum 929.349E8 at node 1 of element 1
 Diagram minimum 2.04549E6 at node 19 of element 12
 Diagram scale: 1: 6.45613E9
 Peak/value entity: Force/Moment - Thick 3D Beam
 Peak/value component: Mz
 Peak range(%): 1.0
 Peak/value maximum 929.349E8 at node 1
 Peak/value minimum 2.04549E6 at node 14

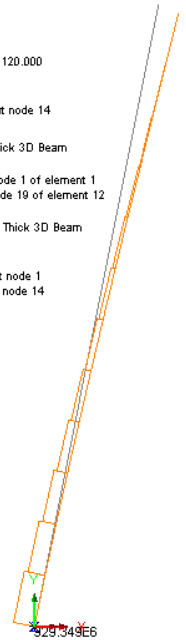


Stage 3 results

- In the  Treeview right-click on **Time step 45 Time = 180.000** (days) and select the **Set Active** option.


Scale: 1: 85.2854
 Zoom: 100.0
 Eye: (0.0, 0.0, 1.0)
 Nonlinear analysis
 Loadcase: 46:Time Step 45 Time = 180.000
 Results file: concrete_tower.mys
 Response time: 180.0
 Maximum displacement 2.86264 at node 26
 Deformation exaggeration: 181.269
 Diagram entity: Force/Moment - Thick 3D Beam
 Diagram component: Mz
 Diagram maximum 1.53289E9 at node 1 of element 1
 Diagram minimum 1.15662E8 at node 31 of element 18
 Diagram scale: 1: 3.91418E9
 Peak/value entity: Force/Moment - Thick 3D Beam
 Peak/value component: Mz
 Peak range(%): 1.0
 Peak/value maximum 1.53289E9 at node 1
 Peak/value minimum 1.15662E8 at node 26

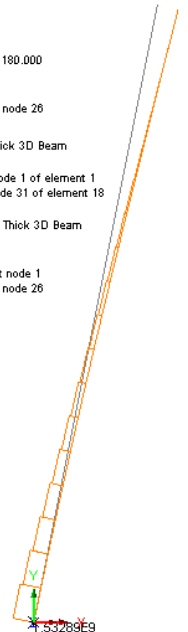


Stage 4 results

- In the  Treeview right-click on **Time step 60 Time = 240.000** (days) and select the **Set Active** option.

Scale: 1: 113.714
Zoom: 100.0
Eye: (0.0, 0.0, 1.0)
Nonlinear analysis
Loadcase: 61:Time Step 60 Time = 240.000
Results file: concrete_tower.mys
Response time: 240.0
Maximum displacement 7.29317 at node 38
Deformation exaggeration: 94.424
Diagram entity: Force/Moment - Thick 3D Beam
Diagram component: Mz
Diagram maximum 1.94322E9 at node 1 of element 1
Diagram minimum 556.57E3 at node 43 of element 24
Diagram scale: 1: 3.08766E-9
Peak/value entity: Force/Moment - Thick 3D Beam
Peak/value component: Mz
Peak range(%): 1.0
Peak/value maximum 1.94322E9 at node 1
Peak/value minimum 556.57E3 at node 38

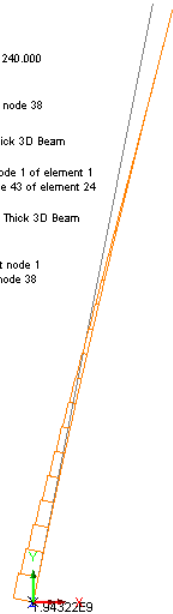


Long-term loadcase

- In the  Treeview right-click on **Time step 79 Time = 1000.00** (days) and select the **Set Active** option.

For the long-term loadcase the bending moment has not changed from the stage 4 analysis since no additional loading has been applied to the model. However, it can be seen from the results that the Maximum Displacement has increased due to the effect of the creep deformations.

Scale: 1: 113.714
Zoom: 100.0
Eye: (0.0, 0.0, 1.0)
Nonlinear analysis
Loadcase: 80:Time Step 79 Time = 1000.00
Results file: concrete_tower.mys
Response time: 1.0E3
Maximum displacement 9.20143 at node 38
Deformation exaggeration: 75.0623
Diagram entity: Force/Moment - Thick 3D Beam
Diagram component: Mz
Diagram maximum 1.94322E9 at node 1 of element 1
Diagram minimum 556.57E3 at node 43 of element 24
Diagram scale: 1: 3.08766E-9
Peak/value entity: Force/Moment - Thick 3D Beam
Peak/value component: Mz
Peak range(%): 1.0
Peak/value maximum 1.94322E9 at node 1
Peak/value minimum 556.57E3 at node 38

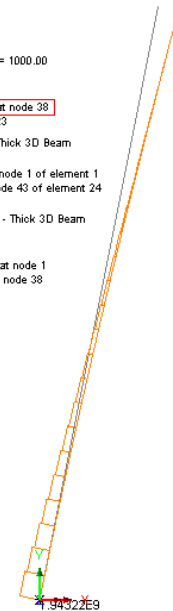


This completes the example.

3-Span Concrete Box Beam Bridge of Varying Section

For software product(s):	Bridge and Bridge Plus
With product option(s):	None

Description

A 3-span concrete box beam bridge of varying cross-section is to be modelled to illustrate the use of the box section property calculator and the use of the multiple varying sections facilities in LUSAS.

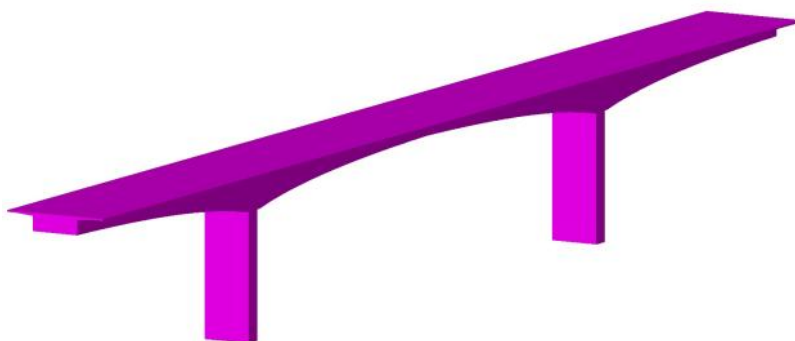

Two models are to be created; a preliminary model suitable for prototype / assessment work and a more detailed model suitable for developing further into a staged construction model. Simplified geometry is used for both to allow the example to concentrate on the use of the box section property calculator and the multiple varying section facilities that are used in modelling the structure.

Units used are kN, m, kg, s, C throughout

3-Span Concrete Box Beam Bridge of Varying Section

Objectives

The required output from the analysis consists of:

- ❑ A comparison of results from the preliminary model and the more detailed model.

Keywords

Bridge, Concrete, Multiple Varying Sections, Box


Associated Files



- ❑ **concrete_box_bridge.mdl** Basic beam model.

Discussion

The 3-span structure is comprised of varying hollow cross-sections with solid diaphragm sections at the four supports. Cross-section properties for three void locations on the structure (as shown in the image below) will be defined and used in the creation of multiple varying section geometric line attributes which will then be assigned to selected lines on the model.

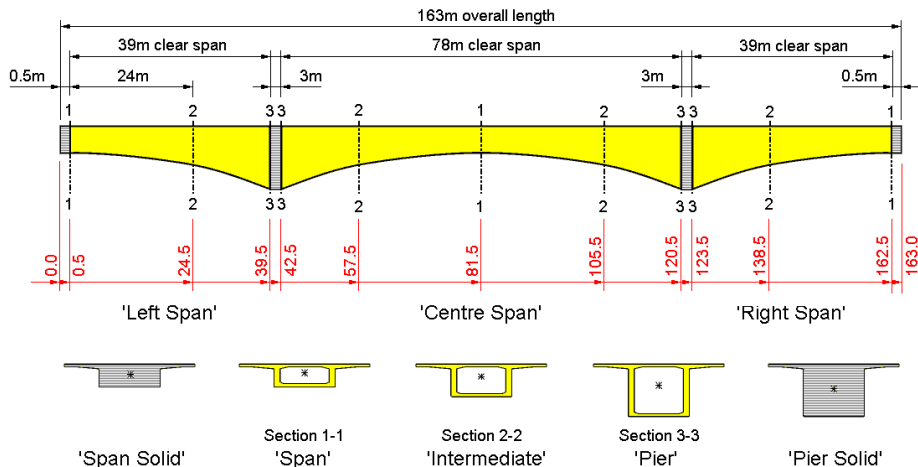

Schematic showing the section locations at which the varying section definitions are based.

Other section properties, for solid diaphragm sections at the supports and at the ends of the structure (shown on the image above), will also be defined and assigned as required.

When building a model like this the bridge can either be represented as a ‘flat model’ using lines at a common level with offsets being assigned to the elements to represent to eccentricity of the section properties about the line, or geometry lines could follow the centroid of the sections to create a ‘curved’ model. If post tensioning is to be carried out the model should be based upon a ‘curved’ model. Both methods are valid but for this example the ‘flat model’ method will be used.



‘Flat’ modelling method
(where lines following the centroid of one section with other sections offset to align to match)



Indicative diagram showing ‘Curved’ modelling method
(where all lines follow the centroid of sections)

Modelling details

The supplied basic beam model is a ‘Flat’ model with clear spans of 39m, 78m and 39m formed of single straight lines. During the initial part of the example multiple varying section geometric line attributes are assigned to the single lines along with other section properties and a simple linear analysis is carried out.

After creating the simple model a more detailed model is formed by splitting the lines representing each span into shorter 3m long lengths in readiness for a future staged construction analysis. In doing so 3 mesh divisions will be present on each 3m long geometric line.



Caution. When modelling varying cross sections with constant section beam elements care should be taken to ensure that sufficient elements have been assigned to achieve the accuracy required. Greater than 8 elements should be used for small variations in cross section along the length of the geometry to which the section has been assigned, and considerably more elements should be used for larger variations.

Modelling : Preliminary Model

Running LUSAS Modeller


For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.

Loading the model

To create the model, open the read-only file **Concrete_Box_Bridge.mdl** located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.

The basic bridge geometry will be displayed.

The geometric lines of this model have been assigned a line mesh of thick beam elements with an element length of 1m. Concrete (ungraded) material properties, and a structural gravity load have also been assigned. Fixed supports restrain the piers and roller supports restrain the ends of the deck.

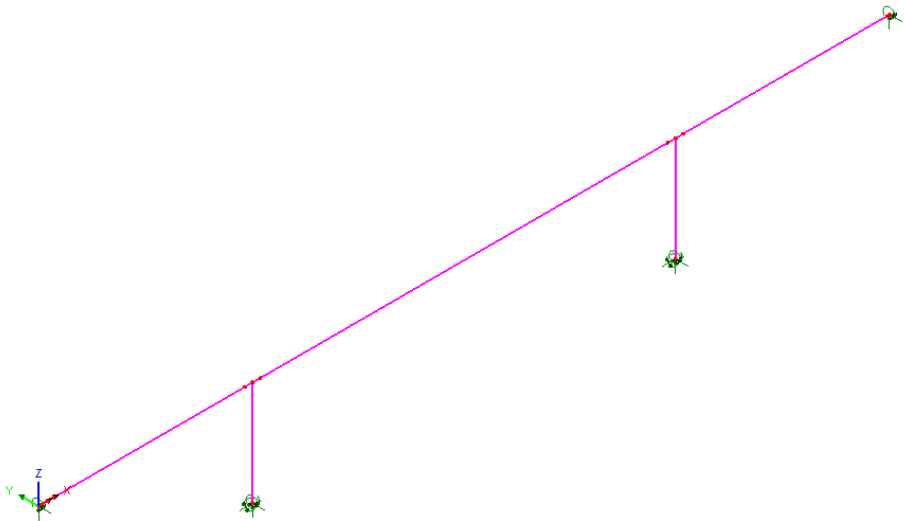

- In the **\<LUSAS Installation Folder>\Projects** folder create a new directory called **ConcreteBoxBridge**
- Save the model into this new folder as **concrete_box_bridge_preliminary**



Note. Save the model regularly as the example progresses. Use the Undo button to correct any mistakes made since the last save was done.

Defining Cross-sectional properties

To start, cross-section properties for three voided box sections that are used in all three spans will be defined.

To define the voided span section

Utilities

Section Property
Calculator >

Box Section

- Select the **Complex section** option and enter values as shown on the dialog opposite.

Box section dimensions are:

- $H = 2.2$
- $Wb = 3$
- $Wt = 3$
- $Hm = 0$ (or leave blank)
- $Tb = 0.2$
- $Tt = 0.2$

Cantilever slab dimensions are:

- $Wc = 3.5$
- $Tc1 = 0.4$
- $Tc2 = 0.2$

Box Section Property Calculator

Type: ☐ Simple section ☒ Complex section ☐ Exclude void

Cell details: Number of cells: 1

Box section dimensions:

H	2.2	Hm	0
Wb	3	Tb	0.2
Wt	3	Tt	0.2
Wc	3.5	Tc1	0.4
		Tc2	0.2

Number of extra points:

Top slab	1
Bottom slab	1
Cantilever slab	1
Web interior face	0
Web exterior	0

Extra points locations:

Point	Offset (O)	Height (H)
P1	2.5	0.4
P2	2.5	0.4
t1	1.65	0.2
b1	2	0.2
c1	1.27	0.2

Calculated properties:

A	6.316
Ixx	4.26726
Iyy	61.6274
Ixy	-1.13641E-15
J	8.81331
Asy	2.2
Asx	4.916
yt	0.81026
yb	1.38974

Name: Span

☒ Add to local library ☐ Add to server library

Buttons: Load section... Create geometry... Visualise... Clear inputs OK Cancel Apply Help

To allow additional points to be entered in addition to P1 and P2 to define the cross-sectional shape the following need to be set in the Number of extra points panel:

- Top slab = 1
- Bottom slab = 1
- Cantilever slab = 1

Web interior face and web exterior face points are not required so are left set to zero.


The complete set of values to be entered in the Extra points locations table are:

Point	Offset (O)	Height (H)
P1	2.5	0.4
P2	2.5	0.4

3-Span Concrete Box Beam Bridge of Varying Section

t1	1.65	0.2
b1	2.0	0.2
c1	1.27	0.2

- To see the section that will be created by the values entered click the **Visualise** button. Click **Close** to return to the main dialog.
- Enter the name as **Span**
- Ensure **Add to local library** is selected and click **Apply** to calculate the section properties, add the section to the local library, and allow you to continue to define another section.

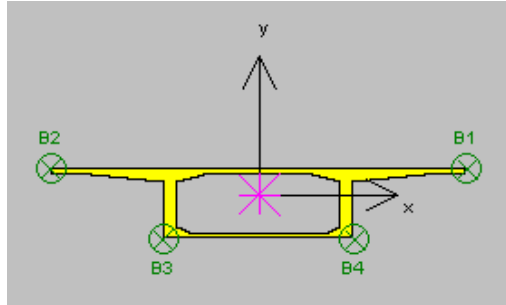

Tip. Of the section properties calculated one, y_t , (**0.81026** for this section) should be noted because it used in subsequent calculations of eccentricity / offset values for other sections.

To define the voided intermediate section

- In the Box section dimensions panel change the value of H to be **3.2**
- Change the name to be **Intermediate** and click **Apply** to calculate the section properties, add the section to the local library, and allow you to continue to define another section.

To define the voided section adjacent to the pier

- In the Box section dimensions panel change the value of H to be **5.2**
- Change the name to be **Pier** and click **Apply** to calculate the section properties, add the section to the local library, and allow you to continue to define another section.

To define the solid pier section

- In the Type panel select **Exclude void**
- Change the name to be **Pier Solid** and click **Apply** to calculate the section properties, add the section to the local library, and allow you to continue to define another section.



Tip. The difference between the y_t value of the Span section and the Pier Solid section should be noted because this will be required later in the example to specify an

eccentricity / offset value for other sections. In this case the difference in values of yt is $2.4646 - 0.81026 = 1.652$

To define the solid span section

Existing defined sections such as that of the voided span section can be loaded into the dialog for subsequent modification to create new or similar sections

- Click the **Load section...** button. Browse the sections in the local library to find the **Span** entry and click **OK** to load its section details into the dialog.
- In the Type panel select **Exclude void**
- Change the name to be **Span Solid** ensure **Add to local library** is selected and click **OK** to calculate the section properties, add the section to the local library, and finish defining the deck sections.





Tip. The difference between the yt value of the Span section and the Span Solid section should be noted because this will be required later in the example to specify an eccentricity / offset value of one from the other. In this case the difference in values of yt is $0.98225 - 0.81026 = 0.169$

To define the column section

- On the Rectangular Solid Section Property dialog enter D=6 and B=2.

A name of RSS D=6 B=2 will be automatically created.



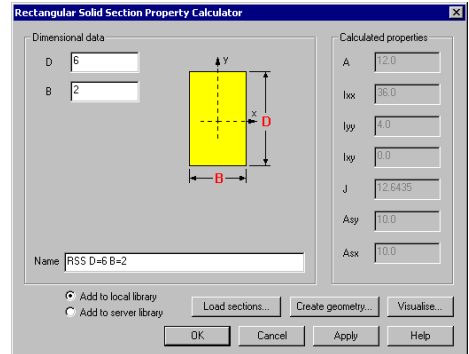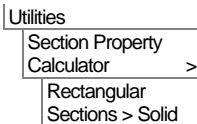




- Ensure **Add to local library** is selected and click **OK** to calculate the section properties, add the section to the local library, and finish defining section properties.




All required section properties have now been defined and saved in the local user library. The solid sections must now be added to the Treeview in order to allow for them to be assigned to the model. The voided span sections will be used to create multiple varying section line attributes which will be automatically added to the Treeview when the attribute is created.

Adding the solid section geometric properties to the Treeview

The standard sections dialog will appear.

- Click on the drop-down list button  to change the selection from UK Sections to **User Sections**
- Ensure a **Local** library is being accessed.
- Click on the drop-down list button  and select **Span Solid** from the list of local library items.
- Change the name to be **Span Solid**
- Click the **Apply** button to add the Span Solid line attribute to the  Treeview and allow you to choose another section.
- Click on the drop-down list button  and select **Pier solid** from the list of local library items.
- Change the name to be **Pier Solid**
- Click the **Apply** button to add the Pier Solid line attribute to the  Treeview and allow you to choose another section.
- Click on the drop-down list button  and select **RSS D=6 B=2** from the list of local library items
- Change the name to be **Column**
- Click the **OK** button to add the Column line attribute to the  Treeview.

These line attributes will be assigned to the model later in the example.

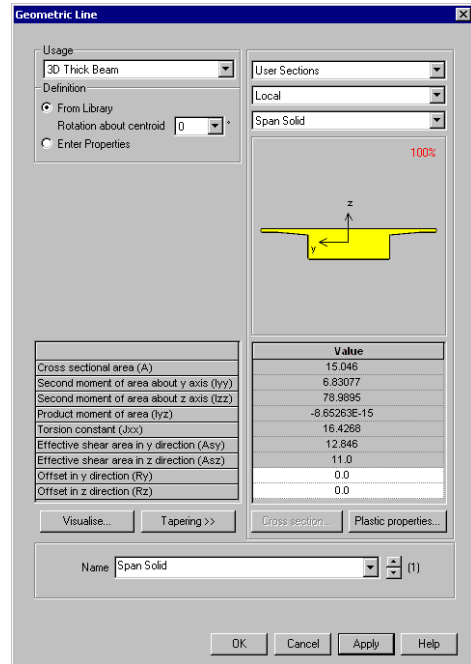






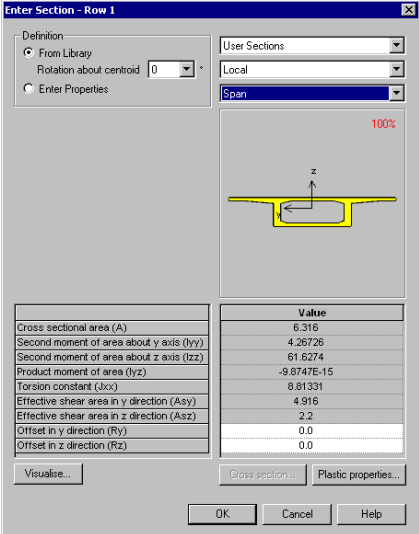
Defining the multiple varying section line properties for the Left Span

A multiple varying geometric line attribute needs to be defined for the left-hand span. This will make use of the previously defined voided sections named Span, Intermediate and Pier.

Define sections

Attributes	
Geometric	>
Multiple Varying	
Section...	

- On the Multiple Varying Section dialog click in the Section cell that currently reads 914x305x289kg UB and the launch dialog button  will appear to allow a different pre-defined section to be chosen from a different section library.
- On the Enter Section dialog, click on the drop-down list button  to change the selection from UK Sections to **User Sections**
- Ensure a **Local** library is being accessed.
- Click on the drop-down list button  and select **Span** from the list of local library items and then click **OK** to add the section to the first row of the table on the Multiple Varying Section dialog.
- On the Multiple Varying Section dialog press the **TAB** key to move between cells and create a new row beneath the existing row. (Shape interpolation and distance values will be entered after all sections have been added to the table)
- In the new Section cell (row 2) click on the launch dialog button  again. The drop-down list should still be showing **User Sections** for a **Local** library. Browse and select **Intermediate** from the drop-down list and click **OK** to add the section to the table.
- Press the **TAB** key to move between cells and create a new row beneath the existing row.
- In the new Section cell (row 3) click on the launch dialog button  again. The drop-down list should still be showing **User Sections** for a **Local** library. Browse and select **Pier** from the drop-down list and click **OK** to add the section to the table.



	Value
Cross sectional area (A)	6.316
Second moment of area about y axis (Iyy)	4.26726
Second moment of area about z axis (Izz)	61.6274
Product moment of area (Iyz)	-9.8747E-15
Torsion constant (Jxx)	8.81331
Effective shear area in y direction (Asy)	4.916
Effective shear area in z direction (Asz)	2.2
Offset in y direction (Ry)	0.0
Offset in z direction (Rz)	0.0


3-Span Concrete Box Beam Bridge of Varying Section



Note. As the multiple varying section is built-up in the table, a visualisation of the longitudinal and vertical alignment and of the cross-section shapes used is displayed on the dialog. Longitudinal section visualisation only takes place once all required data has been entered and only for sections that are compatible.

Define shape interpolation method

To specify a shape interpolation method for each defined section:

- The **Span** section as the first in the table is set by default to **Start**
- For the **Intermediate** section entry click on the drop-down list button  in the Shape Interpolation cell and select **Smoothed**
- Repeat for the **Pier** section in the cell below selecting **Smoothed**


Define distance values

Lastly we need to specify a distance value at which each section will apply.

- For the **Span** section click in the Distance cell and enter **0.5**
- For the **Intermediate** section enter **24.5**
- For the **Pier** section enter **39.5** and click somewhere else on the dialog to cause the visualisation to be updated for the last entered distance.



Note. Values entered are treated as proportional distances along a line (for example entering 0, 10 and 20 would specify a section at either end and at a mid-point of any line that was selected and assigned the geometric line attribute). Distances are also mapped to the actual line length so entering 0, 0.5, and 1, in three separate cells would produce the same result. But note that a section does not necessarily have to be defined to start at a distance of 0, (as in this example). In this case the use of a non-zero starting point of 0.5 (a chainage value representing the actual setting-out point of the section on the model) as well using a corresponding intermediate and an end point appropriate to the line beam length will help to ensure an easy conversion to a staged construction model in the second part of this example. This will use the same chainage values in conjunction with the reference path facility.

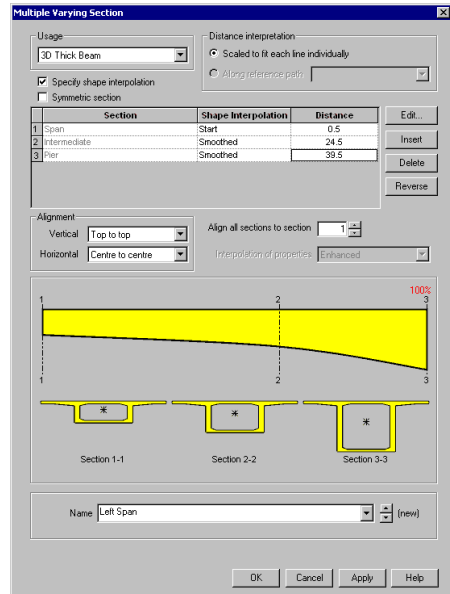

Section	Shape Interpolation	Distance
1 Span	Start	0.5
2 Intermediate	Smoothed	24.5
3 Pier	Smoothed	39.5

Check alignment settings

The vertical and horizontal alignment of a series of sections is controlled by the Alignment options. All sections are aligned with respect to a chosen section.

- Ensure that all sections are aligned **Top to top**, **Centre to centre** and with respect to section **1**

Name the attribute

- Enter a name of **Left Span** and click **Apply** to add the multiple varying section line attribute to the Treeview and allow you to continue to define another one.

Defining the multiple varying section line properties for the Right Span

This can be done by reversing the order of the sections used for the left span and then changing the distance values. This time, to prevent inadvertent overwriting of previously defined line attributes we will name the attribute first.

Name the attribute

- With the Multiple Varying Section dialog for the Left Span currently displayed overtype the Left Span name with **Right Span**

Define sections


- Click the **Reverse** button to change the order of the sections listed.

Check Shape Interpolation type

- The **Pier** section should be set to **Start**
- The **Intermediate** section should be set to **Smoothed**
- The **Span** section should be set to **Smoothed**

Define Distance values

- For the **Pier** section click in the Distance cell and enter **123.5**
- For the **Intermediate** section enter **138.5**

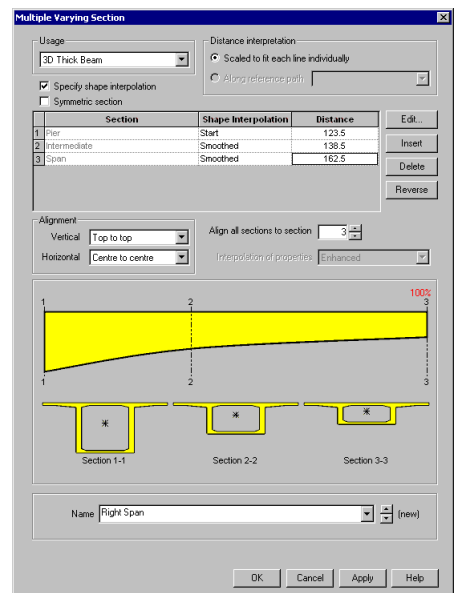


3-Span Concrete Box Beam Bridge of Varying Section

- Repeat for the **Pier** section enter **162.5**
- Click somewhere else on the dialog to cause the visualisation to be updated for the last entered distance.

Check alignment

- Ensure that all sections are aligned **Top to top**, **Centre to centre** and with respect to section **3** (because this is now the number identifier for the Span section)

Save the changes

- Click **Apply** to add the multiple varying section line attribute to the  Treeview, and allow you to continue to define another one.

Defining the multiple varying section line properties for the Centre Span

This can be done by using the symmetric option to mirror the sections used for the Right Span and then changing the distance values.

Name the attribute

- With the Multiple Varying Section dialog displayed for the Right Span overtype the Right Span name with **Centre Span**

Define sections

- Click the **Symmetric** button to mirror the sections listed.


Check Shape Interpolation type

- The **Pier** section should be set to **Start**
- The **Intermediate** section should be set to **Smoothed**
- The **Span** section should be set to **Smoothed**

Define Distance values

Specify a distance value at which each section will apply:

- For the **Pier** section click in the Distance cell and enter **42.5**
- For the **Intermediate** section enter **57.5**

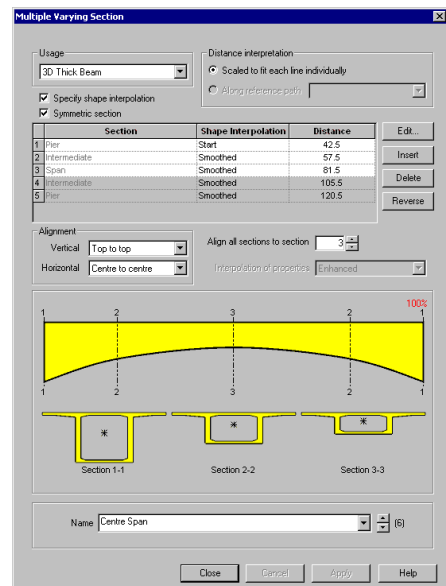


- Repeat for the **Pier** section enter **81.5**
- Click somewhere else on the dialog to cause the visualisation to be updated for the last entered distance.

Check alignment

- Ensure that all sections are aligned **Top to top, Centre to centre** and with respect to section **3** (the number identifier for the main setting-out section)


Save the changes

- Click **OK** to add the multiple varying section line attribute to the  Treeview and stop defining any more.




Note. Where all sections have been defined using either a LUSAS supplied standard library item or one of the LUSAS standard section generators an 'exact' calculation is made to arrive at intermediate section properties based upon the defined shape interpolation method.

Assigning the varying geometric line properties

- Select the 39m long line representing the left-hand clear span of the bridge and drag and drop the **Left Span (Varying – 3 Sections)** geometric line attribute from the  Treeview onto it.
- Select the 39m long line representing the right-hand clear span of the bridge and drag and drop the **Right Span (Varying – 3 Sections)** geometric line attribute onto it.
- Select the 78m long line representing the centre clear span of the bridge and drag and drop the **Centre Span (Varying – 5 Sections)** geometric line attribute onto it.

After assignment (and with fleshing turned on) the model will look like this:

3-Span Concrete Box Beam Bridge of Varying Section

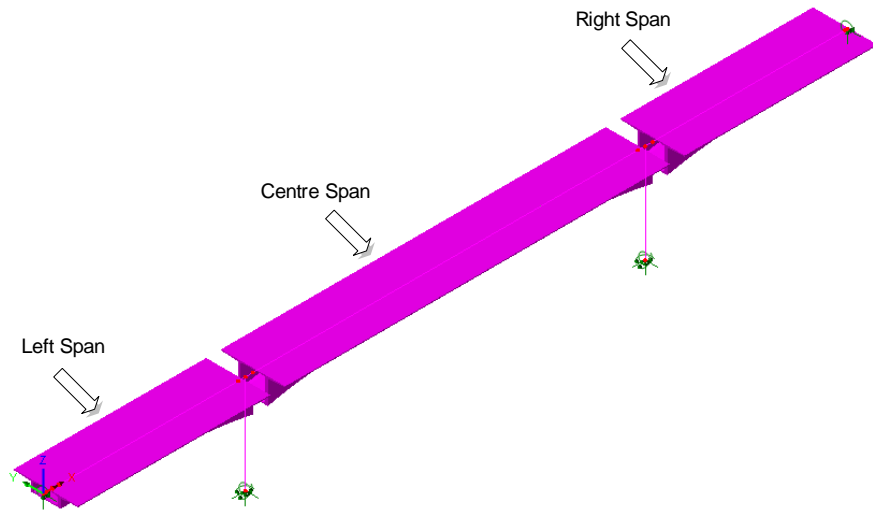


Assigning the solid geometric deck properties

The solid sections at the ends of the deck and at column locations now need to be assigned to the model.

Y: N/A Select the **Y axis** button to view the side elevation of the model.




- Box-select the lines at either end of the bridge defining the solid section and drag and drop the **Span Solid (Span Solid major Z)** geometric line attribute onto the selection.

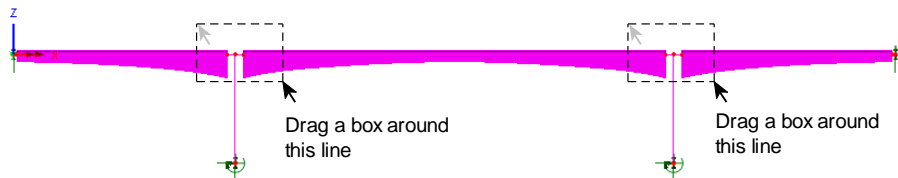



- Box-select the 2 lines at both internal supports defining the solid section of the deck and drag and drop the **Pier Solid (Pier Solid major Z)** geometric line attribute onto the selection.


Adjusting the centroid offsets for solid sections

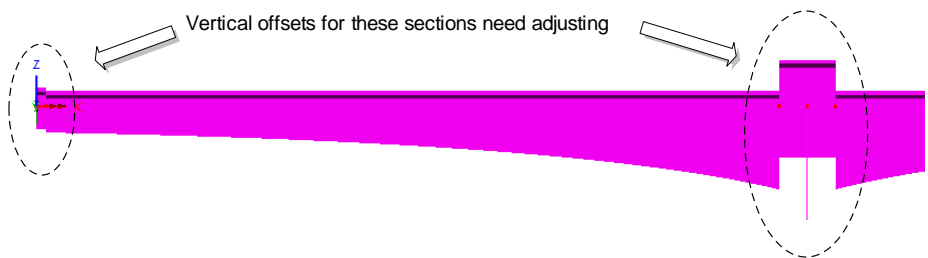In assigning the geometric line attributes for the solid sections of the deck it can be seen that differences in centroid values in the y direction cause the solid sections to sit too high with respect to the varying sections (which were all set-out with a vertical alignment with respect to the centroid of the section named Span that sits at the left-hand end of the structure). As a result the offset values for these solid sections need amending:




- In the  Treeview, double-click the **Span Solid (Span solid major Z)** entry. Enter a value of **0.169** for the Offset in z direction (Rz). This was calculated and noted with a Tip marker earlier in the example.
- In the  Treeview, double-click the **Pier Solid (Pier Solid major Z)** entry. Enter a value of **1.652** for the Offset in z direction (Rz). This value was calculated and noted with a Tip marker earlier in the example.

Assigning the main column properties

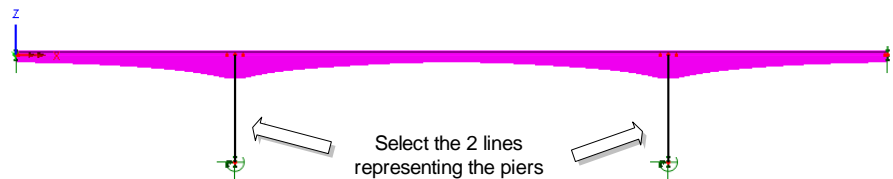

- Select the lines representing the columns (piers) and drag and drop the **Column (RSS D=6 B=2 major z)** geometric line attribute onto the selection.
- Rotate the model to a suitable 3D view

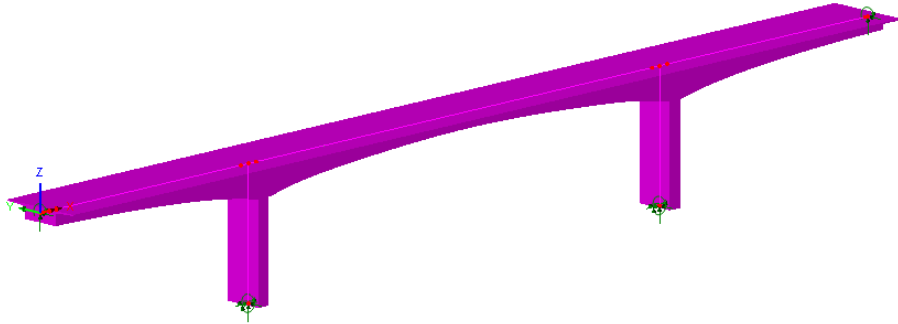

File
Save



Save the model file.

The preliminary model is now complete and ready to be solved.

Running the Analysis : Preliminary Model

With the model loaded:

File
LUSAS Datafile...



A LUSAS data file name of **concrete_box_bridge_preliminary** will be automatically entered in the File name field.


- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.



Note. A general warning relating to the use of sufficient constant beam elements will be displayed (unless turned off) whenever a model containing multiple varying geometric line attributes is solved.

A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.


If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:




- ❑ **concrete_box_bridge_preliminary.out** this output file contains details of model data, assigned attributes and selected analysis statistics.

- ❑ **concrete_box_bridge_preliminary.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results to be viewed.


If the analysis fails...

If the analysis fails, information relating to the nature of the error encountered is written to a output files in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.


Viewing the Results : Preliminary Model

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results can be seen in the Loadcase  Treeview.


Add a contour layer

- With no features selected click the right-hand mouse button in a blank part of the Graphics window and select the **Contours** option to add the contour layer to the  Treeview.
- From the drop down menu in the dialog, pick **Stress – Thick 3D Beam** from the entity drop down list and pick **Sx(Fx,My,Mz)** from the component drop down list.
- Click **OK** to display stress contours on the fleshed shape.

Add a diagrams layer

- With no features selected click the right-hand mouse button in a blank part of the Graphics window and select the **Diagrams** option to add the diagrams layer to the  Treeview.
- From the drop down menu in the dialog, pick **Force/Moment – Thick 3D Beam** from the entity drop down list and **My** from the component drop down list.
- Select the **Diagram Display** tab and select **Window Summary**. Select the **Scale** tab and enter a magnitude of **18**. Click **OK** to display a bending moment diagram on the fleshed shape.

3-Span Concrete Box Beam Bridge of Varying Section

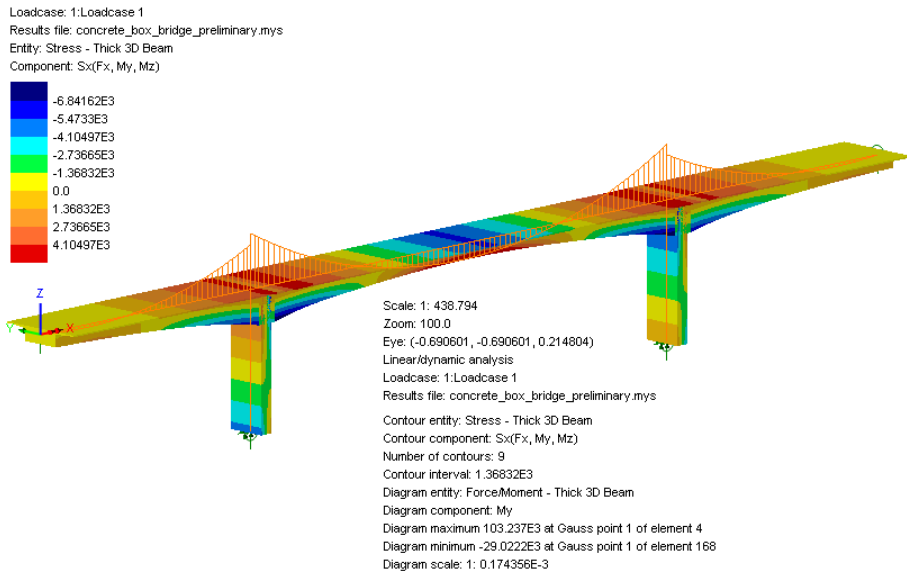

This completes the preliminary part of the example.

Modelling : Detailed Model

The preliminary model has clear spans of 39m, 78m and 39m formed of single lines. A more detailed model is to be formed by splitting the lines representing each span into shorter 3m long lengths in readiness for a future staged construction analysis. To allow this to happen a reference path is created and the multiple varying section geometric line attributes are updated to make use of the reference path that is defined prior to the lines representing the spans being split into the smaller number of line divisions. No re-assignment of geometric properties need be made to the lines created by splitting the existing lines. The multiple varying section geometric line attributes will automatically be applied to the lines using the reference path facility.

If the previous modelling / analysis was successful:



If the previous analysis was performed successfully open the model file **concrete_box_bridge_preliminary.mdl** saved after completing the first part of this example and select **No** to not load a results file of the same name on top of this model.

- Enter the model file name as **concrete_box_bridge_detailed** and click the **Save** button.


Changing the model description


File
Model Properties...

- Change the model title to **Concrete Box Beam Bridge Detailed Model** and click **OK**

Creating a reference path

Utilities
Reference Path

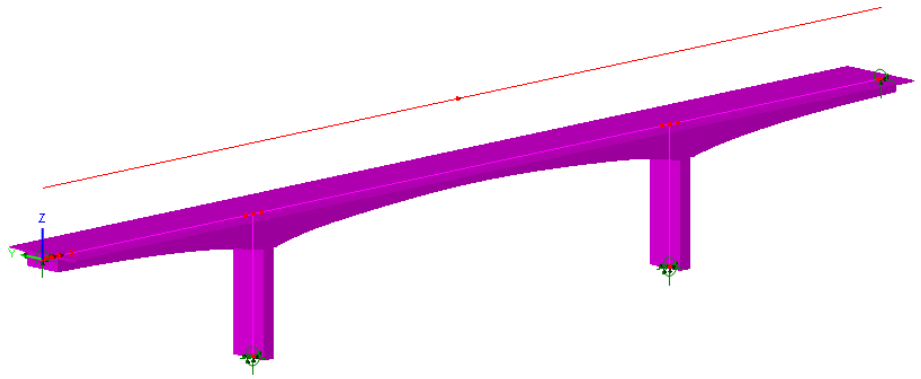


- A reference path defines a route through a model that provides a concept of distance to each point in the model. Those distances can be used in the definition of a varying section, such that when the section is assigned to lines, the path is used to interpret which part of the section is appropriate to each line. Bridge engineers refer to this reference path concept as chainage.
- For this example and for clarity a reference path will be defined above the model using the path definition dialog.
- Enter coordinates of **(0, 0, 10)** in the first row of the table. Press the **TAB** key and enter coordinates of **(163,0,10)** in the second row.
- Accept all the default values and click **OK** to define a reference path above and of the same overall length as lines defining the deck in the model. A corresponding path definition entry will be created in the  Treeview.




- **Note.** In its simplest form a reference path can be defined as a line between two points (quite separate from the model data, as in this case) if a straight path is to be considered, or be created from the model geometry itself and contain as many defining points as the lines from which it has been created (by using the Utilities > Reference Path menu item) in which case the coordinates of all lines selected would be listed in the Path Definition table. If the latter is done it is important to remember that the model geometry has been used to arrive at the points required to generate a reference path but no connection between the model geometry and reference path data exists.

-

Editing multiple varying section geometric properties


- To make use of the reference path all multiple varying section geometric line attributes need to be edited to refer to it.
- In the  Treeview, double-click the **Left Span (Varying - 3 Sections)** entry.
- On the Multiple Varying Section dialog change the Distance Interpretation setting to **Along reference path** and ensure that **Path1** is selected. Click **O** to update.
- Repeat the above procedure for the **Right Span (Varying - 3 Sections)** entry in the  Treeview.
- Repeat the above procedure for the **Centre Span (Varying - 5 Sections)** entry in the  Treeview.

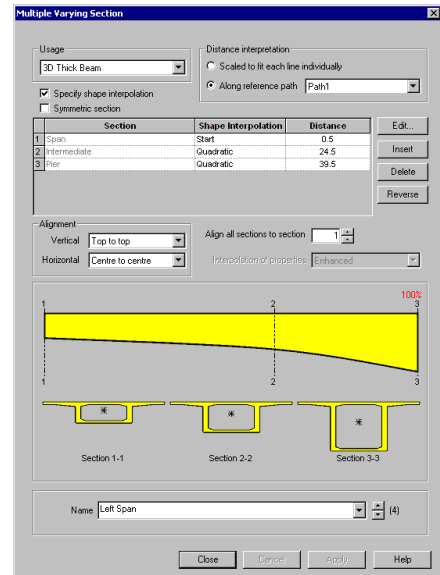


Split the lines representing the clear spans



The single lines representing each clear span are to be split into 3m lengths to represent each proposed construction stage.

- Select the two 39m long lines representing the left and right clear spans of the bridge

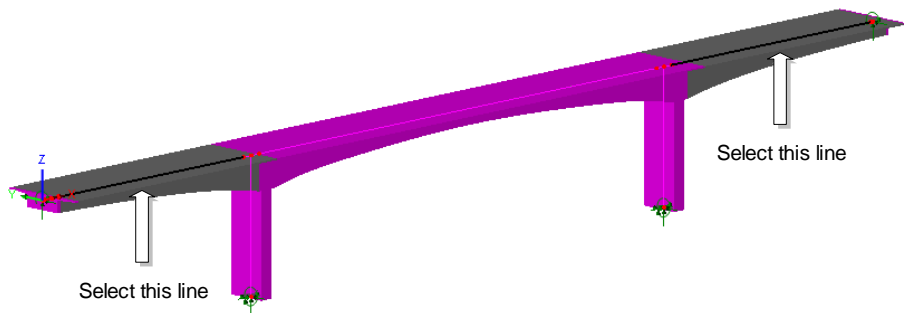

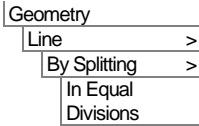


-
- Enter **13** for the number of divisions and ensure that **Delete original lines after splitting** is selected.
- Lastly, select the 78m long line representing the centre span of the bridge

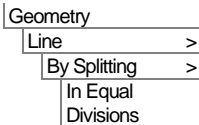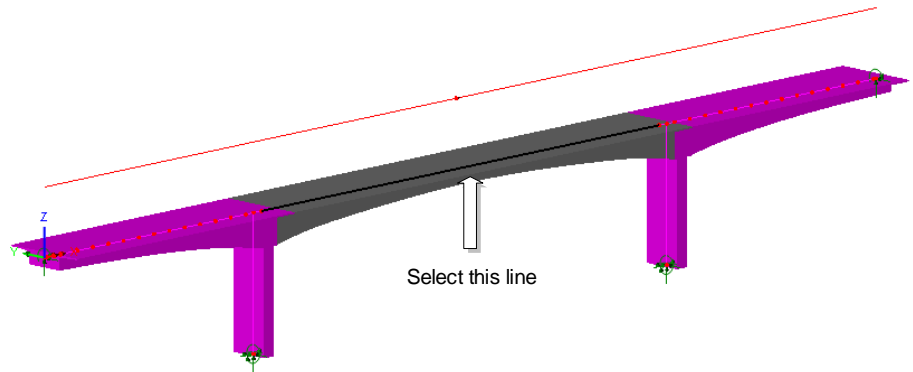

-
- Enter **26** for the number of divisions and ensure that **Delete original lines after splitting** is selected.

Splitting the lines in this way produces the following model which is now ready for further manipulation (not covered in this example) to allow a staged construction analysis to be carried out.

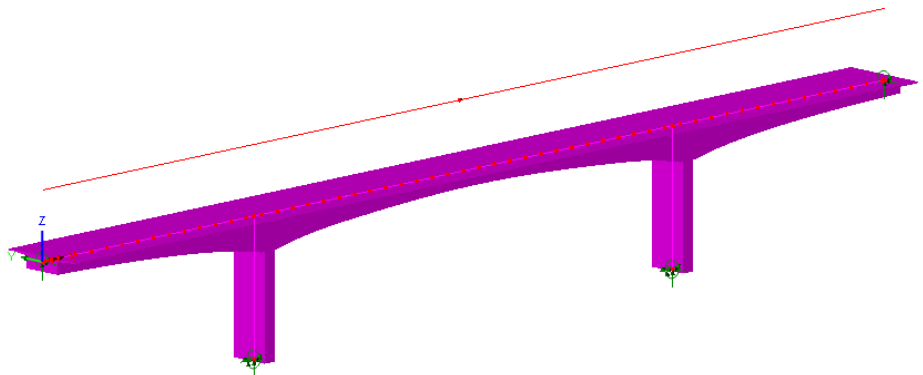


Save the model file.

The detailed model is now complete and ready to be solved.

Running the Analysis : Detailed Model

 With the model loaded:



A LUSAS data file name of **concrete_box_bridge_detailed** will be automatically entered in the File name field.


- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.



Note. A general warning relating to the use of sufficient constant beam elements is displayed (unless turned off) whenever a model containing multiple varying geometric line attributes is solved.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:




- ❑ **concrete_box_bridge_detailed.out** this output file contains details of model data, assigned attributes and selected analysis statistics.
- ❑ **concrete_box_bridge_detailed.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results to be viewed.


If the analysis fails...

If the analysis fails, information relating to the nature of the error encountered is written to a output files in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Viewing the Results : Detailed Model

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results can be seen in the Loadcase  Treeview.

- When the detailed model has been built immediately after creating and viewing results for the preliminary model the Contour and Diagrams layers will already be present in the Treeview and the stress contours and diagram plot will be as shown below.

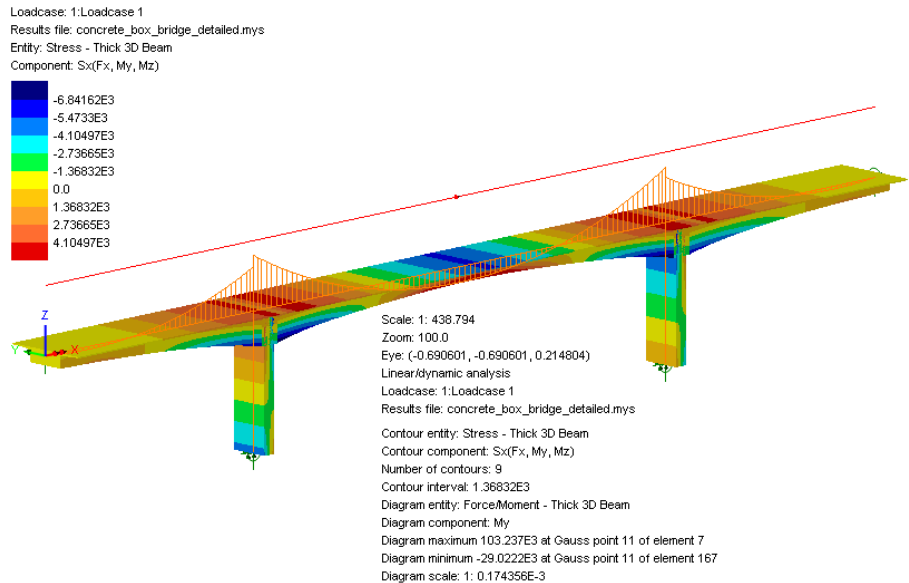

The results obtained can be seen to be identical to those obtained from the simple preliminary model.


This completes the detailed modelling part of the example.

Segmental Construction of a Post Tensioned Bridge

For software product(s):	LUSAS <i>Civil & Structural Plus</i> and LUSAS <i>Bridge Plus</i>
With product option(s):	Nonlinear

Description


The construction of a balanced cantilever segmentally constructed bridge is to be modelled using a beam analysis.

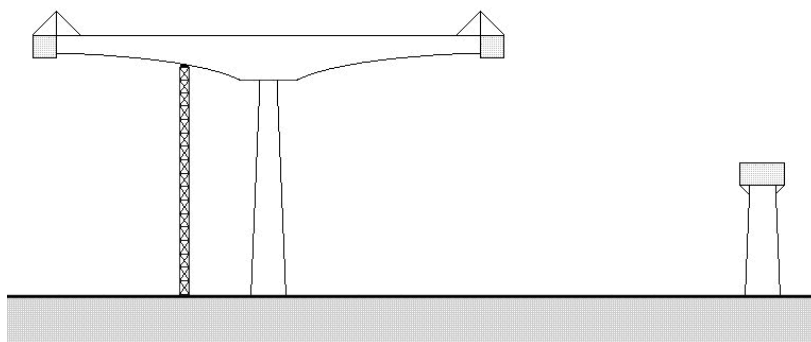

A complete analysis of a balanced cantilever segmentally constructed bridge is a complex and large analysis to undertake. In this example the geometry has been simplified to concentrate on the definition of the staged construction process and to illustrate the definition and assignment of tendon properties.

Segmental Construction of a Post Tensioned Bridge

An internal span of the bridge is modelled with segments being placed from adjacent piers with a final closing segment to join the two constructions together as shown on the next diagram.

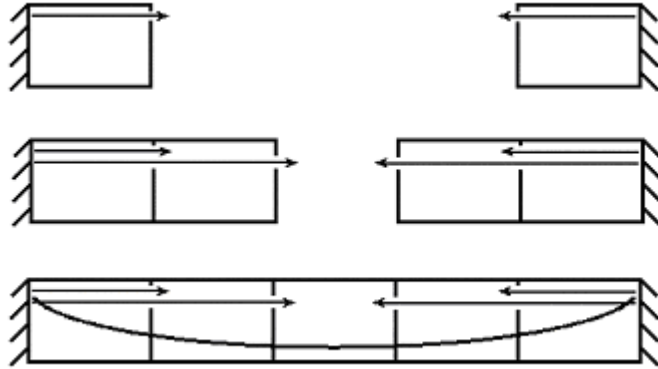

Each stage of the construction analysis considers a 6m long section being added to the construction. These are: Stage 1 (top-left), Stage 2 (top-right), Stage 3 and Stage 4 (middle) and Stage 5 (bottom)

Units used are kN, m, t, s, C throughout.

The example incorporates staged construction and the assignment of multiple tendon prestress loading.

Objectives

The output requirements of the analysis are:

- ☐ Maximum moments during construction

Keywords

Staged Construction, Multiple Tendon Prestress Wizard

Associated Files



- ☐ **segmental_bridge_modelling.vbs** carries out the modelling of the structure.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **Segmental Bridge**
- Use the **Default** working folder.
- Enter the title as **Segmental bridge including prestress and creep**
- Ensure units of **kN, m, t, s, C** are selected.
- Ensure the **Structural** user interface is used.
- Ensure the startup template **None** is selected.
- Ensure the **Vertical Y Axis** option is selected.
- Click **OK**

Defining the Geometry

Geometry >
Line >
Coordinates...



Enter coordinates of **(0, 0, 0)**, and **(6, 0, 0)**, to define the first segment of the bridge and click **OK**

- Select the line just drawn.

Geometry
Line >
Copy...




Enter a translation in the **X** direction of **6**

- Enter the number of copies required as **4** and click **OK**



Defining and Assigning Mesh Attributes

- The bridge is to be modelled with **Thick nonlinear beam** elements (BTS3 elements)
- Ensure that **3 dimensional** elements of **Linear** interpolation order are selected.
- Enter **6** for the number of mesh divisions.
- Enter the attribute name as **Thick Nonlinear Beam** and click **OK**
- Select all lines on the model and drag and drop the **Thick Nonlinear Beam** mesh from the Treeview onto the selected features.
- Click **OK** to accept default element orientation.

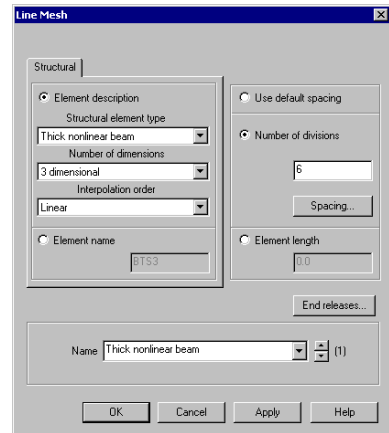

Note. Forces and moments for a thick nonlinear beam element are constant along each element's length. As a result, sufficient elements should be used to get the desired accuracy. In this example 6 mesh divisions have been chosen for simplicity, more may be needed in real-life modelling situations.


Defining and Assigning Geometric Properties

The bridge is formed from box sections of a constant width and depth. Five construction stages are to be modelled. Each of the stages uses the same section properties.


In this example the geometric properties have already been calculated and will be defined manually and then assigned to the model.

- With the **3D Thick Beam** option selected enter the box section properties in the Vales column as follows:

 
$A = 5.36886$,
 $I_{yy} = 17.4844$, $I_{zz} = 4.63749$, $I_{yz} = 0.0$,
 $J_{xx} = 7.98955$,
 $A_{sy} = 2.55135$, $A_{sz} = 3.87119$,
 $R_y = 0.0$ and $R_z = 0.0$

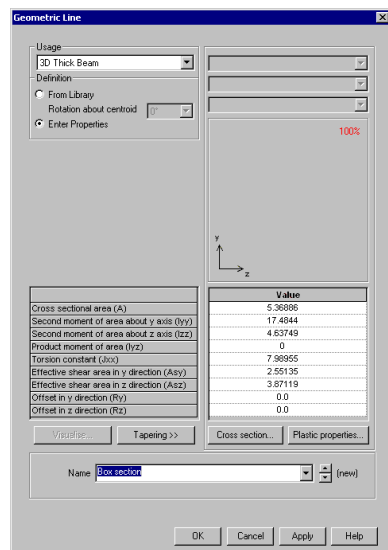
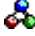


- Enter the attribute name as **Box Section** and click **OK**.

- Select all the lines on the model (hold down **Ctrl + A** keys) and drag and drop the **Box Section** geometry material from the  Treeview onto the selected features

Defining the Material

 



- Select material **Concrete** of grade **Ungraded** from the drop down lists, and click **OK** to add the material attribute to the  Treeview.
- Select all lines on the model and drag and drop the **Iso1 (Concrete Ungraded)** material from the  Treeview onto the selected features.



Note. For this example an allowable tensile stress of 4 N/mm^2 and an allowable compressive stress of 20 N/mm^2 will be considered for the concrete section.


Supports




- A fully fixed support is required so all translations in the **X, Y** and **Z** and rotation about the **X, Y** and **Z** axes must be **Fixed**. Enter a attribute name of **Fully Fixed** and click **OK**
- Select the points at the ends of the bridge model and from the  Treeview drag and drop the support attribute **Fully Fixed** onto the selected features, ensure the **All loadcases** option is selected and click **OK**

Loading

 As well as the self-weight of the structure the effects of the prestress force will also be considered in this analysis. Firstly, the self-weight will be defined.



A loading attribute named **BFP1 (Gravity -ve Y)** will be created in the  Treeview.



Note. If using the Civil version a gravity load may be defined from the **Attributes> Loading> Structural> Body Force** menu by specifying **-9.81** as Linear acceleration in the Y direction.

Self-weight loading is not to be applied yet. It will be applied during the definition of the staged construction process.

Creating Activation and Deactivation Datasets


In order to carry out a staged construction analysis the birth and death facility is used.



- Select the **Activate** option and click **Next**


- Enter the attribute name as **Activate** and click **Apply**
- Click **Back** so the deactivate attribute can be defined.
- Select the **Deactivate** option and click Next
- Enter the attribute name as **Deactivate**, leave the percentage to redistribute as **100** and click **Finish**


Modelling of Construction Stage 1

- In the  Treeview rename **Loadcase 1** to be **Stage 1** by selecting Loadcase 1 with the right-hand mouse button and using the **Rename** option.

All elements in the model not required for the first stage analysis need to be deactivated.

- In the graphics window select the three lines defining the segments that are not required in stage 1.

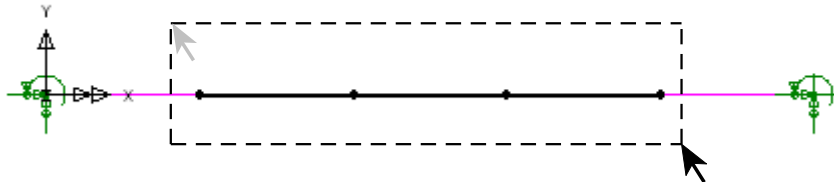

- From the  Treeview and with the three segments selected, assign the deactivation attribute **Deactivate** ensuring that it is assigned to loadcase **Stage 1** and click **OK**

Assigning Loading

- Now select the two lines representing the active segments at either end. Assign the **BFP1 (Gravity -ve Y)** loading to **Stage 1** and click **OK**

Defining Loadcase Properties

- In the  Treeview select **Stage 1** using the right-hand mouse button and select **Nonlinear and Transient** from the **Controls** menu.

- On the Nonlinear & Transient dialog select the **Nonlinear** option in the top-left hand corner, leave the incrementation type as **Manual** and click **OK** to accept all default entries.


Construction Stages 2 to 3

Stages 2 and 3 require loadcases to be generated to specify the duration of the construction process. Lines on the model must be selected according to the construction stage being considered and activation attributes must be assigned to these lines.

Stage 2

The elements in the second construction stage must now be activated

- In the graphics window select the segments to be added in Stage 2 of the construction sequence.

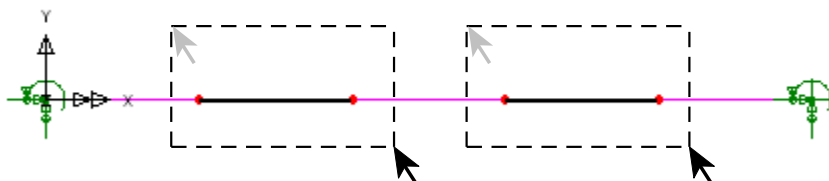

- With the second stage selected, assign the activation attribute **Activate** from the Treeview. Enter **Stage 2** in the loadcase combo box and ensure that **Set as the active loadcase** is checked. Click **OK** to finish activation of the selected sections.

Assigning Loading

- Now select all the activated segments (i.e. the lines representing the segments from Stage 1 as well as the lines representing the segments from Stage 2) and assign the **BFP1 (Gravity -ve Y)** loading to these lines ensuring the loadcase is set to **Stage 2**. Click **OK** to complete the loading assignment.



Note. As the **Stage 1** loadcase has been set as nonlinear with manual control the subsequent loadcase controls do not need to be defined as they will take the properties defined in loadcase 1.





Note. If you need to verify loading assignments such as self-weight or to check when particular lines (and hence elements) become active in an analysis select a line on the model and then, using the right-hand mouse button, select Properties. Select the Activate Elements tab. Note that the 'greyed-out' loadcase is simply the current loadcase and may not be the actual loadcase that the properties are assigned to.

Selecting the Activate entry in the table of Assigned properties will show the loadcase to which the activation is assigned.

Stage 3

The elements in the third construction stage now need to be activated.

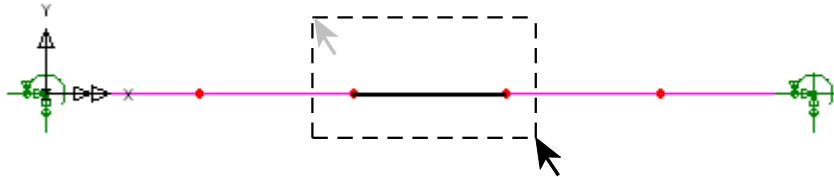

- In the graphics window select the segment to be added in Stage 3 of the construction sequence.
- With the middle segment selected, assign the activation attribute **Activate** from the  Treeview. Enter **Stage 3** in the loadcase combo box and ensure the **Set as the active loadcase** is checked. Click **OK** to finish the activation of the selected section.

Assigning Loading

- Now select all of the activated segments (i.e. all lines in the model) and assign the **BFP1 (Gravity -ve Y)** loading ensuring the loadcase is set to **Stage 3**. Click **OK** to complete the loading assignment.



Note. The active elements at each stage can be visualised by removing the Geometry layer, selecting the **Show activated only** option on the mesh properties dialog and then activating each loadcase in turn.

This completes the definition of the model geometry and the staged construction process.

Rebuilding a model after a previous failed analysis

If a previous analysis of this example has failed you need to return here to continue after having run the supplied file stated.

Prestress Loading


The calculation and assignment of the equivalent prestress force to the loadcases already created is carried out by using the multiple tendon prestress wizard. It requires the following to be defined:


- ☐ Design code and elastic shortening criteria
- ☐ Tendon profiles
- ☐ Tendon properties
- ☐ Tendon loadings
- ☐ Tendon loading assignments

Once entered, and once the multiple tendon prestress wizard has been run, values for each of these entries are retained and can be viewed and subsequently modified by re-running the wizard. Previously calculated equivalent loadings are automatically re-calculated.


Using the Multiple Tendon Prestress Wizard

Lines on the model will be selected during the use of the wizard, so:

- Ensure that the **Geometry** layer is present in the  Treeview.
- Ensure that the **BS5400** design code is selected from the drop down list.
- Ensure that the **User-defined** option for elastic shortening is selected and then click **Set losses...** to proceed to the Elastic Shortening – Incremental dialog.

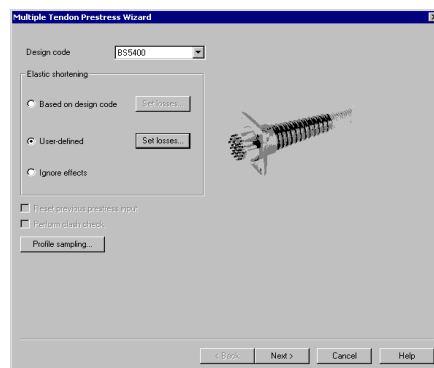

- Enter the losses as **100, 95 and 90** percent. (Use the **Tab** key to create each new line.)
- Click **OK** to return to the first dialog.
- Click **Next** to proceed to the Tendon Profile dialog.

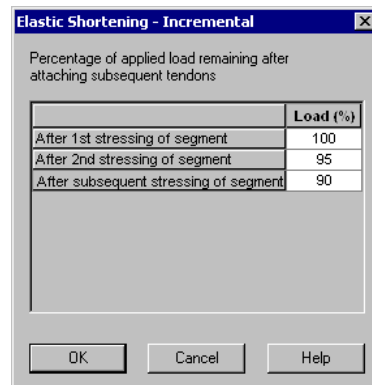

Defining the Tendon Profiles

Any number of tendon profiles can be defined on the tendon profile page prior to moving on to the next page of the Multiple Tendon Wizard. By entering a name the Create button becomes active and tendon details can be defined. Entering another name stores the previously defined profile and enables another set of data to be entered, and so on.

Type	x (m)	y (m)	z (m)
1 Start	0	1	0
2 Straight	6	1	0

- Enter the attribute name as **Short Tendon Profile** and click the **Create** button.
- Ensure the option **Local coordinates mapped to lines** is selected
- Enter the tendon profile into the grid as

Type	X (m)	Y (m)	Z (m)
Start	0	1	0
Straight	6	1	0

- Now, to start entering another tendon profile, enter the name as **Long Tendon Profile** and click the **Create** button. In doing so, this stores the previous short tendon profile values and clears the grid for the long tendon profile values to be entered.

- Enter the tendon profile into the grid as follows:

Type	X (m)	Y (m)	Z (m)
Start	0	1	0
Straight	12	1	0

- Lastly, enter the attribute name as **Full Tendon Profile** and click the **Create** button.
- Enter the tendon profile into the X, Y, Z part of the grid as follows:

Type	X (m)	Y (m)	Z (m)
Start	0	1	0
Parabola Bulge	15	-1	0
Parabola End	30	1	0

- Change the Type settings from Straight to be as shown by clicking inside the cell and selecting **Parabola Bulge** for the second row and **Parabola End** for the last row.

Tendon Profile

☐ Global coordinates
☒ Local coordinates mapped to lines

x = distance along assigned line(s)
 y = distance along y axis of assigned element at x
 z = distance along z axis of assigned element at x

	Type	x (m)	y (m)	z (m)
1	Start	0	1	0
2a	Parabola Bulge	15	-1	0
2b	Parabola End	30	1	0

☐ Smoothing
 Minimum radius:

☒ Cut corner
☐ Offset line

Name: (3 of 3)



Note. Tendon profile definitions can be reviewed before proceeding further by clicking the up and down buttons adjacent to the tendon profile name.

- Click **Next** to proceed to the Tendon Properties dialog.

Defining the Tendon Properties

The Multi-strand prestressing system being considered here consists of 12, 15mm diameter strands that give a nominal area of 1800mm^2

- Enter the attribute name as **Strand Properties** and click the **Create** button
- Enter the tendon area as **1800**
- Enter duct friction coeff. as **0.2**
- Select **Long term losses**

Any number of tendon properties could be defined on this page prior to moving on to the next page of the Multiple Tendon Wizard.

- Accept the defaults for the remaining properties by clicking the **Next** button.

Defining the Tendon Loading

This page allows a tendon load to be associated with previously entered profiles and properties.

For tendon 1:

- Enter the attribute name as **Tendon 1** and click the **Create** button.
- Enter the prestress force as **2E3**
- Ensure that jacking from **End 1** only is selected and enter the slip as **2E-3**
- Ensure the profile combo box is set to **Short tendon profile** and the property combo box is set to **Strand Properties**

For tendon 2:

- Enter the attribute name as **Tendon 2** and click the **Create** button.
- Enter the prestress force as **2E3**
- Ensure that jacking from **End 2** only is selected and enter the slip as **2E-3**
- Ensure the profile combo box is set to **Short tendon profile** and the property combo box is set to **Strand Properties**

For tendon 3:

- Enter the attribute name as **Tendon 3** and click the **Create** button.
- Enter the prestress force as **2E3**
- Ensure that the jacking from **End 1** only is selected and enter the slip as **2E-3**
- Change the profile combo box so that **Long tendon profile** is displayed and the property combo box so that **Strand Properties** is displayed.

For tendon 4:

- Enter the attribute name as **Tendon 4** and click the **Create** button.
- Enter the prestress force as **2E3**
- Ensure that the jacking from **End 2** only is selected and enter the slip as **2E-3**
- Change the profile combo box so that **Long tendon profile** is displayed and ensure the property combo box is set to **Strand Properties**

For tendon 5:

- Enter the attribute name as **Tendon 5** and click the **Create** button.
- Enter the prestress force as **4E3**
- Ensure that the jacking from **End 1** and **End 2** is selected and enter the slip as **4E-3** at each end.
- Change the profile combo box so that **Full tendon profile** is displayed and ensure the property combo box is set to **Strand Properties**




Note. Tendon loading assignments can be reviewed and corrected if necessary before proceeding further by clicking the up and down buttons adjacent to the tendon profile name.

- Click **Next** to proceed to the Tendon Loading Assignment dialog.


Defining the Tendon Loading Assignment(s)

The page of the wizard allows the assignment of the tendon loads that have been defined in the previous dialog to selected lines on the model.

- Click the **New** button and the Assignment will change to 1
- Drag the dialog so that the analysis model can be clearly seen in the graphics window

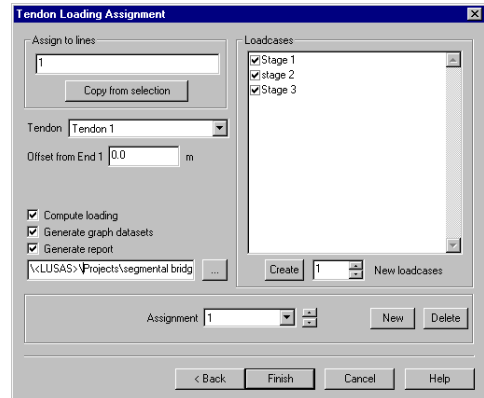

- Select the line tendon 1 acts on.

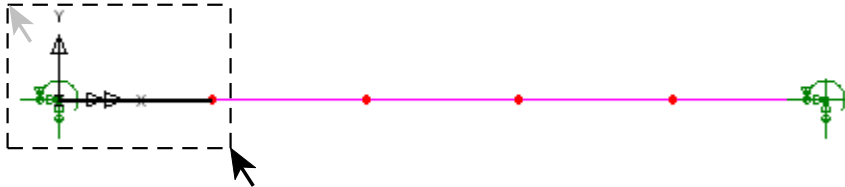


- On the Tendon Loading Assignment dialog click the **Copy from selection** button and the selected line number will be entered in the text box.
- Ensure the tendon combo box has **Tendon 1** displayed.
- In the loadcases section of the dialog, ensure **Stage 1, Stage 2** and **Stage 3** are selected.




Note. Clicking a higher loadcase will select or deselect loadcases beneath it.


- Click the **New** button and the Assignment will change to 2.
- Select the line tendon 2 acts on.

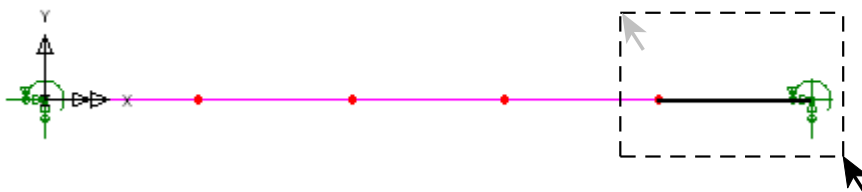


- Click the **Copy from selection** button and the selected line number will be entered in the text box.
- Change the tendon combo box so that **Tendon 2** is displayed.
- In the loadcases section of the dialog, ensure **Stage 1**, **Stage 2** and **Stage 3** are selected
- Click the **New** button and the Assignment will change to 3.
- Select the two lines tendon 3 acts on.

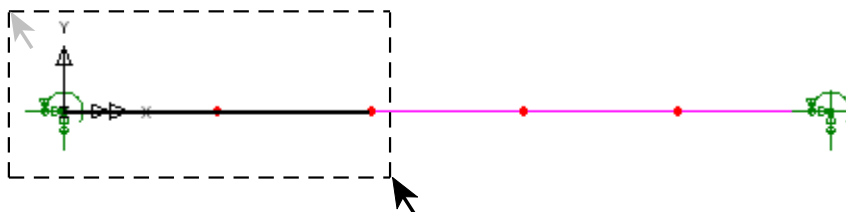

- Click the **Copy from selection** button and the selected line numbers will be entered in the text box.
- Change the tendon combo box so that **Tendon 3** is displayed.
- In the loadcases section of the dialog, ensure **Stage 2** and **Stage 3** only are selected
- Click **New** and the Assignment will change to 4.
- Select the two lines tendon 4 acts on.

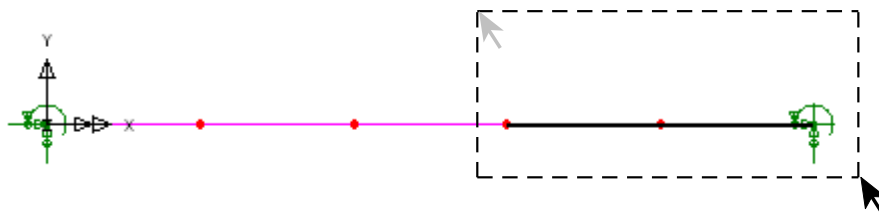

Segmental Construction of a Post Tensioned Bridge

 
- Click the **Copy from selection** button and the selected line numbers will be displayed in the text box.
- Change the tendon combo box so that **Tendon 4** is displayed.
- In the loadcases section of the dialog, ensure **Stage 2** and **Stage 3** only are selected
- Click **New** and the Assignment will change to 5.
- Select the lines tendon 5 acts on. (All the lines in the model.)
- Click the **Copy from selection** button and the selected line numbers will be displayed in the text box.
- Change the tendon combo box so that **Tendon 5** is displayed.
- In the loadcases section of the dialog, ensure that the check box for **Stage 3** only is selected.
- Ensure that the **compute loading** and **generate graph datasets** and **generate report** options are selected. Graph datasets will be created in the  Treeview for graphing if required. A report will be generated in the directory that you are currently working in but this can be changed if required.
- Select the **Finish** button to calculate and generate the equivalent prestress loading.

On completion, an HTML report will be opened automatically in the default web browser. This report is also saved into the specified folder. The report is a complete summary of the tendon profile, properties and loading assignments made.


On closing the report the tendon loading assignments on the model can be seen for Stage 1. By changing the active loadcase the assignments can be seen for the other construction stages also.





Note. Tendon profile visualisations and the display of start and finish coordinates can be controlled by changing settings on the Utilities layer Properties dialog. Visualisations are identified by their start and finish identifiers (1 or 2) and by the coordinates of these points. Because all tendons are active in loadcase 3 the visualisations will overlap.




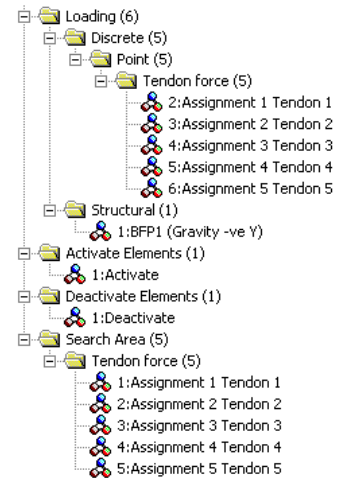
Notes on Prestress Wizard-created data

In using the Prestress Wizard, prestress loading is added to the analysis model as equivalent discrete point loading. Attributes containing this data can be seen in the  Treeview in the Tendon force folder.

Search areas are created and used automatically by the prestress wizard to define the target geometry (in this case, the lines) to be loaded. These can be seen in the  Treeview.




Load factors are used to represent elastic shortening and these can be seen for each stage in the  Treeview.

Graphing datasets (which allow of graphing of prestress losses etc) are added to the  Treeview.



Notes on editing Prestress Wizard-created data

If any tendon assignments are incorrect, the Multiple tendon prestress wizard may be re-run (previously entered values will be retained) and the Next button can be clicked to get to the tendon loading assignment page. Incorrect assignments can be deleted or simply corrected as required before clicking the Finish button to recalculate the equivalent tendon loading on the model.

Tendon profile data defined within the Prestress Wizard is also stored in the  Treeview. Editing of tendon profile data in the  Treeview (that is, outside of the wizard) is permitted but all attributes that require re-calculating by re-running the prestress wizard will be marked with the  symbol. Re-running the prestress wizard will update all values accordingly.

Editing of any attribute data calculated and generated by the prestress wizard is not permitted.

Save the model



Saving the model file also saves all the multiple tendon prestress input. This allows the prestress definition and assignment data to be modified by re-entering the multiple tendon prestress wizard.

Running the Analysis

With the model loaded:




A LUSAS data file name of **Segmental Bridge** will be automatically entered in the Filename text box.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.


A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **segmental bridge.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **segmental bridge.mys** this is the LUSAS results file which is loaded automatically into the  Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Select **Yes** to view the output file. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis. Note that a common error is to forget to assign attribute data (such as geometry, mesh, supports, loading etc.) to the model. If the errors cannot be identified the model may be rebuilt and the prestress loading redefined.

Rebuilding the Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model up to the point of defining the Prestress Loading.




- ☐ **segmental_bridge_modelling.vbs** carries out the geometric modelling of this example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 
- Enter the file name as **Segmental Bridge**



- To recreate the model, select the file **segmental_bridge_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.

The geometry of the model has been created. Now return to the section entitled **Prestress Loading** earlier in this example and re-define the tendon properties.





Viewing the Results

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for each stage can be seen in the  Treeview.

Bending moments of M_z over the segments are to be investigated for each stage of the construction process. A summary of results on each results plot also allows a comparison of maximum displacements for each stage.

In the following images the tendon profile visualisations are not shown. They can be turned off by editing the tendon profile properties of the Utilities layer in the Layers Treeview.

Stage 1 results

 
 
- In the  Treeview right-click on **Stage 1** and select the **Set Active** Option.
- Turn off the display of the **Mesh**, **Geometry** and **Attributes** layers from the  Treeview.
- Add the **Deformed mesh** layer to the  Treeview. Specify factor as **1E3**. Click the **Window summary** option.
- Select the **Mesh** tab and click the **Show activated only** option.
- Click **OK** to display the deformed mesh for stage 1.
- Add the **Diagrams** layer to the  Treeview. On the dialog, select **Force/Moment - Thick 3D Beam** results from the entity drop-down list and component **M_z** . Select the **Diagram Display** tab.
- Select the **Label values** and **Window summary** options. Ensure that the **Deform** option is selected. Set the % of element length to **60**. Set the Angle to **90** degrees and the number of significant figures to **4**.
- Click **OK** to display the bending moment diagram for the active elements for stage 1.



Note. The maximum deflection and maximum and minimum bending moments are shown in the window summary.

Stage 2 results

- In the Treeview right-click on **Stage 2** and select the **Set Active** option.



Stage 3 results

- In the Treeview right-click on **Stage 3** and select the **Set Active** option.



This completes the example.

3D Nonlinear Static Analysis of a Cable Stayed Mast

For software product:	Any Plus version.
With product options:	Nonlinear.


Description

A 10m tall mast with three supporting guy cables is to be analysed. The guy cables are spaced at 120° intervals around the mast and are fixed at ground level at a radius of 7m. Both the mast and cables are made of steel with a Young's Modulus of 210×10^9 Pa, Poisson's Ratio of 0.3 and a mass density of 7800 kg/m^3 .

Units of N, m, kg s, C are used throughout.

Four load types are to be considered:

1. Initial force in the cables of 5000N.
2. Self-weight of the structure.
3. Horizontal wind load of 500 N/m distributed along the length of the mast.
4. A horizontal point load acting at the top of the mast of 5000 N.

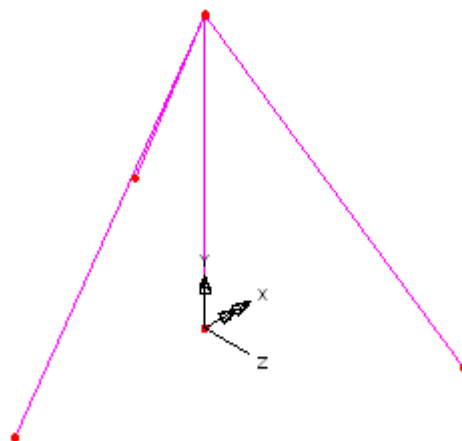

Objectives

The required output from the analysis consists of:

- ☐ **Deformed shape plot**
- ☐ **Force diagram and peak forces in cables**
- ☐ **Bending moment and force diagram of the mast**
- ☐ **Reaction summary at the base of the mast**

Keywords

3D, Thick Nonlinear Beam, Nonlinear Control, Geometric Nonlinear Analysis, Axial Force Diagram, Shear Force, Bending Moment Diagram

Associated Files



- ☐ **mast_modelling.vbs** carries out the modelling of the example.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the file name as **mast**
- Use the **Default** working folder.
- Set the units as **N,m,kg,s,C**
- Ensure the user interface is set to **Structural**
- Select the model startup template **Standard**
- Select the **Vertical Y axis** option.
- Click the **OK** button.

Defining the Geometry

Geometry
Point >
Coordinates...



Enter co-ordinates of **(0, 0, 0)** and click **OK** to define a point at the bottom of the mast.

- Select the Point

Geometry
Line >
By Sweeping...



Enter **10** in the **Y** direction (vertical) and click **OK** to sweep the point.

Geometry
Point >
Coordinates...



Enter co-ordinates of **(-7, 0, 0)**, **(3.5, 0, 6.0622)** and **(3.5, 0, -6.0622)**. Click **OK** to define points where the guy cables are fixed to the ground.



Select the isometric view button to rotate the model so that all points are visible


- Define a cable by selecting a base Point followed by an apex Point. (Use the Shift key to make multiple selections)

Geometry
Line >
Points...



The lines defining the cable will be drawn.

- Repeat for the other two pairs of points.

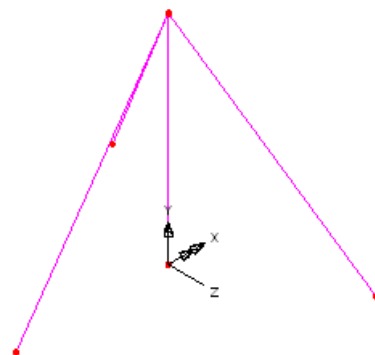

Defining Groups

To simplify the assignment of model attributes and assist with post processing the features will be grouped together.

- Select the Line representing the mast.



Select the **Group** button.

- Change the group name to **Mast** and click **OK**
- Select the three Lines representing the cables. (Use the Shift key to make multiple selections)



Select the **Group** button.

- Change the group name to **Cables** and click **OK**

Meshing

The Line features are to be meshed using three-dimensional nonlinear beam elements.

Select **Thick nonlinear beam, 3 dimensional, Linear** elements.

- Enter the attribute name as **Mast** and click the **Apply** button.
- Change the number of divisions per line to **10**
- Change the attribute name to **Cables** and click the **OK** button
- Select the mast.
- Drag and drop the mesh attribute **Mast** from the Treeview onto the selected Line features using an element orientation with a beta angle of **0**. Click **OK** to assign.
- Select a line representing a cable and holding down the **Shift** key, select the other 2 lines representing the cables.
- Drag and drop the mesh attribute **Cables** from the Treeview onto the selected Line features using an element orientation with a beta angle of **0**. Click **OK** to assign.

Geometric Properties

The mast will be defined as a Circular Hollow Section (CHS).

- From the Usage section select a **3D Thick Beam** with no rotation specified.
- From the **UK Sections** library select the **CHS (EN10210)** section type and select the **168.3x8 CHS** section.
- Enter an attribute name of **Mast**
- Click the **OK** button to add the CHS attribute to the Treeview.

The 10mm diameter guy cables will be defined with very low bending properties in order to not attract any bending moments. A value of $1/100^{\text{th}}$ of the actual bending stiffness for the 10mm diameter cable will be used. The torsional constant and shear area values are left unaltered.

Attributes
Geometric
Line...

- From the Usage section ensure a **3D Thick Beam** is selected
- Enter the properties shown below:

A=7.85e-5

Iyy=5e-12

Izz=5e-12

Iyz=0

J=1e-9

Asy=7.85e-5

Asz=7.85e-5





Ry=0, Rz=0

Note that these properties could have been derived by using the standard section property calculator.

- Enter the attribute name as **10mm Cable** and click the **OK** button.

The cable geometry dataset will be added to the Treeview.

Assigning Geometry Properties

- In the  Treeview, right-click on the group name **Mast**. Choose the **Select Members** option. Click **Yes** to deselect members already selected.
- Drag and drop the geometry attribute **Mast (168.3x8 CHS major z)** from the  Treeview onto the selected Line. The section assigned will be visualised.
- In the  Treeview, right-click on the group name **Cables**. Choose the **Select Members** option. Click **Yes** to deselect members already selected.
- Drag and drop the geometry attribute **10mm Cable** from the  Treeview onto the selected Lines. Note that for manually entered section property data the section properties cannot be visualised unless cross-section data is also defined (which will not be done in this case)



Select the fleshing on/off button to turn-off the geometric visualisation.

Material Properties

A linear approximation to steel properties will be used for the mast and cables.


- Select material **Mild Steel, Ungraded**, and click **OK**.
- Select the whole model (**Control + A** keys) and drag and drop the material attribute **Iso1 (Mild Steel Ungraded)** from the Treeview onto the selected features.

Supports

The Standard template provides the more common types of support by default. These can be seen in the Treeview. The structure will be supported at the base of the mast with a fully fixed support condition. The cables will be supported in translation directions only.

Assigning the Supports

- Select the Point at the base of the mast.
- Drag and drop the support attribute **Fully Fixed** onto the selected Point for all loadcases. Click **OK** to assign.
- Select the 3 Points at the base of the three cables.
- Drag and drop the support dataset **Pinned** from the Treeview onto the selected Points for all loadcases. Click **OK** to assign.

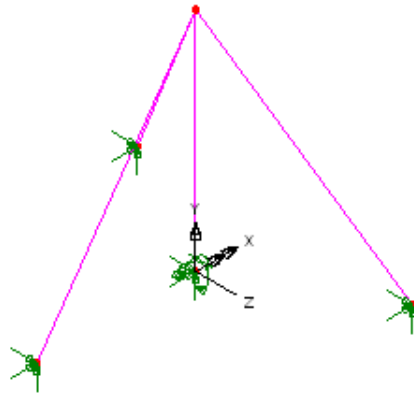

Loading

Four load types will be considered: Initial stresses in the cables, self-weight, horizontal wind Load, and a point load acting at the top of the structure. The loading will be assigned to four loadcases.

Load type 1 - Initial Stress



- In the Treeview rename **Loadcase 1** to be **Initial stress in cables** by selecting Loadcase 1 with the right-hand mouse button and using the rename option.


An initial force in the guy cables of 5000 N is to be defined and assigned to the model. Since the elements used to represent the mast and cables are BTS3 elements which are formulated using forces and strains (see the *Element Reference Manual* for details) the force is entered by selecting the Stress and Strain option on the structural loading dialog.

Attributes
Loading...

- Select the **Stress and Strain** option and click **Next**
- Select a Line element description
- Select **Thick nonlinear beam** from the drop down list
- Ensure the Stress and Strain Type is set to **Initial**
- Enter a value of **5000** for Fx.
- Enter the attribute name as **Initial Stress**
- Click **Finish** to add attribute to the Treeview.

The copy and paste facility will be used to assign this loadcase to the cable group.


- In the  Treeview, right-click on the loading attribute **Initial Stress** and select the **Copy** option.
- In the  Treeview, right-click on the group name **Cables** and select the **Paste** option.
- On the Loading Assignment dialog select the loadcase name **Initial Stress in Cables** and specify a load factor of **1**. Click **OK** to assign loadcase.

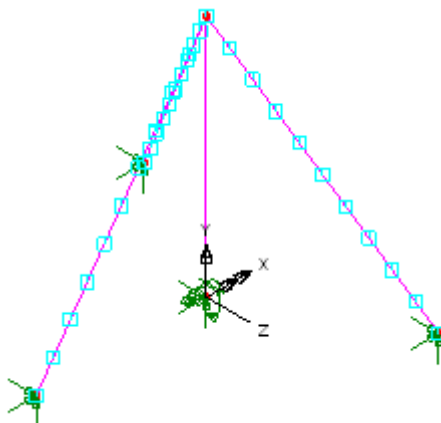


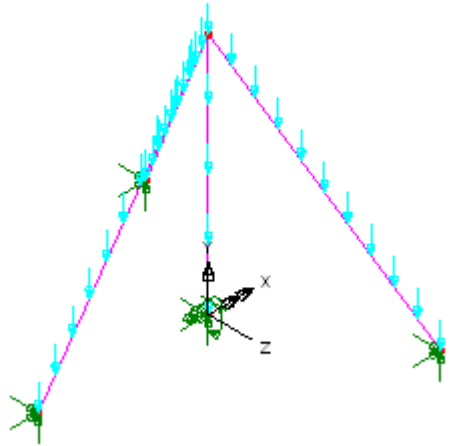
Load type 2 - Self Weight

Load type 2 represents the self-weight of the structure. This is modelled using a Body Force loading attribute which is an acceleration loading simulating the force of gravity acting upon the structure. The self-weight will be assigned to both Loadcase 2 and Loadcase 3 for reasons that are explained during the Nonlinear Analysis Control section of this example.

Attributes
Loading...



- Select the **Body Force** option and click **Next**
- Enter a linear acceleration in the **Y** direction of **-9.81 m/s²**.
- Enter the attribute name as **Self Weight** and click **Finish** to add the attribute to the Treeview.
- Select the whole model (**Control** + **A** keys) and drag and drop the loading attribute **Self Weight** from the  Treeview onto the selected features.


- On the Loading Assignment dialog change the loadcase name to **Self Weight** and specify a load factor of **1**. Click **OK** to assign loadcase.
- With the whole model still selected, repeat the drag and drop of the **Self Weight** loading from the  Treeview onto the selected features.
- On the Loading Assignment dialog change the loadcase name to **Self Weight Freeze** and specify a load factor of **1**. Click **OK** to assign loadcase.



Load type 3 - Horizontal Wind Load

Load type 3 is a horizontal wind load of 500 N/m distributed along the length of the mast.

- Select the **Global Distributed** option and click **Next**
- Select the **Per Unit Length** option. Enter a value of **-500 N/m** in the **X** direction.
- Enter the attribute name as **Distributed Wind Load**.
- Click **Finish** to add the attribute to the Treeview.
- In the  Treeview, right-click on the loading attribute **Distributed Wind Load** and select the **Copy** option.
- In the  Treeview, right-click on the group name **Mast** and select the **Paste** option.

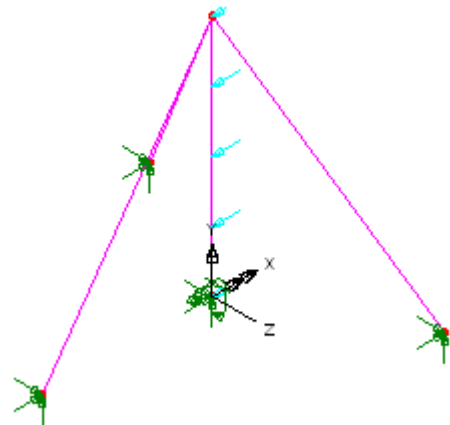

Attributes
Loading...


- On the Loading Assignment dialog change the loadcase name to **Wind and point Load** and specify a load factor of **1**. Click **OK** to assign loadcase.
- Click **OK** to assign the loadcase.

Load type 4 - Concentrated Point Load

A point load of 5000 N is acting at the top of the mast.

Attributes
Loading...

- Select the **Concentrated** option and click **Next**
- Enter a value of **-5000** in the **X** direction.
- Enter the attribute name as **Point Load**
- Click **Finish** to add the attribute to the Treeview.
- Select the Point at the top of the mast then drag and drop the loading attribute **Point Load** from the Treeview onto the selected Point.

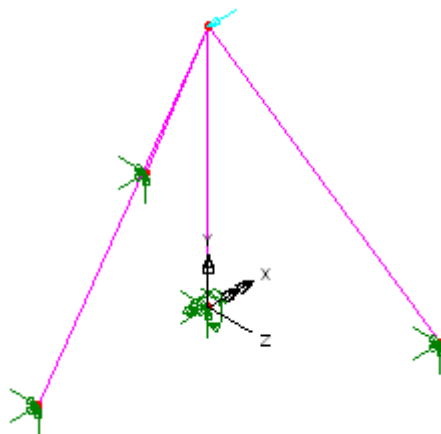


- Ensure that the loading is assigned as **Wind and Point Load** with a load factor of **1**
- Click **OK** to assign the loadcase.


Nonlinear Analysis Control

Nonlinear control is defined as a property of a loadcase and must therefore be set for all four loadcases required for this analysis.

Loadcase 1

- In the  Treeview, right-click on **Initial Stress in Cables** and select **Nonlinear & Transient** from the **Controls** menu.
- Select **Nonlinear** incrementation with **Manual** control.
- Use default settings for this initial manual loadcase. Do not modify the dialog.
- Click **OK** to finish.




Note. A  Nonlinear and Transient object will be added to the Treeview. Double-clicking on this object will allow any changes to be made to the control properties for this loadcase.

Loadcase 2

Loadcase 2 (the self weight loadcase) uses automatic load incrementation. In doing so, the load is applied as a very small initial step to overcome any potential convergence problems. The specification of the number of iterations per increment determines how the load step is varied from one increment to the next. The analysis generally converges in 2 or 3 iterations. By setting this value to 12 the load step will rapidly increase.



Note. In LUSAS, the use of automatic nonlinear incrementation immediately following a manual nonlinear incrementation (as in this case) causes the results from the previous analysis to be retained and used as the starting point for the subsequent analysis.


- In the  Treeview, right-click on **Self Weight** and select **Nonlinear & Transient** from the **Controls** menu.
- Select **Nonlinear** incrementation with **Automatic** control.
- Enter the **Starting load factor** as **0.01**
- Leave the **Max change in load factor** set to **0**
- Enter the **Max total load factor** as **1**
- Set the **Iterations per increment** to **12**
- In the **Incrementation** section of the dialog select the **Advanced** button.
- Enter the **Stiffness ratio to switch to arc length** as **0**. Click the **OK** button.
- Ensure that the **Solution strategy** and **Incremental LUSAS file output** are set to **Same as previous loadcase**.
- Click the **OK** button to finish.

Loadcase 3

Loadcase 3 reapplies the self-weight in a single **Manual** load step. This effectively freezes the self-weight load allowing the wind loadcase 4 to be incrementally increased. If an Automatic (loadcase 4) nonlinear control were to follow a previous Automatic (loadcase 2) nonlinear control then the loading would be overwritten.




Note. So in LUSAS, using manual nonlinear incrementation immediately following an automatic nonlinear incrementation (as in this case) allows a subsequent automatic nonlinear incrementation to be applied without overwriting any previous loading.

- In the  Treeview, right-click on **Self Weight Freeze** and select **Nonlinear & Transient** from the **Controls** menu.
- Select **Nonlinear** incrementation with **Manual** control.
- Ensure that the **Solution strategy** and **Incremental LUSAS file output** are set to **same as previous loadcase**.
- Click the **OK** button to finish.

Loadcase 4

Loadcase 4 applies the wind and point load using **Automatic** load incrementation. In a similar manner to that used for loadcase 2.

- In the  Treeview, right-click on **Wind and Point Load** and select **Nonlinear & Transient** from the **Controls** menu.
- Select **Nonlinear** incrementation with **Automatic** control.
- Enter the **Starting load factor** as **0.01**
- Leave the **Max change in load factor** set to **0**
- Enter the **Max total load factor** as **1**
- Set the **Iterations per increment** to **12**
- In the **Incrementation** section of the dialog select the **Advanced** button.
- Enter the **Stiffness ratio to switch to arc length** as **0**. Click the **OK** button.
- In the **Solution strategy** section of the dialog deselect the **Same as previous loadcase** option and then select the **Advanced** button.
- Set the **Maximum number of line searches** to **0** and click **OK**
- Click the **OK** button to finish.



Defining a Geometric Nonlinear analysis

One additional setting is required to allow a geometric nonlinear analysis to take place.

- Double-click on the  **Nonlinear analysis options** object in the  Treeview.

- Select the **Co-rotational Formulation** option.
- Click the **OK** button to finish.



Note. So the  Nonlinear analysis options object sets parameters for the whole analysis and the  Nonlinear and Transient object sets control properties for each loadcase.

Save the Model

The model is now complete and the model data is to be saved before an analysis is run using the LUSAS Solver.

File
Save



Save the model file.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...




A LUSAS data file name of **mast** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.

During the analysis 2 files will be created:

- ☐ **mast.out** this contains the statistics of the analysis, for example how much disk space was used, how much CPU time was used, and any errors or warning messages from LUSAS. Always check the output file for error messages.
- ☐ **mast.mys** This is the LUSAS results database which will be used for results processing.

If the analysis is successful...

LUSAS results files will be displayed in the  Treeview and the results for the first loadcase will be set active by default.

If the analysis fails...

If the analysis fails, information relating to the nature of the error encountered can be written to an output file in addition to the text output window. Any errors listed in the

 
text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




☐ **mast_modelling.vbs** carries out the modelling of the example.




Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **mast**



 To recreate the model, select the file **mast_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.



Rerun the analysis to generate the results


Viewing the Results

Selecting the results to be viewed



If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results for the first loadcase (in this case the initial stress in cables) are set to be active by default.

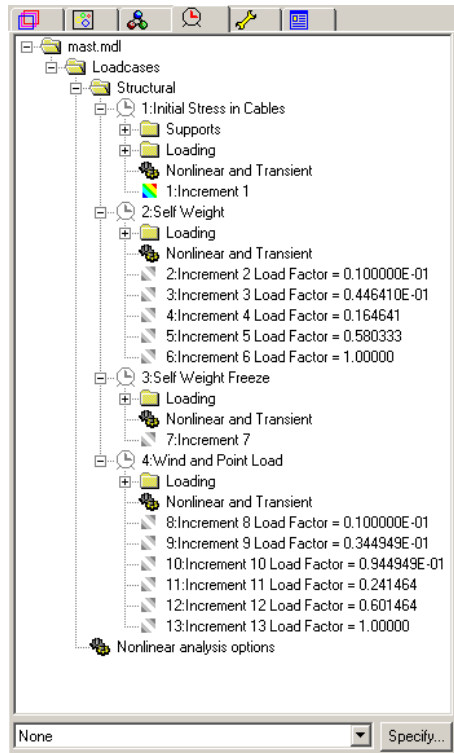


Note. With reference to the loadcase results opposite, the first increment relates to the initial stress loadcase. The first set of load factor increments relate to the self-weight loadcase. Increment 7 relates to the ‘freezing’ of the self-weight loadcase prior to loading the structure with the wind and point load. The remaining load factor increments relate to the application of the wind and point loading on the on the pre-stressed structure.




Deformed Mesh Plot

- If present in the  Treeview turn off the **Geometry**, and **Attribute** layers.
- With no features selected, click the right-hand mouse button in a blank part of the graphics window and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview.
- Click **Close** to accept the default properties and view the deformed mesh for the first results loadcase **Initial Stress in Cables**
- Turn off the **Mesh** layer

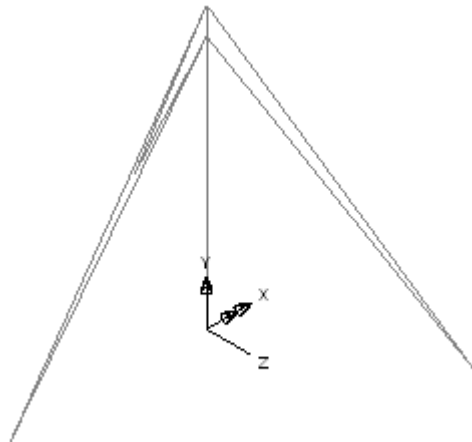

Axial Force Diagram for Initial Stresses


- With no features selected, click the right-hand mouse button in a blank part of the graphics window and select the **Diagrams** option to add the diagrams layer to the Treeview.
- Select entity **Force/Moment - Thick 3D Beam** of component **Fx** (axial force)
- Select the **Diagram Display** tab and select the **Label values** option. Set the number of significant figures to **4**.
- Click **OK** to add the Diagrams layer to the display.

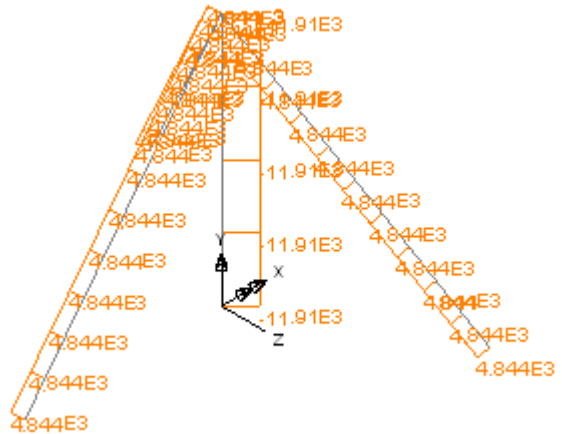


Combined Initial Stress and Self weight

- In the Treeview right-click on the on the last results increment inside the self-weight section for **Load Factor = 1.00000** and select the **Set Active** option.


This shows axial force from the combined effect of the initial stress and the self-weight on the mast.

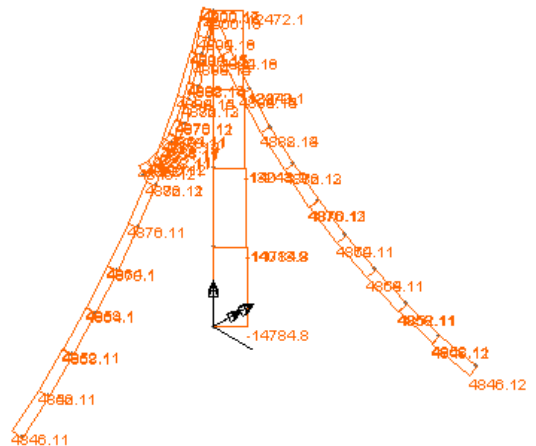


Combined Initial Stress, Self Weight and Wind Load

- In the  Treeview right-click on the last results increment in the Wind and Point load section for **Load Factor = 1.00000** and select the **Set Active** option.


This shows axial force for the combined effect of the initial stress, the self-weight and the wind loading on the mast.

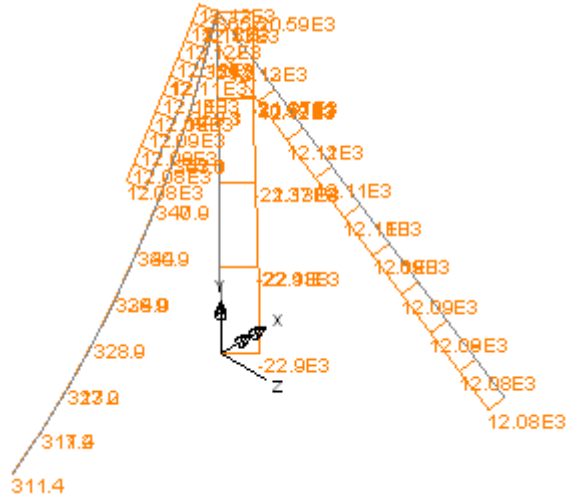


Axial Force Diagram for the mast only


- In the  Treeview, right-click on the group name **Mast** and select the **Set as Only Visible** option.

Shear Force Diagram for the mast

- In the  Treeview double-click on the **Diagrams** entry and select **Force/Moment – Thick 3D Beam** results for axial force **Fy**. Click **OK** to update the graphics window.

Bending Moment Diagram


- In the  Treeview double-click on the **Diagrams** entry and select **Force/Moment – Thick 3D Beam** results for bending moment **Mz** which is the bending moment in the plane of the wind and point loading. Click **OK** to update the graphics window.

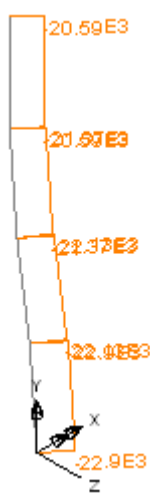

Axial force Fx



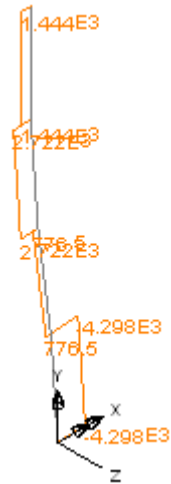


Shear force Fy



Bending moment Mz

Plotting Reactions at the Mast and Cable Supports

- In the  Treeview turn off the **Diagrams** layer.
- With no features selected, click the right-hand mouse button in a blank part of the graphics window and select the **All Visible** option.
- With no features selected, click the right-hand mouse button in a blank part of the graphics window and select the **Values** option to add the values layer to the  Treeview. Select results of entity **Reaction** of component **RSLT**.
- Select the **Values Display** tab and plot 100% of **Maxima** values

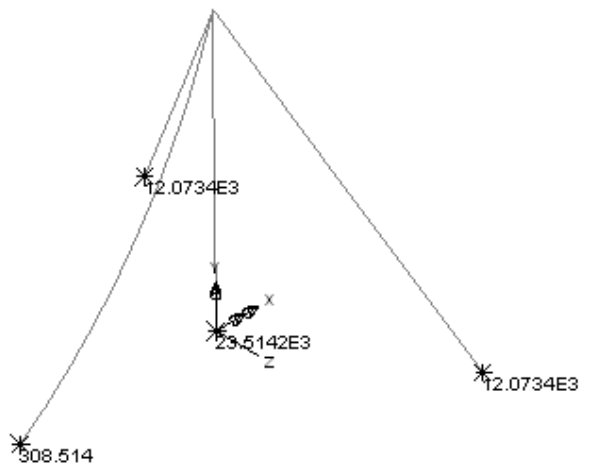


- Click the **OK** button.

Printing a Results Summary of Reactions

With the last results increment for a load factor of 1.0 still selected in the Treeview:

- Select **Active**
- Select entity **Reaction** for type **Component** at location **Node**.
- Click Finish to view the tabulated results summary

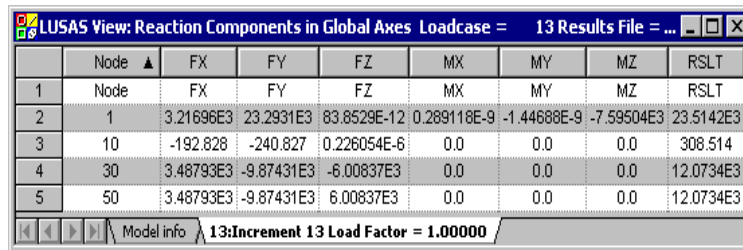

	Node ▲	FX	FY	FZ	MX	MY	MZ	RSLT
1	Node	FX	FY	FZ	MX	MY	MZ	RSLT
2	1	3.21696E3	23.2931E3	83.8529E-12	0.289118E-9	-1.44688E-9	-7.59504E3	23.5142E3
3	10	-192.828	-240.827	0.226054E-6	0.0	0.0	0.0	308.514
4	30	3.48793E3	-9.87431E3	-6.00837E3	0.0	0.0	0.0	12.0734E3
5	50	3.48793E3	-9.87431E3	6.00837E3	0.0	0.0	0.0	12.0734E3

Model info 13:Increment 13 Load Factor = 1.00000



Note. The values of FZ, MX and MY for node 1 vary slightly from those shown from machine to machine. These values are effectively zero.

This completes the example.

2D Consolidation under a Strip Footing


For software product(s):	Any Plus version.
With product option(s):	Nonlinear.
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

The pore water pressure dissipation and settlement in a soil following the application of a distributed load is to be investigated.

Horizontal displacement at the left edge is restrained to model the symmetrical boundary condition. Vertical displacement at the base of the soil is restrained as the soil rests on solid rock. The pore pressure at ground level is prescribed to zero.

Units of kN, m, t, s, C are used throughout.

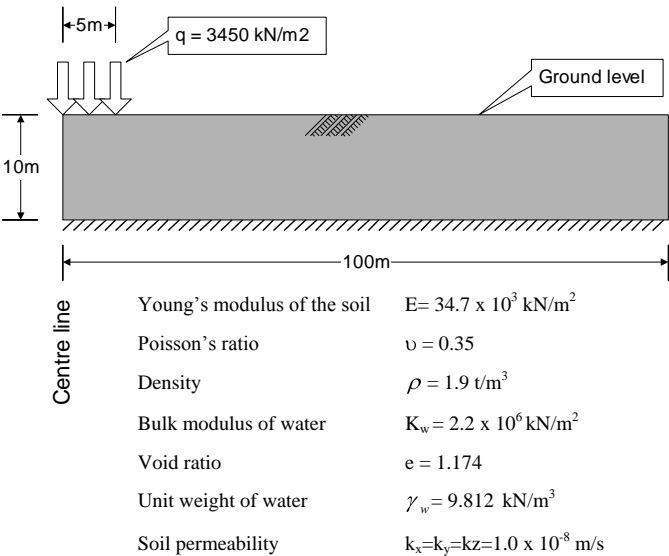

Objectives

The required output from the analysis consists of:

- ☐ Settlement at the centre of the footing with time.
- ☐ Pore pressure distribution immediately after application of the load (undrained response)
- ☐ Pore water pressure dissipation with time at the centre of the footing

Keywords

Consolidation, Pore Water Pressure, Time Stepping, Nonlinear, Transient, Settlement, Two Phase Materials, Default Assignments, Graphing

Associated Files



- ☐ **pwp_modelling.vbs** carries out the modelling of the example.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter the File name as **pwp**
- Use the **Default** working folder.
- Enter the title as **Consolidation under a Strip Footing**
- Select the units as **kN,m,t,s,C** from the drop down list provided.
- Ensure the **Structural** user interface is being used.
- Select the startup template **Standard**
- Select the **Vertical Y axis** option
- Click the **OK** button.

 


Note. The Undo button may also be used to correct a mistake. The undo button allows any number of actions since the last save to be undone.

Prior to defining the geometry of the model default surface mesh and material properties will be set-up.

Mesh Definition

Since this analysis requires the modelling of pore water pressure, plane-strain two phase elements will be used.



- Select **Plane strain two phase, Quadrilateral, Quadratic** elements. Ensure the **Regular mesh** option is selected with **Automatic divisions** so that Modeller uses the mesh divisions assigned to each line.
- Give the attribute the name **Plane Strain Two Phase** and click the **OK** button to add the mesh attribute to the Treeview.
- In the Treeview click on the mesh attribute **Plane Strain Two Phase** with the right-hand mouse button and select the **Set Default** option. This will ensure all newly created surfaces will be assigned the elements defined in this mesh attribute.

Material Properties

For consolidation analysis both the elastic and two-phase soil properties need to be defined. The overall 'equivalent' bulk modulus of the soil is related to the bulk modulus of the pore fluid and the bulk modulus of the solid soil particles by the formula:

$$\frac{1}{K_e} = \frac{n}{K_f} + \frac{(1-n)}{K_s} \approx \frac{n}{K_f}$$

Where

K_e is the equivalent bulk modulus of the soil

K_f is the bulk modulus of the pore fluid

K_s is the bulk modulus of the solid soil particles

n is the porosity of the soil

The porosity of the soil is related to the void ratio by the formula:

$$\text{Porosity } n = \frac{e}{1+e} = 0.54$$

2D Consolidation under a Strip Footing

Attributes
Material >
Isotropic...

- Enter the isotropic material properties for the soil as Young's Modulus **34.7E3**, Poisson's Ratio **0.35** and Mass density **1.9**
- Click on the **Two phase** check box at the top right-hand corner of the dialog.


	Value
Bulk modulus of solid phase	2.2E6
Bulk modulus of fluid phase	2.2E6
Porosity of medium	0.54
Unit weight of fluid phase	9.812
Permeability in global X direction	0.01E-6
Permeability in global Y direction	0.01E-6
Permeability in global Z direction	0.01E-6

- Enter the properties as Bulk modulus of solid phase as **2.2E6**, Bulk modulus of fluid phase **2.2E6**, Porosity of medium **0.54**, Unit weight of fluid phase **9.812**, and Permeability in global X, Y and Z directions **1E-8**



Note. By using these parameters for bulk modulus the undrained bulk modulus of the soil will be equivalent to that of the pore fluid

- Enter the attribute name as **Fissured Clay** and click the **OK** button to add the attribute to the Treeview.

- In the  Treeview click on the attribute **Fissured Clay** with the right-hand mouse button and select the **Set Default** option. This will ensure all newly created features will be assigned the properties defined in this material attribute.

Feature Geometry

Geometry
Surface >
Coordinates...

 


Enter coordinates of **(0, 0)**, **(5, 0)**, **(5, 10)** and **(0, 10)** to define the soil under the load. Use the Tab key to move to the next entry field on the dialog. When all coordinates have been entered click the **OK** button.

Geometry
Surface >
Coordinates...






Enter the coordinates of **(5, 0)**, **(100, 0)**, **(100, 10)**, **(5, 10)** to define the remainder of the soil.




Mesh Grading

Attributes
Mesh >
Line...

- Define a Line mesh with element type **None** and **16** divisions.
- Select the **Spacing** button.
- Choose the **Uniform transition** option and set the **Ratio of first to last element** to **0.1**
- Click **OK** to accept the spacing properties.
- Give the attribute name as **Null 16 Graded** and click the **Apply** button to add the attribute to the  Treeview and keep the dialog active.
- Define a Line mesh with **12** divisions.
- Select the **Spacing** button.
- Enter the **Uniform transition** option and set the **Ratio of first to last element** to **5**
- Click **OK** to accept the spacing properties.
- Give the attribute name as **Null 12 Graded** and click **OK** to add the attribute to the  Treeview.

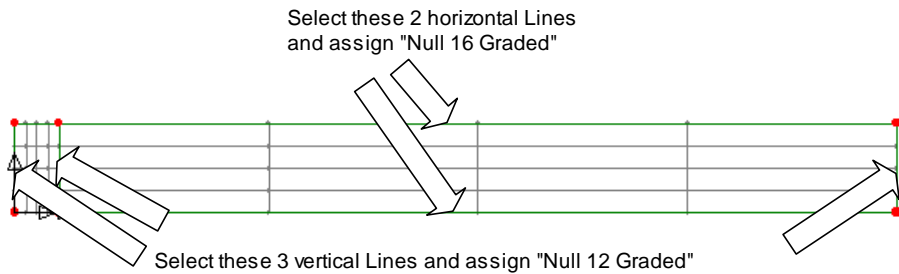

 - Select the horizontal lines of the larger surface as shown and assign the mesh attribute **Null 16 Graded**
- Select all the vertical lines as shown (Use the **Shift** key to add to the initial selection) and assign the mesh attribute **Null 12 Graded**





Note. If the mesh is graded with the smaller elements at the wrong end of a line reverse the line by selecting the line, and using the **Geometry>Line>Reverse** menu.

Supports


Define a support to prescribe zero pore pressure.


- Click on the option to make the Pore pressure **Fixed**
- Enter the attribute name as **Fixed PWP** and click the **OK** button.

Assign the supports to the model.

- Select the vertical Line on the left-hand side of the model and drag and drop the support attribute **Fixed in X** from the  Treeview onto the selection. With the **Assign to lines** option selected click **OK** to assign the support attribute to **All loadcases**
- Select the 2 horizontal Lines representing the base of the soil and drag and drop the support attribute **Fixed in Y** from the  Treeview onto the selection. With the **Assign to lines** option selected click **OK** to assign the support attribute to **All loadcases**

Attributes
Support...


- Select the Line at ground level on the right-hand side of the model (see image) and drag and drop the support attribute **Fixed PWP** from the  Treeview onto the selection. With the **Assign to lines** option selected click **OK** to assign the support attribute to **All loadcases**

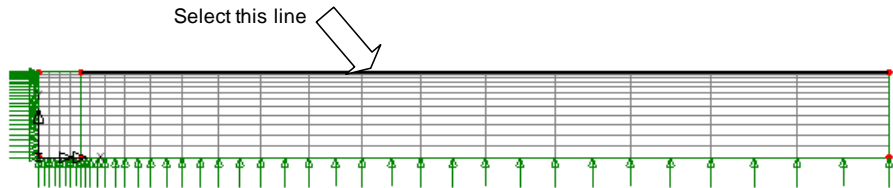

Loading

Attributes
Loading...

- Select the **Face** option and click **Next**
- Enter loading of **3450** in the **y Direction**
- Enter the attribute name of **Distributed Load** and click the **Finish** button.
- Select the top line on the left-hand side of the model and drag and drop the **Distributed Load** attribute onto the selection. With the **Assign to lines** option selected click **OK** to assign the loadcase attribute to **Loadcase 1** with a **Factor** of **1**

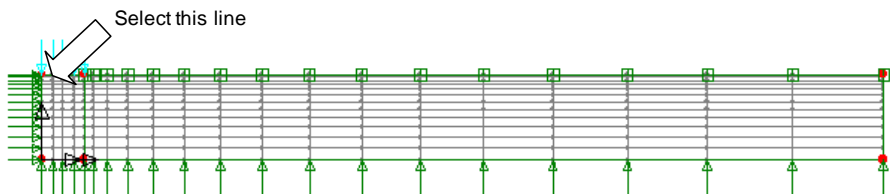

Analysis Control

With this consolidation problem an automatic time stepping procedure is adopted. This is because consolidation is a typical diffusion process in which the field changes rapidly at the start of the process before settling down to a steady state condition a considerable time after the initial load is applied. The automatic time stepping procedure enables the time step to be modified so that the small time steps required at the start of the problem can be increased as the analysis progresses. In some cases the overall response time can be orders of magnitude larger than the initial time step.

The initial time step is important since the early variations in pore pressure must be accurately accounted for. Vermeer and Verruijt suggest the following criteria for determining the initial time step where Δh is the minimum distance between nodes.

$$\Delta t \geq \frac{\gamma_w}{6Ek} (\Delta h)^2 = \frac{9.812}{6 \times 34.7E3 \times 1E-8} \times 0.14^2 \approx 100 \text{ secs}$$



Note. The distance between two nodes can be determined by selecting the two nodes and then picking the **Utilities>Mesh>Distance between Nodes** entry.

- In the  Treeview right-click on **Loadcase 1** and select **Nonlinear & Transient** from the **Controls** menu.

Nonlinear & Transient

Incrementation

☒ Nonlinear

Incrementation:

Starting load factor:

Max change in load factor:

Max total load factor:

☒ Adjust load based on convergence

Iterations per increment:

Time domain

☒ Time domain

Initial time step:

Total response time:

☒ Automatic time stepping

Common to all

Max time steps or increments:

Solution strategy

☐ Same as previous loadcase

Max number of iterations:

Residual force norm:

Incremental displacement norm:

Incremental LUSAS file output

☐ Same as previous loadcase

Output file:

Plot file:

Restart file:

Max number of saved restarts:

Log file:


History file:

Advanced... OK Cancel Help

In the Incrementation section:

- Select the **Nonlinear** option and choose **Manual** incrementation.
- Select the **Time domain** option and chose **Consolidation** from the drop down list.
- Enter an **Initial time step** of **100**
- Select the **Automatic time stepping** option.
- Select the **Advanced** button in the Time domain section of the dialog.

- On the Advance time step parameters dialog set the **Time step increment restriction factor** to **2**
- Set the **Minimum time step** to **100**
- Set the **Maximum time step** to **1E7**
- Set the **Minimum time step for termination** to **0**
- Click **OK** to return to the Nonlinear and Transient control dialog.
- On the Nonlinear and Transient control dialog set **Max time steps or increments** to **50**
- Click **OK** to set the loadcase control.

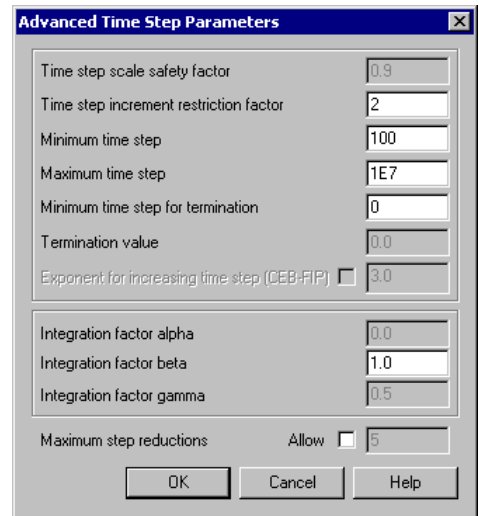

Saving the model

File
Save



Save the model file.

Running the Analysis

File
LUSAS Datafile...




A LUSAS data file name of **pwp** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to solve the problem.

A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ❑ **pwp.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ❑ **pwp.mys** this is the LUSAS results file which is loaded automatically into the Treeview to allow results processing to take place.


If the analysis fails...

 
If the analysis fails, the output file will provide information relating to the nature of the error encountered. Any errors listed in the output file should be fixed in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported a file is provided to enable you to re-create the model from scratch and run an analysis successfully.




 **pwp_modelling.vbs** carries out the modelling of the example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **pwp**





- To recreate the model, select the file **pwp_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.




Rerun the analysis to generate the results.

 
Viewing the Results

Loadcase results can be seen in the  Treeview. If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results for the first time step are set active by default.

- If present, turn off the **Geometry**, **Mesh** and **Attributes** layers in the  Treeview.

Settlement

- With no features selected click the right-hand mouse button in a blank part of the graphics area and select **Deformed mesh** to add the deformed mesh layer to the  Treeview.
- Select the **Specify factor** option, specify a factor of **1** and click **OK** to visualise the deformed mesh for the first time step.



A graph of the deformation over time will be created using the graph wizard.

- Zoom into the left-hand side of the model and select the node on the centre line at the centre of the footing.


- With the **Time history** option selected click **Next**

Firstly define the data to be used for the X axis.

- Selected the **Named** option and click **Next**
- Select **Response Time** from the drop down list and click **Next**

Secondly define the data for the Y axis.


- With the **Nodal** option selected and click **Next**
- Select **Displacement** from the Entity drop down list and **DY** from the Component drop down list.
- The selected node number will appear in the **Specified single node** drop down list. Click **Next**

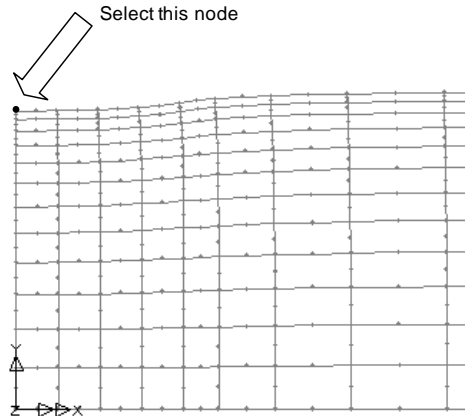

Utilities

Graph Wizard...

- For the X Scale enter **Manual** values of minimum **100** and maximum **10e6** respectively.
- Select the **Use logarithmic scale** option.
- Title the graph as **Settlement under centre of footing**
- Click **Finish** to display the graph of settlement over time under the centre of the strip footing.

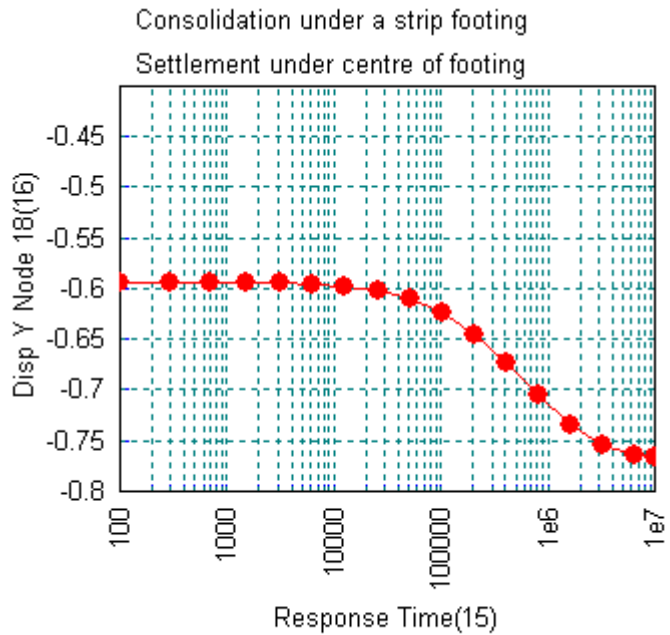


Close the graph window




Maximise the graphics window.


Pore water pressure

The distribution of pore pressure is to be shown using contours.

- With no features selected click the right-hand mouse button in a blank part of the graphics area and select **Contours** to add the contours layer to the  Treeview.
- Select **Displacement** from the Entity drop down list and **PRES** from the component drop down list.
- Select the **Contour Range** tab and set the **Interval** to **250**
- Click the **OK** button to display contours of the undrained pore pressure distribution (Time step 0) immediately after the loading is applied.

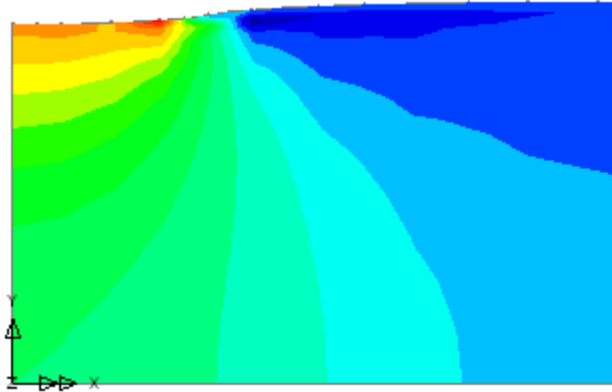

Note. The dissipation of pore water pressure over time may be observed by creating an animation of the contour display.

- To observe the distribution of pore water pressure at a particular time after the application of loading activate the appropriate time step from the  Treeview by selecting the time step with the right-hand mouse button and choosing the **Set Active** option.

The dissipation of pore water pressure under the footing is to be presented on a graph.

- Select the node on the centreline under the footing as before.
- With the **Time history** option selected click **Next**

Firstly define the data to be used for the X axis

- Selected the **Named** option and click **Next**
- Select **Response Time** from the drop down list and click **Next**

Secondly define the data for the Y axis


- With the **Nodal** option selected and click **Next**
- Select **Displacement** from the Entity drop down list and **PRES** from the Component drop down list.
- The extent to be graphed will be set to **Specified single node** and the node selected will be seen in the Specify node field. Click **Next**

Utilities

Graph Wizard...

2D Consolidation under a Strip Footing

- For the X Scale ensure that **Manual** values of minimum **100** and maximum **10e6** respectively are used.
- Select the Use **Logarithmic scale** option
- For the Y Scale leave the values as the defaults.
- Title the graph as **Dissipation of pore water pressure**
- Click **Finish** to display the dissipation of pore water pressure over time under the centre of the strip footing.

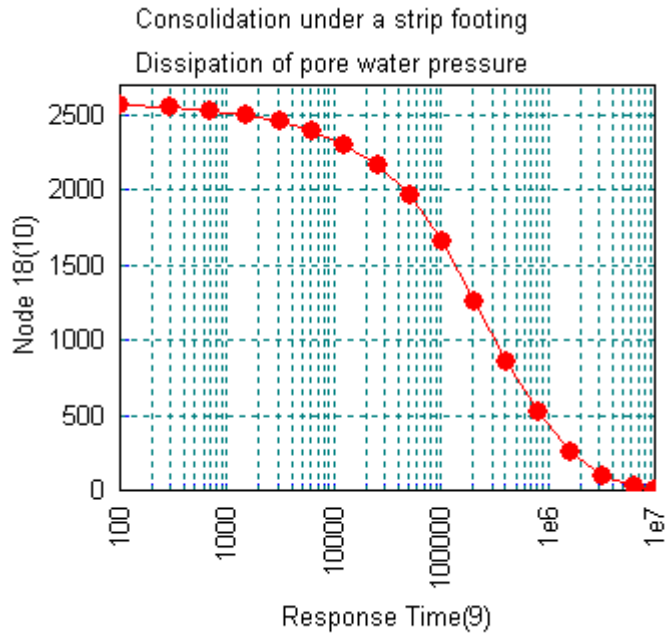

Close the graph window.



Maximise the graphics window.

As the pore water dissipates the load is carried by the soil. The increase in effective stress in soil can be observed on a graph of effective stress against response time.

- Ensure the node on the centreline under the footing still selected.
- With the **Time history** option selected click **Next**

Firstly define the data to be used for the X axis


- Select the **Named** option and click **Next**
- Select **Response Time** from the drop down list and click **Next**

Secondly define the data for the Y axis

- With the **Nodal** option selected and click **Next**
- Select **Stress - Plane Strain** from the Entity drop down list and **SY** from the Component drop down list.

- The extent to be graphed will be set to **Specified single node** and the node selected will be seen in the Specify node field. Click **Next**
- For the X Scale ensure that **Manual** values of minimum **100** and maximum **10e6** respectively are used.
- Select the **Use Logarithmic scale** option.
- For the Y Scale leave the values as the defaults.
- Title the graph as **Effective soil stress**
- Click **Finish** to display the graph of the effective soil stress over time under the centre of the strip footing.

This completes the example.

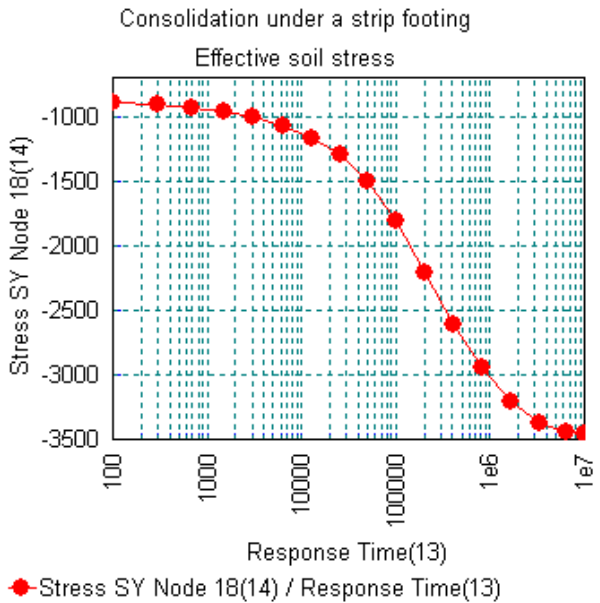

Drained Nonlinear Analysis of a Retaining Wall

For software product(s):	Any Plus version.
With product option(s):	Nonlinear
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

The behaviour of a single propped retaining wall is to be investigated in the long term. Drained soil parameters are used throughout.

Horizontal displacement is restrained at the left and right hand edge and both horizontal and vertical displacement is restrained at the base of the soil as the soil rests on solid rock.


The wall is 'wished-in-place' in that construction of the wall is not modelled.

Units of kN, m, t, s, C are used throughout.

Objectives

The required output from the analysis consists of:

- ☐ Displacement of the wall toe towards the excavation
- ☐ Surface heave immediately behind the wall

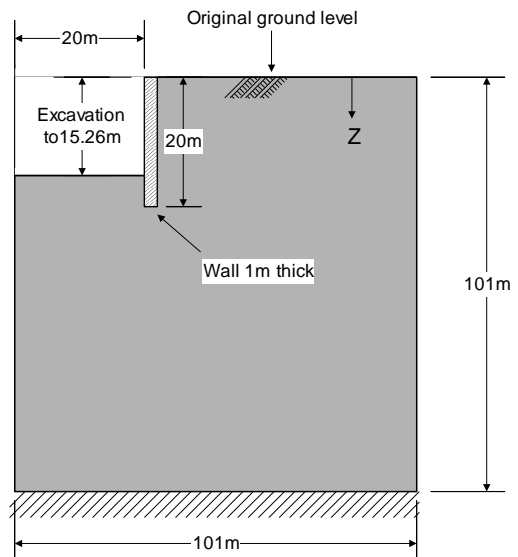

- ☐ Contours of plastic strain around the excavation
- ☐ Prop force per m length of wall
- ☐ Bending moment in the wall at 10m depth

Keywords

Retaining wall, Drained, Nonlinear, Excavation, Surface heave, Plane strain, Prop force, Bending Moment

Associated Files



- ☐ **drained_wall_modelling.vbs** carries out the modelling of the example.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File** > **New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog .

Creating a new model

 
- Enter the File name as **drained_wall**.
- Use the **Default** working folder.
- Enter the title as **Drained analysis of a propped retaining wall**.
- Select units of **kN,m,t,s,C** from the drop down list provided.
- Ensure that a **Structural** User Interface is being used.
- Set the startup template as **None**
- Select the **Vertical Y axis** option.
- Click the **OK** button.





Note. Save the model regularly as the example progresses. Use the undo command to undo mistakes as far back as the last save.


Mesh Definition

The surfaces are to be meshed using plane-strain quadrilaterals with a quadratic interpolation order (QPN8).




- Select the **Plane Strain, Quadrilateral, Quadratic** elements. Ensure the **Regular mesh** option is selected with **Automatic divisions** so that Modeller uses the mesh divisions assigned to each line.
- Give the attribute the name **Plane Strain quads** and click the **OK** button to add the mesh attribute to the  Treeview.
- In the  Treeview click on the mesh attribute **Plane Strain quads** with the right-hand mouse button and select the **Set Default** option. This will ensure all newly created surfaces will be assigned the elements defined in this mesh attribute.

 General Field Variations




The Young's Modulus of the soil and the in situ stresses vary with depth and therefore general field variations are required.



- Enter the function as $-6000*Y$ and the attribute name as **y_mod** for the definition of Young's Modulus with depth and click **Apply** to add the attribute to the  Treeview and keep the dialog active.
- Enter a new function as $20*Y$ and the attribute name as **sig_v** for the definition of vertical stress and click **Apply**.
- Enter a new function as $2*20*Y$ and the attribute name as **sig_h** for the definition of horizontal stress and click **OK**.



 Note. The LUSAS convention assumes that negative stresses are compressive. The Y coordinate datum is at ground level and so increasing depth will lead to increasingly negative Y coordinates. The variations as entered will ensure that stresses increase negatively with depth while the Young's Modulus increases positively with depth.

Feature Geometry



- Turn off the display of the **Mesh** layer in  Treeview.
-  Enter coordinates of **(0, 0), (20, 0), (21, 0), (25, 0)** and **(101, 0)** to define four lines representing the original ground level (all Z coordinates should be zero or left blank). Use the Tab key to move to the next entry field on the dialog. When all coordinates have been entered click the **OK** button.
- Press **CTRL-A** to select all the Lines just drawn.


Drained Nonlinear Analysis of a Retaining Wall

Geometry
Surface >
By Sweeping...



Ensure the **Translate** option is selected and enter a value of **-1.5 in Y**.

- Click **OK** to sweep the Lines to create the Surfaces.

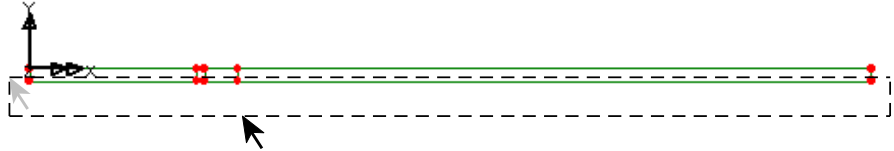

- Select the bottom four horizontal Lines by dragging a box around them.


Geometry
Surface >
By Sweeping...



Ensure the **Translate** option is selected and enter a value of **-1.5 in Y**.

- Click **OK** to sweep the Lines to create the Surfaces.

Repeat the preceding commands eight times, selecting the bottom four lines of the model each time and sweep the lines by **-2.0, -2.13, -2.13, -2.0, -2.0, -2.0, -2.49** and **-2.25** metres in Y as shown above.

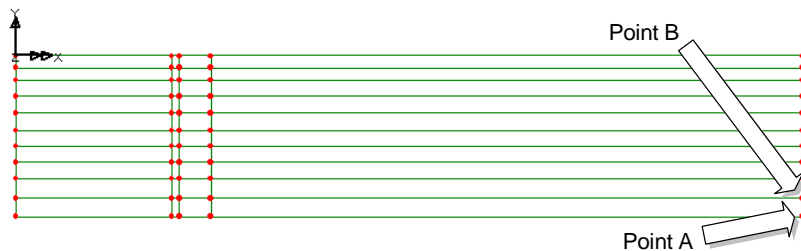

- Select Point A shown.

Geometry
Point >
Move...



Ensure the **Translate** option is selected and enter a value of **-81 in Y**.


- Click **OK** to move the Point.
- Select Point B shown.

Geometry
Point >
Move...



Ensure the **Translate** option is selected and enter a value of **-33.25 in Y**.

- Click **OK** to move the Point.

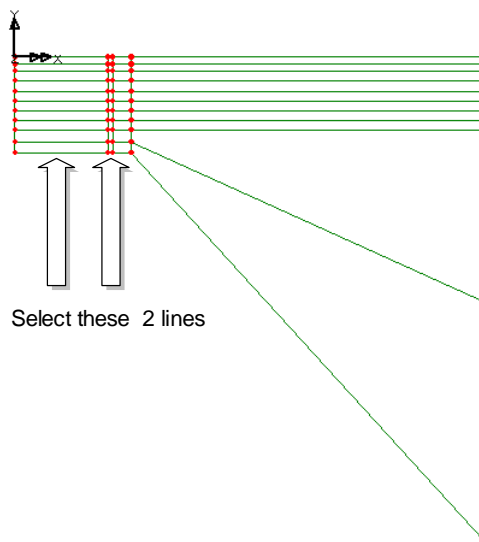


- Select the two Lines shown.

Geometry	
Surface	>
By Sweeping...	



Ensure the **Translate** option is selected and enter a value of **-81** in **Y**.

Click **OK** to sweep the Lines to create the Surfaces.

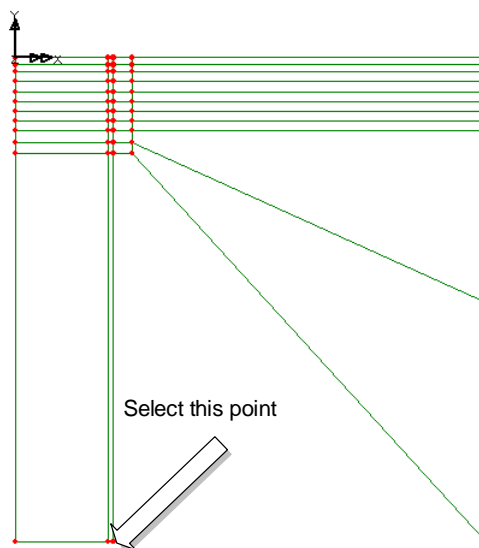

- Select the Point shown.


Drained Nonlinear Analysis of a Retaining Wall

Geometry
Point >
Move...



Ensure the **Translate** option is selected and enter a value of **38** in **X**.

- Click **OK** to move the Point.

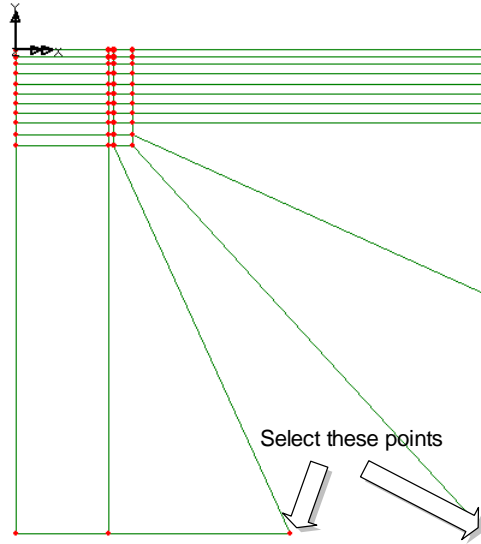


- Select the two Points shown.


Geometry
Line >
Points...



Create a Line between the two selected Points.

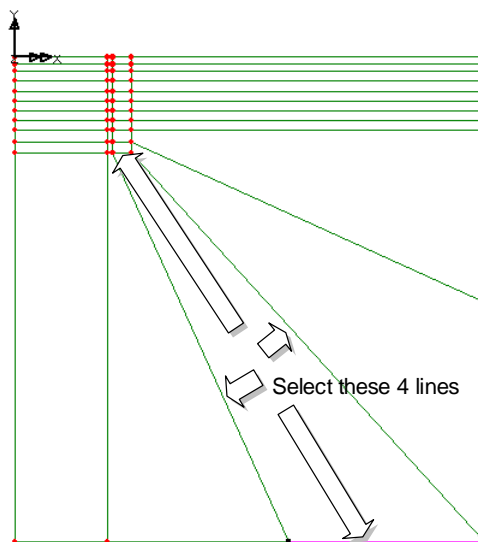


 - Select the Line just drawn along with the three Lines as shown.



Create a Surface from the four selected Lines.

 
Mesh Grading



- Define a Line mesh with element type **None** and **1** division.
- Enter the attribute name as **Null 1** and click the **Apply** button to add the attribute to the Treeview and keep the dialog active.
- Define a Line mesh with **5** divisions.
- Select the **Spacing** button.
- Select the **Uniform transition** option and set the **Ratio of first to last element** to **4**
- Click **OK** to accept the spacing properties.
- Give the attribute name as **Null 5 Graded** and click **Apply** to add the attribute to the Treeview and keep the dialog active.
- Define a Line mesh with **10** divisions.
- Select the **Spacing** button.

- Select the **Uniform transition** option and set the **Ratio of first to last element** to **0.2**
- Click **OK** to accept the spacing properties.
- Give the attribute name as **Null 10 Graded** and click **OK** to add the attribute to the Treeview.

Assigning the mesh attributes

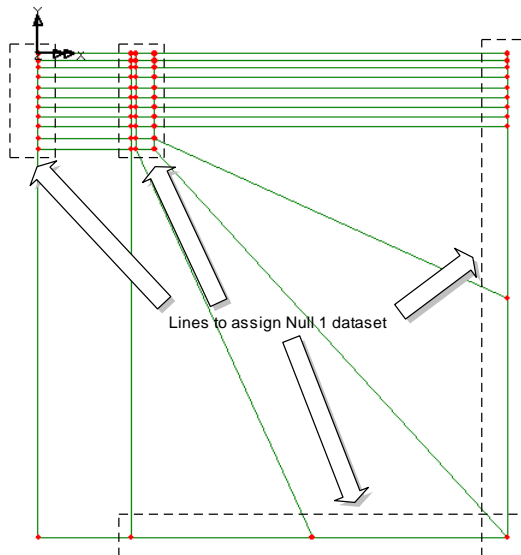

- Box-select the lines as shown and assign the mesh attribute **Null 1**.




Note. The selection of some of the sets of lines as shown in the next two images is best done by changing the selection cursor and additionally using a special keyboard shortcut which causes any lines passing through a box-selection to be selected.


To prepare for this:



Change the cursor to the Select Lines cursor.

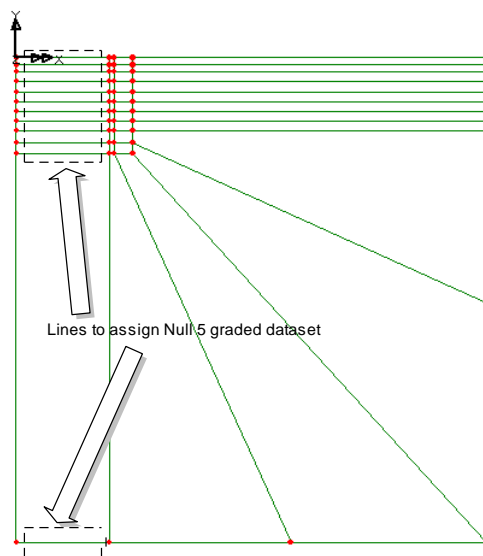


- Hold down the **ALT** key and box-select each set of horizontal lines as shown in the preceding image and assign the mesh attribute **Null 5 Graded**.

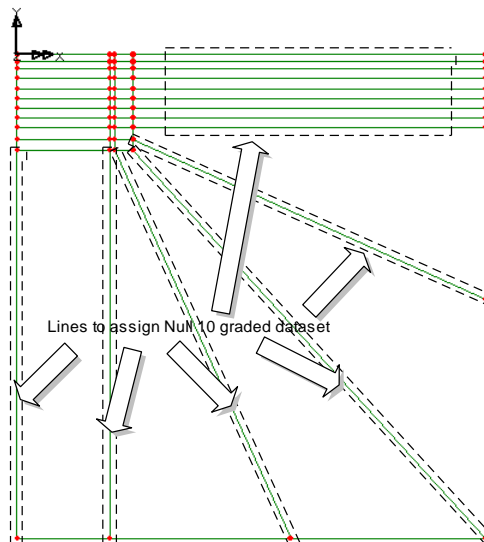


- Select the remaining lines as shown and assign the mesh attribute **Null 10 Graded**.



Note. See the *Keyboard Shortcut Guide* for more details on the use of keyboard shortcuts.


- Turn on the **Mesh** layer in the  Treeview to see the mesh.

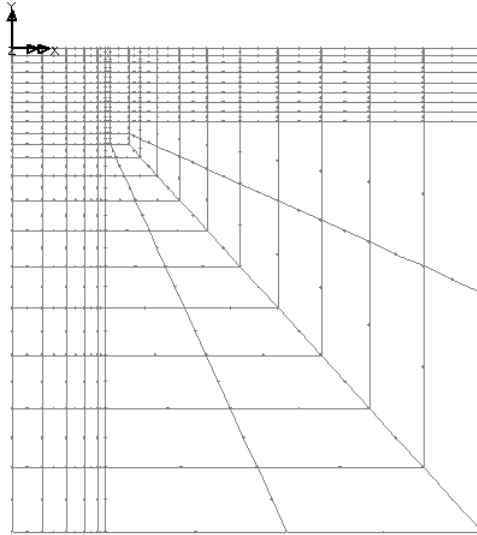


Note. If the mesh is graded with the smaller elements at the wrong end of a line reverse the line by selecting the line using the **Geometry>Line>Reverse** menu selection. If errors have been made in mesh assignments simply re-select any lines with an incorrect mesh assignment and re-assign the correct line mesh.

Material Properties

 An isotropic elastic material will be used for the retaining wall while an isotropic nonlinear material utilising the Mohr-Coulomb failure surface will be used for the soil.



With the **Elastic** tab selected enter the isotropic material properties for the wall as Young's Modulus **28E6** kN/m², Poisson's Ratio **0.15** and Mass Density **2.03874** tonne/m³.

- Enter the attribute name as **Concrete Wall**.
- Click the **Apply** button to add the attribute to the  Treeview and keep the dialog active.
- With the **Elastic** tab selected enter the isotropic material properties for the soil as Young's Modulus **1*y_mod**, Poisson's Ratio **0.2** and Mass Density **2.03874** tonne/m³.



Note. The **1*y_mod** indicates that the Young's Modulus is defined by a variation scaled by a factor of **1**. As an alternative to typing in the formula, enter **1** in the grid location and click on the button. Select the **y_mod** variation from the drop down list.

- Click the **Plastic** option and from the Model drop-down list select the **Mohr-Coulomb (model 65)** entry.
- Enter an **Initial cohesion** value of **0**
- Enter an **Initial friction angle** value of **25**
- Enter an **Final friction angle** value of **25**
- Enter a **Dilation angle** value of **25**
- In the tension section enter a **Cohesion hardening** value of **0**
- In the tension section enter a **Limiting plastic strain** value of **1000**
- Enter the attribute name as **Nonlinear Soil**
- Click the **OK** button to add the attribute to the Treeview.

Isotropic

Using the following properties

☒ Plastic ☐ Creep ☐ Damage ☐ Shrinkage ☐ Viscous ☐ Two phase

Elastic Plastic

Model: Mohr-Coulomb (model 65)

Stress potential type: Von Mises

Section shape: Circular hollow section

☐ Heat fraction
☒ Mass concrete
☐ Reinforced concrete

Property	Value
Initial cohesion	0.0
Initial friction angle	25.0
Final friction angle	25.0
Dilation angle	25.0

☒ Hardening

☒ Total strain
☐ Plastic strain
☐ Hardening gradient

Tension		Compression	
Cohesion hardening	Limitin	Cohesion hardening	Limitin
1	0.0	1	

Attribute: nonlinear soil (2)

OK Cancel Apply Help


Assigning material properties

To assign the material properties groups will be used. Groups are very useful in allowing features of the model to be turned-on and off to aid the assignment of attributes or the viewing of results on selected features of the model.



Change the cursor back to the normal cursor.

- Select the ten surfaces that form the retaining wall as shown.

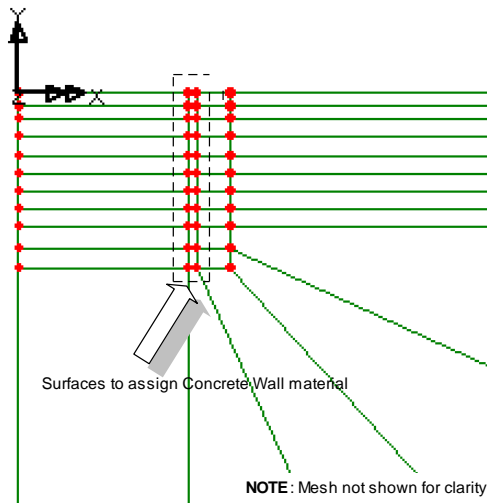

Create a group containing the wall elements only and rename it **Wall**. Click **OK**.

- With the ten surfaces of the wall still selected drag and drop the material attribute **Concrete Wall** from the Treeview onto the selection. With the **Assign to surfaces** option selected click **OK** to assign the material attribute.
- In the Treeview right-click on the **Wall** group and select **Invisible**.
- Select the whole visible model by pressing the **Ctrl-A** keys.



Create a group containing the soil elements only and rename it **Soil**. Click **OK**.

- Drag and drop the material attribute **Nonlinear Soil** from the Treeview onto the selection. With the **Assign to surfaces** option selected click **OK** to assign the material attribute.
- In the Treeview right-click on the **Wall** group and select **Visible**.



Geometry
Group >
New Group...

Geometry
Group >
New Group...




Supports


Define supports to prescribe zero horizontal displacement as well as zero horizontal and vertical displacement.

Attributes
Support...

- Click on the option to fix the **Translation in X**.
- Enter the attribute name as **Fixed in X** and click the **Apply** button to add the attribute to the  Treeview and keep the dialog active.
- Click on the option to fix the **Translation in Y**.
- Enter the attribute name as **Fixed in X and Y** and click the **OK** button to add the attribute to the  Treeview.

Assign the supports to the model.

- Select the vertical Lines on the left-hand side and right-hand side of the model and drag and drop the support attribute **Fixed in X** from the  Treeview onto the selection. With the **Assign to lines** option selected click **OK** to assign the support attribute to **All loadcases**.
- Select the 3 horizontal Lines representing the bottom limit of the soil and drag and drop the support attribute **Fixed in X and Y** from the  Treeview onto the selection. With the **Assign to lines** option selected click **OK** to assign the support attribute to **All loadcases**.
- Select the Point which represents the top-left corner of the concrete wall as shown and drag and drop the support attribute **Fixed in X** from the  Treeview onto the selection. With the **Assign to Points** option selected click **OK** to assign the support attribute to **All loadcases**. This support represents the prop.

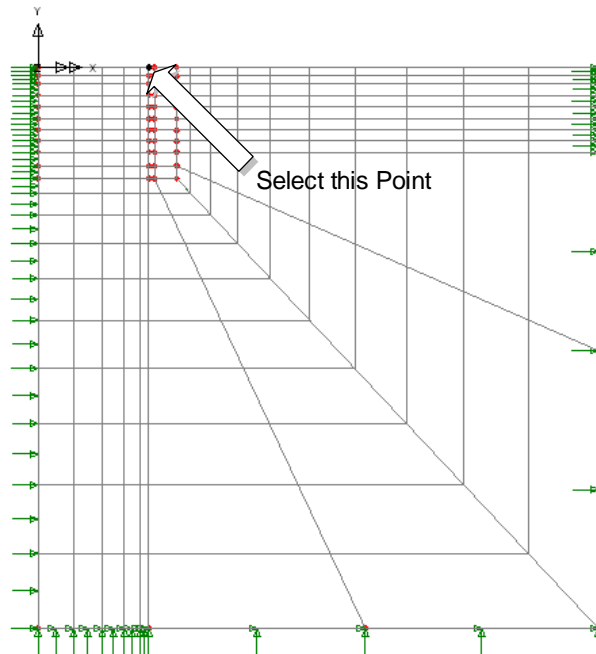

Loading

The initial in situ ground conditions must be established in the first loadcase of the analysis. This is carried out using a stress and strain type load and a gravity (body force) load.

- Select the **Stress and Strain** option and click **Next**
- On the Stress and Strain dialog ensure the Stress And Strain Type is set to **Initial**
- Select a **Surface** element description
- Select **Plane strain** from the drop down list
- Enter **1*sig_h** for Sx. (This can be done most easily by clicking in the right-hand side of the Sx field and selecting the variation attribute from the drop-down list)

Stress and Strain

Usage

☒ Element description

☐ Point ☐ Line ☒ Surface ☐ Volume

☐ Include joints

Plane strain

3 dimensional

☐ Element name

Stress and Strain Type

☒ Initial

☐ Residual (NL only)

Attribute: In situ stress

	Value
Sx	1*sig _h
Sy	1*sig _v
Sxy	0
Sz	1*sig _h
Ex	
Ey	
Exy	
Ez	


< Back Next > Finish Cancel Apply Help

- Enter **1*sig_v** for Sy.
- Enter **0** for Sxy
- Enter **1*sig_h** for Sz. The remaining fields may be left blank (to signify zero)
- Enter the attribute name as **In situ stress** and click **Finish**.
- Select the **Body force** tab from the Structural Loading dialog and click **Next**
- Enter **-9.81** in **Linear acceleration in Y Dir**.
- Enter the attribute name as **Gravity** and click **Finish**.



Attributes
Loading...

Assign the loads to the model.

The in-situ stress is assigned to the whole model.

- Select the whole model by pressing **Ctrl-A** and drag and drop the loading attribute **In situ stress** from the  Treeview onto the selection. With the **Assign to Surfaces** option selected rename the loading attribute to **Loadcase 1** and click OK.


Gravity is assigned to the whole model

- With the whole model selected drag and drop the loading attribute **Gravity** from the  Treeview onto the selection. With the **Assign to Surfaces** option selected click **OK** to assign the loading attribute to **Loadcase 1**
- In the  Treeview drag and drop the **Geometry** layer name beneath the Attributes layer name.

Birth and Death


The **Birth and Death** feature must be used to simulate the removal of soil during excavation in front of the wall. Excavation will take place over eight loadcases.


Attributes
Birth and Death...


- Select the **Deactivate** tab and click **Next**. Ensure that the **Percentage to Redistribute** is set to **100** and enter the attribute name as **Excavation**.
- Click **Finish** to add the attribute to the  Treeview.
- Right-click on the **Excavation** entry and ensure Visualise Assignments is selected.


Assign the deactivation to the model.

- Use the zoom-in button to enlarge the view of the top-left corner of the model.
- Select the top surface representing the first layer of soil to be removed in front of the retaining wall and drag and drop the deactivation attribute **Excavation** from the

 Treeview onto the selection. With the **Assign to surfaces** option selected enter the Loadcase name as **Excavation to -1.50m** and click **OK** to assign the attribute.

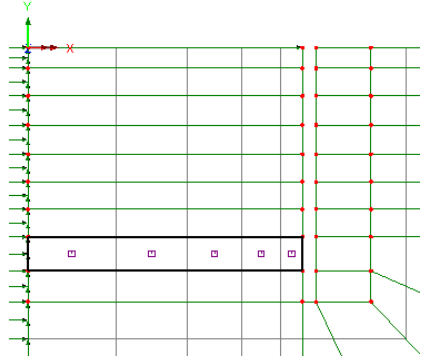

- Select the next surface down in front of the wall and drag and drop the deactivation attribute **Excavation** from the  Treeview onto the selection. With the **Assign to surfaces** option selected enter the Loadcase name as **Excavation to -3.00m** and click **OK** to assign the attribute.
- Repeat this procedure, selecting the next surface down each time and renaming the loadcases **Excavation to -5.00m**, **Excavation to -7.13m**, **Excavation to -9.26m**, **Excavation to -11.26m**, **Excavation to -13.26m** and **Excavation to -15.26m** respectively. The adjacent image shows the final excavation assignment made.




Note. Deactivated surfaces (and hence elements) can be visualised and checked by setting each loadcase active in the  Treeview.

Analysis Control

The use of a Mohr-Coulomb nonlinear material in this example dictates that a nonlinear analysis control must be specified.

- In the  Treeview right-click on **Loadcase 1** and rename it to **In situ**
- In the  Treeview right-click on **In situ** and select **Nonlinear & Transient** from the **Controls** menu.

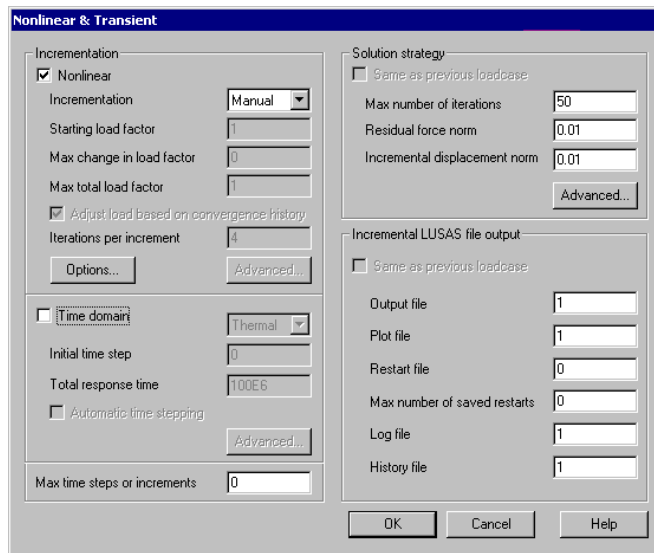

In the **Incrementation** section:

- Select the **Nonlinear** option and choose **Manual** incrementation.

In the **Solution strategy** section:

- Set the **Max number of iterations** to **50**.
- Set the **Residual force norm** to **0.01**.
- Set the **Incremental displacement norm** to **0.01**.
- Click **OK** to set the loadcase control.

Saving the model

File
Save



Save the model file.

Running the Analysis

File
LUSAS Datafile...




A LUSAS data file name of **drained_wall** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to solve the problem.

A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to  Treeview.

In addition, 2 files will be created in the directory where the model file resides:



- ☐ **drained_wall.out** this output file contains details of model data, assigned attributes and selected statistics of the analysis.
- ☐ **drained_wall.mys** this is the LUSAS results file which is loaded automatically into the Treeview to allow results processing to take place.

If the analysis fails...

 
If the analysis fails, the output file will provide information relating to the nature of the error encountered. A common mistake made when using LUSAS Modeller for the first time is to forget to assign particular attribute data (geometry, mesh, supports, loading etc.) to the model. Any errors listed in the output file should be fixed in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If errors are listed that for some reason cannot be corrected, a file is provided to re-create the model information correctly, allowing a subsequent analysis to be run successfully.




- ☐ **drained_wall_modelling.vbs** carries out the modelling of the example.




Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 - Enter the file name as **drained_wall**



 
To recreate the model, select the file **drained_wall_modelling.vbs** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.





Rerun the analysis to generate the results


Viewing the Results

Loadcase results can be seen in the  Treeview. If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for the first time step (increment 1) are set active by default.

- If present, turn off the **Geometry**, **Mesh** and **Attributes** in the  Treeview.


Wall Displacement

- In the  Treeview right-click on the results for **Excavation to -13.26m** and **Set Active**.
- With no features selected click the right-hand mouse button in a blank part of the graphics window and select **Deformed mesh** to add the deformed mesh layer to the  Treeview.
- Select the **Specify factor** option and specify a factor of **5**. Click on the **Mesh** tab and select the option to **Show activated only**. Click **OK** to visualise the deformed mesh for increment 8 magnified by a factor of 5.

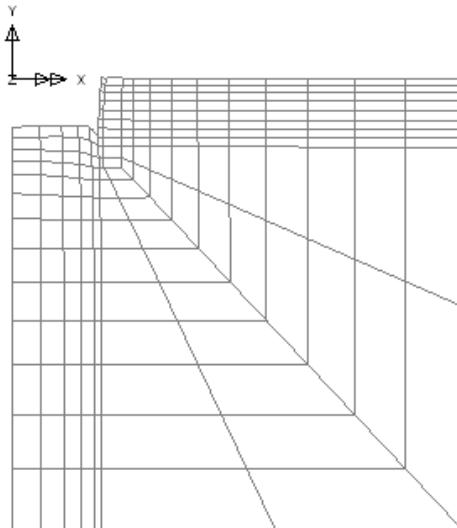

A graph of the deformation of the wall toe will be created using the graph wizard.

- Zoom into the top left-hand side of the model and select the node at the wall toe.

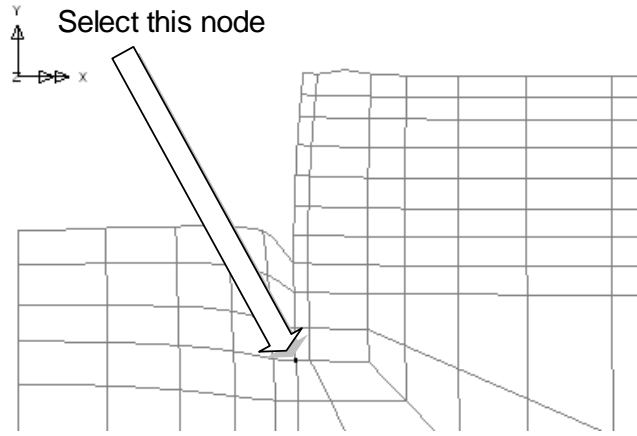

Utilities
Graph Wizard...


- With the **Time history** option selected click **Next**.





Firstly define the data to be used for the X axis.

- Selected the **Named** option and click **Next**.
- Select **Loadcase ID** from the drop down list and click **Next**.

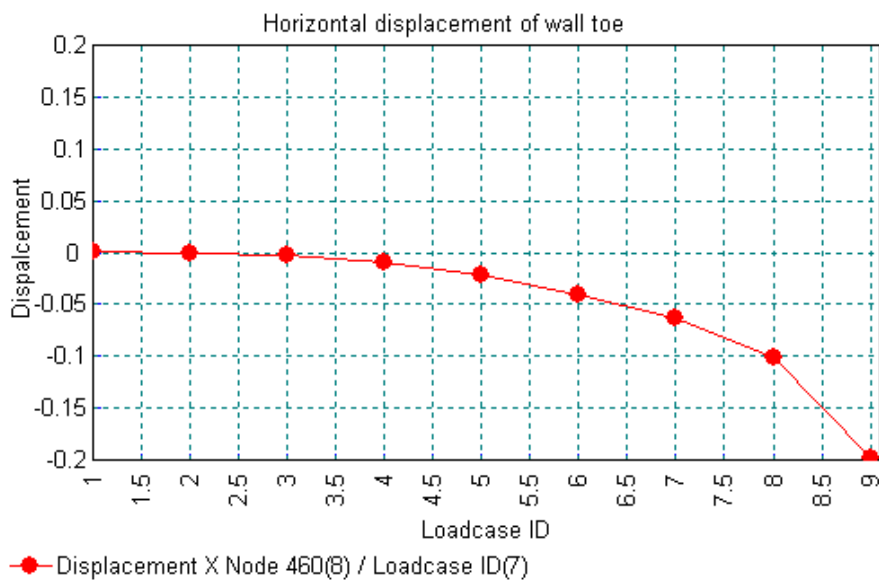Secondly define the data for the Y axis.


- With the **Nodal** option selected and click **Next**.
- Select **Displacement** from the Entity drop down list and **DX** from the Component drop down list.
- The selected node number will appear in the **Specify node** drop down list. Click **Next**.
- Enter suitable text for the graph titles and click **Finish** to display the graph of displacement of the wall toe towards the excavation.



-  Close the graph window.
-    Maximise the graphics window.

Surface Heave

- Select the node at the top of the back of the wall.

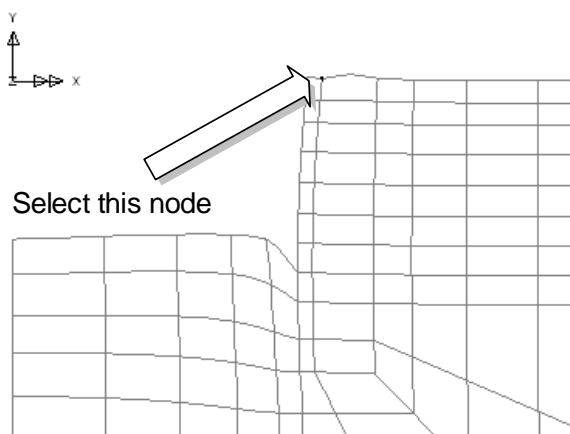


- With the **Time history** option selected click **Next**.



Firstly define the data to be used for the X axis.

- Selected the **Named** option and click **Next**.
- Select **Loadcase ID** from the drop down list and click **Next**.

Secondly define the data for the Y axis.

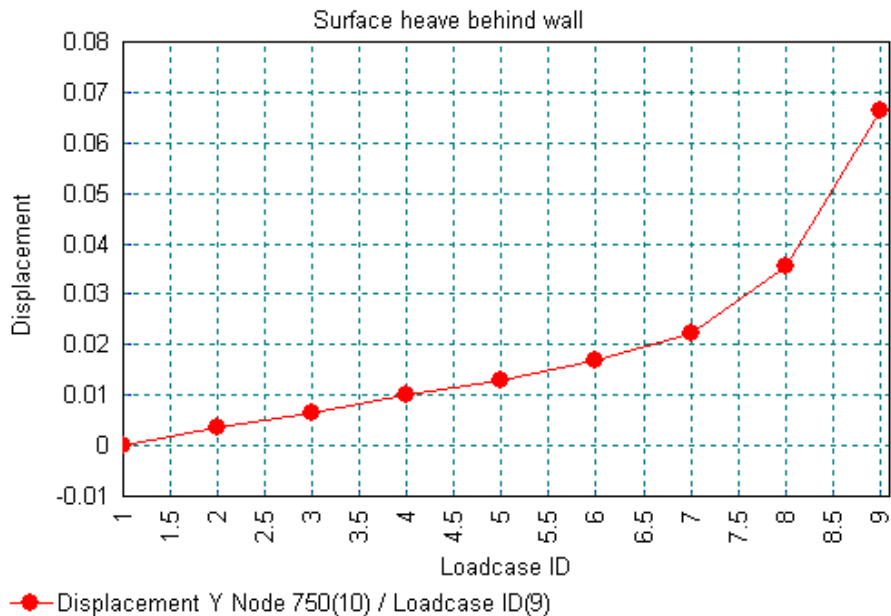

- With the **Nodal** option selected and click **Next**.
- Select **Displacement** from the Entity drop down list and **DY** from the Component drop down list.
- The selected node number will appear in the **Specify node** drop down list. Click **Next**.
- Enter suitable text for the graph titles and click **Finish** to display the graph of heave behind the wall.




-  Close the graph window.
-  Maximise the graphics window.

Plotting contours of plastic strain in the soil


Because the model contains elements with two different material properties the active set on which results are to be plotted must be selected.

- In the  Treeview right-click on the group name **Soil** and select **Show Results > Show Results Only On This Group**
- With no features selected click the right-hand mouse button in a blank part of the graphics window and select **Contours** to add the contours layer to the  Treeview.
- Select **Plastic strain – Plane strain** from the Entity drop down list and **EPE** from the component drop down list.
- Select the **Contour Range** tab and set the **Maximum** to **0.01** (1% strain).
- Click the **OK** button to display contours of the plastic strain distribution around the wall.

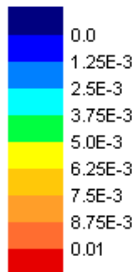

Loadcase: 8:Excavation to -13.26
Entity: Plastic strain - Plane Strain
Component: EPE



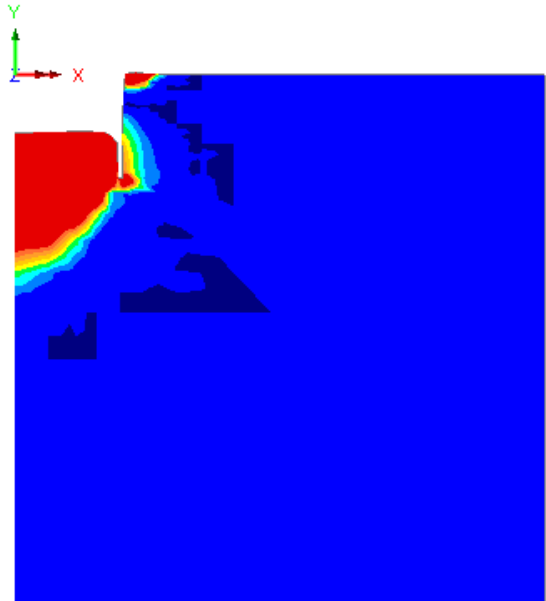


Maximum 0.375332 at node 301
Minimum 0.0 at node 2



Prop Force

- Turn off the display of the **Deformed Mesh** and **Contours** layers in the  Treeview.
- Turn on the display of the **Mesh** layer in the  Treeview.

- In the  Treeview right-click on the group name **Wall** and select **Show Results > Show Results Only On This Group**
- Right-click on the group **Wall** in the  Treeview and select **Set as Only Visible**.
- Select the node at the top-left of the wall that is supported by the prop in the X direction.

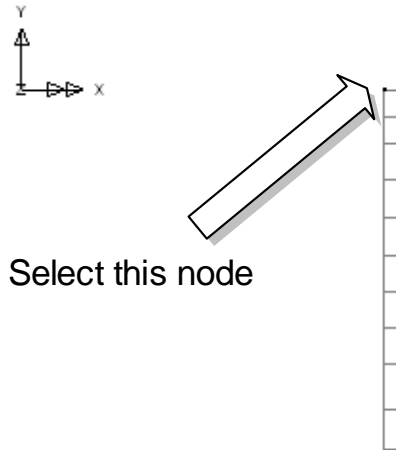

Utilities
Graph Wizard...


- With the **Time history** option selected click **Next**.

Firstly define the data to be used for the X axis.



- Selected the **Named** option and click **Next**.
- Select **Loadcase ID** from the drop down list and click **Next**.

Secondly define the data for the Y axis.

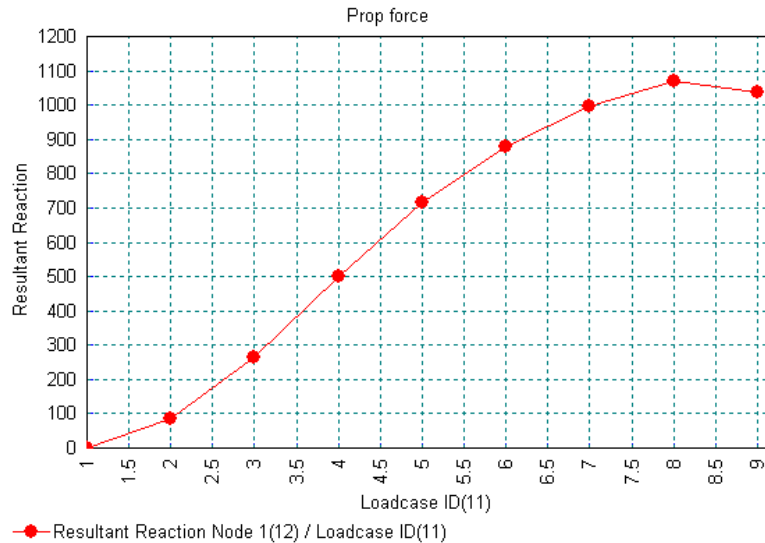- With the **Nodal** option selected and click **Next**.
- Select **Reaction** from the Entity drop down list and **RSLT** from the Component drop down list.
- The selected node number will appear in the **Specify node** drop down list. Click **Next**.
- Enter suitable text for the graph titles and click **Finish** to display the graph of heave behind the wall.



Note. The resultant reaction has been graphed in the above figure. Since the wall is propped only in the horizontal (X) direction at this location (see Supports section) there is no reaction in the vertical direction and therefore the resultant reaction is identical to the horizontal reaction.


-  Close the graph window.
-  Maximise the graphics window.

Bending moment in the wall at 10m Depth


Because the model contains elements with two different material properties the active set on which results are to be plotted must be chosen.

Utilities
Graph Through 2D...

- Ensure the **Snap to grid** option is selected and enter a value of **1** for **Grid size**.
- Click on **OK**.
- Draw a line with the mouse through the wall at 10m depth as shown below.

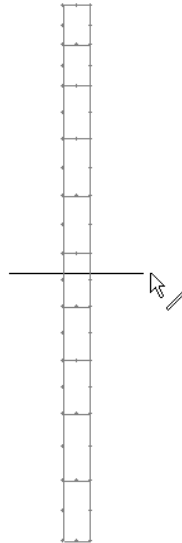

- Select **Resultant effects from 2D model** and select **Bending stress** in the list and click **Next**.

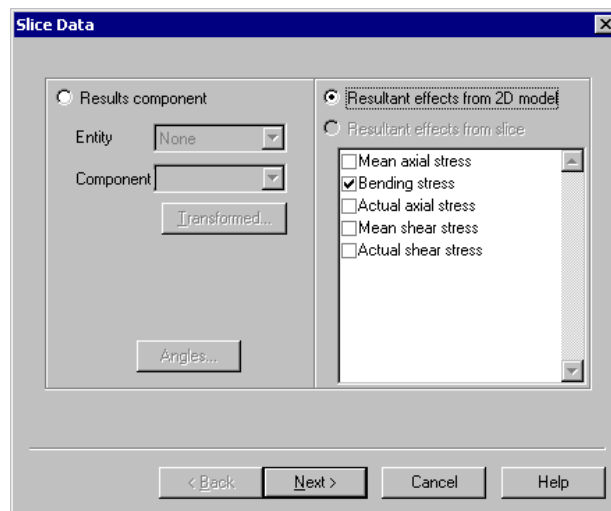

- Enter suitable text for the graph titles and click **Finish**. A graph is drawn and the bending moment (and other information) is displayed in the Text output pane.

```
***2D Forces/Moments. Loadcase      8 Results File      0
Axial Force Per Unit Width      =    -51.20
Shear Force Per Unit Width      =   -148.6
Moment Per Unit Width           =    4280.
Section Depth                   =     1.000
Mean Normal Stress Sz           =    -51.20
Nominal Bending Stress          =    0.2568E+05
...done
```

The bending moment reported is 4280 kN/m^2 per metre run of the wall.

This completes the example.

Staged Construction of a Concrete Dam



For software product(s):	Any Plus version
With product option(s):	Nonlinear, Dynamic, Thermal, Heat of hydration

Description

A 30m high concrete dam, tapering from 10m thick at the base to 3.1735m thick at the crest is to be constructed in three stages, each 10 metres high. Each stage is added 10 days after the previous stage, and the analysis runs for a total of 30 days.

Animations are created showing the variation of temperature and stress during its construction.

Loadcase: 61:Time Step 60 Time = 23.5391
Results file: Concrete_dam_therm.mys
Response time: 23.5391
Entity: Potential
Component: PHI

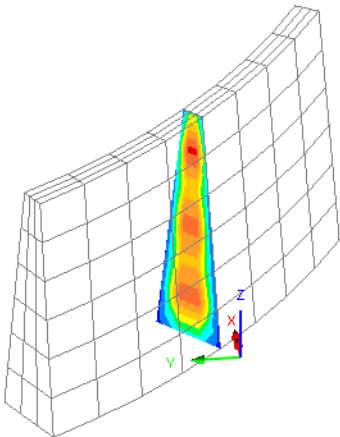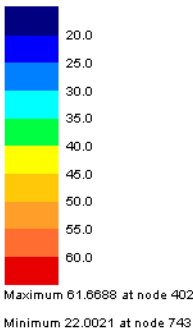

Simplified geometry is used to allow the example to concentrate on the definition of the concrete heat of hydration loading and staged construction techniques required.

Units used are N, m, kg, s, C throughout

Objectives

The required output from the analysis consists of:

- ☐ A time history of the temperature throughout the dam during construction.
- ☐ A time history of the distribution of maximum principal stress (S1) throughout the dam.

Keywords

Birth, Death, Staged Construction, Activate, Deactivate, Heat of hydration, Semi-coupled analysis, Concrete

Associated Files



- ☐ **concrete_dam_geometric_modelling.vbs** carries out the geometric modelling of the example.
- ☐ **concrete_dam_modelling.vbs** carries out the complete modelling of the example to a ready to run stage.

Discussion

Concrete is generally unique among structural materials in that it interacts with its environment undergoing unavoidable physical and chemical volume changes. Concrete exhibits certain characteristics such as ageing, creep and shrinkage, which are collectively known as time dependent deformations; these are dealt with in other examples in this manual. See the Concrete Tower example if age and creep is of interest to you.

The process of hydration is an exothermic chemical reaction, which leads to large amounts of heat generation. This leads to thermal stresses, which may potentially cause the concrete to crack. A semi-coupled analysis can be used to investigate the connection between the heat generated due to concrete hydration and the thermal stresses induced as a result.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model


- Enter the file name as **Concrete_Dam**
- Use the **Default** working folder
- Enter the title as **Concrete dam example to model heat of hydration**
- Select units of **N,m,kg,s,C**
- Ensure the **Coupled** user interface is selected.
- Select a startup template of **None**
- Select the **Vertical Z Axis** option.
- Click the **OK** button.




Note. Save the model regularly as the example progresses. Use the Undo button to correct any mistakes made since the last save was done.

Defining the Geometry

The base of the dam is 10m thick, 54.97m along its centreline, and subtends an angle of 30 degrees. The thickness of the dam tapers with increasing height in a nonlinear manner (such that the thickness at the abutments is very slightly larger than at the centre of the dam).

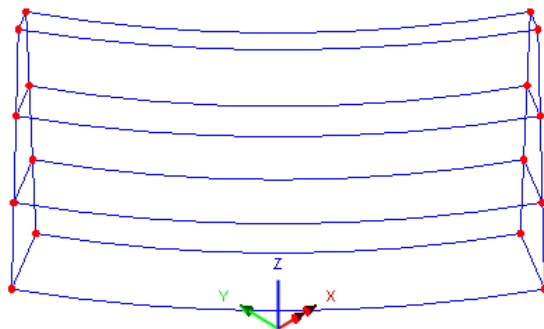

 Since the geometry of the dam is not the focus of this example a script file has been provided which will automatically create the model.



- Select the file **concrete_dam_geometric_modelling.vbs** which is located in the **<LUSAS Installation Folder>\Examples\Modeller** directory and click **OK**



Select the isometric button which, because of the way the geometry has been defined, will give a front view of the dam. The three volumes represent the three stages of construction.

Defining Groups

It is useful in staged construction analysis to make use of the group facility in LUSAS. This allows parts of the model to be displayed in isolation according to the construction stage being modelled and simplifies the viewing of results.

- Select the lowest volume representing the concrete in construction stage 1.



Enter the group name as **Stage 1** and click **OK** to finish defining the group.

- With the previous volume still selected, hold the Shift key down and add the middle volume representing construction stage 2 to the selection.



Enter the group name as **Stage 2** and click **OK** to finish defining the group.

- With the previous two volumes still selected, hold the Shift key down and add the upper volume representing construction stage 3 to the selection.



Enter the group name as **Stage 3** and click **OK** to finish defining the group.

Defining and Assigning Mesh Attributes

To ensure a well-proportioned mesh, line mesh attributes will be assigned to define a mesh with three elements through the thickness of the dam, and eight elements across the width of the dam. Vertically, lines defining each volume will be split into two divisions. To create this mesh arrangement both default and individual line mesh divisions will be used.




- On the Model Properties dialog select the **Meshing** tab. Change the default line divisions to **3** and click **OK**.


This specifies the default number of mesh divisions to be used along a line unless a line mesh attribute is subsequently assigned.

- On the Line Mesh dialog ensure that the Structural element type is set to **None**. Set the number of divisions to **2**, name the attribute **Divisions = 2** and click **Apply** to create the attribute.
- Change the number of divisions to **8**, change the name to **Divisions = 8** and click **OK**.



Tip. To assign these mesh divisions to the model the selection of lines could be done individually, but lines can also be selected by holding-down the **Alt + L** keys while box-selecting with the mouse. When this is done any part of a line that is within the area dragged is selected.

- Select the twelve near-vertical lines that define four edges of the dam. Assign the line mesh attribute **Divisions = 2** from the  Treeview onto the selected features.
- Select the eight horizontal curved lines from the model. Assign the line mesh attribute **Divisions = 8** from the  Treeview onto the selected features.
- The dam is to be modelled with **Stress, Hexahedral, Linear** elements (HX8M elements) in the structural analysis. By clicking on the Thermal tab it can be seen that these elements are automatically coupled to **Field, Hexahedral, Linear** elements (HF8 elements) in the thermal analysis. Ensure that a **Regular** mesh is used. (The mesh spacing will be governed by the assigned line mesh attributes. Enter the dataset name as **Coupled Brick Elements** and click **OK**
- Select all volumes in the model (or use the **Ctrl + A** keys to select all features) and drag and drop the **Coupled Brick Elements** mesh from the  Treeview onto the selected features.


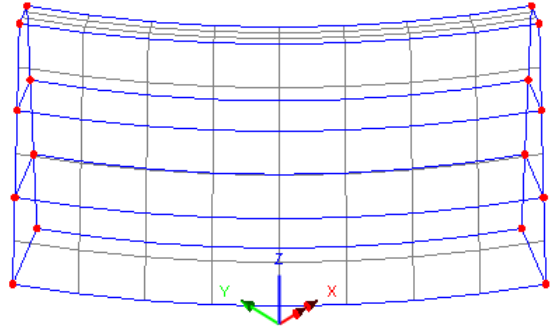


Material Properties

- Enter a Young's modulus of **30e9**, a Poisson's ratio of **0.2**, and a mass density of **2.4e3**. Click the **Thermal expansion** check box and enter a Coefficient of thermal expansion of **10e-6**.
- Click on the **Thermal** tab. Leave the Phase change state set to None and enter a Thermal conductivity of **172.8E3** (J/day·m·°C) and a Specific heat coefficient of **2.5075E6** (J/m³·°C).

The heat of concrete hydration thermal loading will now be defined.

  - Set the Exotherm option to **Concrete** for Cement type **Type I** and set Timescale units to **Days**. Set the remaining values required in the dialog as follows: Weight of cement **307**, Water/Cementitious ratio **0.47**, Weight of slag **0**, Weight of fly ash **0**, CaO content of fly ash **0**, Assumed cure temperature **21.1** and click **OK**. See the following dialog for confirmation of the thermal values required:



Isotropic

Using the following properties

☐ Plastic
 ☐ Creep
 ☐ Damage
 ☐ Shrinkage
 ☐ Viscous
 ☐ Two phase

Elastic Thermal

Phase change state:

	Value
Thermal conductivity	172.8e3
Specific heat	2.5075e6

Exotherm:

Cement type:

Timescale units:

	Value
Weight of cement per unit volume	307
Water/Cementitious ratio	0.47
Weight of slag per unit volume	0
Weight of fly ash per unit volume	0
CaO content of fly ash (%)	0
Assumed cure temperature	21.1

Attribute: (new)

OK Cancel Apply Help



Note. The Specific heat coefficient is the specific heat capacity multiplied by the density.



Note. When computing the heat due to the rate of hydration of concrete, hours or days are convenient units to use for the time step and elapsed time. Due to the way the solution algorithms are formulated this is independent of the fundamental units of seconds and Newtons that are defined for the model.



Note. The concrete heat of hydration loading is a type of internal heat generation. From the input parameters LUSAS automatically calculates the amount and rate of this internal heat generation based on formulae presented in published research by Schindler and Folliard. Reference [S18] *LUSAS Theory Manual*.


Assign the Material Properties


- With all three volumes in the model selected, drag and drop **Concrete Ungraded** from the Treeview onto the selected volumes.

Structural Supports

Attributes	
Support	>
Structural...	

A fully fixed support is required for the base and abutments of the dam. All degrees of translation in the X, Y and Z-axes must therefore be set as **Fixed**. Enter the attribute name as **Fixed** and click **OK**

- Select the surfaces that define the base and abutments of the dam and from the  Treeview drag and drop the support attribute **Fixed** onto the selected features, ensure the **All loadcases** option is selected and click **OK**

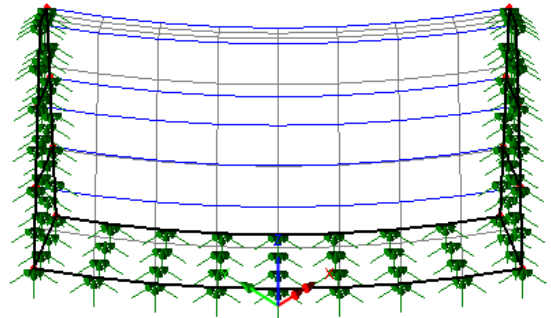

Tip. Hold-down the **Shift +S** keys and box-select the surfaces required.

Thermal Supports

A thermal support needs to be defined for use later in the example.

Attributes	
Support	>
Thermal...	

- Ensure the temperature support is set to **Free** and enter the attribute name as **Free** and click **OK**.

Do not assign this support to the model yet. It is to be used during the activation and deactivation of the thermal loadcases to free-up elements that have had their temperature restrained at the concrete placement temperature.

Structural Loading

Self-weight is the only loading to be considered on the model

Attributes	
Loading	>
Structural...	

- Select **Body Force**, click **Next** and enter a value of **−9.81** in the **Z** direction. Name the attribute as **Self Weight** and click **Finish**

Self-weight loading will not be applied yet. Instead, it will be applied when defining the staged construction processes.

Thermal Loading

Several thermal loads need to be defined for applying to the model later. Environmental temperature loads for the air and ground temperatures will be defined first, followed by the initial concrete placement temperature.

Air temperature

- Select the **Environmental Temperature** radio button and click **Next**
- Enter a value of **21.1** (°C) for the environmental temperature, and **720E3** (J/m²·day·°C) for the convection heat transfer coefficient. Enter the attribute name as **Air temperature**. Click **Apply**

Ground temperature

- In the first row of the dialog, keep the value of **21.1** (°C) for the environmental temperature, but over-type a value of **240E3** (J/m²·day·°C) for the convection heat transfer coefficient. Change the attribute name to **Ground temperature** and click **Finish**

Initial concrete temperature

The initial concrete temperature will be defined:

- Select the **Prescribed Temperature** radio button and click **Next**
- Enter a value of **21.1** (°C) for the temperature. Ensure the **Total prescribed** button is selected. Enter the attribute name as **Initial concrete temperature**. Click **Finish**

Modelling Staged Construction

In order to correctly model the staged construction of the dam, volumes (and hence, elements) in the model must only be included in the analysis after they have been constructed. Similarly, loading attributes (such as surface heat transfer) will need to be applied only for a certain portion of the analysis to reflect the construction stage being considered. In general, model attributes are assigned and changed using Loadcases, whilst loading attributes that apply during particular times during an analysis are applied to selected features of the model using Load curves.

Creating Activation and Deactivation datasets



Modelling of staged construction processes that require activation and deactivation of elements is carried out in LUSAS using the birth and death facility.

- Choose the **Activate** option and click **Next**
- Enter the attribute name as **Activate** and click **Apply**. Then click **Back** so the dialog can be reused to define the deactivate attribute.
- Choose the **Deactivate** option and click **Next**
- Enter the attribute name as **Deactivate**, leave the percentage to redistribute as **100%** and select **Finish**

When building staged construction models it is often very helpful to see the elements that are actually activated in the loadcase being viewed.

- In the  Treeview, double-click the **Mesh** entry. Select the **Show activated only** option, and click **OK**.

Defining Loadcase properties

- In the  Treeview two loadcase entries can be seen – one structural and one thermal. These are created automatically as a result of selecting a Coupled user interface option at the beginning of the example. There is also a  **Coupled analysis options** object. Loadcases need to be created for each construction stage to be modelled – for both the structural loadings and for the thermal loadings.

Defining a structural initialisation loadcase

- Right-click on structural **Loadcase 1** and rename it to **Structural Initialisation**
- Select **Structural Initialisation** using the right-hand mouse button and from the **Controls** menu select the **Nonlinear and Transient** option.
- On the Nonlinear & Transient dialog select the **Nonlinear** option and leave the incrementation type as **Manual**
- Select the **Time domain** option. Choose a **Viscous** time domain from the drop-down list. Enter the Initial time step as **1e-6**, leave the Total response time as its default value, and set the Max time steps or increments to **1**
- Click **OK** to return to the Modeller window.



 
Note. The small initial time step of 1e-6 has been used to minimise the curing effects during this loadcase.



Note. In this instance the large default total response time has no significance because only one time step is processed. This load case will finish after the first small time step.

Defining a structural loadcase for construction stage 1


- Enter a loadcase name of **Structural stage 1** and click **OK**
- Select **Structural stage 1** using the right-hand mouse button and from the **Controls** menu select the **Nonlinear and Transient** option.
- On the Nonlinear & Transient dialog select the **Nonlinear** option and leave the incrementation type as **Manual**



- Select the **Time domain** option. Choose a **Viscous** time domain from the drop-down list. Enter the Initial time step as **0.05**, the Total response time as **10**, and set the Max time steps or increments to **100**
- Select the **Automatic time stepping** option and then click the **Advanced** button.
- On the Advanced Time Step Parameters dialog set the Time step increment restriction factor to **1.5**, the minimum time step to **0.05** and the Maximum time step to **0.5** This will allow the time step to increase from its initial value of 0.05 up to the maximum value of 0.5 and thus reduce the number of increments required.
- Click **OK** to close the Advanced Time Step Parameters dialog and return to the Nonlinear & Transient dialog. On this dialog pick the **Coupling** button and change the **Interval between coupled reads** and the **Interval between coupled writes** to **0.05**, and click **OK**. Click **OK** to return to the Modeller window.

Defining a structural loadcase for construction stage 2

Loadcases can be dragged and dropped in the Treeview in order to copy them. This saves having to re-enter similar details for each loadcase. Then, just the different values can be defined for each newly copied loadcase.

- Click on loadcase **Structural stage 1** and then, while holding down the **Ctrl** key, drag this loadcase to a blank part of the loadcase Treeview beneath the Nonlinear analysis options object. This will create a new loadcase that is an exact copy named **Copy of Structural stage 1**. Rename this new structural loadcase to **Structural stage 2**
- Double-click the  **Nonlinear and Transient** object for **Structural stage 2** and set the total response time as **20**

Defining a structural loadcase for construction stage 3

- Repeat the last two procedures to create another copy of the first loadcase called **Structural stage 3**, but set the total response time as **30**

Defining a thermal initialisation loadcase

- Right-click on the thermal Loadcase 2 and rename it to **Thermal Initialisation**
- Select **Thermal Initialisation** using the right-hand mouse button and from the **Controls** menu select the **Nonlinear and Transient** option.
- On the Nonlinear & Transient dialog select the **Nonlinear** option and leave the incrementation type as **Manual**

- Select the **Time domain** option. Choose a **Thermal** time domain from the drop-down list. Enter the Initial time step as **1e-6**, leave the Total response time as its default value, and set the Max time steps or increments to **1**
- In the Solution Strategy section set the Max number of iterations to **15**
- Click **OK** to return to the Modeller window.



Note. The small initial time step of 1e-6 has been used to minimise the curing effects during this loadcase.



Note. In this instance again, the large default total response time has no significance because only one time step is processed. This load case will finish after the first small time step.

 
Defining a thermal loadcase for construction stage 1

- Enter a loadcase name of **Thermal stage 1**
- Click on loadcase **Thermal stage 1** using the right-hand mouse button and from the **Controls** menu choose the **Nonlinear and Transient** option.
- On the Nonlinear & Transient dialog tick the **Nonlinear** option and leave the incrementation type as **Manual**
- Select the **Time domain** option and note that the **Thermal** time domain option is the only one available for selection. Enter the Initial time step as **0.05**, the Total response time as **10**, and set the Max time steps or increments to **100**
- Ensure the **Automatic time stepping** option is selected and then click the **Advanced** button.
- On the Advanced Time Step Parameters dialog set the Time step increment restriction factor to **1.5**, the minimum time step to **0.05** and the Maximum time step to **0.5**
- Click **OK** to close the Advanced Time Step Parameters dialog and return to the Nonlinear & Transient dialog. On this dialog, pick the **Coupling** button and change the **Interval between coupled reads** and the **Interval between coupled writes** to **0.05**, and click **OK**. Click **OK** to return to the Modeller window.


Now create a copy of this loadcase:

Defining a thermal loadcase for construction stage 2

- Click on loadcase **Thermal stage 1** and then, while holding down the **Ctrl** key, drag this loadcase to the white space in the loadcase Treeview beneath the Nonlinear



analysis options object. This will create a new loadcase that is an exact copy named **Copy of Thermal stage 1**. Rename this new thermal loadcase as **Thermal stage 2**

- Double-click the  Nonlinear and Transient object for **Thermal stage 2**, set the total response time as **20**

Defining a thermal loadcase for construction stage 3

- Repeat the last procedure to create another copy of the first loadcase called **Thermal stage 3**, but set the total response time as **30**



All loadcases have now been defined. Element activations and model attributes will be assigned to these loadcases later.




Note. The total response time in each loadcase represents the total time at which that loadcase in the analysis ends, and the next one begins.

Set coupled analysis options

In this analysis, the thermal results affect the structural behaviour (that is, temperatures cause thermal stresses), but the structural results do not affect the thermal behaviour. A semi-coupled analysis is therefore required, and the appropriate coupled analysis options must be chosen.

- Double click on the  **Coupled analysis options** object in the  Treeview.
- Set the coupling type as **Thermal first** from the drop down list.
- Select the **Initialise reference temperatures** option.
- Ensure the **Time coupling** radio button is selected.
- Set the **First data write** to **0.05** and the **First data read** to **0.05** (i.e. every step)
- Click **OK**

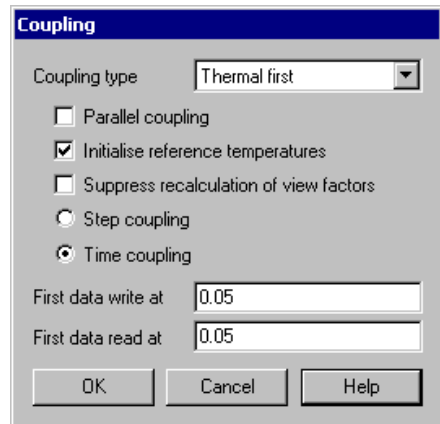

Coupling

Coupling type: Thermal first

☐ Parallel coupling

☒ Initialise reference temperatures

☐ Suppress recalculation of view factors

☐ Step coupling

☒ Time coupling

First data write at: 0.05

First data read at: 0.05


OK Cancel Help

Load Curves

Load curves are used to describe the variation of the loading in nonlinear, transient and Fourier analyses. In a transient thermal analysis, such as in this example, the environmental temperature loading on specific surfaces of the dam will change with time. As the construction progresses some surfaces that were initially external surfaces


(that could dissipate heat to the outside environment) become internal ones that can only dissipate heat to other parts of the structure.

Defining Load Curves

- Right-click on the  Thermal folder icon, and choose **New** and **Load Curve** to open the Load Curve dialog box.

Defining a concrete placement load curve:

- In the User-defined section of the dialog enter a Time of **0** and a Factor **1**, press the **Tab** key to create a new row. On this new row enter a Time of **30** and a Factor of **1**. Leave the default values of Activation time (0.0) and Scaling factor (1.0) unchanged. Name the load curve **Concrete placement** and click **Apply**

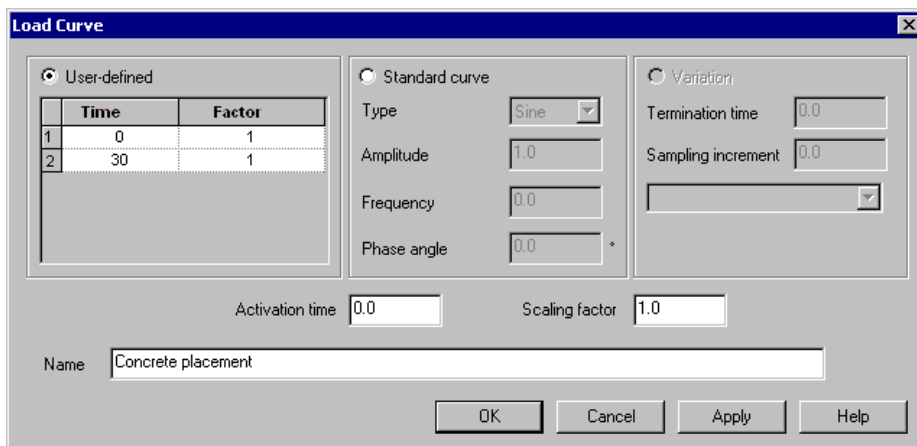

Load Curve

☒ User-defined

	Time	Factor
1	0	1
2	30	1

☐ Standard curve

Type:

Amplitude:

Frequency:

Phase angle:

☐ Variation

Termination time:

Sampling increment:

Activation time:

Scaling factor:

Name:

OK Cancel Apply Help

- With reference to data that follows, repeat this procedure four more times to add four more load curves called **External surface stage 1**, **External surface stage 2**, **External surface stage 3** and **Base and abutments**. The User-defined area of each of the dialog boxes should be filled-in according to the tables that follow.

Time	Factor
0	1
9.999	1

Table 1. External surface stage 1

Time	Factor
10	1
19.999	1

Table 2. External surface stage 2

Time	Factor
20	1
30	1

Table 3. External surface stage 3

Time	Factor
0	1
30	1

Table 4. Base and abutments

Setting a Solution (Solver) option

In this example the self weight will be applied to the whole model in the initial loadcase. Because of this a solution setting to preserve any assigned loading when elements are deactivated (to model the construction stages) needs to be set.

- On the **Solution** tab select **Element options** to open the Element Options dialog.
- Select the option **Preserve loading whilst elements deactivated** and click **OK** to return to the Properties dialog.
- Click **OK** in the Properties dialog to return to the Modeller window.

Setting this Solution option ensures that the weight of each stage of construction is included in the analysis only once that stage is activated.




Caution. Note that when using this solution option no additional loading should be applied to any loadcases following the one that contained the load assignments. If done so, the initial applied loading for those loadcases will be lost.

Assigning Activation and Deactivation attributes


Construction Stage 1

The elements not required for the first construction stage must be deactivated.

- In the Graphics window select the top two volumes of the dam.

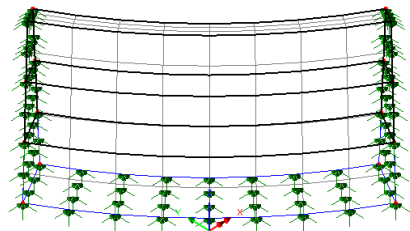


Structural activation/deactivation

- Drag and drop the deactivation attribute **Deactivate** from the  Treeview, ensuring that it is assigned to loadcase **Structural Initialisation** and clicking **OK**

Because the option to show the activated mesh only was set earlier in the example the view window will update to show only the elements for the lowest volume.

Thermal activation/deactivation

- With the top two volumes still selected, assign the deactivation attribute **Deactivate** from the  Treeview onto the selected features ensuring that it is assigned to loadcase **Thermal Initialisation**

Verifying self weight and activation assignments


- If, during the course of this example, you need to verify loading assignments such as self weight, or to check when particular features (and hence elements) become active in an analysis, select a feature (say, a volume) and then by using the right-hand mouse button choose **Properties**. Go to the **Activate Elements** tab. Note that the 'greyed-out' loadcase is simply the current loadcase and may not be the actual loadcase that the properties are assigned to. Highlighting an entry in the right-hand panel (that shows the assigned attributes) will show the loadcase in which the activation is assigned in the Loadcase box.

Construction Stage 2


The elements in the second construction stage now need to be activated.


- In the graphics window select only the second stage of the dam (i.e. the middle volume).

Structural activation/deactivation

- Assign the activation attribute **Activate** from the  Treeview, ensuring that it is assigned to loadcase **Structural stage 2** and clicking **OK**

Thermal activation/deactivation

- With the middle volume still selected, assign the activation attribute **Activate** from the  Treeview ensuring that it is assigned to loadcase **Thermal stage 2**

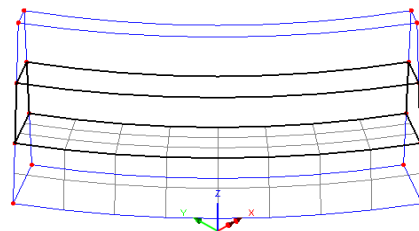


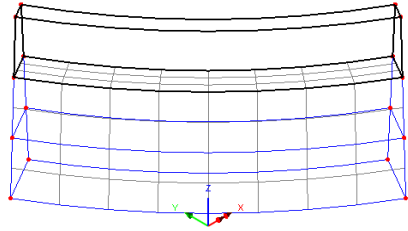
Construction Stage 3

The elements in the third construction stage now need to be activated.


- In the graphics window select only the top volume of the dam.

Structural activation/deactivation


- Assign the activation dataset **Activate** from the  Treeview, ensuring that it is assigned to loadcase **Structural stage 3** and clicking **OK**




Thermal activation/deactivation

- With the top volume still selected, assign the activation attribute **Activate** from the  Treeview ensuring that it is assigned to loadcase **Thermal stage 3**

Assigning Structural loading

- Select the whole model using the **Ctrl + A** keys together and drag and drop the loading attribute **Self Weight** from the  Treeview onto the selected features, assigning the loading to the **Structural Initialisation** loadcase

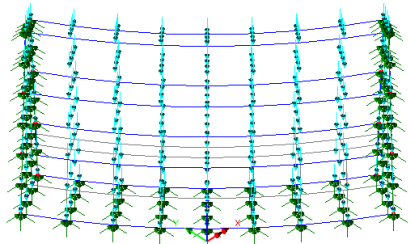


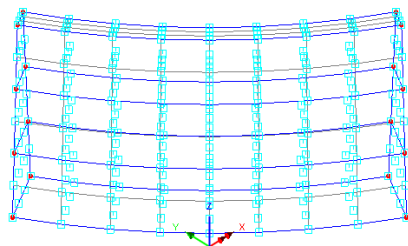
Assigning thermal loading (load curves)

Load curves were defined to model the thermal loading and these need to be assigned to appropriate features of the model.

Assigning the Initial Concrete Temperature




The Initial Concrete Temperature attribute will apply to all the stages of the model as they are activated.


- With all three volumes selected, assign the thermal loading attribute **Initial Concrete Temperature** from the  Treeview, ensuring that it is assigned to Load curve **Concrete Placement** in the drop-down list before clicking **OK**.



Assigning ground temperature

Ground temperature loading only applies to selected surfaces. These could be selected one-by-one but, to show an alternative way, they can also be selected by virtue of already having had a support assigned to them. First, a structural loadcase must be set active to allow selection of an assigned structural attribute:


- In the  Treeview right-click on the **Structural Initialisation** loadcase and select **Set active**.
- In the  Treeview right-click on the Supports entry **Fixed** and choose **Select Assignments**
- With the bottom and side surfaces only selected, assign the thermal loading attribute **Ground temperature** from the  Treeview, ensuring that it is assigned to Load curve **Base and abutments** in the drop-down list before clicking **OK**.

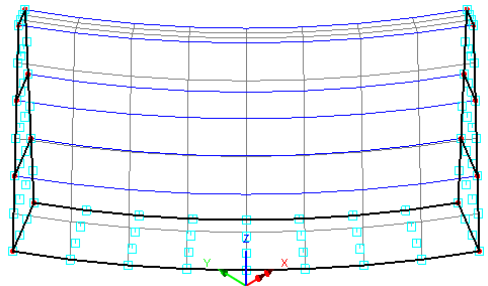



Assigning air temperatures and thermal supports


The surfaces in contact with the air change as the construction progresses. To help ensure the correct surfaces are selected prior to assigning air temperature loading the pre-defined Groups (that were set-up at the start of the example to mimic the construction process) will be used. Thermal supports also need to be assigned to the model at each construction stage to free-up nodes in the model that are restrained at a prescribed temperature by the LUSAS Modeller.

Construction Stage 1

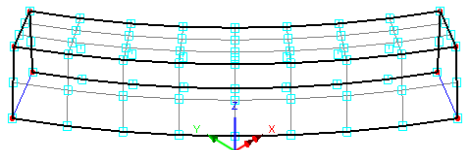


- In the  Treeview right-click on the group name **Stage 1** and select the **Set as Only Visible** option.
- Click in the graphics area to allow a keyboard short-cut to be used.
- Holding-down the **Shift + S** keys select the front, back and top Surfaces of the concrete that forms stage 1
- Assign the thermal loading attribute




Air temperature from the  Treeview, ensuring that it is assigned to Load curve **External surface stage 1** in the drop down menu before clicking **OK**



- Select the Volume and assign the thermal support **Free** from the  Treeview, ensuring that it is assigned to volumes and selecting **Thermal stage 1** from the loadcase drop down list before clicking **OK**

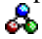
Construction Stage 2

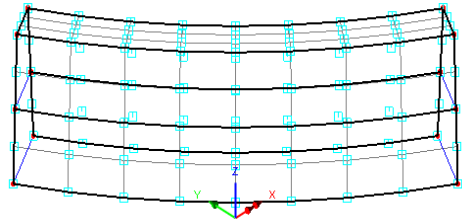
- In the  Treeview right-click on the group name **Stage 2** and select the **Set as Only Visible** option.
- Click in the graphics area to allow a keyboard short-cut to be used.
- Holding-down the **Shift + S** keys select the front, back and top surfaces of the concrete that forms stage 2 (5 surfaces in total)
- Assign the thermal loading attribute **Air temperature** from the  Treeview, ensuring that it is assigned to Load curve **External surface stage 2** in the drop down menu before clicking **OK**
- Select the two Volumes representing this construction stage and assign the thermal support **Free** from the  Treeview, ensuring that it is assigned to volumes and selecting **Thermal stage 2** from the loadcase drop down list before clicking **OK**



Construction Stage 3

- In the  Treeview right-click on the group name **Stage 3** and select the **Set as Only Visible** option.
- Click in the graphics area to allow a keyboard short-cut to be used.
- Holding-down the **Shift + S** keys select the front, back and top surfaces of the concrete that forms stage 3 (7 surfaces in total)
- Assign the thermal loading attribute **Air temperature** from the  Treeview, ensuring that it is assigned to Load curve **External surface stage 3** in the drop down menu before clicking **OK**

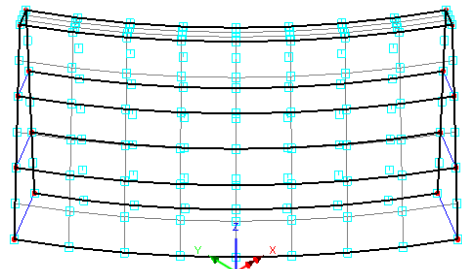

- Select the three Volumes representing this construction stage and assign the thermal support **Free** from the  Treeview, ensuring that it is assigned to volumes and selecting **Thermal stage 3** from the loadcase drop down list before clicking **OK**

The model is now complete.


File
Save





Save the model file.

Staged Construction of a Concrete Dam

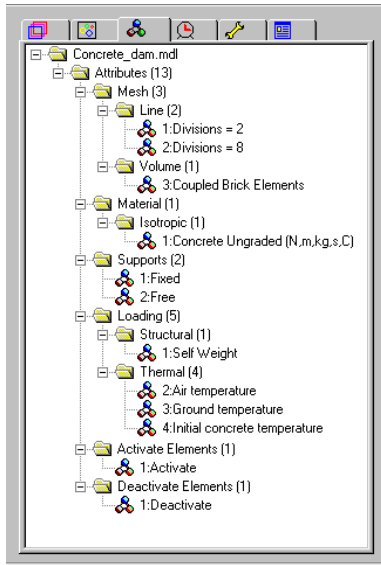
Checking the Attributes and Loadcase Treeviews




In defining and modelling the staged construction of the dam the Attributes  and the Loadcase  Treeviews now contain all the information for the LUSAS Solver to carry out an analysis.

For a successful analysis your model should contain Treeviews similar to those shown.. Right-clicking on attribute and loadcase data allows any defined values to be checked. If your model has potential errors in your Attribute data or in your Loadcase Treeviews, a file is provided to enable you to re-create the model from scratch and run the analysis successfully. See the next page for details.



Note. When solving the model note that in the  Treeview the structural and thermal loadcases are always tabulated and solved in order from top to bottom. Additionally, the thermal loadcases can be solved before the structural ones by stating the coupling type in the Coupled analysis object.

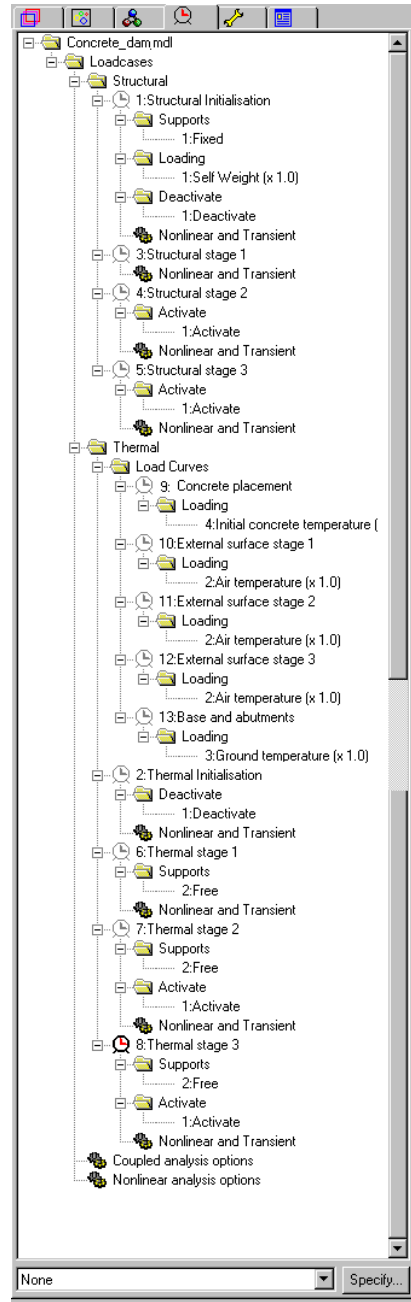

Running the Analysis

With the model loaded:




A LUSAS data file name of **concrete_dam** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.



A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

If the analysis is successful...

The LUSAS results file will be added to the  Treeview.

In addition, 4 files will be created in the directory where the model file resides:

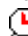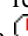

- ☐ **concrete_dam_therm.out** this output file contains details of model data, assigned attributes and selected statistics of the thermal analysis.
- ☐ **concrete_dam_struct.out** this output file contains details of model data, assigned attributes and selected statistics of the structural analysis.
- ☐ **concrete_dam_therm.mys** this is the LUSAS results file from the thermal analysis which is loaded automatically into the  Treeview to allow results to be viewed.
- ☐ **concrete_dam_struct.mys** this is the LUSAS results file from the structural analysis which is loaded automatically into the  Treeview to allow results to be viewed.

If the analysis fails...

If the analysis fails, information relating to the nature of the error encountered is written to a output files in addition to the text output window. Any errors listed in the text output window should be corrected in LUSAS Modeller before saving the model and re-running the analysis.

Rebuilding a Model

If it proves impossible for you to correct the errors reported the following file is provided to enable you to re-create the model from scratch and run an analysis successfully:

 


 **concrete_dam_modelling.vbs** carries out the modelling of the example.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

- Enter the file name as **concrete_dam**
- Select units of **N,m,kg,s,C**
- Ensure the **Coupled** user interface is selected and click the **OK** button




- To recreate the model, select the file **concrete_dam_modelling.vbs** located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.



Run the analysis to generate the results.



Viewing the Results

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the load case results for each time step can be seen in the Loadcase  Treeview. The time step result for the first thermal loadcase is set to be active by default.

Temperature contours throughout the dam are to be investigated for each stage of the construction process. Animations of the change in temperature and of the stress in the dam will be created.

Thermal Results



To illustrate the variation of temperature throughout the model with time, an animation will be created showing contours at different time steps. Firstly, contours of temperature for the current time step will be created.



- Turn off the display of the **Geometry** and **Attributes** layers in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the Graphics window and select the **Contour** option to add the contour layer to the  Treeview. Select **Potential** from the entity drop down list and ensure **PHI** is selected in the component drop down list. Click **OK**.

A plot showing initial contours at ambient temperature will be displayed.

When creating animations of contours it is preferable to have a static contour scale. By setting a Time Step active for the end of the construction stage under consideration an

estimate of the maximum and minimum values required for the contour key can be obtained.

- In the  Treeview right-click on the Thermal loadcase results for **Time Step 25** and **Set Active**
 - In the  Treeview double-click on the **Contours** layer.
 - Select the **Contour Range** tab and ensure that the contour **Interval** contour is set to **5.0**. Set the **Maximum** and **Minimum** values to **60.0** and **20.0** respectively. Click **OK**
- Loadcase: 26:Time Step 25 Time = 10.0000
 Results file: Concrete_Dam_therm.mys
 Response time: 10.0
 Entity: Potential
 Component: PHI

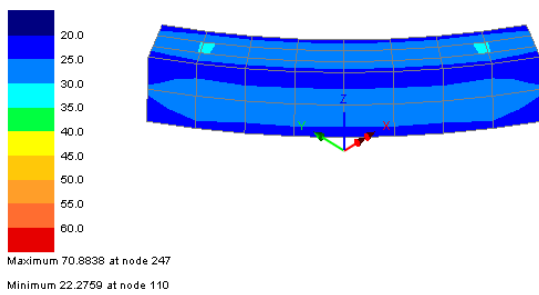
- In the  Treeview, drag the **Mesh** layer below the **Contours** layer. This will prevent the contours layer from being drawn over (and thus completely obscuring) the mesh layer.

Animating Thermal Results



Note. The viewing parameters (e.g. the view angle and contour options) used in the animation are those that are currently specified in the window when the animation is loaded. It is therefore important to have an appropriate view visible in the Modeller window when running the animation wizard.

To create and save an animation of the temperature variation on the external surfaces of the dam throughout the whole analysis, complete the following procedure:

- Select the **Load history** radio button and click **Next**
- From the File drop-down menu on the Animation Load History dialog choose the thermal results file **Concrete_Dam_therm.mys**




Note. In some analyses fine time increments are required for solution convergence but are not required for animation purposes. It is possible to reduce the size of (and the time required to produce) an animation by using the filter area of the dialog box.


- For the purposes of this example animate every 4th Time Step by entering a Start value of **1**, a Step value of **4** and click **Filter**. Only every 4th Time Step will appear in the Available area of the dialog. Select all of these filtered thermal results time

Utilities

Animation Wizard...

Staged Construction of a Concrete Dam

steps (by clicking on the first time step, holding the **Shift** key, scrolling all the way to the bottom of the list and clicking on the last time step). Include these time steps by clicking on the  button and then clicking **Finish**

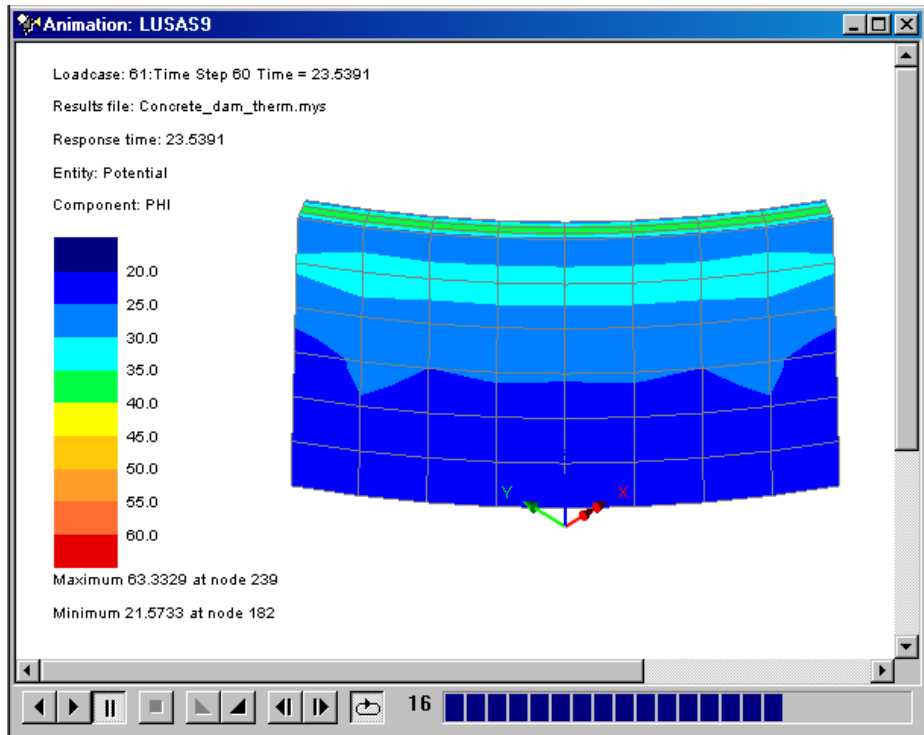

LUSAS will load-in the selected time step results and open a window showing an animation of the variation of temperature with time. Animations may be saved in compressed AVI format for playback in other applications.

File
Save As AVI...


- Save the animation to your projects folder and enter **concrete_dam_thermal.avi** for the filename
- On the next dialog select **Microsoft Video 1** compression. This has been found to produce reliable results and allows playback in many applications. Click **OK**
- Close the Animation window.

Animating Thermal Results on a Slice Section

With heat of hydration analysis the maximum temperatures reached will occur within the concrete. To plot the change of temperature over time inside the dam slice sections are used:



Note. When creating animations using slice sections the animation results are only created for the elements that are sliced. This means that for this example one of the Thermal loadcase Time Step results for Stage 3 must be set active so that the complete mesh for the dam can be seen.

- In the  Treeview right-click on the Thermal Stage 3 loadcase results for **Time Step 60** and select **Set Active**


Loadcase: 61:Time Step 60 Time = 23.5391

Results file: Concrete_dam_therm.mys

Response time: 23.5391


Entity: Potential

Component: PHI

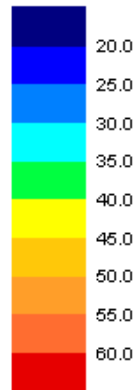



Maximum 63.3329 at node 239

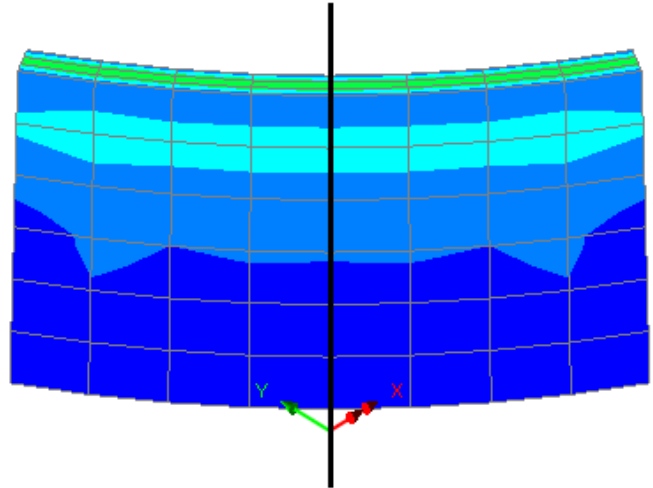Minimum 21.5733 at node 182




Utilities

Section Through
3D...

- Click **OK** to accept a grid size of 1
- Position the cursor above the dam in-line with the Z-axis and click and drag vertically downwards to define a slice section right through the centre of the dam. A group named Slice 1 will be created in the  Treeview.
- In the  Treeview select double-click the **Contour** option, ensure the **Display on slice(s)** option is selected and click **OK**

Staged Construction of a Concrete Dam

-  Use the Dynamic rotate button to rotate the model around to the view shown:



Loadcase: 61:Time Step 60 Time = 23.5391

Results file: Concrete_dam_therm.mys


Response time: 23.5391

Entity: Potential


Component: PHI

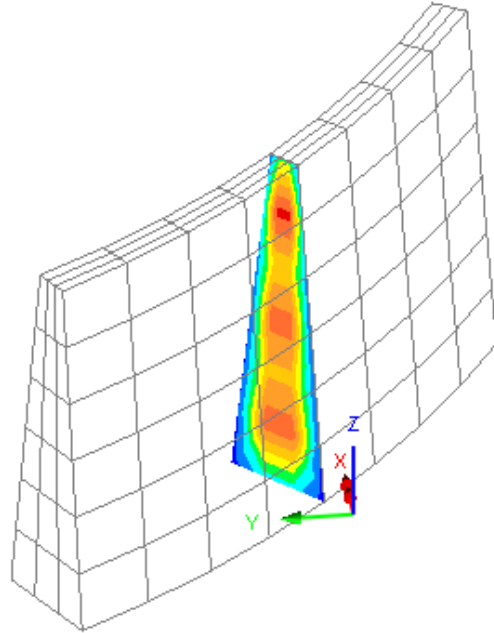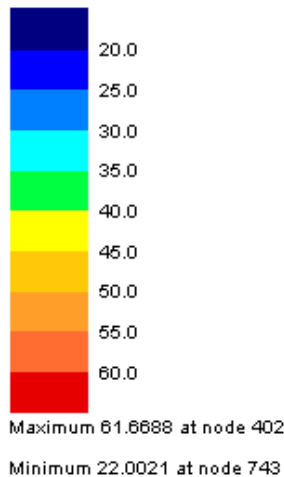

To create and save an animation of the temperature variation on this slice section through the dam, complete the following procedure:

- Select the **Load history** radio button and click **Next**
- From the File drop-down menu on the Animation Load History dialog choose the thermal results file **Concrete_Dam_therm.mys**
- For the purposes of this example animate every 4th Time Step by entering a Start value of **1**, a Step value of **4** and click **Filter**. Only every 4th Time Step will appear in the Available area of the dialog. Select all of these filtered thermal results time steps (by clicking on the first time step, holding the **Shift** key, scrolling all the way to the bottom of the list and clicking on the last time step). Include these time steps by clicking on the  button and then clicking **Finish**


Utilities
Animation Wizard...

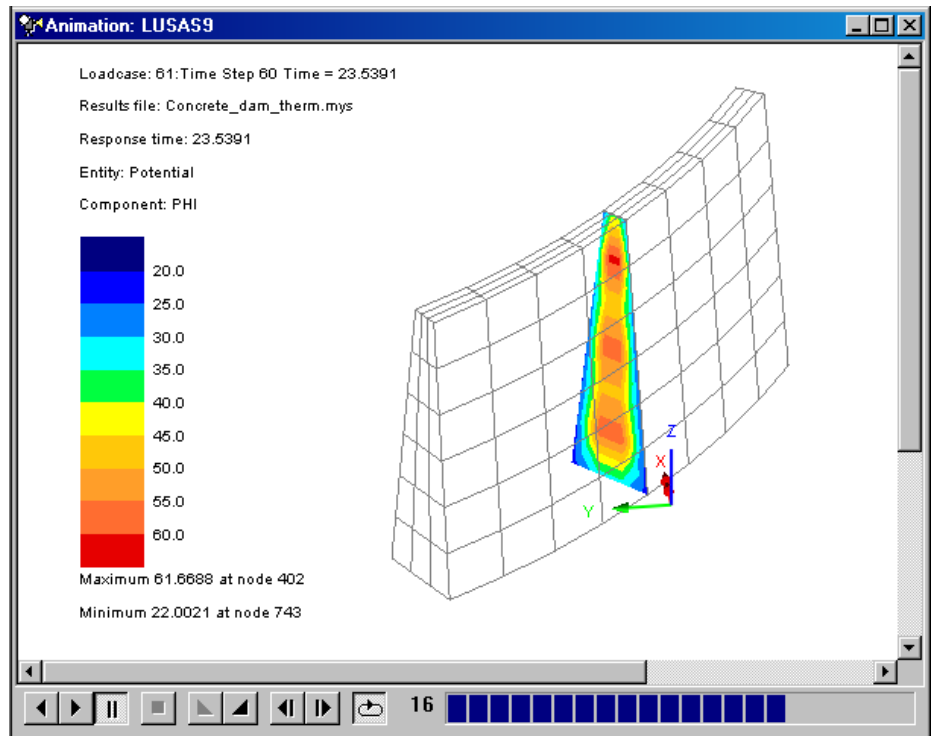


File
Save As AVI...

- Save the animation to your projects folder and enter **concrete_dam_thermal_slice.avi** for the filename. Use **Microsoft Video 1** compression and click **OK**
- Close the Animation window.

Plotting contours on the whole model after slicing



- In the  Treeview select double-click the **Contour** option and deselect the **Display on slice(s)** option and click **OK**.

The display will revert to show contours of Potential of entity PHI on the whole model.

- Remove any slices generated by picking the **Slices** group from the  Treeview, clicking right-hand mouse button and choosing the **Delete** menu item from the context menu.

Structural Results

Viewing and animating structural results is done in a similar manner to that described for thermal results, ensuring that only Structural loadcase results Time Steps are set active or used in an animation.

- In the  Treeview right-click on the structural results for **Time Step 60** and **Set Active**
- Double-click the contours layer in the  Treeview. On the dialog, set the results entity to **Stress – Solids** and component **S1**.
- Select the **Contour Range** tab and ensure that an **Automatic** contour range using **9** contours is being used. Deselect the **Maximum** and **Minimum** values and click **OK**



Loadcase: 61:Time Step 60 Time = 23.5391

Results file: Concrete_Dam_struct.mys

Response time: 23.5391


Entity: Stress - Solids


Component: S1

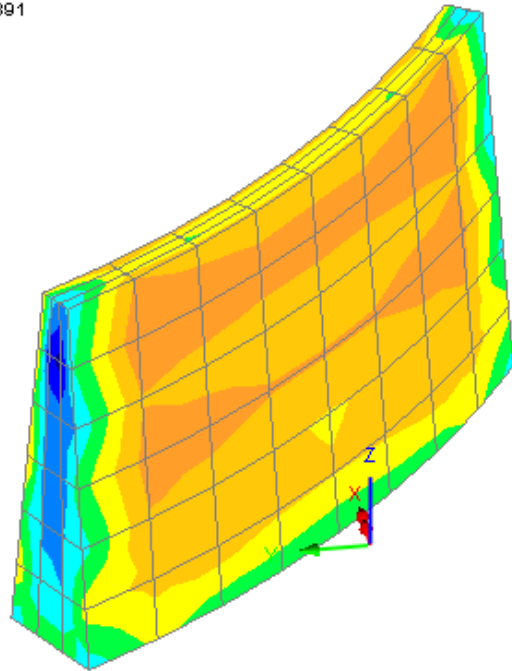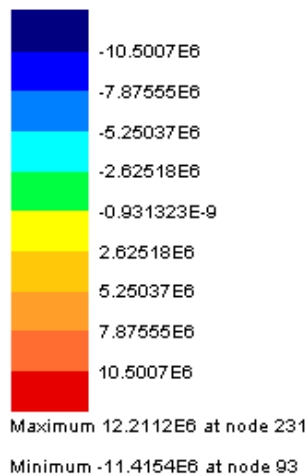

This will show contours of the maximum principal stress (S1) at the current time step. To create and save an animation of the variation of the maximum principal stress throughout the whole analysis, complete the following procedure:

- Select the **Load history** radio button and click next.

- From the File drop-down menu in the Animation Load History dialog box, select the structural results file **Concrete_Dam_struct.mys**.
- Animate every 4th Time Step by entering a Start value of **1**, a Step value of **4** and click **Filter**. Only every 4th Time Step will appear in the Available area of the dialog. Select all of these filtered thermal results time steps (by clicking on the first time step, holding the **Shift** key, scrolling all the way to the bottom of the list and clicking on the last time step). Include these time steps by clicking on the  button and then clicking **Finish**

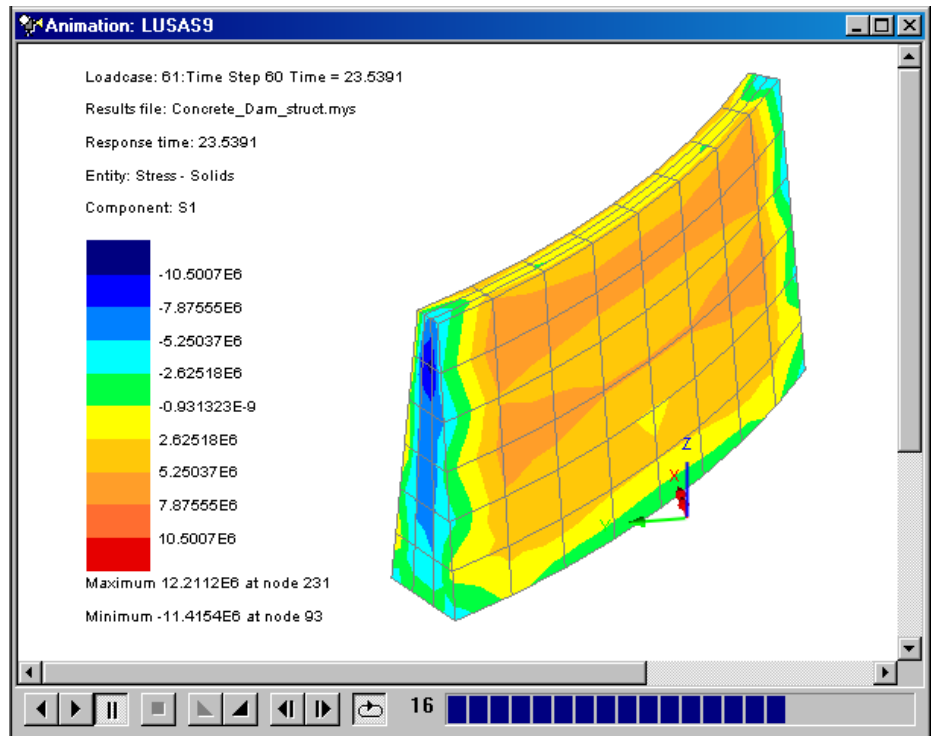

File



Save As AVI...


- Save the animation to your projects folder and enter **concrete_dam_struct.avi** for the filename.
- On the next dialog select **Microsoft Video 1** compression and click **OK**

Graphing of Results at a Selected Node

In analyses of this type it may also be useful to graph the changing temperature at a selected node (or nodes) as the construction progresses. This can be done by selecting a node of interest and using the Graph Wizard - making sure that only thermal results and thermal time steps are selected for plotting.

Continuing on from the last animation created:

- Delete the animation window and maximise the Model window
- Turn off the display of the **Contours** layer in the  Treeview.
- In the  Treeview right-click on any **Thermal** loadcase results time step in the 3rd construction stage, say, **Time Step 60** and **Set Active**
- Double-click the **Mesh** layer and select **Hidden parts** to view all the mesh.
- Select only the node shown for stage 1 node for results graphing.

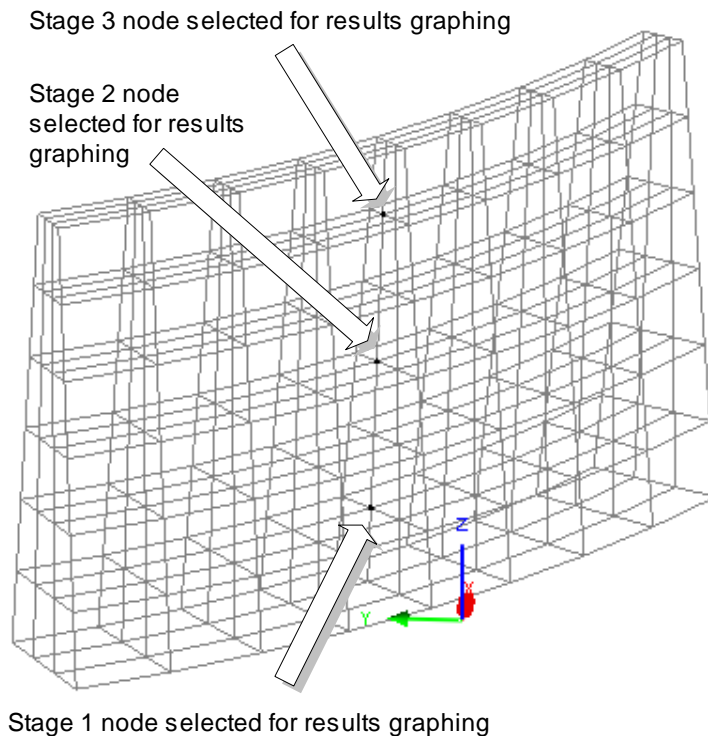


Utilities
Graph wizard...

- Select **Time history** and click **Next**.

To define the graph X axis details:

- Select **Named** entity data and in the Sample loadcases panel deselect the **All** option. Press the **Select** button.
- On the Select Loadcases dialog ensure the **Concrete_Dam_Therm.mys** file is selected in the File drop-down list and then include all thermal analysis time step


results for graphing by clicking on the first time step, holding the **Shift** key, scrolling all the way to the bottom of the list and clicking on the last time step).

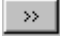Include these time steps by clicking on the  button and then clicking **Finish**. Click **Next**.

- Select **Response time** for the data to be plotted and click **Next**.

To define the graph Y axis details:

- Select **Nodal** entity data and click **Next**.
- Ensure entity **Potential** and results component **PHI** are selected for the node shown on the dialog and click **Next**.
- Enter the title as **Thermal results for selected internal nodes**
- Enter the X axis title as **Response time (Days)**
- Enter the Y axis as **Temperature (Degrees)** and click **Finish** to create the graph.
- Without deleting the Graph Window return to the Model Window

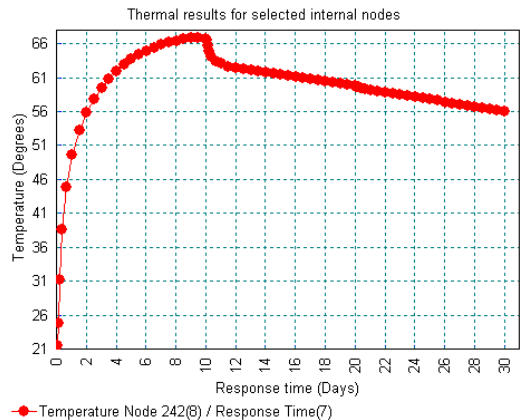


Graphing Results for Other Nodes

When a node in the mid-section of the dam for the other two construction stages is selected and relevant thermal time step results for those construction stages only are left in the included Loadcase panel for graphing (as described previously) the following graph can be created which clearly shows the initial rise and subsequent reduction of temperature after each stage of concrete is constructed.

Make sure that results for these additional modes are plotted onto the initial graph created by selecting the **Add to existing graph option**. Graph properties (such as editing axis or curve titles etc) can be edited by right-clicking on the Graph and choosing **Edit Graph Properties**

Staged Construction of a Concrete Dam

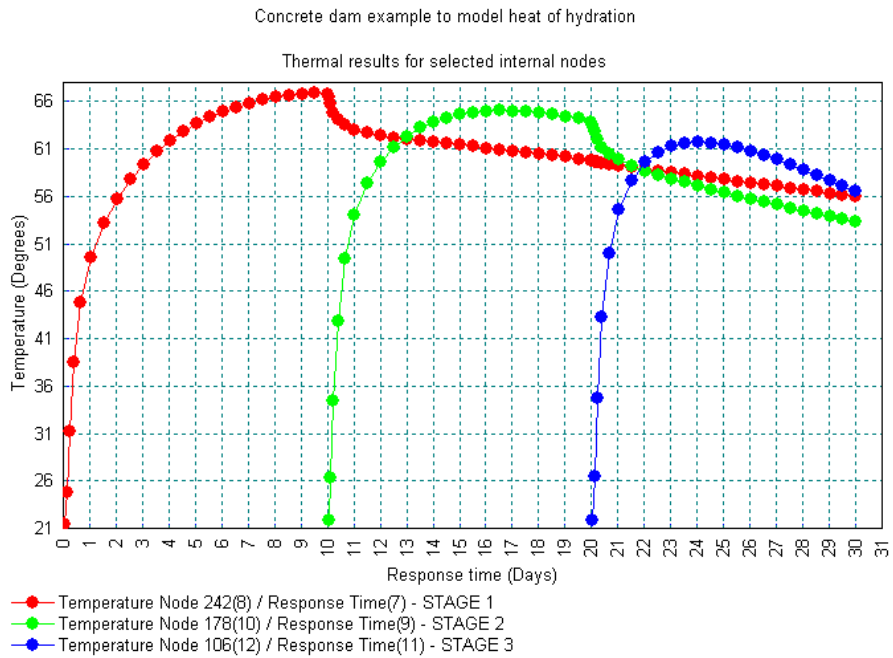

This completes the example.


Seismic Analysis of a 2D Frame (Time Domain)

For software product(s):	All
With product option(s):	IMDPlus
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

This example examines the seismic response of a 2D plane frame founded on an elastic medium. The model is an extension of the Seismic Response of a Plane Frame example.

Units used are N, m, kg, s, C throughout.

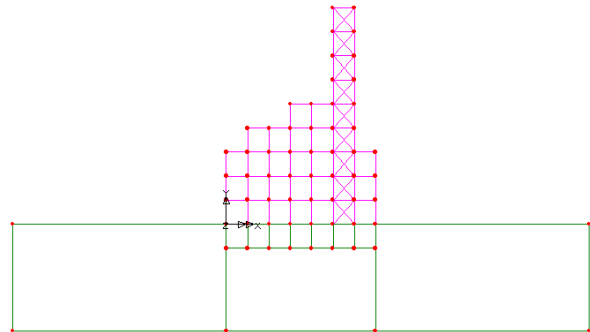

Objectives

The output requirements of the analysis are:

- ☐ Displacements, velocities and accelerations at the top of the tower
- ☐ Secondary response spectra at the top of the tower
- ☐ Forces and moments in a column at the base of the tower

Keywords

Seismic, time domain, response, mass participation, interactive modal dynamics, excitation, eigenvalue, Secondary Response Spectra.

Associated Files



- ❑ **IMDPlus 2D Tower.mdl** Model file of the structure.
- ❑ **horizontal.prn and vertical.prn** define horizontal and vertical earthquake accelerations. These two files contain two earthquake records each; one for the 1940 El Centro earthquake and one for the 1994 Northridge earthquake.

Discussion

The Seismic Response of a Plane Frame is revisited in this example. The frame is founded in a plane strain elastic medium and the response of the structure is evaluated in the time domain using IMDPlus.

The model is comprised of thick beam elements for the concrete columns, beam members, and steel diagonal bracing members, which have pinned end connections. The number of beam elements representing the components of the structure has been increased from 1 per line to 4 per line to provide greater definition of the deformed shapes. In addition to this modification, all support restraints have been removed from the frame and an additional 4.5 m length has been added to the base of each column to allow embedment of the column bases into the elastic medium.

The elastic medium is modelled as a 108m by 20m block which is fully restrained along its base and with cyclic translation constraints assigned to the sides. These constraints provide support to the sides of the elastic medium without the need to apply physical restraints, thus allowing direct and shear behaviours in the elastic medium.

The seismic response analysis is performed in two distinct stages. A natural frequency analysis is performed first. This is used to calculate the first 50 natural modes of vibration of the combined structure and elastic medium. The eigenvalues, frequencies and eigenvectors (mode shapes) are stored and used in the subsequent IMDPlus analysis. Although the natural frequencies are obtained from an eigenvalue analysis any information regarding the magnitudes of deformations or stresses / moments is non-quantitative.

The second phase of the analysis utilises the IMDPlus option which performs enhanced time domain solutions using Interactive Modal Dynamics (IMD). This is an alternative to performing a spectral response analysis and allows the excitation of the structure using acceleration time histories instead of spectral excitation curves.

In the IMDPlus solution, the structure is subjected to a support condition excitation governed by time histories of acceleration in the model global axes. In this example this

is assumed to act along the base of the elastic medium in the form of horizontal and vertical accelerations. It should, however, be noted that no deconvolution of the records has been carried out to convert the surface responses recorded for these earthquakes to at-depth acceleration time histories to be input into the analysis. As a consequence, the ground level accelerations in the analysis will not correspond to the measured values. As stated previously, two earthquake records are used in the analysis, the first being the 1940 El Centro earthquake and the second being the 1994 Northridge earthquake. The two earthquake responses are computed during a single analysis. Only the first 10 seconds of each seismic event is analysed in this example.

Modelling


Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.

Building and loading the model

To create the model, open the file **IMDPlus 2D Tower.mdl** located in the \<LUSAS Installation Folder>\Examples\Modeller directory.

After a short while the following view of the model of the building will be displayed.

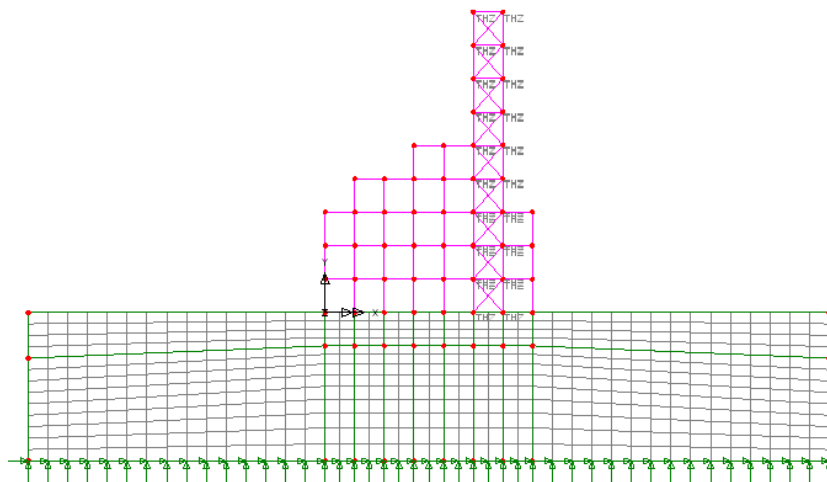

- In the \<LUSAS Installation Folder>\Projects\ folder create a new directory called **IMDPlus 2D Tower**

- Save the model into this new folder as **IMDPlus 2D Tower**. This helps keep all relevant IMDPlus created files separate from other analyses and is good practice.



Note. No static structural loading is required for this analysis because only the dynamic loading is considered during the results processing based on the results from the natural frequency analysis.

The modelling will now be completed by defining the controls necessary to extract the natural frequencies.

Defining Eigenvalue Controls

Eigenvalue controls are defined as properties of the loadcase.

- In the  Treeview right-click on **Loadcase 1** and select **Eigenvalue** from the **Controls** menu.

The Eigenvalue dialog will appear.

- Set the **Number of eigenvalues** as **50**
- Ensure the **Shift to be applied** is set as **0**
- Ensure the **Type of eigensolver** is set as **Default**



Note. Eigenvalue normalisation is set to **Mass** by default. This is essential if the eigenvectors are to be used for subsequent IMD analysis.

- Click the **OK** button to finish.

File
Save



Save the model file.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...



A LUSAS data file name of **IMDPlus 2D Tower** will be automatically entered in the File name field.



- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.

A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.


Viewing the Results

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results for each eigenvalue can be seen in the Loadcase panel of the Treeview. Eigenvalue 1 is set to be active by default.

Plotting Mode Shapes

- Turn off the display of the **Mesh**, **Geometry** and **Attributes** layers in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the Graphics window and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview.
- In the Display section of the dialog select the **Window summary** option. Select the Visualise tab and deselect the **Beam end releases** option. Click the **OK** button to accept the remaining default values and display the deformed mesh for Eigenvalue 1.

Scale=1.546.967
Zoom: 100.0
Eye: (0.0, 0.0, 1.0)
Eigenvalue Analysis
Dump: 1
Eigenvector: 1
Results File: 0
Eigenvalue: 143.1
Natural Frequency: 1.904
Error Norm: 0.6973E-10
Maximum Displacement 0.9979E-02 at Node 939

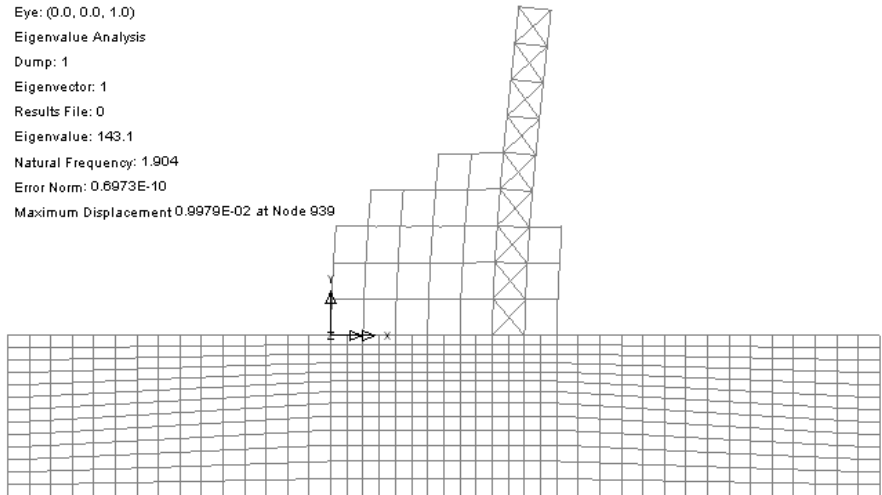


Note. The mode shape may be inverted. This is because the sense is arbitrary since during vibration the deformed shape will appear in both directions.



Note. The window summary displays the values of the eigenvalue and the natural frequency and also a value for displacement at a node. It should be noted that the

displacement value is non-quantitative and is related to the amount of mass in a particular mode using the mass normalisation technique. Therefore the only items that can be found using a basic eigenvalue analysis are the frequency and the mode shape.

By setting each Eigenvalue to be active the deformed mesh can be seen for all mode shapes.

- In the  Treeview right-click on **Eigenvalue 2** and select the **Set Active** option. The deformed mesh plot for Eigenvalue 2 will be displayed.

Printing Eigenvalue Results

Eigenvalue results for the whole structure can be displayed in the Text Output window.

- Select **Active**
- Select entity **None** of type **Eigenvalue** and click **Finish**

The Eigenvalue results will be printed to the Text Output window. For inspection only the first 10 modes are shown here. Error norms may vary.

Results File = C:\Lusas140\Projects\IMDPlus 2D Tower.mys ID=0
Eigenvalues

MODE	EIGENVALUE	FREQUENCY	ERROR NORM
1	143.132	1.90409	0.697344E-10
2	1479.53	6.12184	0.473863E-11
3	7142.46	13.4507	0.175757E-11
4	11469.1	17.0445	0.109588E-10
5	13603.1	18.5626	0.731054E-12
6	15305.1	19.6897	0.156151E-11
7	22092.9	23.6563	0.384489E-05
8	23569.4	24.4340	0.120369E-06
9	23646.6	24.4740	0.440677E-06
10	23787.5	24.5468	0.105613E-09



Note. The frequency in Hertz can be obtained by dividing the square root of the eigenvalue by 2π , and the period of vibration in seconds is obtained using the reciprocal of frequency (1/frequency). Values of error norm may vary from those shown.



Caution. The system eigenvectors have been normalised (in this case with respect to mass) therefore any derived quantities such as displacement and moment are also normalised and are not true design values.

- Close the text window by selecting the close button in the top right-hand corner of the window.

Checking the Mass Participation Factor



Note. In order to carry out a successful IMDPlus analysis you should ensure that a significant proportion of the total mass has been accounted for in the analysis. This requires checking that around 90% of the total mass has been achieved in the global directions. If less than 90% has been achieved, no further modes need be included if and only if the mode of vibrations omitted cannot be excited by the input acceleration time histories or if a significant proportion of the structure is restrained by support in these directions and therefore cannot participate in the modes of vibration. The acceptability of the included modes of vibration will vary from analysis to analysis but failure to check that a significant proportion of the total mass has been accounted may lead to important modes being missed and subsequent errors in the analysis results.

Utilities

 Print Results
Wizard...

- After selecting **Active**, ensure **Sum Mass Participation Factors** is displayed in the Type combo box and click **Finish**. The Sum Mass Participation Factors results will be printed to the Text Output window.

For inspection only modes 40 to 50 will be printed here. It can be seen that the 90% value has not been achieved and is discussed below.

Results File = C:\Lusas\Projects\IMDPlus 2D Tower.mys ID 1
Eigenvalues

MODE	SUM MASS X	SUM MASS Y	SUM MASS Z
40	0.812738	0.589039	0.00000
41	0.812738	0.668151	0.00000
42	0.812738	0.754011	0.00000
43	0.812739	0.754145	0.00000
44	0.812741	0.754146	0.00000
45	0.812744	0.757349	0.00000
46	0.812745	0.788070	0.00000
47	0.812747	0.788841	0.00000
48	0.812760	0.789616	0.00000
49	0.812760	0.789618	0.00000
50	0.812760	0.789686	0.00000



Note. In this analysis, a significant proportion of mass is restrained along the base of the elastic medium. For the 50 modes of vibration, 81.27% and 78.96% of the total mass is achieved in the horizontal and vertical directions. In order to achieve 90% total

mass in both the horizontal and vertical directions 160 modes of vibration with an upper frequency equivalent to 97.2 Hz would actually be required. However, for the purposes of this example, the number of modes of vibration has been restricted to 50.

- Close the text window by selecting the close button in the top right hand corner of the window.
- Use the maximise button to increase the size of the graphics window.

Seismic Response Analysis

Seismic response calculations are performed using the IMDPlus (Interactive Modal Dynamics) facility. This involves defining the excitation and specifying the results required. Initially, in this example, the response of the node at the top-right corner of the tower will be investigated.




Note. With a seismic response analysis, additional damping information may also be set. Unlike results from a natural frequency analysis, the output values obtained from a seismic response are design values.

- Zoom-in to the top of the tower and select only the top-right node.

The main tower members have been meshed with 4 line mesh divisions so each line will have 3 nodes along its length in addition to one at either end.

Select this node

Scale=1.567.034
Zoom: 358.554
Eye: (0.0, 0.0, 1.0)
Eigenvalue Analysis
Dump: 1
Eigenvector: 2
Results File: 0
Eigenvalue: 1480.
Natural Frequency: 6.122
Error Norm: 0.4739E-11
Maximum Displacement 0.8503E-02 at Node 939

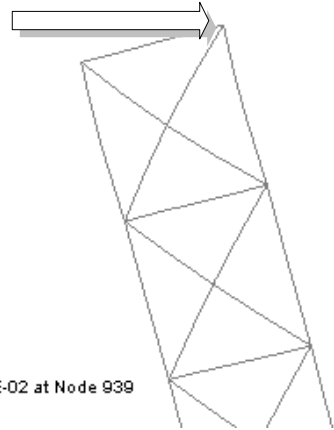

- On the IMDPlus Main Control dialog select the **Run Seismic Analysis** option.

Defining the Seismic Parameters

The input for the seismic analysis is defined on the IMDPlus Seismic Analysis Control dialog. The input consists of the earthquake acceleration records, included modes and damping along with interpolation options.

IMDPlus Seismic Analysis Control

Earthquake Input

X-Direction Earthquake Record(s)

Y-Direction Earthquake Record(s)

Z-Direction Earthquake Record(s)

Direction Factors X Y Z

Mode / Damping Control

Included modes: All

☒ Default damping (5.0%)

Total participating mass
 X-Direction : 81.27%
 Y-Direction : 78.96%
 Z-Direction : 0.00%

Frequency Interpolation

☒ All frequencies included ☐ Linear interpolation of records
☐ Limit frequencies to Nyquist frequency ☐ Cubic spline interpolation of records

Time step

- In the Earthquake Input section, for the **X-Direction Earthquake Record(s)** browse to the \<Lusas Installation Folder>\Examples\Modeller directory and select **horizontal.prn**
- For the **Y-Direction Earthquake Record(s)** browse to the \<Lusas Installation Folder>\Examples\Modeller directory and select **vertical.prn**
- Ensure the **Direction Factors** in the **X** and **Y** directions are set to **1** and **0.66667**
- In the Mode/Damping Control section ensure **Included modes** is set to **All**. If this is not the case, click on the **Modify...** button and turn the **All modes** option on.
- Ensure **Default damping (5%)** is selected. If a different damping is displayed, click on the **Modify...** button and set the **Default damping** to **5**
- In the Frequency Interpretation section, ensure the **All frequencies included** option is selected.

- Click the **Next** button to proceed to the IMDPlus Output Control dialog. When prompted about less than 90% total mass participation detected choose **Yes** since we are aware of this (see Checking Mass Participation Factor).

The IMDPlus Output Control dialog will be displayed. Continue at the heading 'Displacement Plots' unless more information in the Seismic Analysis Control dialog is needed.



Notes relating to the IMDPlus Seismic Analysis Control dialog

On the Seismic Analysis Control dialog the **Browse** buttons can be used instead of entering the directional earthquake file names. As each file is loaded, the contents are checked to ensure that they are in the correct format.

Under the **Modify** dialog for the modes, individual modes can be included or excluded from the seismic analysis and total mass participations for the excitation directions are reported.

Under the **Modify** dialog for the damping, control over the inclusion of over-damped modes can be adjusted if viscous modal damping has been included in the original eigenvalue analysis. To include viscous modal damping, Rayleigh damping parameters must be defined in the material properties assigned to the model or a separate damping attribute defined and assigned to the model. This allows direct mirroring of step-by-step dynamic solutions and the inclusion of frequency dependent damping.

Four methods of interpolation are available in IMDPlus. The default All frequencies included will solve the seismic analysis using all of the frequencies included in the eigenvalue analysis. Limit frequencies to Nyquist frequency will limit the included frequencies to the Nyquist frequency which is governed by the time step of the earthquake records and defined as $1/2\delta t$. Linear interpolation of records allows the specification of an alternative time step for the analysis where the earthquake records are linearly interpolated to this time step. Cubic spline interpolation of records allows the specification of an alternative time step for the analysis where the earthquake records are interpolated with a cubic spline to this time step. This last form of interpolation should generally not be used for measured earthquake records as it can smooth the peak responses but is often more appropriate for synthesised earthquake records.

Displacement Plots

The displacement of the top of the tower will be investigated initially. Enter the following information into the IMDPlus Output Control dialog.

- Select **Node** and enter **939** (or your node number if different) This is the node at the top-right of the tower.
- Select results entity **Displacement** of component **DX & DY**

- Select **Response time history**
- Select **Peak response summary**
- Select **Generate graphs in Modeller** and specify the earthquake to graph as **1**

The dialog should look like this:

IMDPlus Output Control

Node / Element Selection

Select node number or element number, then set results entity and component for output

☒ Node

☐ Element

GP / Node

Entity

Component

Output Control

☒ Response time history

☒ Peak response summary ☐ Positive/Negative ☒ Absolute

☐ Generate Secondary Response Spectra (SRS)

☐ Modal combination/factor history

☒ Generate graphs in Modeller Earthquake to graph

☐ Generate textfile output


- Click the **Apply** button to proceed.

An IMDPlus analysis will run and after a short while the horizontal (DX) and vertical (DY) displacements for the point at the top of the tower are displayed on the graph for the first 10 seconds of the 1940 El Centro earthquake. (Earthquake 1)

Peak displacements are also output to Notepad and indicate absolute peak displacements of 0.085 m in the X-direction, 0.006 m in the Y-direction, a peak rotation of 0.003 radians and an absolute peak resultant displacement of 0.086 m/s (Record 1).

An IMDPlus output control toolbar button is also displayed. This provides the means to easily return to the IMDPlus output control dialog.

Seismic Analysis of a 2D Frame (Time Domain)

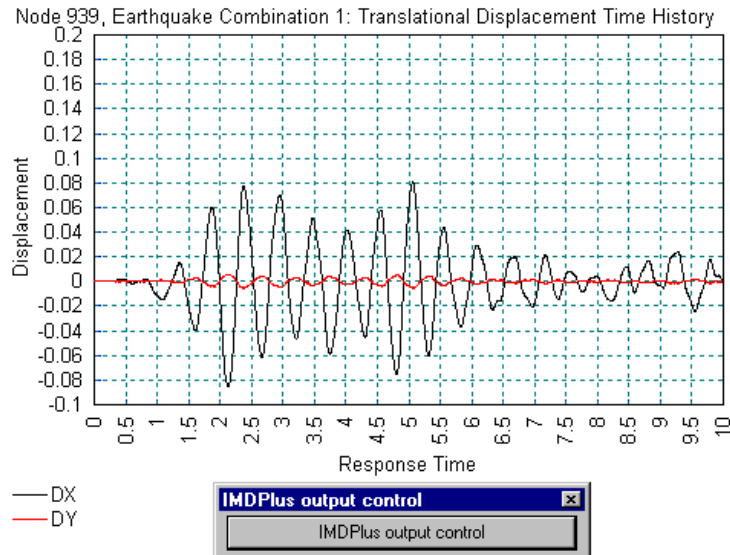

```
#-----#
# Entity      /----- Time ----- Record 001 ----- value ----- \ /----- Time ----- Record 002 ----- value ----- \
# Entity      /----- Time ----- Record 001 ----- value ----- \ /----- Time ----- Record 002 ----- value ----- \
Peak_Pos_DX   5.060000000 0.8052273757E-001 9.590000000 0.2138006029E-001
Peak_Neg_DX   2.125000000 -0.8533060521E-001 9.345000000 -0.2608100073E-001
Abs_Peak_DX   2.125000000 0.8533060521E-001 9.345000000 0.2608100073E-001
Peak_Pos_DY   2.120000000 0.5616536455E-002 9.355000000 0.2026448894E-002
Peak_Neg_DY   5.070000000 -0.5386391530E-002 9.595000000 -0.1688830058E-002
Abs_Peak_DY   2.120000000 0.5616536455E-002 9.355000000 0.2026448894E-002
Peak_Pos_THZ  2.125000000 0.2571384062E-002 9.355000000 0.9067903874E-003
Peak_Neg_THZ  5.065000000 -0.2505170484E-002 9.595000000 -0.7781354656E-003
Abs_Peak_THZ  2.125000000 0.2571384062E-002 9.355000000 0.9067903874E-003
Abs_Peak_RSLT 2.125000000 0.8551297551E-001 9.345000000 0.2615483103E-001
```



Note. Displacements are relative to the supports.


- Close the Notepad application and graph window.
- Click on the **IMDPlus output control** toolbar button to return to the IMDPlus output control dialog.

In the IMDPlus analysis we have analysed two earthquake combinations at the same time. We are therefore also interested in the displacement response of the top of the tower for the second earthquake.

Enter the following information into the IMDPlus Output Control dialog:

- Select earthquake **2** in the Earthquake to graph list box
- Click the **Apply** button to proceed.

The horizontal (DX) and vertical (DY) displacements for the point at the top of the tower are displayed on the graph for the first 10 seconds of the 1994 Northridge earthquake. Peak displacements are also output to Notepad and indicate absolute peak displacements of 0.026 m in the X-direction, 0.002 m in the Y-direction, a peak rotation of 0.001 radians and an absolute peak resultant displacement of 0.026 m/s (Record 2).

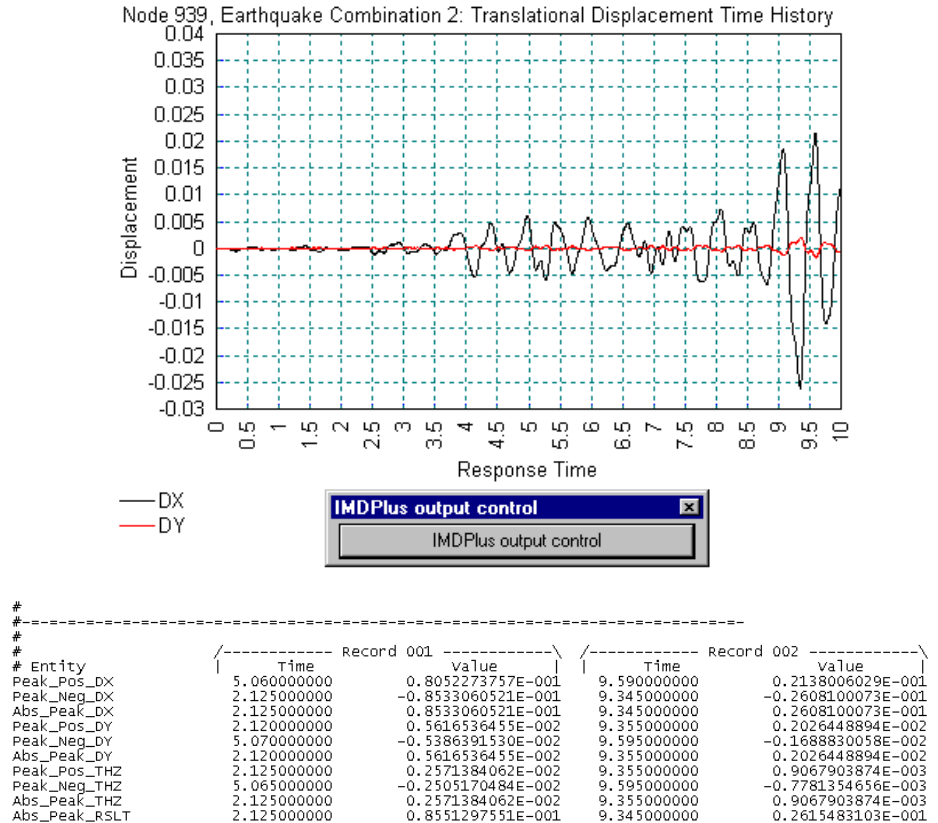

- Close the Notepad application and graph window.
- Click on the **IMDPlus output control** toolbar button to return to the IMDPlus Output Control dialog.

Velocity Plots


In addition to the displacement response of the top of the tower we are also interested in the velocities experienced by the tower. Enter the following information into the output control dialog.

- Select **Velocity** results of **VX & VY**

Seismic Analysis of a 2D Frame (Time Domain)

- Select earthquake **1** in the Earthquake to graph list box
- Click **Apply** to proceed

The horizontal (VX) and vertical (VY) velocities of the top of the tower are displayed on the graph for the first 10 seconds of the 1940 El Centro earthquake. Peak velocities are also output to Notepad and indicate absolute peak velocities of 1.129 m/s in the X-direction, 0.089 m/s in the Y-direction, a peak rotational velocity of 0.040 rad/s and an absolute peak resultant velocity of 1.13 m/s (Record 1).

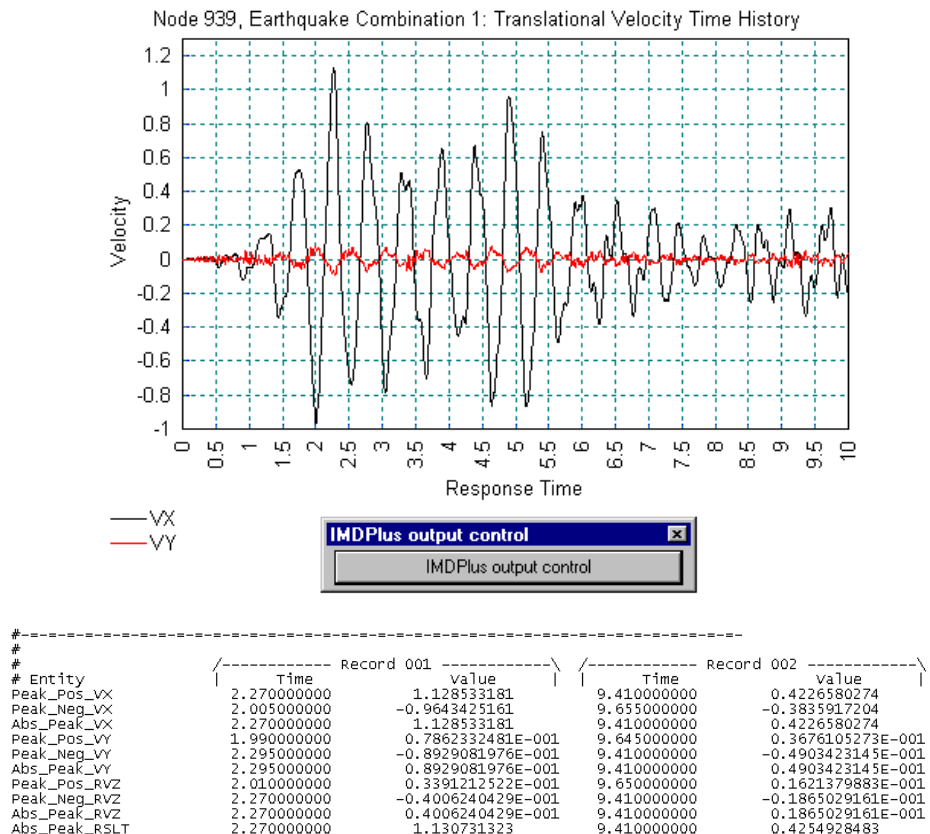

Note. Velocities are relative to the supports.

 

- Close the Notepad application and graph window.
- When the graph is displayed click on the **IMDPlus output control** toolbar button to return to the IMDPlus Output Control dialog.

Acceleration and Secondary Response Spectra Plots

The acceleration response of the top of the tower is now required. Enter the following information into the output control dialog.

- Select **Acceleration** results of **AX & AY**
- Select **Generate Secondary Response Spectra (SRS)**
- Click on the **Modify...** button to bring up the SRS Control dialog.
- On the SRS Control dialog set the **Minimum damping** and **Maximum damping** to **5.0** and the **Damping increment** to **0.0**
- Click the **OK** button and **Yes** to confirm that only a single damping ratio is to be used
- Click the **Apply** button to proceed.
- When the IMDPlus analysis is finished select **No** when asked whether to show average, maximum and minimum SRS envelopes.


The horizontal (AX) and vertical (AY) accelerations of the top of the tower are displayed on the graph for the first 10 seconds of the 1940 El Centro earthquake. Peak accelerations are also output to Notepad and indicate absolute peak accelerations of 14.476 m/s^2 in the X-direction, 6.381 m/s^2 in the Y-direction, a peak rotational acceleration of 2.08 rad/s^2 and an absolute peak acceleration of 14.627 m/s^2 (Record 1).

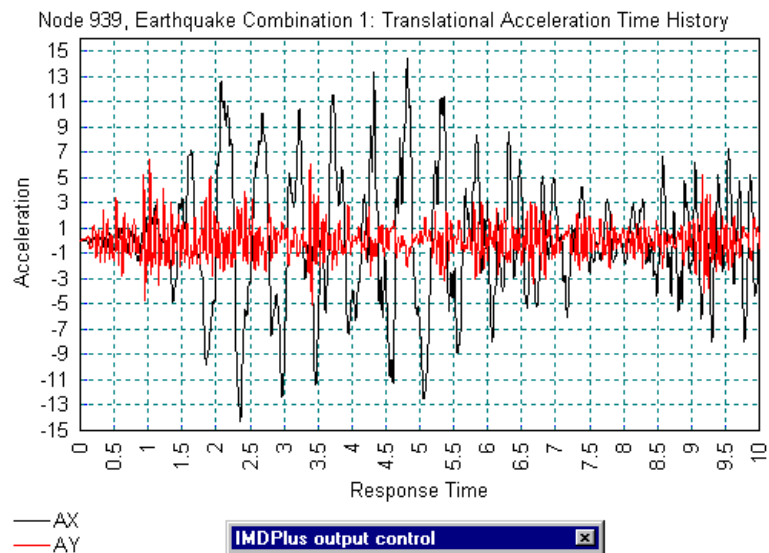


Seismic Analysis of a 2D Frame (Time Domain)

```
#-----
#
# Entity      /----- Record 001 -----\ /----- Record 002 -----\
# Entity      | Time      value      | | Time      value      |
Peak_Pos_AX   | 4.815000000    14.47617101 | | 9.360000000    8.342975448 |
Peak_Neg_AX   | 2.355000000   -14.27033705 | | 9.595000000   -7.757536158 |
Abs_Peak_AX   | 4.815000000    14.47617101 | | 9.360000000    8.342975448 |
Peak_Pos_AY   | 1.025000000    6.380712405 | | 9.435000000    1.720675177 |
Peak_Neg_AY   | 3.410000000   -5.047342570 | | 9.350000000   -1.439803622 |
Abs_Peak_AY   | 1.025000000    6.380712405 | | 9.435000000    1.720675177 |
Peak_Pos_RAZ  | 1.050000000    2.080347531 | | 9.610000000    0.4529081068 |
Peak_Neg_RAZ  | 1.030000000   -2.019831395 | | 9.370000000   -0.5864493798 |
Abs_Peak_RAZ  | 1.050000000    2.080347531 | | 9.370000000    0.5864493798 |
Abs_Peak_RSLT | 4.815000000    14.62693000 | | 9.355000000    8.415377535 |
```

Secondary Response Spectra are also generated for the horizontal and vertical and horizontal directions in two additional graphs. These graphs represent the peak acceleration responses of a range of single degree of freedom oscillators with known natural frequencies and damping should they be attached to the node at the top of the tower.

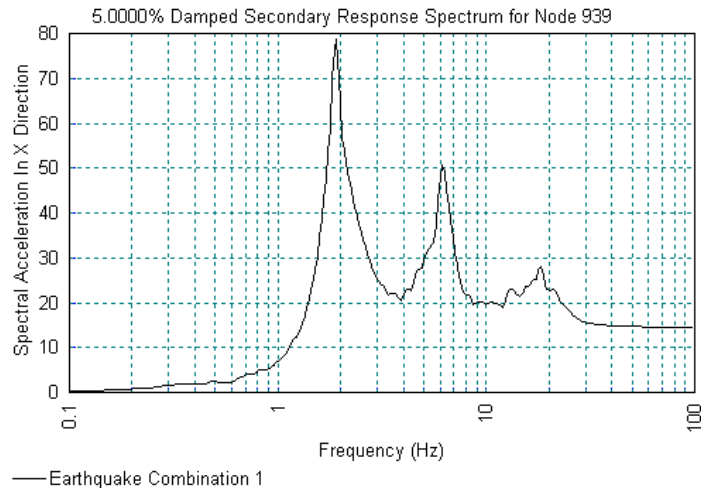

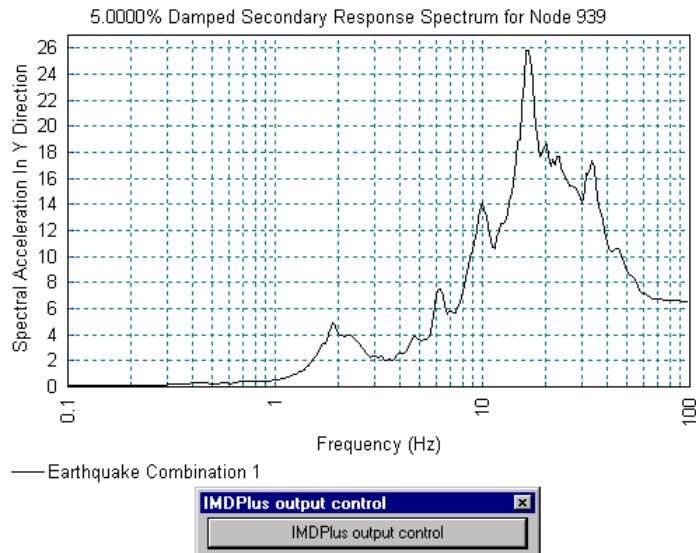

- Close the Notepad application and graph windows.

Displaying Element Results for Seismic Analyses

In the previous section the displacement, velocity and acceleration response of the top of the tower were investigated. Now, forces and moments in one of the columns at ground level for the structure will be evaluated.



In the LUSAS Graphics Window re-size the display to show the whole tower.

The main tower members have been meshed with 4 line mesh divisions so each line will have 4 elements along its length




Zoom-in to the base of the tower and select the element immediately above ground level in the second column from the right.

- Click on the **IMDPlus output control** toolbar button to return to the IMDplus Output Control dialog.

Enter the following information into the IMDPlus Output Control dialog:


Select this element

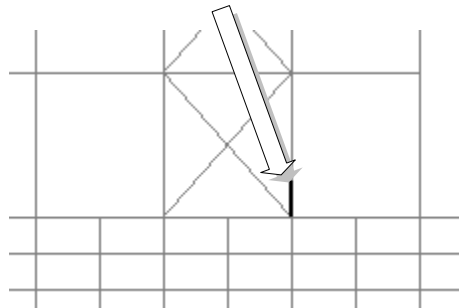


Seismic Analysis of a 2D Frame (Time Domain)

- Select **Element** and select element number **656** (or your element number if different) from the drop-down menu.
- Select **End 2** of the element which corresponds to the ground level. (Note that line directions can be viewed to ascertain which is end 1 or end 2 of a line).
- Select **Force/Moment - Thick 2D Beam** results of **Fx**
- Deselect **Peak response summary**
- Click the **Apply** button to proceed.


The time history of the axial force (in N) in the column is displayed on the graph for the first 10 seconds of the 1940 El Centro earthquake. Similar graphs can also be generated for the shear force and bending moment by selecting Fy (in N) and Mz (in Nm) from the output control dialog.

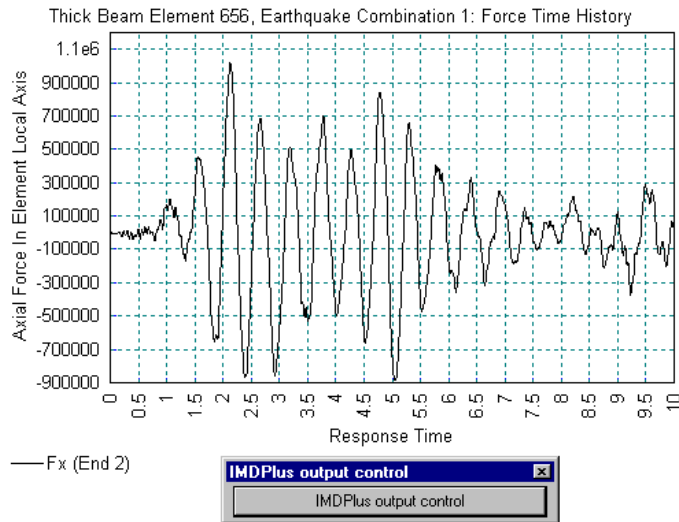

- Close the graph window.
- Click on the **IMDPlus output control** toolbar button to return to the IMDPlus Output Control dialog.
- Select **Force/Moment - Thick 2D Beam** results of **Fy**
- Click the **Apply** button to proceed.

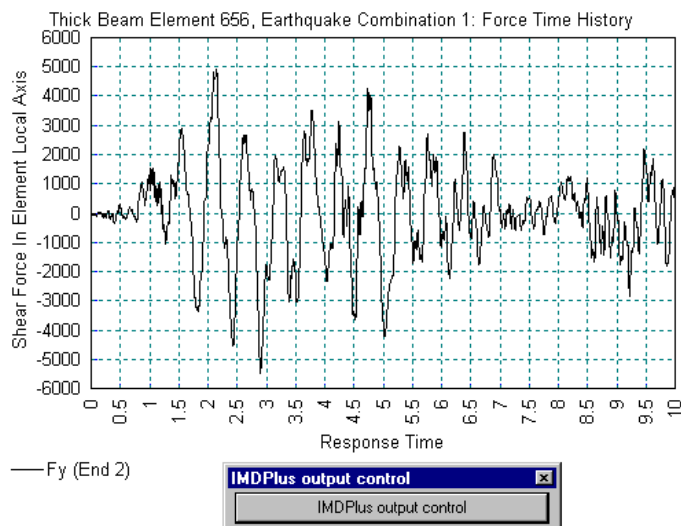

- Close the graph window.
- Click on the **IMDPlus output control** toolbar button to return to the IMDPlus Output Control dialog.
- Select **Force/Moment - Thick 2D Beam** results of **Mz**
- Click the **Finish** button to finish output processing.

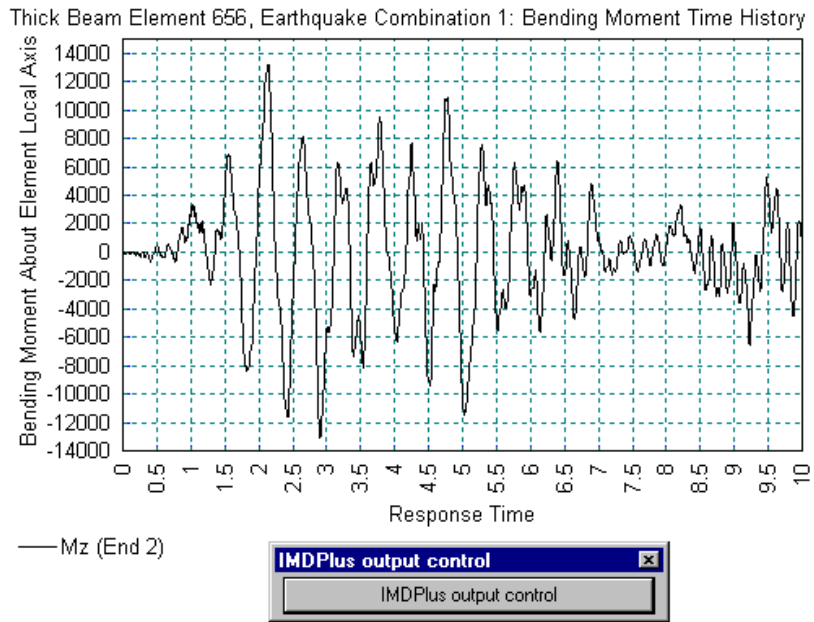

- Close the graph window.

Save the model

Save the model. This saves all load combinations that have been defined during the results processing operations.

This completes the example.


Seismic Analysis of a 3D Frame (Time Domain)

For software product(s):	All
With product option(s):	IMDPlus
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

This example examines the seismic response of a 2-storey 3D frame in the time domain. The geometry of the structure has been simplified to a wire-frame or stick representation with each of the members of the structure being represented by a line feature.

Units used are N, m, kg, s, C throughout.

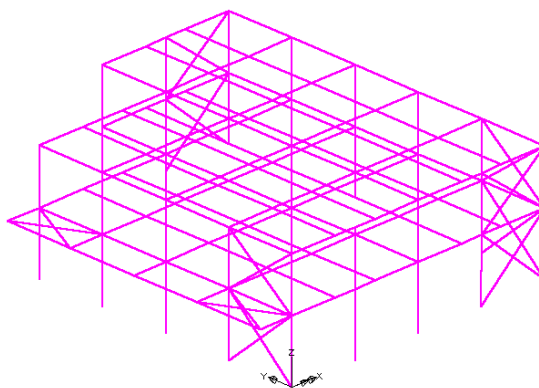

Objectives

The output requirements of the analysis are:

- ☐ Maximum deflections in X-, Y- and Z-directions
- ☐ Deformed mesh plots associated with maximum deflections
- ☐ Envelopes of axial force and bending diagrams from modal combination.

Keywords

Seismic, time domain, response, interactive modal dynamics, excitation, eigenvalue, modal combination.

Associated Files



- ❑ **IMDPlus 3D Frame.mdl** Model of the structure.
- ❑ **e-w.prn, n-s.prn and up.prn** define the east-west horizontal, north-south horizontal and vertical earthquake accelerations for the 1940 El Centro earthquake.

Discussion

The mesh definition used in a dynamic analysis is somewhat different from that used on a static stress analysis. In a static analysis, and with experience, it is usually not too difficult to estimate where the high stresses are likely to occur. These estimates can then be used to develop a meshing strategy with a fine mesh in high stress locations and a coarse mesh in less critical locations. For a dynamic analysis the interaction between the stiffness and inertia forces will lead to deflected shapes which can be very different from those expected in a static analysis.

In a dynamic analysis both stiffness and mass distribution has to be considered. Generally, the best strategy for a dynamic analysis is to have a uniform mesh over the entire structure. If refinement is to be carried out a more coarse mesh can sometimes be used in stiff regions. In regions that are more flexible, or where heavy masses are located, the mesh should be more refined.

In this example the global behaviour of the building is being considered for earthquake response. In this analysis the lower frequencies will be dominant and a relatively coarse mesh will suffice. If the higher frequencies are important, or if a local response for individual beams and columns is to be considered, a revised mesh with more elements would need to be used.

The seismic response analysis is performed in two distinct stages. A natural frequency analysis is performed first. This is used here to calculate the first 30 natural modes of vibration of the structure. The eigenvalues (frequencies) and eigenvectors (mode shapes) are stored and used in the subsequent seismic response analysis. In order to carry out a seismic analysis the eigenvectors must be normalised with respect to the mass. Although natural frequencies are obtained from an eigenvalue analysis any information regarding the magnitudes of deformations or moments is non-quantitative.

The second phase of the analysis utilises the IMDPlus option which performs enhanced time domain solutions using Interactive Modal Dynamics (IMD). This is an alternative to performing a spectral response analysis and allows the excitation of the structure using acceleration time histories instead of spectral excitation curves. In the IMDPlus solution, the structure is subjected to support excitation governed by time histories of

acceleration in the model global axes. In this example, the seismic excitation is applied directly to the bases of the columns using the first 2.5 seconds of the 1940 El Centro earthquake.

Modelling

Running LUSAS Modeller


For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.

Building and loading the model

File
Open...

To create the model, open the file **IMDPlus 3D Frame.mdl** located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.

After a short while the following isometric view of the model of the building will be displayed.

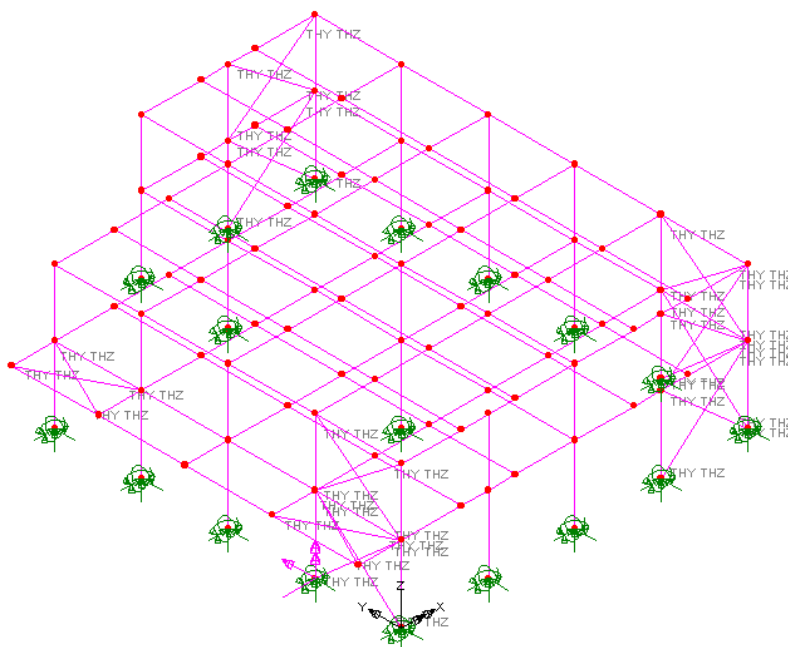

File
Save As...

- In the **\<LUSAS Installation Folder>\Projects** folder create a new directory called **IMDPlus 3D Frame**

- Save the model into this new folder as **IMDPlus 3D Frame**. This helps keep all relevant IMDPlus created files separate from other analyses and is good practice.



Note. No static structural loading is required for this analysis because only the dynamic loading is considered during the results processing.

The modelling will now be completed by defining the controls necessary to extract the natural frequencies.

Defining Eigenvalue controls

Eigenvalue controls are defined as properties of the loadcase.

- In the  Treeview right-click on **Loadcase 1** and select **Eigenvalue** from the **Controls** menu.

The Eigenvalue dialog will appear.

- Set the **Number of eigenvalues** as **30**
- Ensure the **Shift to be applied** is set as **0**
- Ensure the **Type of eigensolver** is set as **Default**



Note. Eigenvalue normalisation is set to **Mass** by default. This is essential if the eigenvectors are to be used for subsequent IMD analysis.

- Click the **OK** button to finish.



Save the model file.

File
Save

Running the Analysis

With the model loaded:




A LUSAS data file name of **IMDPlus 3D Frame** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.

A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

File
LUSAS Datafile...



Viewing the Results


If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results for each eigenvalue can be seen in the Loadcase panel of the  Treeview with Eigenvalue 1 set to be active by default.

Seismic Response Analysis

Seismic response calculations are performed using the IMDPlus (Interactive Modal Dynamics) facility. This involves defining the excitation and specifying the results required. With a seismic response analysis, additional damping information may also be set. Unlike results from a natural frequency analysis, the output values obtained from a seismic response are design values.

Initially, in this example, the response of a node at the top and in the centre of the frame will be investigated. Node numbers will be added to the mesh display to allow selection.


- Turn off the **Geometry** layer in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the graphics window and select the **Labels** option to add the labels to the  Treeview.
- On the Properties dialog select the **Name/Node** check box and click **OK**
- Select the node at the top and in the centre of the frame as shown in the following diagram.

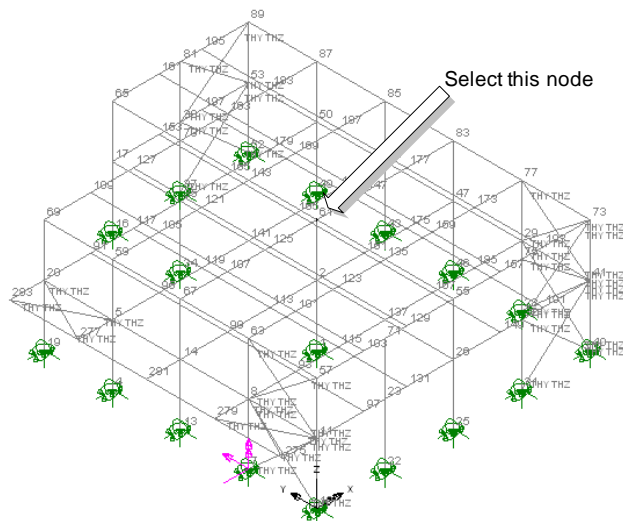

- On the IMDPlus Main Control dialog select the **Run Seismic Analysis** option.

Defining the Seismic Parameters

The input for the seismic analysis is defined on the IMDPlus Seismic Analysis Control dialog. The input consists of the earthquake acceleration records, included modes and damping along with interpolation options.

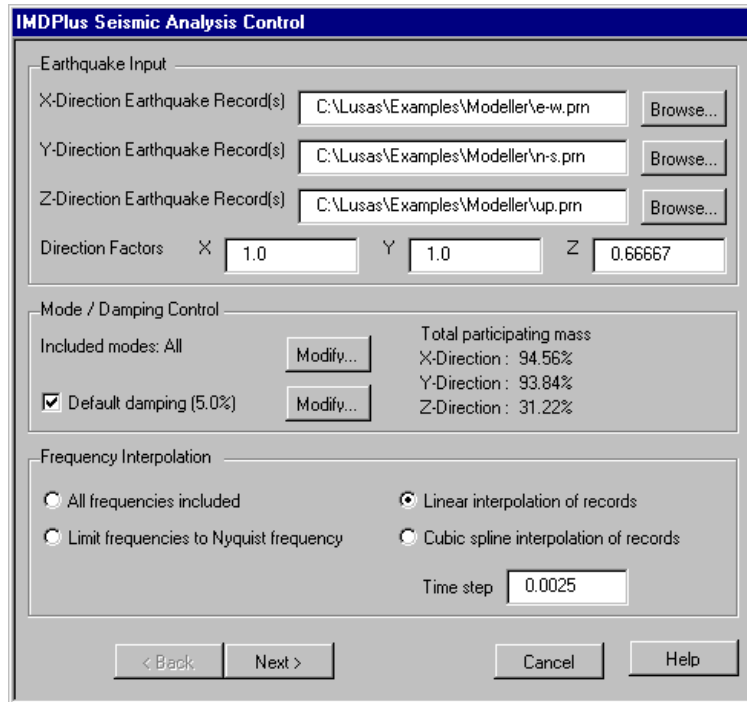

The dialog box is titled "IMDPlus Seismic Analysis Control". It is divided into three main sections: "Earthquake Input", "Mode / Damping Control", and "Frequency Interpolation".

- Earthquake Input:** Contains three rows for "X-Direction Earthquake Record(s)", "Y-Direction Earthquake Record(s)", and "Z-Direction Earthquake Record(s)". Each row has a text box with a file path (e.g., "C:\Lusas\Examples\Modeller\e-w.prn") and a "Browse..." button. Below these is a "Direction Factors" section with input boxes for X (1.0), Y (1.0), and Z (0.66667).
- Mode / Damping Control:** Contains a section for "Included modes: All" with a "Modify..." button. Below it is a checked checkbox for "Default damping (5.0%)" with a "Modify..." button. To the right, it displays "Total participating mass" and its distribution: "X-Direction : 94.56%", "Y-Direction : 93.84%", and "Z-Direction : 31.22%".
- Frequency Interpolation:** Contains two columns of radio button options. The first column has "All frequencies included" and "Limit frequencies to Nyquist frequency". The second column has "Linear interpolation of records" (which is selected) and "Cubic spline interpolation of records". Below these is a "Time step" input box set to "0.0025".

At the bottom of the dialog are four buttons: "< Back", "Next >", "Cancel", and "Help".

- In the Earthquake Input section, for the **X-Direction Earthquake Record(s)** browse to the \<Lusas Installation Folder>\Examples\Modeller directory and select **e-w.prn**
- For the **Y-Direction Earthquake Record(s)** browse to the \<Lusas Installation Folder>\Examples\Modeller directory and select **n-s.prn**
- For the **Z-Direction Earthquake Record(s)** browse to the \<Lusas Installation Folder>\Examples\Modeller directory and select **up.prn**
- Ensure that the **Direction Factors** are set to **1.0** in the X-Direction, **1.0** in the Y-Direction and **0.66667** in the Z-Direction
- Ensure **Included modes** is set to **All**. If this is not the case, click on the **Modify...** button and turn the **All modes** option on.

- Ensure **Default damping (5%)** is selected. If a different damping is displayed, click on the **Modify...** button and set the **Default damping** to **5**
- Select the **Linear interpolation of records** option and enter a time step of **0.0025** (Half the time step of the original earthquake records)
- Click the **Next** button to proceed. When prompted about significant missing total mass choose **Yes** as only 31.22% is included in the Z-Direction (vertical) for 30 modes.

Displacement Plots

The displacement of the top of the central column will be investigated initially. Enter the following information into the IMDPlus Output Control dialog.

- Select **Node** and enter or select **61** from the drop-down list.
- Select **Displacement** results of **DX, DY & DZ**
- Select **Response time history**
- Select **Peak response summary**
- Select **Modal combination/ factor history** and click on the **Options...** button.
- Set the **Minimum mass participation factor percentage to include** to **1.0** and click on **OK**
- Select **Generate textfile output** and click the **Finish** button.

The image shows the 'IMDPlus Output Control' dialog box. It is divided into two main sections: 'Node / Element Selection' and 'Output Control'.

Node / Element Selection:

- Under 'Select node number or element number, then set results entity and component for output', the 'Node' radio button is selected with a value of '61' in the dropdown. The 'Element' radio button is unselected.
- The 'Entity' dropdown is set to 'Displacement'.
- The 'Component' dropdown is set to 'DX, DY & DZ'.


Output Control:

- ☒ Response time history
- ☒ Peak response summary. To its right are radio buttons for 'Positive/Negative' (unselected) and 'Absolute' (selected).
- ☐ Generate Secondary Response Spectra (SRS) with a 'Modify...' button next to it.
- ☒ Modal combination/factor history with an 'Options...' button next to it.
- ☒ Generate graphs in Modeller. To its right is a dropdown for 'Earthquake to graph' set to '1'.
- ☒ Generate textfile output with an 'Options...' button next to it.

At the bottom of the dialog are five buttons: '< Back', 'Finish', 'Apply', 'Cancel', and 'Help'.

The horizontal (DX and DY) and vertical (DZ) displacement of the top of the column are displayed on the graph for the first 2.5 seconds of the 1940 El Centro earthquake.

Seismic Analysis of a 3D Frame (Time Domain)

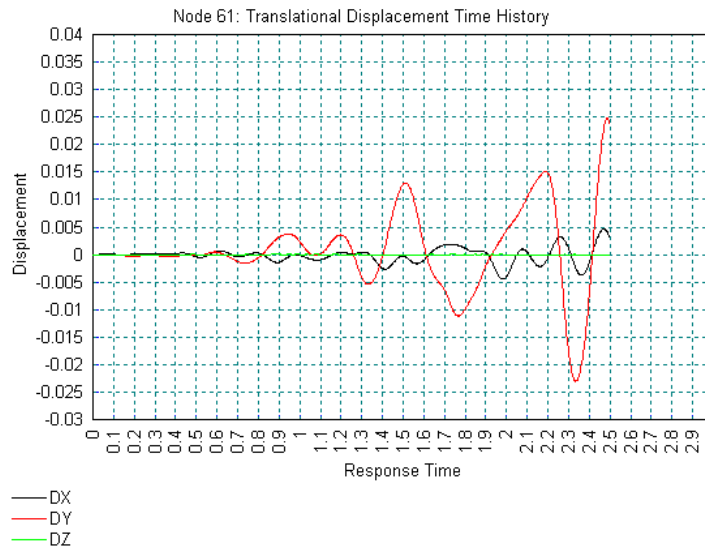

Peak displacements are also output to Notepad and indicate absolute peak displacements of 0.0047 m in the X-direction, 0.0248 m in the Y-direction along with additional output for the Z-direction and rotations about each of these axes. From this output we can identify times of 2.4725 seconds and 2.49 seconds which correspond to the absolute peak displacements in the X and Y directions respectively. This information will be used in the next section to visualise the deformed shapes using modal combinations.

#	Record 001	
# Entity	Time	value
Peak_Pos_DX	2.472500000	0.4663131411E-002
Peak_Neg_DX	1.982500000	-0.4455946988E-002
Abs_Peak_DX	2.472500000	0.4663131411E-002
Peak_Pos_DY	2.490000000	0.2476942373E-001
Peak_Neg_DY	2.337500000	-0.2302743593E-001
Abs_Peak_DY	2.490000000	0.2476942373E-001
Peak_Pos_DZ	1.082500000	0.6531231806E-004
Peak_Neg_DZ	1.015000000	-0.9521361203E-004
Abs_Peak_DZ	1.015000000	0.9521361203E-004
Peak_Pos_THX	2.327500000	0.5255492534E-004
Peak_Neg_THX	2.500000000	-0.5539241810E-004
Abs_Peak_THX	2.500000000	0.5539241810E-004
Peak_Pos_THY	2.467500000	0.1603537859E-004
Peak_Neg_THY	2.002500000	-0.1634596294E-004
Abs_Peak_THY	2.002500000	0.1634596294E-004
Peak_Pos_THZ	2.380000000	0.4130097956E-003
Peak_Neg_THZ	2.480000000	-0.4316077683E-003
Abs_Peak_THZ	2.480000000	0.4316077683E-003
Abs_Peak_RSLT	2.490000000	0.2510253392E-001

 
- Close the Notepad application and graph window.

Displaying Deformed Mesh Plots from Modal Combinations


When the IMDPlus analysis was carried out in the previous section, the Modal combination/factor history option was selected and caused IMDPlus to generate a command file in the current working directory called **Modal_Combinations-rec001.vbs**. These combinations can now be generated in Modeller by loading this command file.








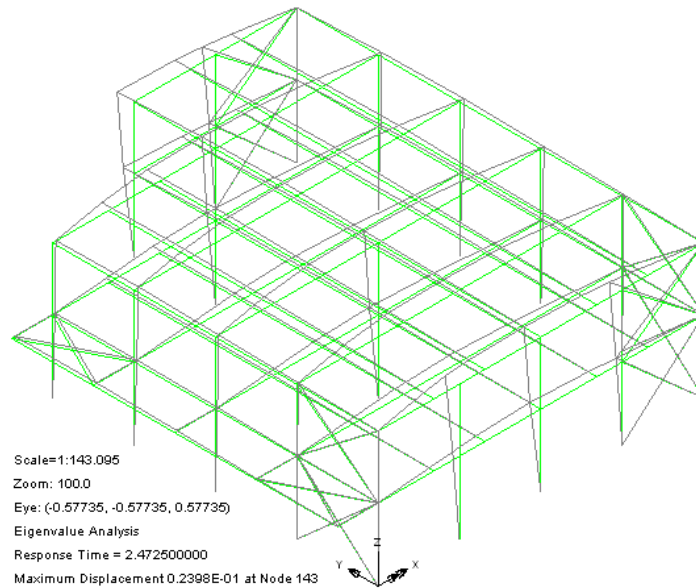
Modal_Combinations-rec001.vbs defines the modal combinations for all time steps in the seismic analysis.




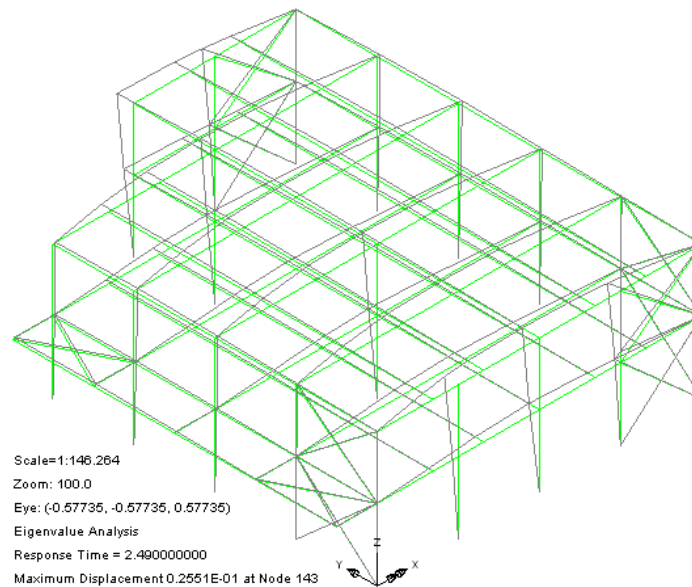
- Open the file **Modal_Combinations-rec001.vbs** located in the **\<LUSAS Installation Folder>\Projects\IMDPlus 3D Frame** directory.

The combinations will appear under the original model in the  Treeview.

- Turn off the display of the **Labels** and **Attributes** layers in the  Treeview.
- In the  Treeview click the right-hand mouse button on the **Local Coordinates 1** entry and deselect **Show definition**
- In the  Treeview click the right-hand mouse button on the **Mesh** and select **Properties**. Select the **Choose pen...** button and select a **Green** colour for the mesh. Select the **Visualise** tab and turn off the **Beam end releases** option. Click the **OK** button.
- With no features selected click the right-hand mouse button in a blank part of the Graphics area and select the **Deformed Mesh** option to add the deformed mesh layer to the  Treeview. In the Display section of the dialog select the **Window summary** option. Select the **Visualise** tab and turn off the **Beam end releases** option. Click the **OK** button to accept the remaining default values and display the deformed mesh.
- In the  Treeview right-click on the **991:Response Time = 2.472500000** dataset name and select the **Set Active** option to set this combination active. The deformed mesh will now be displayed for this instance in time as shown below.



- In the  Treeview right-click on the **998:Response Time = 2.490000000** dataset name and select the **Set Active** option to set this combination active. The deformed mesh will now be displayed for this instance in time as shown below.





Note. Standard post-processing such as displaying contours can be performed on these modal combinations to allow the global behaviours at instances in time to be investigated.





Displaying Envelopes Over Whole Earthquake

Plots showing the maximum and minimum axial force and bending moment in the columns for the entire earthquake duration are to be displayed.

Utilities


Envelope...


Create an envelope

- Enter **Whole Earthquake** for the name
- Select **model** data from the drop-down list
- Hold down the shift key and select combinations **2** to **1002** in the list and click on the >> 'Add to' button to add all combinations to the envelope
- Click the **OK** button to create the max and min envelopes.
- In the  Treeview right-click the group named **Columns** and **Set as Only Visible** to only view the column members.
- Turn off the display of the **Mesh** and **Deformed Mesh** layers in the  Treeview.
- With no features selected, click the right-hand mouse button in a blank part of the Graphics area and select the **Diagrams** option to add the Diagrams layer to the  Treeview.
- Select **Force/Moment – Thick 3D Beam** results of axial force **Fx** in the members. Select the **Diagram display** tab and select the **Label values** option. Plot values on **80%** of the element length.
- Click the **OK** button.
- In the  Treeview right-click on the **Whole Earthquake (Max)** envelope and select the **Set Active** option to set this envelope active.
- On the Set Active dialog select **Force/Moment – Thick 3D Beam** results of axial force **Fx** and click the **OK** button to finish.


The envelope will now be assembled over the 1000 modal combinations generated by IMDPlus. On modern computers this will take under 5 minutes.

Seismic Analysis of a 3D Frame (Time Domain)

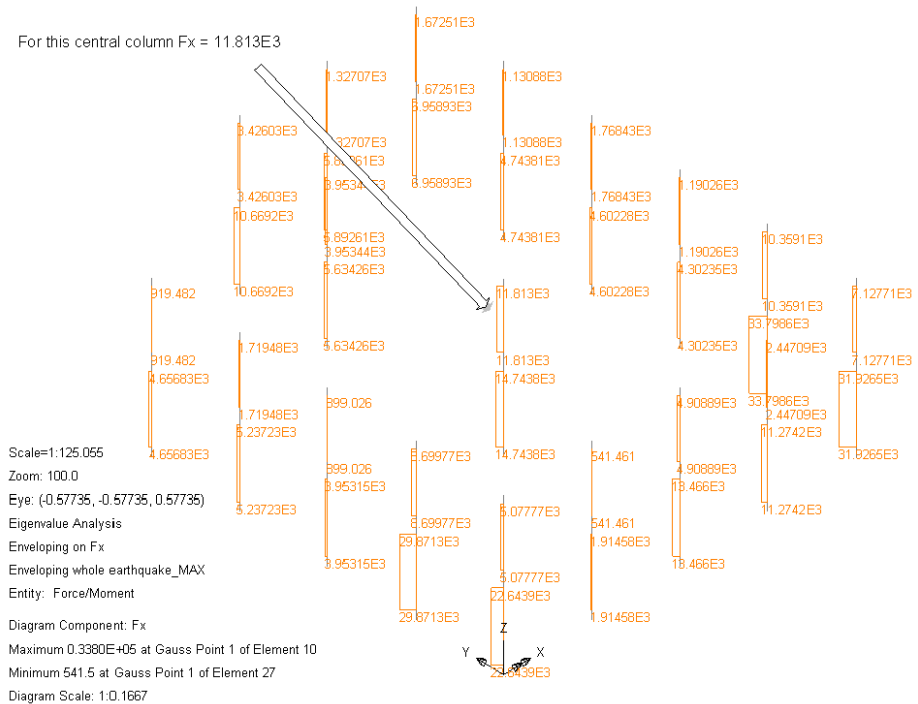


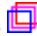
- In the  Treeview right-click on the **Whole Earthquake (Max)** envelope and select the **Set Active** option to set this envelope active. Select entity **Force/Moment – Thick 3D Beam** of component **My** and click the **OK** button. When informed that the component is different to the one used in the drawing layers click the **Yes** button to update the diagrams layer.

The envelope will now be assembled over the 1000 modal combinations generated by IMDPlus. On current computers this will take under 5 minutes.

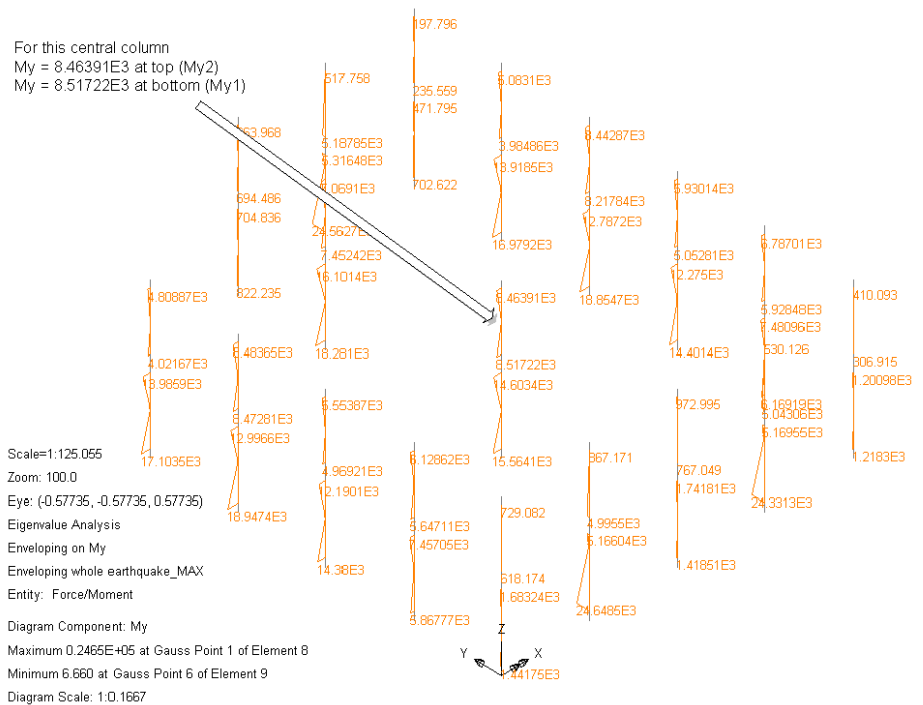


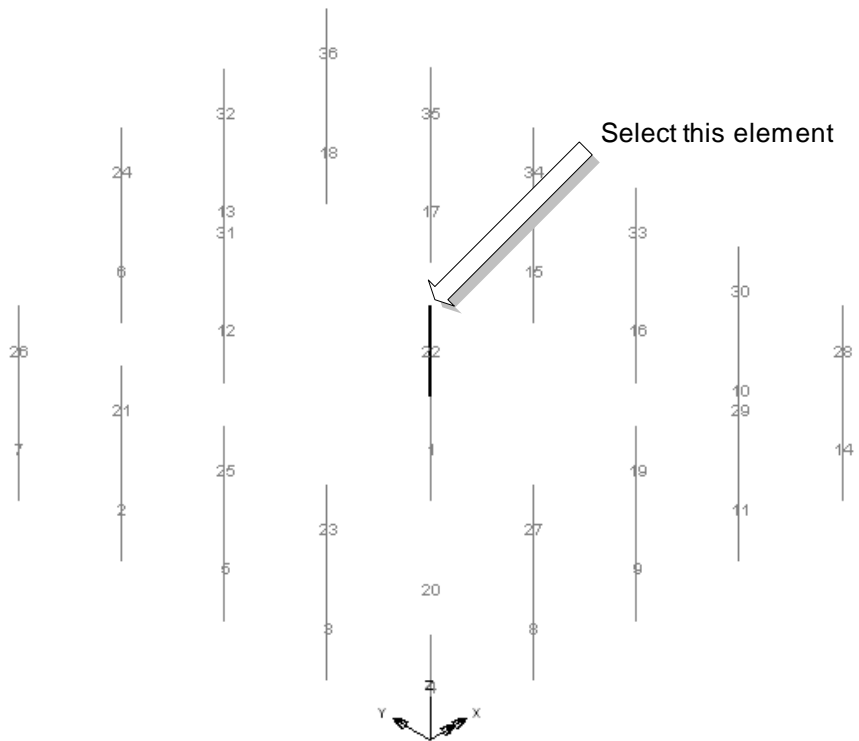
Displaying results for a selected member

To check these previous results for F_x and M_y we will utilise IMDPlus again to check the response of the member in centre of the frame.

- Turn off the display of the **Diagrams** and **Annotation** layers in the  Treeview.
- Turn on the display of the **Mesh** layer in the  Treeview.

Element numbers will be added to the mesh display to allow selection.

- Double-click on the **Labels** layer name in the  Treeview. On the Properties dialog de-select the **Name/Node** check box and select the **Name/Element** check box and click **OK**. (This turns on the display of a turned-off layer.)
- Select the element in the centre of the frame as shown in the following diagram.



Utilities
IMDPlus...

- Select the **Run Seismic Analysis** option
- On the IMDPlus Seismic Analysis Control dialog click the **Next** button to accept the previously defined values. When prompted about the total mass participation click the **Yes** button to continue.
- On the IMDPlus Output Control dialog select **Element** and enter or select **22** from the drop-down list for **All** ends.
- Choose **Force/Moment – Thick 3D Beam** and component **Fx**.
- Deselect the **Response time history**.
- Ensure **Peak response summary** is selected.
- Deselect the **Modal combination/factor history**.
- Click the **Finish** button and click the **Yes** button to confirm that both ends of the beam element are to be processed (because All ends has been previously set).

The peak forces and moments in element 22 will be output to a Notepad application in the format indicated below.

#	Record 001	
# Entity	Time	value
Peak_Pos_Fx1	1.082500000	12103.66441
Peak_Neg_Fx1	1.015000000	-17746.38265
Abs_Peak_Fx1	1.015000000	17746.38265
Peak_Pos_Fx2	1.082500000	12103.66441
Peak_Neg_Fx2	1.015000000	-17746.38265
Abs_Peak_Fx2	1.015000000	17746.38265
Peak_Pos_Fy1	2.500000000	14792.56416
Peak_Neg_Fy1	2.330000000	-13266.17911
Abs_Peak_Fy1	2.500000000	14792.56416
Peak_Pos_Fy2	2.500000000	14792.56416
Peak_Neg_Fy2	2.330000000	-13266.17911
Abs_Peak_Fy2	2.500000000	14792.56416
Peak_Pos_Fz1	1.982500000	5582.631170
Peak_Neg_Fz1	2.475000000	-5874.923396
Abs_Peak_Fz1	2.475000000	5874.923396
Peak_Pos_Fz2	1.982500000	5582.631170
Peak_Neg_Fz2	2.475000000	-5874.923396
Abs_Peak_Fz2	2.475000000	5874.923396
Peak_Pos_Mx1	2.282500000	1.398951832
Peak_Neg_Mx1	2.195000000	-0.9690896263
Abs_Peak_Mx1	2.282500000	1.398951832
Peak_Pos_Mx2	2.282500000	1.398951832
Peak_Neg_Mx2	2.195000000	-0.9690896263
Abs_Peak_Mx2	2.282500000	1.398951832
Peak_Pos_My1	2.475000000	8929.840188
Peak_Neg_My1	1.982500000	-8475.194095
Abs_Peak_My1	2.475000000	8929.840188
Peak_Pos_My2	1.982500000	8607.657285
Peak_Neg_My2	2.475000000	-9047.425405
Abs_Peak_My2	2.475000000	9047.425405
Peak_Pos_Mz1	2.330000000	20310.39285
Peak_Neg_Mz1	2.500000000	-22643.69505
Abs_Peak_Mz1	2.500000000	22643.69505
Peak_Pos_Mz2	2.500000000	22621.55129
Peak_Neg_Mz2	2.330000000	-20284.11523
Abs_Peak_Mz2	2.500000000	22621.55129

Comparison of the results for Fx and My for the central column show good agreement between the envelope and IMDPlus results. Exact agreement would have been obtained if all modes were included in the modal combinations used for the envelope instead of the 1% minimum participating mass selected earlier.

- Close the Notepad application.



Note. For an IMDPlus seismic analysis selecting Peak response summary will tabulate results for all components and not just the one selected (Fx). If Response time history is selected only the results for the selected component will be graphed.

Save the model

Save the model. This saves all load combinations that have been defined during the results processing operations.

This completes the example.

File
Save...


Train Induced Vibration of a Bridge

For software product(s):	Any Plus version
With product option(s):	IMDPlus
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

This example examines the response of a steel rail bridge to the passage of a train.

Units used are N, m, kg, s, C throughout.

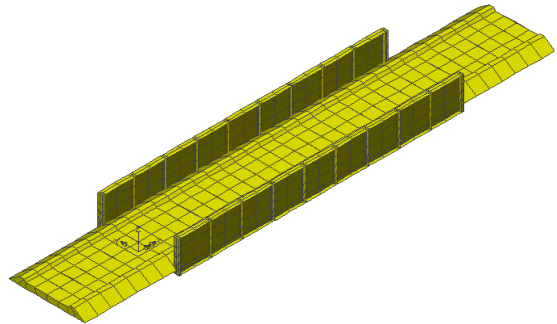

Objectives

The output requirements of the analysis are:

- ☐ Maximum deflections and accelerations in X-, Y- and Z-directions for train speeds of 15 m/s and 70 m/s,
- ☐ Peak deflections and accelerations in the vertical direction for a speed range of 15 m/s to 70 m/s in 5 m/s intervals,

- ☐ Stress resultants and peak stress resultants in main girder web.

Keywords

Moving load, time domain, response, interactive, modal, dynamics, IMDPlus, eigenvalue.

Associated Files



- ☐ **IMDPlus Rail Bridge.mdl** Model of the structure.
- ☐ **ec1-3_Type3.prn** contains the axle loads of the train set.

Modelling


Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.

Building and loading the model


To create the model, open the read-only file **IMDPlus Rail Bridge.mdl** located in the **\<LUSAS Installation Folder>\Examples\Modeller** directory.


After a short while the following view of the model of the bridge will be displayed.

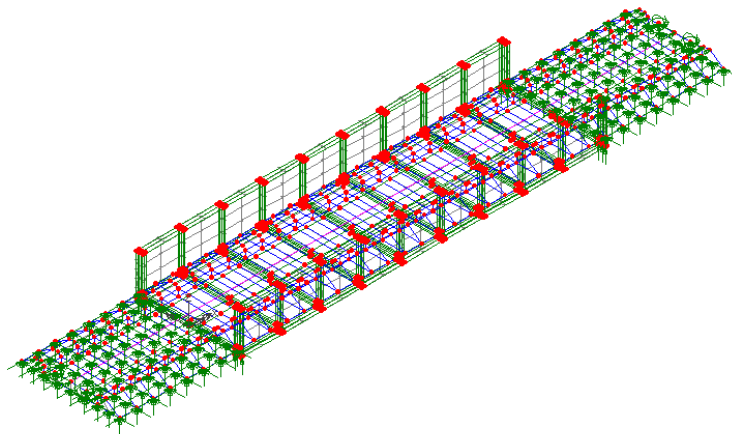

File
Open...

File
Save As...


- In the \<LUSAS Installation Folder>\Projects\ folder create a new directory called **IMDPlus Rail Bridge**
- Save the model into this new folder as **IMDPlus Rail Bridge**. This helps keep all relevant IMDPlus created files separate from other analyses and is good practice.
- Turn off the display of the **Attributes** layer in the  Treeview.

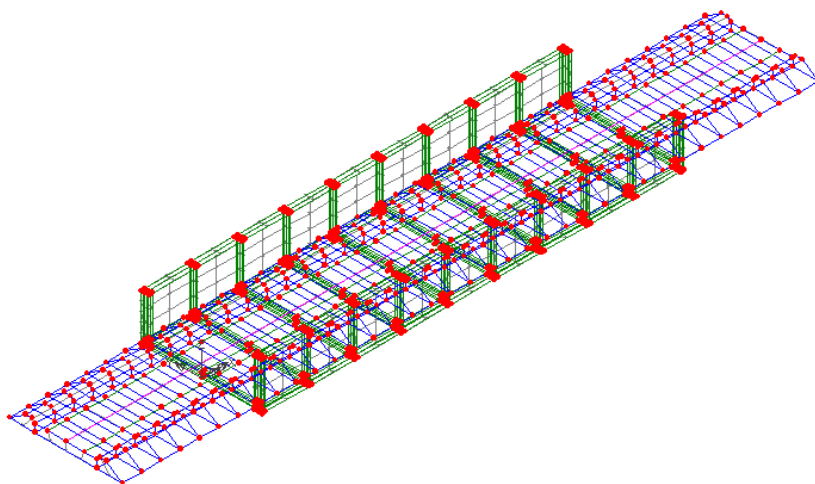


Note. No static structural loading is required for this analysis because only the dynamic loading is considered during the results processing which is defined later.

Modelling Discussion

The bridge is approximately 16.5m long and 4.75m wide and carries a single track with ballast and concrete sleepers. The primary structure is constructed from steel and is modelled using shell elements. For this analysis, modelling of the ballast/track-bridge interaction has been carried out using a full 3D solid representation of the ballast with the sleepers modelled with thick beam elements laid along the top of the ballast. The rails of the track have been modelled using thick beam elements spanning between the sleepers and the whole ballast/track model is connected to the bridge deck using a sliding-only slideline. For the purposes of this example the bridge and ballast model has been represented with a coarse mesh and therefore the results from this analysis will be inaccurate. For analysing actual structures it is recommended that a finer mesh be used which can capture both the vibration modes of the bridge and the movement of the load across the bridge more accurately.

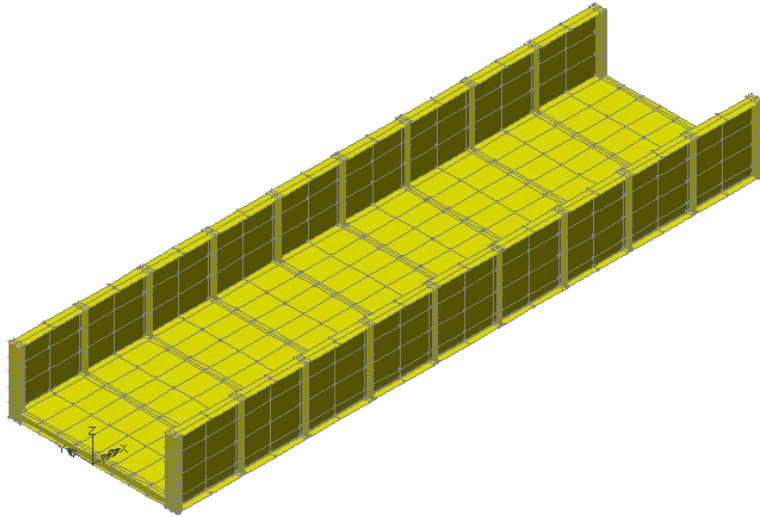


Bridge representation

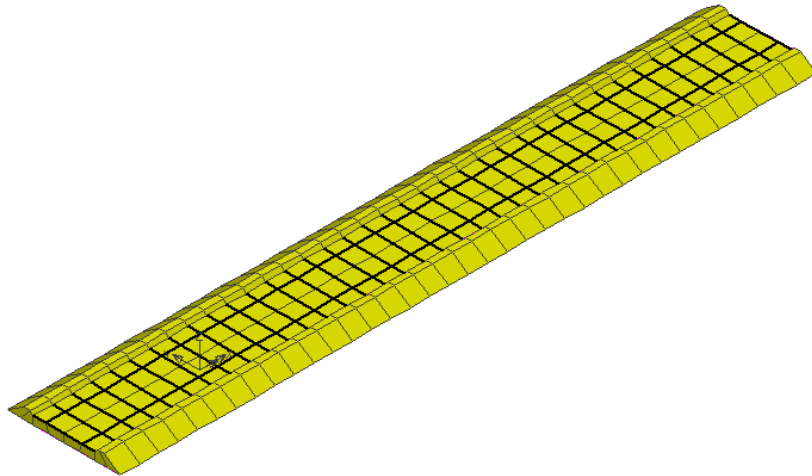

Ballast representation

To allow the loading of the rails to be distributed to the 3D solid elements using discrete point loads the track modelling uses weak, weightless shell elements which span between the beam elements representing the rails. The track representation is shown in the following figure.

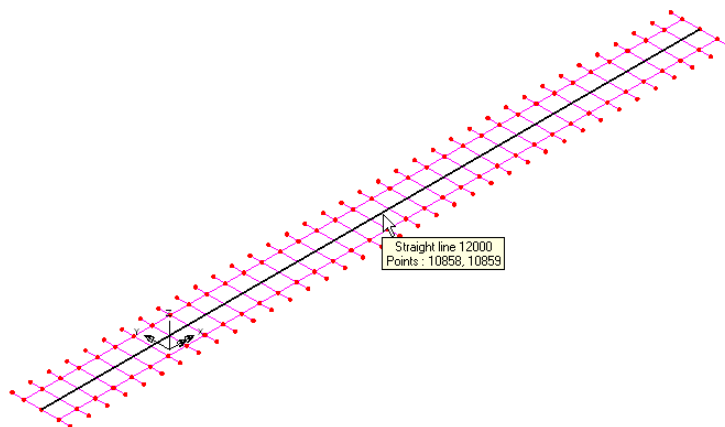

Track (sleepers and rails) representation

Note that the line down the centre of the track (Line 12000) is used to define the path of the train across the bridge and will be used later in this example. In order to avoid any adverse dynamic behaviour of the weak weightless shell elements, only one division is used to span between the two rails thus providing full support to the shells without adding stiffness to the model.

Defining Eigenvalue Controls

Eigenvalue controls are defined as properties of the loadcase.

- In the  Treeview right-click on **Loadcase 1** and select **Eigenvalue** from the **Controls** menu.

The Eigenvalue dialog will appear.

The following parameters need to be specified:

- Set the **Eigenvalues required** to **Range**
- Ensure the **Range** is set to **Frequency**
- Set the **Minimum frequency** as **0**
- Set the **Maximum frequency** as **35**

- Set the **Number of eigenvalues** to **0** to solve for all frequencies in the range.
- Ensure the **Type of eigensolver** is set as **Default**



Note. Eigenvalue normalisation is set to **Mass** by default. This is essential if the eigenvectors are to be used for subsequent IMD analysis.

- Click the **OK** button to finish.

File
Save



Save the model file.

Running the Analysis

With the model loaded:

File
LUSAS Datafile...



A LUSAS data file name of **IMDPlus Rail Bridge** will be automatically entered in the File name field.

- Ensure that the options **Solve now** and **Load results** are selected.
- Click the **Save** button to finish.

A LUSAS Datafile will be created from the model information. The LUSAS Solver uses this datafile to perform the analysis.

Viewing the Results

If the analysis was run from within LUSAS Modeller the results will be loaded on top of the current model and the loadcase results for each eigenvalue can be seen in the Loadcase layer. Eigenvalue 1 is set to be active by default.

Checking the Mass Participation Factor



Note. In order to carry out a successful IMDPlus analysis you should ensure that a significant proportion of the total mass has been accounted for in the analysis. This requires checking that around 90% of the total mass has been achieved in the global directions. If less than 90% has been achieved, no further modes need be included if and only if the mode of vibrations omitted cannot be excited by the dynamic input or if a significant proportion of the structure is restrained by support in these directions and therefore cannot participate in the modes of vibration. The acceptability of the included modes of vibration will vary from analysis to analysis but failure to check that a significant proportion of the total mass has been accounted may lead to important modes being missed and subsequent errors in the analysis results.

Utilities

Print Results

Wizard...

- Select **Active** and click **Next**.
- Select Entity **None** and from the Type drop-down menu select **Sum mass participation factors** and then click **Finish**. The Sum Mass Participation Factors results will be printed to the Text Output window.

It can be seen that the 90% value has almost been achieved in all directions for this analysis and is discussed in the note below.

Results File = C:\Lusas140\Projects\IMDPlus Rail Bridge.mys ID=0
Eigenvalues

MODE	SUM MASS X	SUM MASS Y	SUM MASS Z
1	0.110940E-01	0.117572E-04	0.707920
2	0.121970E-01	0.133845E-04	0.708029
3	0.125612E-01	0.182964	0.708274
4	0.131909E-01	0.182989	0.769089
5	0.290473E-01	0.352634	0.770999
6	0.430279E-01	0.813529	0.771960
7	0.177903	0.890132	0.806536
8	0.178201	0.892043	0.831905
9	0.188464	0.893014	0.832302
10	0.207253	0.893215	0.833539
11	0.864564	0.893542	0.861563
12	0.901000	0.938795	0.862830
13	0.901132	0.939785	0.862830
14	0.920871	0.940199	0.864118
15	0.920872	0.940360	0.881332
16	0.938299	0.940366	0.882002
17	0.938309	0.940637	0.882002
18	0.938347	0.940642	0.882003
19	0.938366	0.940708	0.882003



Note. In this analysis we are only including modes of vibration with frequencies up to and including 35 Hz with frequencies higher than this value considered insignificant for the analysis. In this analysis the printed results show that 93.8% of the total mass is achieved in the X-direction, 94.1% is achieved in the Y-direction and 88.2% is achieved in the Z-direction.

Train Induced Vibration of a Bridge

- Close the text window by selecting the close button in the top right hand corner of the window.
- Select **Active** and click **Next**.
- Select Entity **None** and from the Type drop-down menu select **Mass participation factors** and then click **Finish**. The Mass Participation Factors results will be printed to the Text Output window.



Results File = C:\Lusas140\Projects\IMDPlus Rail Bridge.mys ID=0
Eigenvalues

MODE	MASS PF X	MASS PF Y	MASS PF Z
1	0.110940E-01	0.117572E-04	0.707920
2	0.110297E-02	0.162728E-05	0.109262E-03
3	0.364226E-03	0.182951	0.245424E-03
4	0.629662E-03	0.241889E-04	0.608148E-01
5	0.158564E-01	0.169645	0.191047E-02
6	0.139805E-01	0.460895	0.960755E-03
7	0.134875	0.766029E-01	0.345759E-01
8	0.298085E-03	0.191048E-02	0.253685E-01
9	0.102626E-01	0.971036E-03	0.397193E-03
10	0.187893E-01	0.200908E-03	0.123754E-02
11	0.657310	0.327165E-03	0.280234E-01
12	0.364360E-01	0.452530E-01	0.126713E-02
13	0.132603E-03	0.990173E-03	0.130638E-07
14	0.197387E-01	0.413466E-03	0.128847E-02
15	0.797027E-06	0.161819E-03	0.172134E-01
16	0.174273E-01	0.517540E-05	0.670044E-03
17	0.100738E-04	0.271287E-03	0.727633E-06
18	0.383935E-04	0.473477E-05	0.479303E-07
19	0.185724E-04	0.667088E-04	0.664934E-07

From these mass participation factors the major modes of vibration of the bridge can be seen to be mode 1 in the Z-direction (vertical) and modes 3, 5 and 6 in the Y-direction (lateral).


- Close the text window by selecting the close button in the top right hand corner of the window.
- Use the maximise button to increase the size of the graphics window.

Plotting Mode Shapes


- Turn off the display of the **Mesh**, and **Geometry** layers in the  Treeview.
- With no features selected click the right-hand mouse button in a blank part of the Graphics area and select the **Deformed mesh** option to add the deformed mesh layer to the  Treeview. On the deformed mesh Properties dialog select the **Window summary** option and click the **OK** button to accept the remaining default values and display the deformed mesh for Eigenvalue 1.

This mode of vibration is the primary mode in the vertical direction as determined in the Checking the Mass Participation Factor section.

Scale=1:146.844
 Zoom: 100.0
 Eye: (-0.57735, -0.57735, 0.57735)
 Eigenvalue Analysis
 Dump: 1
 Eigenvector: 1
 Results File: 0
 Eigenvalue: 1590.
 Natural Frequency: 6.345
 Error Norm: 0.1872E-10
 Maximum Displacement 0.6989E-02 at Node 1672

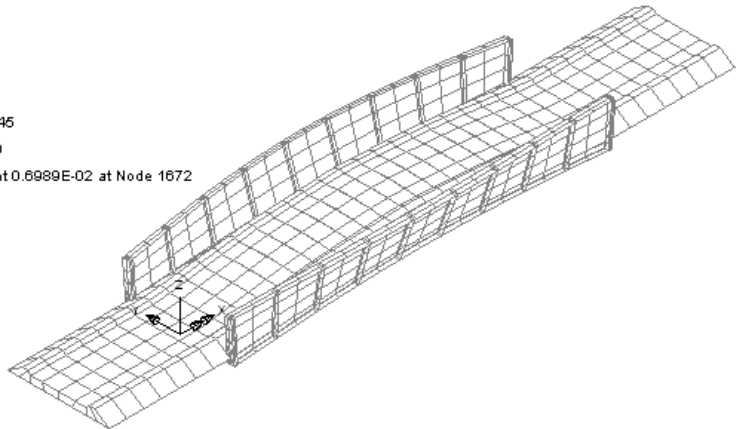


By setting each Eigenvalue to be active the deformed mesh can be seen for all mode shapes.

- In the  Treeview right-click on **Eigenvalue 6** and select the **Set Active** option. The deformed mesh plot for Eigenvalue 6 will be displayed.

This mode of vibration has the highest participating mass in the lateral (Y) direction for the whole bridge as determined in the Checking the Mass Participation Factor section.

Scale=1:118.951
Zoom: 100.0
Eye: (-0.57735, -0.57735, 0.57735)
Eigenvalue Analysis
Dump: 1
Eigenvector: 6
Results File: 0
Eigenvalue: 0.1074E+05
Natural Frequency: 16.50
Error Norm: 0.4814E-11
Maximum Displacement 0.9762E-02 at Node 1851

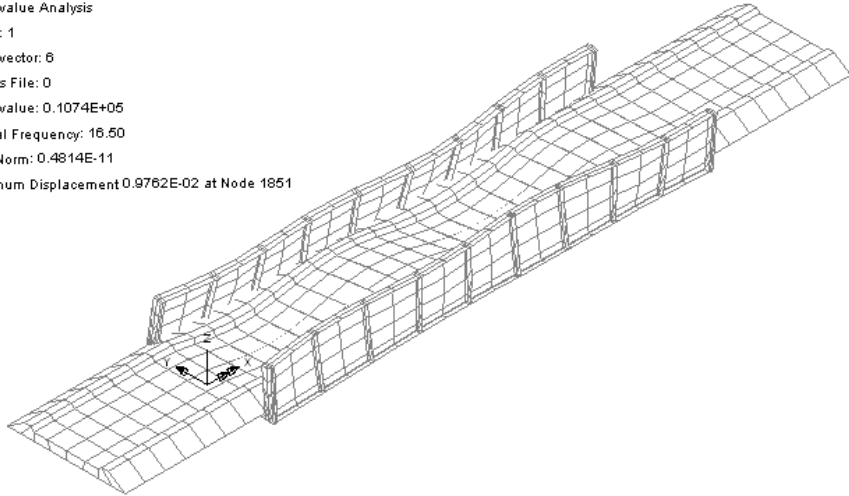



Note. The window summary displays the values of the eigenvalue and the natural frequency and also a value for displacement at a node. It should be noted that the displacement value is non-quantitative and is related to the amount of mass in a particular mode using the mass normalisation technique. Therefore the only items that can be found using a basic eigenvalue analysis are the frequency and the mode shape.




Note. The mode shape may be inverted. This is because the sense is arbitrary since during vibration the deformed shape will appear in both directions.


Selecting nodes and elements of interest

Prior to running an IMDPlus analysis nodes and element numbers for the locations of the structure that will be assessed should be ascertained. This can be done by selecting the locations of interest with the cursor and noting down the numbers of the node and elements concerned.

- Turn off the display of the **Deformed mesh** and **Annotation** layers in the  Treeview.
- In the  Treeview double-click on the **Mesh** layer name and click the **OK** button to accept the default settings. This will turn on the layer.

To view just the bridge structure without the ballast and track:

- In the  Treeview click the right-hand mouse button on the group name **Bridge_Structure** and select the **Set as Only Visible** option from the drop-down menu.

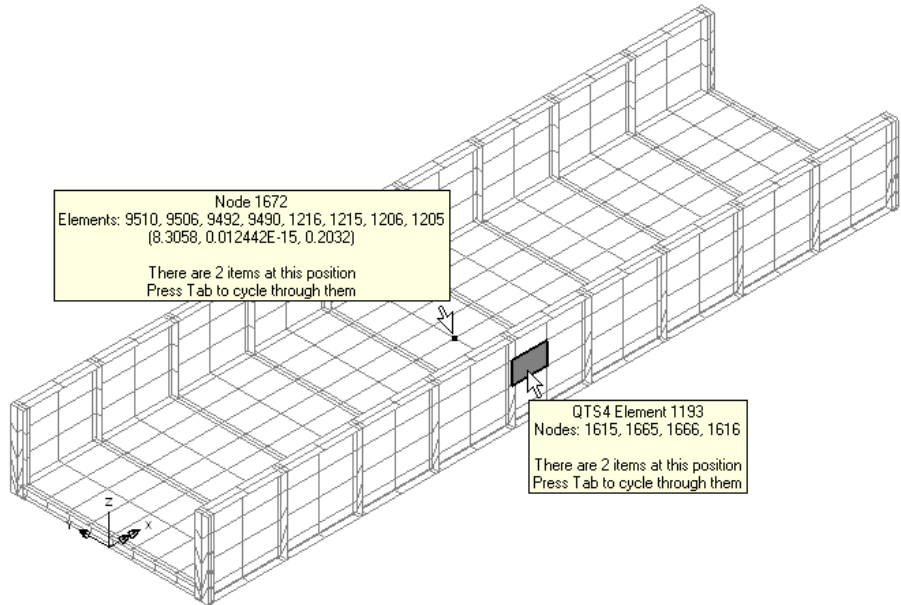



By selecting or hovering the cursor over the node and elements shown, the node and element number of interest can be obtained. For this analysis we are interested in the node at the centre of the bridge deck and the element in the middle of the side girder as shown.

Moving Load Discussion

Before an IMDPlus analysis can be carried out the load that is going to pass over the structure must be defined using either discrete point or patch loads. For this example this has already been carried out with a single axle of unit load defined as a discrete point load. Defining a single axle allows multiple load configurations to be analysed through the composite axle definition method in IMDPlus without needing to carry out the path and modal force stages for each layout. For railways the axle lengths remain constant over all of the train set and this method would normally be used. For moving loads where axles are of different widths the full definition of the load must be carried out with the path and modal force stages carried out for each layout.


To view the complete model again:

- In the  Treeview click the right-hand mouse button on the group name **IMDPlus Rail Bridge.mdl** and select the **Visible** option from the drop-down menu.
- In the  Treeview double-click on the **Geometry** layer name and click the **OK** button to accept the default settings. This will also turn on the layer.

Define the path of the moving load

To solve for the passage of the train across the bridge the path for the moving load must be defined. Line 12000 (the line representing the path of the moving load) will be set to be the current selection.

- Select the **line** shown (line 12000)

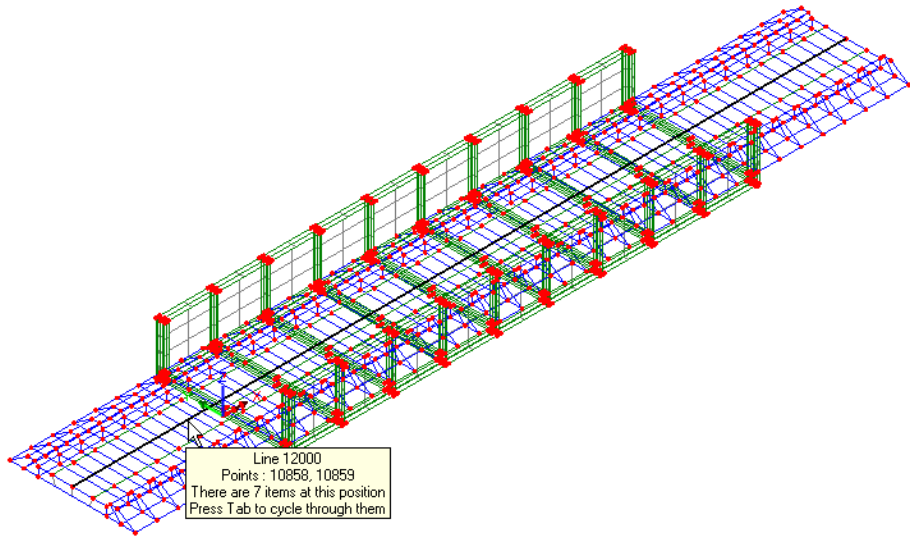

Note. The path can be built from multiple lines and arcs but these must form a continuous path without branching.

Moving Load Analysis

Moving load calculations are performed using the IMDPlus (Interactive Modal Dynamics) facility. In order to carry out the moving load analysis of the train travelling across the bridge we need to carry out three stages:

1. Define and set-up the path along which the load will travel
2. Convert the loading along this path into modal forces for the IMDPlus analysis
3. Run a IMDPlus moving load Analysis to calculate the response of the bridge

With the exception of initially defining a line representing the moving load path the set-up of the moving load path, modal history information and moving load analysis controls are all set via the IMDPlus Main Control dialog.

Running an IMDPlus analysis

The IMDPlus Main Control dialog will appear.

Each of the Moving Load Analysis Options, as shown on this dialog, will be selected in turn.




Defining the Moving Load Path

- On the IMDPlus Main Control dialog select the **Setup Moving Load Path** option

On startup of the IMDPlus Moving Load Generation dialog, all valid discrete loads and search areas will be made available in the loading options along with information about the path defined by the current selection.

In this example a single discrete load called Unit Axle Load which defines the unit loading from a single axle of the train is present along with a search area that is assigned to the weak weightless shells.

- Ensure **1:Unit Axle Load** is selected from the **Moving load dataset** list.
- Ensure **1:Track_Search_Area** is selected from the **Search area ID** for the assignment of the discrete loading.
- Ensure **Project over area** is selected.

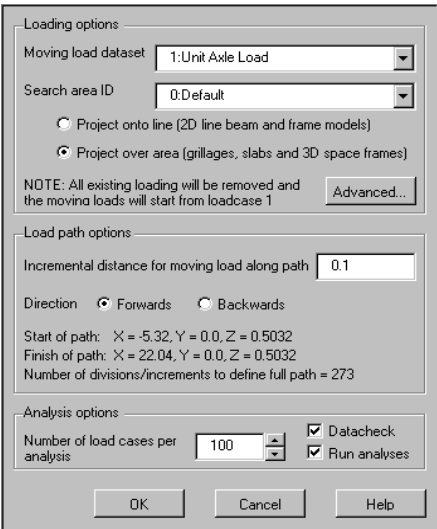



Note. Using search areas targets the application of the loading to the required features as described in the Modeller Reference Manual.


- Click on the **Advanced** button to adjust the inclusion of load characteristics.
- On the Moving Load Advanced Options dialog choose the **Include Full Load** option for loads outside the search area and click the **OK** button.
- On the IMDPlus Moving Load Generation dialog set the **Incremental distance** to **0.1**



Note. By default the incremental distance is set to one tenth of the length of the line along which the load moves.

- Click the **OK** button to proceed.

The program will now generate the loading information for the 274 locations of the unit axle along the path before returning to the Main IMDPlus Control dialog. This process will take only a minute or so on a modern computer and does not need to be repeated unless the lateral configuration of the load changes. For a railway this will not happen but it may be required for highway analyses where the axle lengths and tyre configurations could vary.

- When the program appears to have finished its calculations the **Close** button on the IMDPlus Main Control dialog can be clicked in order to see the loadcases generated in the  Treeview. (If not visible for some reason, the dialog can be accessed by selecting the Window > IMDPlus Control menu item)



Note. The discrete loading locations defined by this dialog will be saved into three models with a maximum of 100 loadcases each and the analyses performed automatically. These models will have the same file basename as the original model with a numeric indicator appended to it (e.g. _00001, _00002, etc) and are required for the modal force calculation stage.

Generating the Modal Force History for the Moving Load

In the previous stage the passage of the train axle across the structure has been defined. The modal forces for the IMDPlus solution now need to be calculated using the Modal Force Calculator.

Utilities

IMDPlus...


On the IMDPlus Main Control dialog click the **Setup Modal History Information** button to proceed.

- Click the **OK** button to accept the default information and proceed.



Note. This process will take only a minute or so on a modern computer and does not need to be repeated unless the moving load path or configuration in Stage 1 is changed.



Note. On the IMDPlus Main Control dialog the **Close** button can be clicked if you wish to see the loadcases generated in the  Treeview.

Defining the Moving Load Parameters

All of the basic moving load information has now been defined for the IMDPlus analysis. The next stage is to define the included modes, damping and speed parameters.

With line 12000 still selected:

Utilities

IMDPlus...

On the IMD Main Control dialog click the **Run Moving Load Analysis** button to continue.

- Ensure the **Modal forces associated with passage** contains **IMDPlus Rail Bridge.mfh** If this is not the case, browse to the current working directory and select this file.
- Click on the **Use composite axle definition method** option since we are using a unit load axle definition.
- Click on the **Browse** button next to the **Composite axle configuration file** text box and locate the **ec1-3_Type3.prn** file in the **\<LusasInstallationFolder>\Examples\Modeller** directory. Select the file and click the **OK** button to load this axle configuration.
- Ensure that **Included modes** is set to **All**. If this is not the case, click on the **Modify...** button and ensure the **All modes** option is selected.

- Ensure **Default damping (5%)** is selected. If a different damping is displayed, click on the **Modify...** button and set the **Default damping** to **5**
- Enter the **Minimum Speed** as **15**
- Enter the **Maximum Speed** as **70**
- Enter the **Speed Increment** as **5**
- Deselect the **IMDPlus determining time step (Nyquist)** option so we can specify the required time step
- Enter the **Solution time step** as **1E-3**

Click the **Next** button to proceed. When prompted about significant missing total mass choose **Yes** to continue. For this analysis we are only interested in the contributions of modes of vibration up to and including 35Hz which means that we are not going to achieve the 90% total mass target.

The information entered above will analyse the passage of a Eurocode ENV 1991-3 Type 3 train (with axle details as held in the file ec1-3_Type3.prn) across the bridge for a speed range of 15 m/s to 70 m/s in increments of 5 m/s (or 54 kph to 252 kph in increments of 18 kph). The quiet time allows for the decay of the response of the bridge after the train has passed across and the solution time step forces the time step to be used in the analyses.

Displaying Nodal and Element Results for Moving Load Analysis

The IMDPlus Output Control dialog will appear. This controls the results output for the model.

Displacement and Acceleration Graphs

The response of the mid-span of the bridge for the range of speeds selected will be investigated. Initially we will look at the displacements of the mid-span for a single speed of 15 m/s (or 54 kph).

Enter the following information into the output control dialog:

- Select **Node** and enter **1672**. This is the node in the centre of the bridge deck at the mid-span of the bridge.
- Select **Displacement** results of **DX, DY & DZ**
- Ensure **Response time history** is selected.
- Ensure **Generate graphs in Modeller** is selected.
- Set the **Speed to graph** as **1:15.0** which indicates that the first speed of 15 m/s is being processed

- **IMPORTANT:** Click the **Apply** button and not the Finish button to proceed.



Note. Clicking the Apply button instead of the Finish button keeps the IMDPlus Control Dialog accessible for subsequent graph plotting.

The IMDPlus analysis will now run and warning messages will be seen to appear from time to time in the text output window.

- At the end of the analysis click on **Yes** to view the warnings.


A typical warning issued is:

WARNING Results may be unreliable with high oversamples

If there are a significant number of warnings in an analysis then the size of the incremental distance used in the Moving Load Generation stage may need to be decreased. For this analysis we can ignore this warning and select **No** to not view the file.



Note. The warning/error log file IMDPlus.log must be closed before any graphs will be generated.

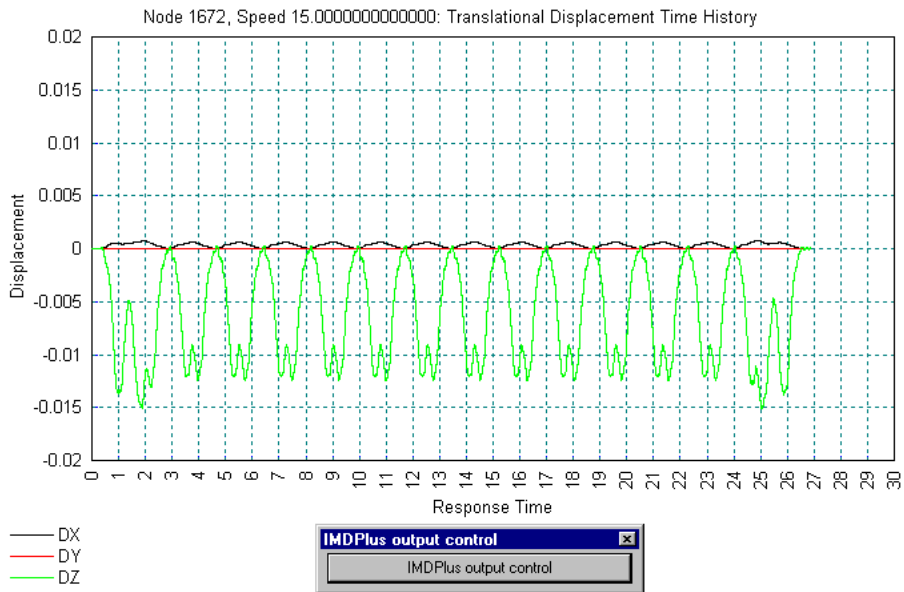

- When the graph has been displayed, close the graph and click on the **IMDPlus output control button** to return to the IMDPlus output control dialog

The vertical acceleration response of the mid-span for a single speed of 15 m/s (or 54 kph) will now be investigated.

- On the IMD Output Control dialog select **Acceleration** results of **AZ** for the vertical component only
- Click the **Apply** button and not the Finish button to proceed.



Note. IMDPlus does not need to be rerun since the acceleration results were computed at the same time as the displacement results.

IMDPlus Output Control

Node / Element Selection

Select node number or element number, then set results entity and component for output

Node: 1672 Entity: Acceleration

Element: GP / Node Component: AZ

Output Control

☒ Response time history

☐ Peak response summary ☐ Positive/Negative ☐ Absolute


☐ Generate Secondary Response Spectra (SRS)

☐ Modal combination/factor history

☒ Generate graphs in Modeller Speed to graph: 1:15.0

☐ Generate textfile output

< Back Finish Apply Cancel Help

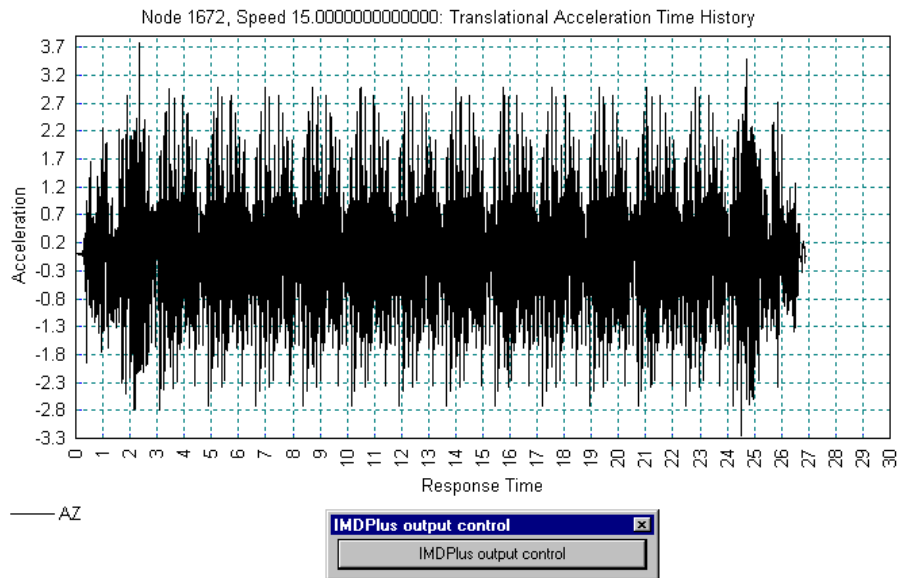


- When the graph has been displayed, close the graph and click on the **IMDPlus output control** button to return to the output control dialog

Previously we have investigated the displacement and acceleration response of the mid-span of the bridge deck for a single train speed. We will now look at the peak positive and negative vertical displacement and acceleration responses of the mid-span over the speed range of 15 m/s to 70 m/s as specified previously in the moving load analysis control dialog..


- On the IMDPlus Output Control dialog select **Displacement** results of **DZ** for the vertical component only
- Deselect the **Response time history** option
- Select the **Peak response summary** option and select **Positive/Negative**
- Click the **Apply** button to proceed.

The IMDPlus analysis will now run and warning messages will be seen to appear from time to time in the text output window.

- When prompted about the warnings click the **No** button since these are the same oversample warnings as seen previously.

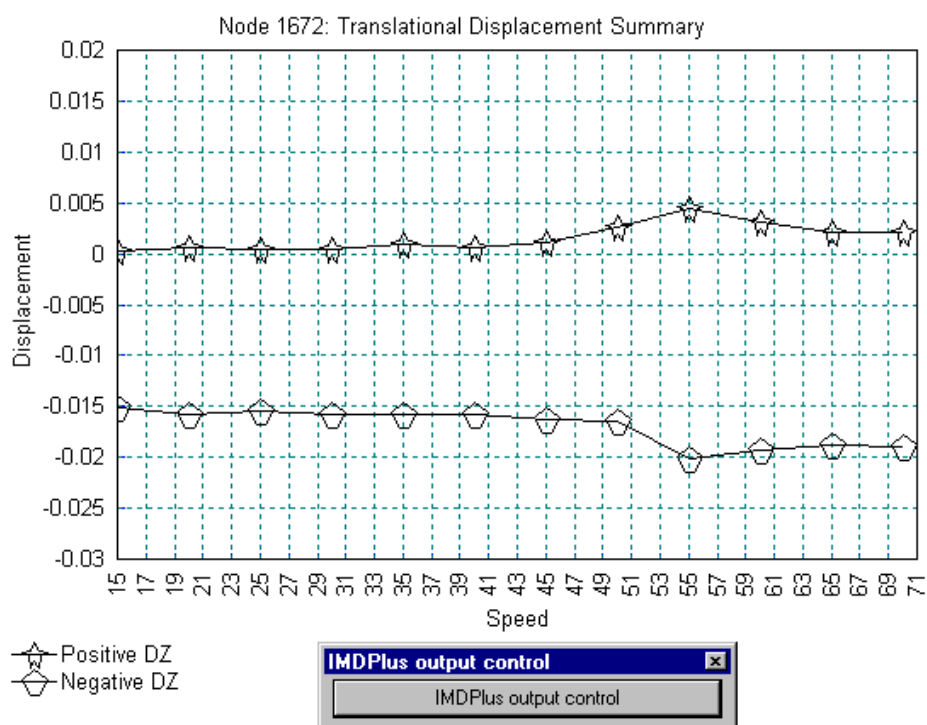

- When the graph has been displayed, close the graph and click on the **IMDPlus output control** button to return to the IMDPlus Output Control dialog
- Select **Acceleration** results of **AZ** for the vertical component only
- Click the **Apply** button to display a graph of acceleration versus speed at the mid-span.

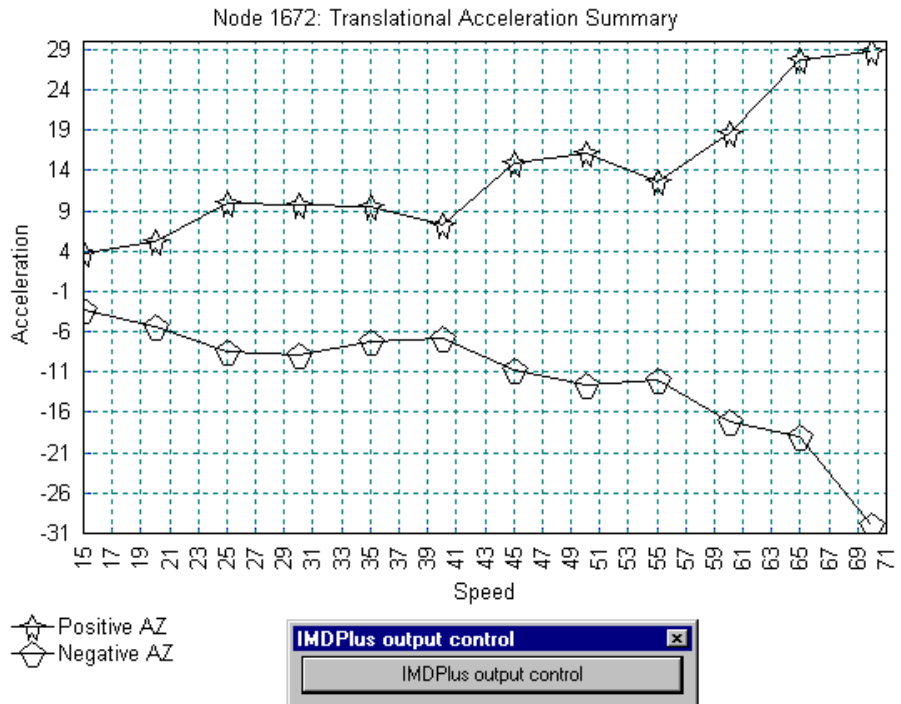

- When the graph has been displayed, close the graph and click on the **IMDPlus output control** button to return to the IMDPlus Output Control dialog

Stress Resultant Graphs for Shells


In the previous section the displacement and acceleration response at the mid-span of the bridge were investigated. We will now look at the stress resultants in the web of one of the main girders. Results for element number 1193 in the centre of the web of the nearside girder will be investigated.

Enter the following information into the IMDPlus Output Control dialog.

- Select **Element** and enter **1193**. Set **Gauss point** to **1**.
- Select **Force/Moment – Thick Shell** results of **Nx** which is the stress resultant in the along bridge direction
- Ensure the **Response time history** option is selected.
- Deselect the **Peak response summary** option


Train Induced Vibration of a Bridge

- Set the **Speed to graph** as **12:70.0** which indicates that the twelfth and last speed of 70 m/s is being processed
- Click the **Apply** button to display a graph of N_x versus time for gauss point 1 of element 1193.
- When informed about the oversample warning click the **No** button to not view any messages.

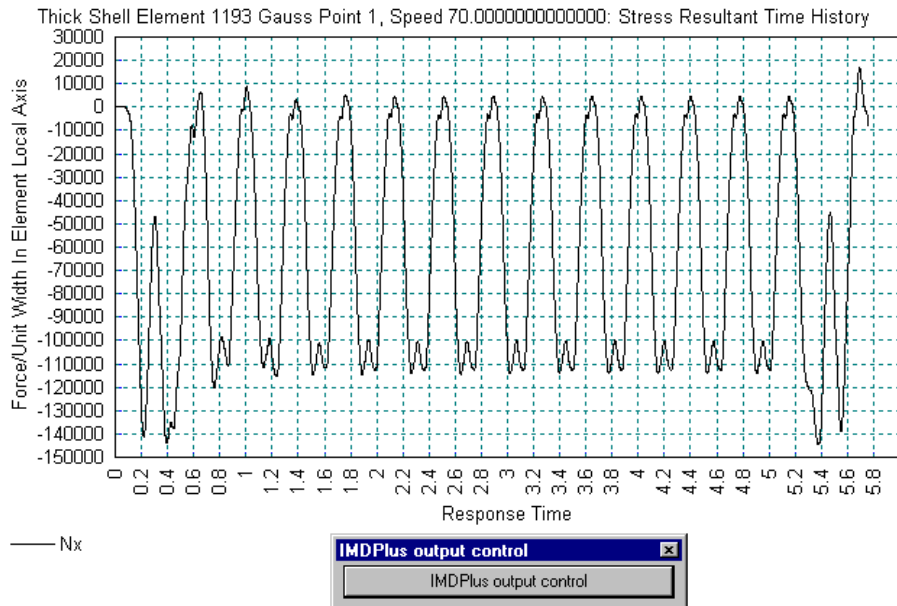


- When the graph has been displayed, close the graph and click on the **IMDPlus output control** button to return to the IMDPlus Output Control dialog
- Select **Force/Moment – Thick Shell** results of M_x which is the moment in the along bridge direction
- Click the **Apply** button to proceed.

After a short pause a graph of M_x versus time for gauss point 1 of element 1193 will be created.

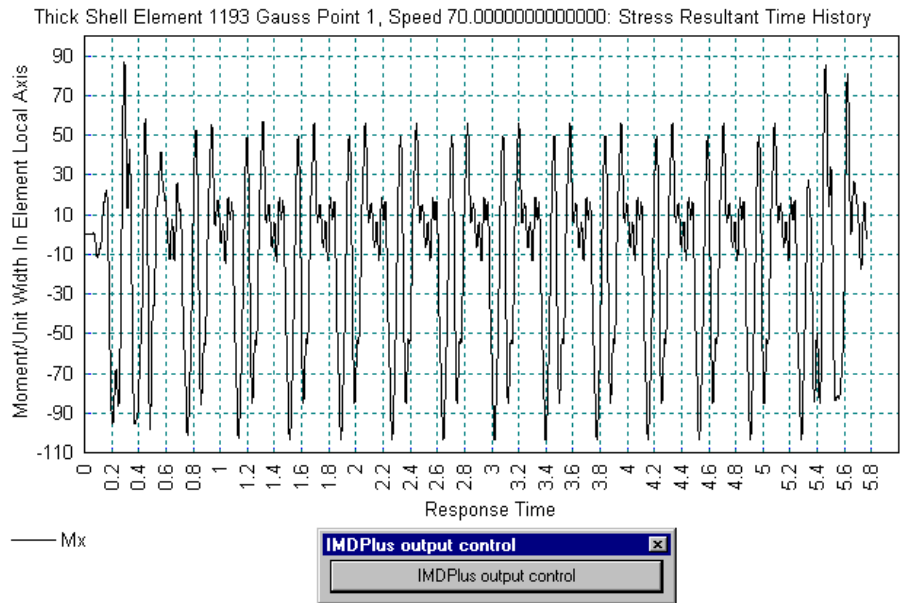

- When the graph has been displayed, close the graph and click on the **IMDPlus output control** button to return to the IMDPlus Output Control dialog.
- Deselect the **Response time history** option
- Select the **Peak response summary** option and select **Absolute**
- Click the **Finish** button.
- When informed about the oversample warning click the **No** button to not view any messages.

A graph of absolute peak Mx versus speed for gauss point 1 of element 1193 will be generated.

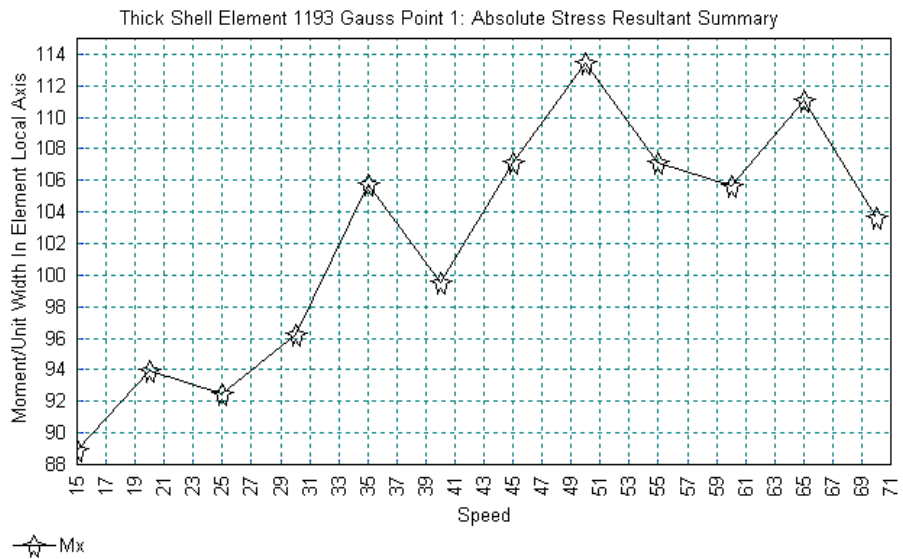

Save the model

File
Save...

Save the model. This saves all load combinations that have been defined during the results processing operations.


This completes the example.

Track-Structure Interaction to UIC774-3

For software product(s):	LUSAS <i>Bridge</i>
With product option(s):	Nonlinear, Rail Track
Note: The example exceeds the limits of the LUSAS Teaching and Training Version.	

Description

This example examines the track-structure interaction between a braking train and a single span bridge and considers the cases where the trainset is just about to enter the left-side side of structure through to the front of the train being 90m beyond the right-hand side. It replicates (as far as the original test data allows) testcase E1-3 which can be found in Appendix D.1 of the UIC774-3 Code of Practice.

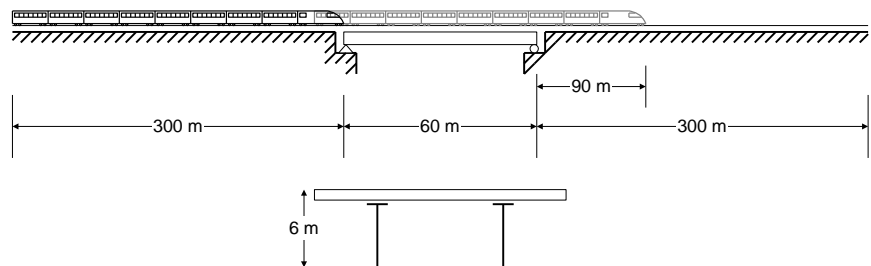

Objectives

The output requirements of the analysis are:

- ☐ Maximum relative displacement between the track and the structure in the longitudinal direction (relative railbed displacement),
- ☐ Peak axial rail stresses,

- ☐ Peak longitudinal reactions at the abutments.

Keywords

UIC774-3, track-structure interaction

Associated Files



- ☐ **UIC_Template.xlsx** or **UIC_Template.xls** UIC774-3 Microsoft Excel input spreadsheet (unpopulated)
- ☐ **UIC E1-3 Analysis.xlsx** or **UIC E1-3 Analysis.xls** UIC774-3 Microsoft Excel input spreadsheet populated with data defined in this example
- ☐ **UIC E4-6 Analysis.xlsx** or **UIC E4-6 Analysis.xls** UIC774-3 Microsoft Excel input spreadsheet populated with data defined in this example

Defining Model Data

The LUSAS Rail Track Analysis software option automatically builds LUSAS models suitable for track/structure interaction analysis from data defined in Excel spreadsheets.

- Copy the Microsoft Excel spreadsheet named **UIC_Template.xlsx** (use **UIC_Template.xls** if using an older version of Microsoft Excel) from the \< **LUSAS Installation Folder**>\Programs\Scripts\User folder to the working folder where the track-structure interaction model is to be built.
- Rename the spreadsheet to **UIC E1-3 Analysis.xlsx** if using Microsoft Excel 2007 and above or **UIC E1-3 Analysis.xls** if using an older version of Microsoft Excel.
- Open the spreadsheet in Microsoft Excel.

The modelling spreadsheet contains six worksheets titled:

- **No. Decks, Tracks and Embank Len**
- **Structure Definition**
- **Geometric Properties**
- **Material Properties**
- **Interaction and Expansion Joint**
- **Loading**



Note. Data should only be entered into the yellow regions of the Microsoft Excel spreadsheet to define the modelling and analysis requirements. Numeric values in the white cells are automatically populated according to data entered in other worksheets. These cells are protected from editing or user input.



Note. Whilst it is recommended that an unpopulated spreadsheet is used with this example, populated spreadsheets are supplied for those not wishing to enter all details as listed or for use if any errors are encountered with user-input into the general spreadsheet that cannot easily be fixed. Populated spreadsheets can be found in the \<LUSAS Installation Folder>\Examples\Modeller folder. A spreadsheet compatible for an installed version of version of Microsoft Excel should be copied to the working folder where the track-structure interaction example model is to be created.

Defining Decks, Tracks and Embankment Lengths

- Pick the **No. Decks, Tracks and Embank Len** worksheet.
- Enter **1** for the **Number of Decks**.
- Enter **1** for the **Number of Tracks**.
- The UIC774-3 Code of Practice specifies the embankment lengths for the test cases to be 300m. Enter **300** for both the **Left Embankment Length** and **Right Embankment Length**.

	A	B	C	D
1	Decks, Tracks and Embankment Units : m			
2				
3	Number of Decks	1		
4	Number of Tracks	1		
5	Left Embankment Length	300		
6	Right Embankment Length	300		
7	Length of Decks Only / Total Length (m)	0	600	
8				

Note that the Length of Decks Only and Total Length cells are populated using data on this and another worksheet.

Defining the Structure

A1

fx

Structure Definition

	A	B	C	D	E	F	G	H	K	L	M
1	Structure Definition Units : Pier Height : m ; Bearing springs on top of each pier : kN/mm ; Span Length : m										
2											
3			Spring Support for each Abutment / Pier	Pier Height	Pier Geo. Assign.	Pier Mat. Assign.	Bearing Springs on Top of each Pier	Span Length	Geo. Assign.	Mat. Assign.	
4	Deck 1	Left End	600				R				
5		Span 1	R				F	60	1	1	
6		Span 2									
7		Span 3									
8		Span 4									
9		Span 5									
10		Span 6									
11		Span 7									
12		Span 8									
13	Span 9										
14		Number of Supports for the Deck / Length	2				2	60			
15	Deck 2	Left End									
16		Span 1									
17		Span 2									
18		Span 3									
19		Span 4									
20		Span 5									
21		Span 6									
22		Span 7									
23		Span 8									
24	Span 9										
25		Number of Supports for the Deck / Length	0				0	0			
26		Left End									
27		Span 1									
28		Span 2									

No. Decks, Tracks and Embank Len

Structure Definition

Geometric Properties

- Pick the **Structure Definition** worksheet.


- The left abutment has a stiffness of 600000kN/m according to test case E1-3. Enter **600** for the **Spring Support for each Abutment/Pier** for the left end of the deck because the units for the worksheet entry are kN/mm.
- No bearing behaviour is modelled in the E1-3 test case so enter **R** for the **Bearing Springs on Top of each Pier** for the left end of the deck.
- The first and only span of the deck has a free support in the longitudinal direction and can be specified through either no restraint in the spring support for the abutment / pier or through no restraint in the bearing springs. For this example the condition has been modelled using no restraint in the bearing springs.
- Enter **R** for the **Spring Support for each Abutment/Pier** for the first span of the deck.
- Enter **F** for the **Bearing Springs on Top of each Pier** for the first span of the deck.
- Enter **60** for the **Span Length**.
- Enter **1** for the **Geometric Assignment**. This ID will match a geometric definition in the **Geometric Properties** worksheet covered next.
- Enter **1** for the **Material Assignment**. This ID will match a material definition in the **Material Properties** worksheet covered later.



Note. If more spans were present in the deck or the structure consisted of multiple decks this information would be entered into this worksheet.

The UIC774-3 fundamental tests do not incorporate modelling of the piers of the structure, so are not included in this example. However, LUSAS offers two methods of modelling piers when this is required to be done. The first method represents the pier through the equivalent stiffness which should be entered into the **Spring Support for each Abutment/Pier** entry and is calculated in accordance with Clause 1.3.2.2 in the UIC774-3 Code of Practice. The second method physically includes the pier in the finite element model and requires additional data entry into the columns for the **Pier Height**, **Pier Geometric Assignment** and **Pier Material Assignment**. For further details see the *Rail Track Analysis User Manual*.

Defining the Geometric Properties for the Structure

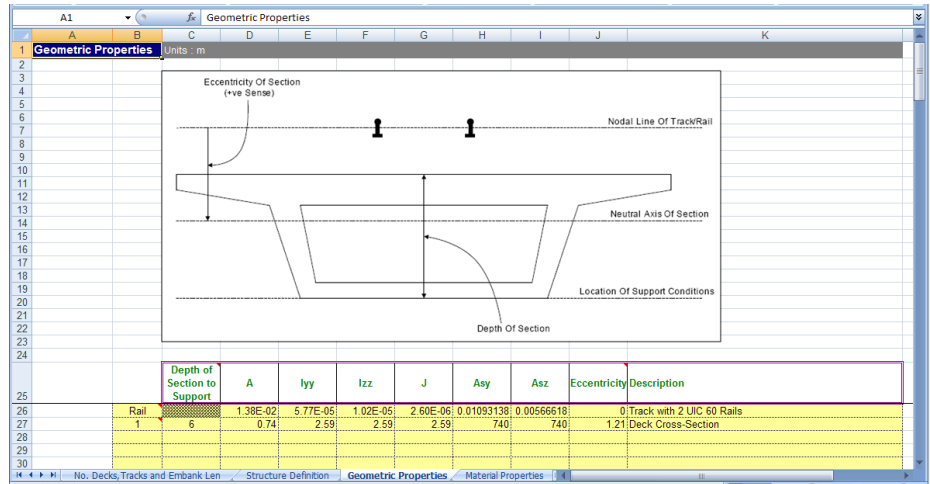

- Pick the **Geometric Properties** worksheet.

The first line of data should always be called **Rail** and contains the geometric properties for the rail track. All other lines define the geometric properties for the unique IDs used in the **Structure Definition** worksheet.

The details of the rail used in the UIC774-3 test cases are not provided so it has been assumed that the track is formed of UIC 60 rails and for the purposes of this example the properties are approximated. Enter the following values for the rail:

- Enter **0.01379182** for the area (**A**) in m^2 of the two rails of the track (This value is the total area per track for a track comprising of two UIC 60 rails).
- Enter **5.76942E-5** for the second moment of inertia about the horizontal y-axis (**Iyy**) in m^4 .
- Enter **1.02222E-5** for the second moment of inertia about the vertical z-axis (**Izz**) in m^4 .
- Enter **2.59616E-6** for the torsional constant (**J**) in m^4 .
- Enter **0.01093138** for the shear area for the y-direction (**Asy**) in m^2 .
- Enter **0.00566618** for the shear area for the z-direction (**Asz**) in m^2 .
- Enter **0** for the **Eccentricity** in the rail in m.
- Enter **Track with 2 UIC 60 Rails** in the **Description** for the rails.



Note. The UIC774-3 Code of Practice assumes that a 2D analysis is performed where the longitudinal and vertical behaviours of the track and structure are of interest. The current rail track analysis also assumes a 2D analysis but for its solution it requires the features of an element type which is only available in 3D in LUSAS. The properties entered into the worksheet therefore require geometric properties for all freedoms of the 3D element and the lateral behaviour and torsion the properties for two rails have been assumed to be twice those of the single rail. This will be discussed further in the **Modelling Discussion** section that follows.


Some of the properties for the 2D bending behaviour of the deck are provided in Appendix D.1 of the code of practice. As for the track rails, while the analysis is 2D the elements used are 3D so dummy properties have been included for the lateral behaviour and torsion of the deck although these will not affect the results obtained. In the model it has therefore been assumed that these properties are equal to the values provided for the vertical behaviour. Enter the following values for the deck:

- Enter **1** for the ID in the first column to match the geometric assignment ID for the deck in the **Structure Definition** worksheet.
- Enter **6** for the **Depth of Section** in m.
- Enter **0.74** for the area (**A**) in m^2 .
- Enter **2.59** for the second moment of inertia about the horizontal y-axis (**I_{yy}**) in m^4 .
- Enter **2.59** for the second moment of inertia about the vertical z-axis (**I_{zz}**) in m^4 .
- Enter **2.59** for the torsional constant (**J**) in m^4 .
- Enter **740** for the shear area for the y-direction (**A_{sy}**) in m^2 . The UIC774-3 test cases do not indicate whether shear deformations were included in the calculation of the target results so these have been ignored by setting the shear area to $1000 \cdot A$ in accordance with the *Element Reference Manual*.
- Enter **740** for the shear area for the z-direction (**A_{sz}**) in m^2 .
- Enter **1.21** for the **Eccentricity** in the deck in m. The UIC774-3 test cases assume that the track is at the top surface of the section and the neutral axis ordinate specified is from the base of the section. The depth of the section is 6m and the neutral axis ordinate is 4.79m giving an eccentricity of $6 - 4.79 = 1.21\text{m}$.
- Enter **Deck Cross-Section** in the **Description** for the deck.

Modelling Discussion

While the UIC774-3 Code of Practice treats the track-structure interaction as a 2D problem the rail track analysis software uses 3D thick nonlinear beam elements for the modelling of this problem but restrains the out of plan behaviour thus reducing it back to an equivalent 2D analysis. In the definition of the geometric properties for the track rails and structure the rail track analysis software therefore requires all of the 3D geometric properties to be defined for the worksheet. The properties entered for I_{zz} , J and A_{sy} will be used in the analysis but these will not affect the results. They should however be set to similar magnitudes to the properties in I_{yy} and A_{sz} which are used for the bending deflection and shear deflection in the geometric properties to avoid mechanisms.

The properties (in units of mm) for a single UIC 60 rail of simplified cross-section were calculated in LUSAS using the arbitrary section property calculator. Since only the vertical bending of the track is considered the combined geometric section properties for the two rails of the track can be calculated by doubling the values calculated for the single rail. These combined values are the ones entered into the **Rail** properties section of the Geometric Properties worksheet

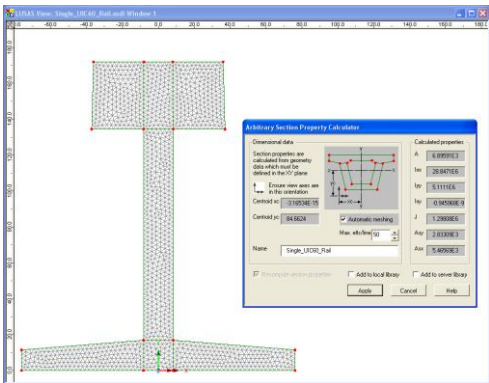

Note. The doubling of the I_{zz} , J and A_{sy} properties could be considered to be inappropriate but since these properties are not used in the effective 2D analysis their doubling is considered acceptable.

Defining the Material Properties for the Structure

The image shows a screenshot of a spreadsheet application with the 'Material Properties' worksheet selected. The spreadsheet has columns A through G. Row 1 is the header row. Row 2 contains the text 'Material Properties' and 'Units : N, mm, kg'. Row 3 is empty. Row 4 has a yellow background and contains 'Rail' in column B, '210000' in column C, '0.3' in column D, '0' in column E, '1.00E-05' in column F, and 'Rails' in column G. Row 5 has a yellow background and contains '1' in column B, '210000' in column C, '0.3' in column D, '0' in column E, '1.00E-05' in column F, and 'Deck' in column G. Rows 6 through 11 are empty and have a yellow background.

	A	B	C	D	E	F	G
1	Material Properties		Units : N, mm, kg				
2							
3							
4		Rail	210000	0.3	0	1.00E-05	Rails
5		1	210000	0.3	0	1.00E-05	Deck
6							
7							
8							
9							
10							
11							

- Pick the **Material Properties** worksheet.

The first line of data should always be called **Rail** and contains the material properties for the rail track. All other lines define the material properties for the unique IDs used in the **Structure Definition** worksheet.

Enter the following values for the rail:

- Enter **210000** for the Young's modulus (**E**) in N/mm^2 which is equivalent to a value of 210 GPa.
- Enter **0.3** for the Poisson's ratio (**v**).
- Enter **0** for the mass density (**ρ**). Setting this to the representative value allows the self-weight deflections to be calculated for the structure and track system if they are required but it is not used for the track-structure interaction analysis.
- Enter **1.0E-5** for the coefficient of thermal expansion (**α**).
- Enter **Rails** in the **Description** for the rails.

Enter the following values for the deck:

- Enter **1** for the ID in the first column to match the material assignment ID for the deck in the **Structure Definition** worksheet.
- Enter **210000** for the Young's modulus (**E**) in N/mm^2 .
- Enter **0.3** for the Poisson's ratio (**v**).
- Enter **0** for the mass density (**ρ**).
- Enter **1.0E-5** for the coefficient of thermal expansion (**α**).
- Enter **Deck** in the **Description** for the material properties.



Note. The documentation accompanying the UIC774-3 test cases does not mention the exact material properties that were used for the rail track in the target solutions and also does not mention the Poisson's ratio or coefficient of thermal expansion used for the deck. These material properties have therefore been assumed to be identical for both and the coefficient of thermal expansion used is identical to the value mentioned in Example 1 in Appendix C.1 of the UIC774-3 Code of Practice.

Defining the Track-Structure Interaction and Expansion Joint Properties for the Structure

Interaction Joint Properties Between Rail/Slab

Units : Bilinear springs characteristic : kN/mm/m, Eccentricity between rail/slab : m

Eccentricity between Rail/Slab		Item		
	0			
Unloaded Bilinear Springs Characteristic	Contact Stiff	10	infinite	infinite
	Lift-off Force	20	infinite	infinite
	Lift-off Springs	1.00E-06	infinite	infinite
Loaded Bilinear Springs Characteristic	Contact Stiff	30	infinite	infinite
	Lift-off Force	60	infinite	infinite
	Lift-off Springs	1.00E-06	infinite	infinite

Rail Expansion Joints

Units : Distance : m, Initial gap : mm

Track 1		Track 2	
Position	Initial Gap	Position	Initial Gap

- Pick the **Interaction and Expansion Joint** worksheet.
- Enter **0** for the eccentricity between the rail and slab as the UIC774-3 test cases in Appendix D.1 are assumed to have their centre of gravity coincident with the top of the reinforced concrete slab of the deck.



Note. The UIC774-3 test cases assume that the track is ballasted without specifying the exact interaction properties that are to be used. It is therefore assumed that the value of u_0 in the test cases is equal to 2mm which is the representative value for a sleeper in ballast (as opposed to 'frozen' ballast track) indicated in Clause 1.2.1.2.

- Enter **10** for the **Unloaded Contact Stiffness** in the longitudinal direction in kN/m/mm. The resistance parameter for the unloaded track is 20kN/m in the test and this gives a stiffness of 20kN/m / 2mm = 10kN/m/mm (see note above).
- Enter **20** for the **Unloaded Lift-off Force** in the longitudinal direction in kN/m.

- Enter **1.0E-6** for the **Unloaded Lift-off Springs** in the longitudinal direction in kN/m/mm.
- Enter **30** for the **Loaded Contact Stiffness** in the longitudinal direction in kN/m/mm. The resistance parameter for the unloaded track is 60 kN/m in the test and this gives a stiffness of $60\text{ kN/m} / 2\text{ mm} = 30\text{ kN/m/mm}$ (see note above).
- Enter **60** for the **Loaded Lift-off Force** in the longitudinal direction in kN/m.
- Enter **1.0E-6** for the **Loaded Lift-off Springs** in the longitudinal direction in kN/m/mm.



Note. The interaction springs are modelled using nonlinear joints with elastic-perfectly plastic behaviour in the longitudinal direction. This is achieved using the elasto-plastic uniform tension and compression material where the lift-off force is equivalent to the yield force and the lift-off spring is equivalent to the hardening stiffness. The lift-off spring should always be set to a very small value to avoid numerical instabilities.


- Ensure that there is no data specified in the **Rail Expansion Joints** region of the worksheet.

Defining the Trainset Loading for the Structure

Loading									
Units : Temperature : Celsius , Load Position/Length : m , Load : kN/m									
1	Loading								
2									
3	For Deck	Amount							
4		Temperature	35						
5		Temperature	50						
6									
7		Number of Track							
8		Loading Locations	16						
9		Loading Type	Track Selection to be Loaded	Parametric Starting Position for Loadings	Parametric End Position for Loadings	Amount (per unit length)	Loaded Length	Starting Location of Loading for First Analysis	Finishing Location of Loading for Last Analysis
10		Braking	1	0	300	20	300	0	150
11	For Rails	Vertical	1	0	300	80	300	0	150
12									
13									
14									
15									
16									
17									
18									
19									
20									
21									
22									
23									
24									
25									

- Pick the **Loading** worksheet.
- Enter **35** for the **Temperature** variation of the deck in °C.
- Enter **50** for the **Temperature** variation of the rail tracks in °C.

For the UIC774-3 E1-3 test case the 300m long trainset travels from the left-hand abutment of the 60m long deck to 90m past the right-hand abutment of the deck, a total distance of 150m. For the example this trainset passage will be broken up into 10m increments.

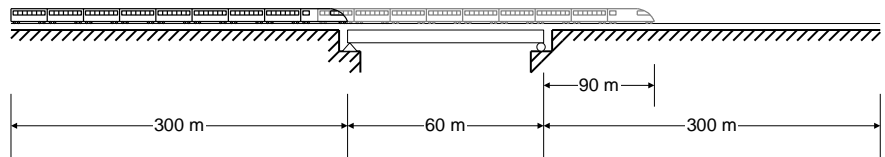

- Enter **16** for the **Number of Track Loading Locations** based on the formula

$$\text{Number of track loading locations} = \text{Travel} / \text{Increment} + 1 \text{ giving } 150 / 10 + 1 = 16.$$
- Enter **Braking** for the **Loading Type** in the first row of loading.
- Enter **1** in the **Track Selection to be Loaded** since there is only a single track in the analysis.
- Enter **0** for the **Parametric Starting Position for Loadings** (in m) to indicate the left-hand limit of the trainset loading.
- Enter **300** for the **Parametric End Position for Loadings** (in m) to indicate the right-hand limit of the trainset loading. The train is 300m long in the test case.
- Enter **20** for the **Amount (per unit length)** to apply 20kN/m horizontal braking forces acting to the right for the trainset moving from left to right.
- Enter **0** for the **Starting Location of Loading for First Analysis** to place the trainset in a location where it is just about to enter the deck structure for the first analysis, recalling that the left-hand embankment is 300m long.
- Enter **150** for the **Finishing Location of Loading for Last Analysis** to place the right-hand extent of the trainset 90m past the 60m deck span for the last analysis.
- Enter **Vertical** for the **Loading Type** in the second row of loading.
- Enter **1** in the **Track Selection to be Loaded** since there is only a single track in the analysis.

- Enter **0** for the **Parametric Starting Position for Loadings** (in m) to indicate the left-hand limit of the trainset loading.
- Enter **300** for the **Parametric End Position for Loadings** (in m) to indicate the right-hand limit of the trainset loading. The train is 300m long in the test case.
- Enter **80** for the **Amount (per unit length)** to apply 80 kN/m vertically downwards for the trainset.
- Enter **0** for the **Starting Location of Loading for First Analysis** to place the trainset in a location where it is just about to enter the deck structure for the first analysis, recalling that the left-hand embankment is 300m long.
- Enter **150** for the **Finishing Location of Loading for Last Analysis** to place the right-hand extent of the trainset 90m past the 60m deck span for the last analysis.
- Save the spreadsheet and close the Microsoft Excel application.



Note. The horizontal and vertical loading of the trainset in the test cases have identical configurations. More complex trainset loading configurations and acceleration loading can be also specified (see the *Rail Track Analysis User Manual* for more information).

Modelling / Running an Analysis

All of the model construction and analysis is automatically performed by the Rail Track Analysis software option but, to do so, a blank LUSAS model must be initially created or a suitable existing LUSAS model (that was created by the Rail Track Analysis option) must be opened.

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the Examples Manual Introduction.

Creating a Temperature-only Model

An initial temperature-only analysis can form the basis for carrying out more than one track-structure interaction analysis with different trainset loading configurations being used. For large analyses time savings can result from not having to re-run a temperature analysis for each trainset loading.


- Enter **UIC774_testcase** for the model name and click OK.

This model is created solely to allow the Rail Track Analysis option to be selected. It is not used after the option has been run.


File
New...

Bridge	
Rail Track Analysis	
UIC774-3	>
Build Model...	

- Enter **E1-3_TemperatureOnly** for the **Model filename**.
- Enter the filename of the Microsoft Excel spreadsheet created for the analysis or browse for it using the **Browse...** button in the **Microsoft Excel spreadsheet or batch text file** input. If the full folder information is not entered it will be assumed that the Microsoft Excel spreadsheet is in the current working folder which is reported in the dialog.
- Ensure an **Element size** of **2** is specified which will create elements of a maximum length of 2m in the LUSAS model.
- Ensure that the **Apply temperature and rail loads in same analysis** option is not selected.
- Ensure the **Wait for solution** option is selected and click the **OK** button.

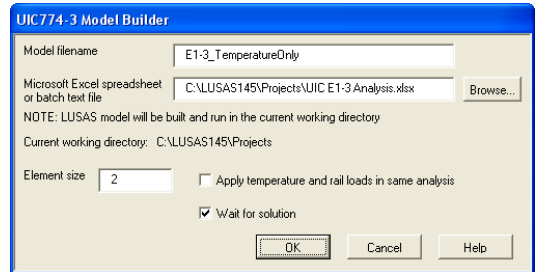


Assuming that there have been no errors in the input for the Microsoft Excel spreadsheet the Rail Track Analysis software option will automatically generate a LUSAS model from the spreadsheet data and run a rail track analysis for temperature-only loading. If the Rail Track Analysis software option detected errors with modelling data these will be reported and must be corrected prior to re-running the Rail Track Analysis option.

 


Note. If the intention was to only perform this analysis and investigate the thermal effects then post-processing could be performed on the results of the analysis. In addition, if the **Apply temperature and rail loads in same analysis** option was selected the combined temperature and rail track loading results would now be available. For this example we will however be using this temperature only analysis as a starting point for more than one track-structure interaction analysis so no post-processing will be performed at this stage.

Applying Trainset Rail Loading to the Temperature Model

The temperature only model will now be used as the starting point for the application of the trainset rail loading that needs to be considered for the track-structure interaction analysis.

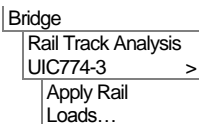

- Enter **E1-3_TemperatureOnly.mdl** for the **Original model filename** which holds the temperature only analysis or browse for it using the **Browse...** button. If the full folder is not specified then it will be assumed that the model is in the current working folder.

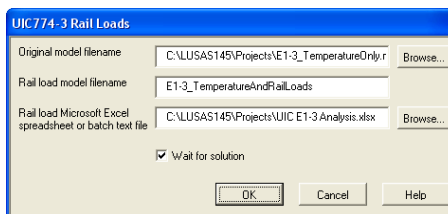

- Enter **E1-3_TemperatureAndRailLoads** as the **Rail load model filename**.
- Enter the **UIC E1-3 Analysis.xlsx** (or **UIC E1-3 Analysis.xls**) filename of the Microsoft Excel spreadsheet created for the analysis or browse for it using the **Browse...** button in the **Microsoft Excel spreadsheet or batch text file** input. If the full folder information is not entered it will be assumed that the Microsoft Excel spreadsheet is in the current working folder.
- Ensure the **Wait for solution** option is selected.
- Click the **OK** button.

Assuming that there have been no errors in the trainset loading input for the Microsoft Excel spreadsheet the Rail Track Analysis software option will now automatically generate a LUSAS model and run a track-structure analysis for the combined temperature and trainset rail loading using the trainset loading information defined in the spreadsheet.



Note. If both the temperature and trainset rail loads were applied to the original model the program would detect this and report that the original model is not a valid temperature-only model. If this were to happen, repeat the model building process above before reattempting to apply the trainset rail loading to the analysis.

If errors were detected...

If errors were detected with the modelling data or the post-processing in the next section gives different results the values in the spreadsheet should be corrected before re-selecting the previous Rail Track Analysis menu item. If it proves impossible for you to correct the errors reported a populated spreadsheet file is provided to enable you to create the model and run an analysis successfully.

 


- ❑ **UIC E1-3 Analysis.xlsx (.xls)** is a populated spreadsheet containing all input data for the example.

A spreadsheet compatible for an installed version of version of Microsoft Excel should be copied to the working folder where the track-structure interaction example model is to be created, and the **Bridge > Rail Track Analysis UIC774-3 > Apply Rail Loads** menu item re-selected.

Viewing the Results

If the analyses were run from within LUSAS Modeller with the **Wait for solution** option the results will be loaded on top of the current model.




If the results from the analyses were not automatically loaded then these should be loaded manually using the VBScript file created by the program in the working folder.


- To load the results on top of the current model, select the file **E1-3_TemperatureAndRailLoads_Reload.vbs** located in the folder where the models were generated and the analysis performed.

Automatic Extraction of Results into Microsoft Excel

The Rail Track Analysis option provides a post-processing tool that automatically extracts the results of the analyses into tabular form in Microsoft Excel and generates commonly required graphs and tables of quantities that can be compared against prescribed limits for the track-structure interaction.

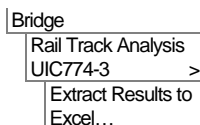

- Enter **E1-3_PostProcess** for the **Filename**. No *.xlsx or *.xls extension is required.
- Ensure the **Working folder** is set to **Current** to place the post-processing Microsoft Excel spreadsheet into the same folder as the analyses.

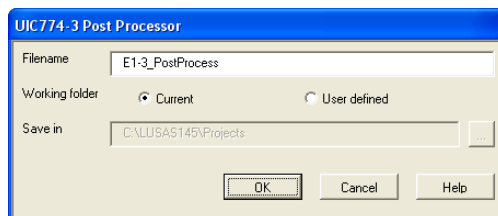

- Click the **OK** button.
- Click on **Yes** when asked whether envelopes are to be created in Microsoft Excel.

The automatic post-processor will now extract the results from the loaded analysis results and generate the Microsoft Excel spreadsheet in the working folder.



Note. The post-processing can take a noticeable length of time and will occupy the LUSAS licence for this time. The post-processing for this example should take less than 10 minutes to complete.



Caution. You should not have any other Microsoft Excel windows open while the post-processing is carried out. Starting Microsoft Excel or opening another Microsoft Excel spreadsheet while the post-processing is running will break the connection between Modeller and Microsoft Excel resulting in an error and termination of the post-processing.

- Open the spreadsheet **E1-3_PostProcess** in Microsoft Excel.

Because the creation of envelopes was specified earlier the results spreadsheet will contain seven worksheets that contain the results from the analyses. These are titled:


- **Track 1**
- **Decks**
- **Envelope – Track 1**
- **Envelope – Decks**
- **Railbed Check**
- **Longitudinal Reactions Check**
- **Rail Stresses Check**

Peak Relative Railbed Displacement

For a continuously welded rail (CWR) track the typical criteria to be met for the relative railbed displacements is quoted in Clause 1.5.3 of UIC774-3 which states that:

“The maximum permissible displacement between rail and deck or embankment under braking and/or acceleration forces is 4 mm”

To permit checking of this criteria rail bed displacements are included in the **Track 1** Microsoft Excel worksheet which reports all of the relative railbed displacements calculated for the track-structure interaction model. These are output in the form of the maximum and minimum values which are reported in the summaries at the top of the sets of results, the values over the structure graphed in the top chart and the individual values along the length of the track in tabular form – as highlighted in the following figure.

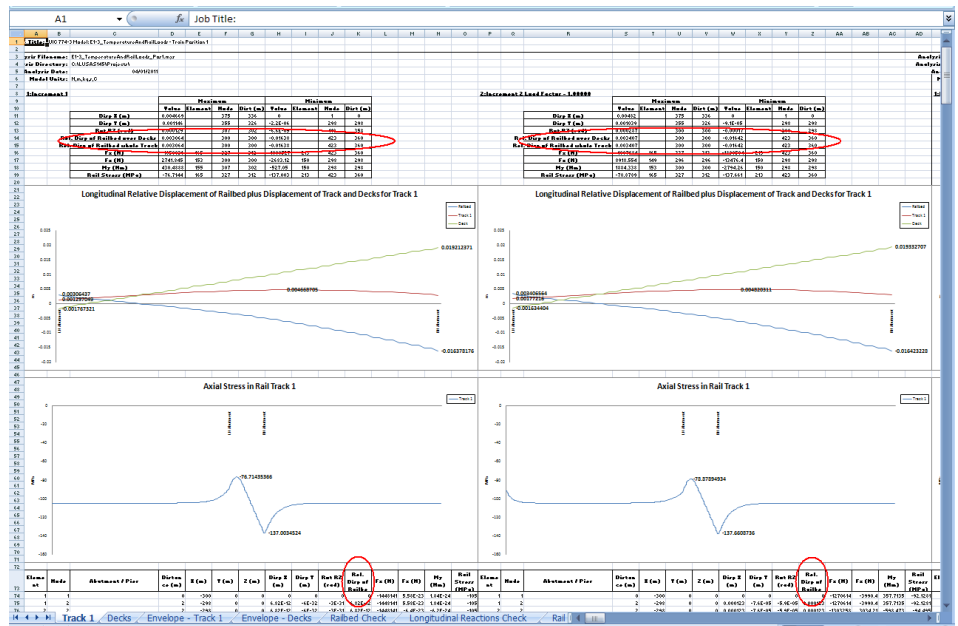


Because the option to create envelopes in Microsoft Excel was chosen when the post-processor was run the spreadsheet includes additional post-processing of the relative railbed displacement in the form of envelopes and a table of peak values for each trainset position.

For the envelopes worksheet the output is identical to the tabular and chart output for the individual results in the analyses. Six envelopes are generated by the post-processor, namely:

- ☐ Envelope - Temperature Only (Max)
- ☐ Envelope - Temperature Only (Min)
- ☐ Envelope - Temperature and Train (Max)
- ☐ Envelope - Temperature and Train (Min)
- ☐ Envelope - All Configurations (Max)
- ☐ Envelope - All Configurations (Min)

Concentrating on the envelopes for the combination of the temperature and trainset loading, these are illustrated in the following figure.

Track-Structure Interaction to UIC774-3

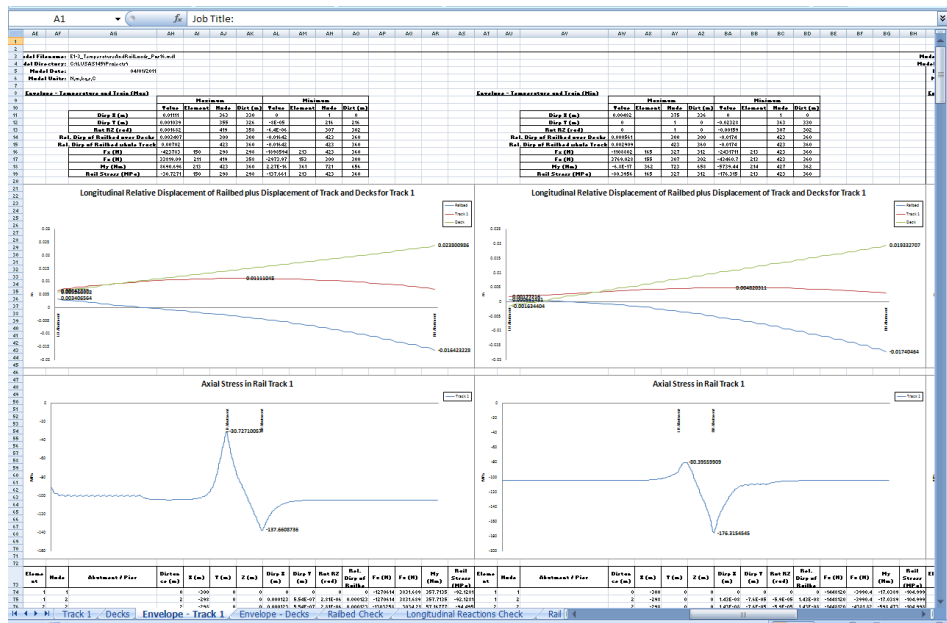

Zooming into the summary tables at the top of the columns of results and charts (see images that follow) allows the extraction of the peak relative railbed displacements of +0.00341 m movement of the track to the right relative to the base of the ballast over the deck, +0.007 m movement of the track to the right relative to the base of the ballast over the whole track length and -0.0174 m movement of the track to the left relative to the base of the ballast over the whole track length and deck.

	AE	AF	AG	AH	AI	AJ	AK	AL	AM	AN	AO
1											
2											
3	Model Filename: E1-3_TemperatureAndRailLoads_Pos16.mdl										
4	Model Directory: C:\USAS145\Projects\										
5	Model Date: 04/01/2011										
6	Model Units: N,m,kg,s,C										
7											
8	Envelope - Temperature and Train (Max)										
9											
10											
11											
12											
13											
14											
15											
16											
17											
18											
19											

	AT	AU	AV	AW	AX	AY	AZ	BA	BB	BC	BD
1											
2											
3											
4											
5											
6											
7											
8	Envelope - Temperature and Train (Min)										
	Maximum				Minimum						
	Value	Element	Node	Dist (m)	Value	Element	Node	Dist (m)			
11	Disp X (m)	0.00482031		375	336	0		0			
12	Disp Y (m)	0		1	0	-0.0232841		363	302		
13	Rot RZ (rad)	0		1	0	-0.0015892		307	302		
14	Rel. Disp of Railbed over Decks (m)	0.00056143		300	300	-0.0174046		423	360		
15	Rel. Disp of Railbed whole Track (m)	0.00290948		423	360	-0.0174046		423	360		
16	Fx (N)	-1108801.6	165	327	312	-2431.711	213	423	360		
17	Fz (N)	3769.0284	155	307	302	-43460.704	213	423	360		
18	My (Nm)	-6.776E-17	362	723	658	-5739.4367	214	427	362		
19	Rail Stress (MPa)	-80.395599	165	327	312	-176.31545	213	423	360		

The peak relative railbed displacement is therefore -0.0174 m which compares well with the UIC774-3 E1-3 test case published result of -1.73E-2 m with a difference of +0.6%.

In addition to the envelope worksheet, the peak relative railbed displacement can also be found in the **Railbed Check** worksheet shown below. This shows that the peak relative railbed displacement occurs when the braking trainset is placed at the 8th position when the front of the 300 m long trainset is just over half way across the 60 m deck.

Check of Longitudinal Relative Displacement of Railbed (Relative Displacement between Rails and Deck)							
Job Title: UIC 774-3 Model: E1-3_TemperatureAndRailLoads - Train Position 1							
Analysis Filename: E1-3_TemperatureAndRailLoads_Pos1 -> E1-3_TemperatureAndRailLoads_Pos16							
Model Directory: C:\USAS145\Projects							
Analysis Date: 04/01/2011 -> 04/01/2011							
Model Units: N,m/kg,s,C							
Track 1							
Analysis ID	Results Filename	Loading Type	Distance from Left End of the Model to the Starting Position of the Loading (m)	Distance from Left End of the Model to the Finishing Position of the Loading (m)	Peak Relative Longitudinal Displacement between Rail and Slab (m)	Track Number with Peak Displacement	Distance from Left End of Structure for Peak Displacement (m)
1	E1-3_TemperatureAndRailLoads_Pos1.mys	Temperature Only	0	300	0.016378176	1	60
2	E1-3_TemperatureAndRailLoads_Pos1.mys	Braking	0	310	0.016423228	1	60
3	E1-3_TemperatureAndRailLoads_Pos2.mys	Braking	10	320	0.016719947	1	60
4	E1-3_TemperatureAndRailLoads_Pos3.mys	Braking	20	330	0.017098191	1	60
5	E1-3_TemperatureAndRailLoads_Pos4.mys	Braking	30	340	0.017355878	1	60
6	E1-3_TemperatureAndRailLoads_Pos5.mys	Braking	40	350	0.017404644	1	60
7	E1-3_TemperatureAndRailLoads_Pos6.mys	Braking	50	360	0.017204664	1	60
8	E1-3_TemperatureAndRailLoads_Pos7.mys	Braking	60	370	0.016780766	1	60
9	E1-3_TemperatureAndRailLoads_Pos8.mys	Braking	70	380	0.017172988	1	60
10	E1-3_TemperatureAndRailLoads_Pos9.mys	Braking	80	390	0.017277515	1	60
11	E1-3_TemperatureAndRailLoads_Pos10.mys	Braking	90	400	0.017255585	1	60
12	E1-3_TemperatureAndRailLoads_Pos11.mys	Braking	100	410	0.017243417	1	60
13	E1-3_TemperatureAndRailLoads_Pos12.mys	Braking	110	420	0.017238413	1	60
14	E1-3_TemperatureAndRailLoads_Pos13.mys	Braking	120	430	0.017236521	1	60
15	E1-3_TemperatureAndRailLoads_Pos14.mys	Braking	130	440	0.017235825	1	60
16	E1-3_TemperatureAndRailLoads_Pos15.mys	Braking	140	450	0.017235572	1	60
17	E1-3_TemperatureAndRailLoads_Pos16.mys	Braking	150	460	0.01723548	1	60



Note. The peak relative railbed displacement in test case E1-3 is 0.0174 m or 17.4 mm which would be greater than the limit stated in Clause 1.5.3 of the UIC774-3 code of practice. All of the test cases in Appendix D.1 of the code of practice exceed this limit.

Peak Axial Rail Stresses

For a continuously welded rail track with UIC 60 rails the typical criteria to be met for the rail stress are quoted in Clause 1.5.2 of UIC774-3 which states that


“The maximum permissible additional compressive rail stress is 72 N/mm²”

and

“The maximum permissible additional tensile rail stress is 92 N/mm²”

To permit checking of these criteria rail axial stress values are included in the **Track 1** Microsoft Excel worksheet. These are output in the form of the maximum and minimum values which are reported in the summaries at the top of the sets of results, the values over the track length graphed in the bottom chart and the individual values along the length of the track in tabular form – as highlighted in the following figure.

For the temperature-only loadcase (Increment 1) the maximum and minimum stresses observed in the rail track were -76.71MPa in compression and -137.0MPa in compression. For the temperature and trainset rail loading loadcase (Increment 2) the maximum and minimum stresses observed in the rail track were -78.88MPa in compression and -137.66MPa in compression.

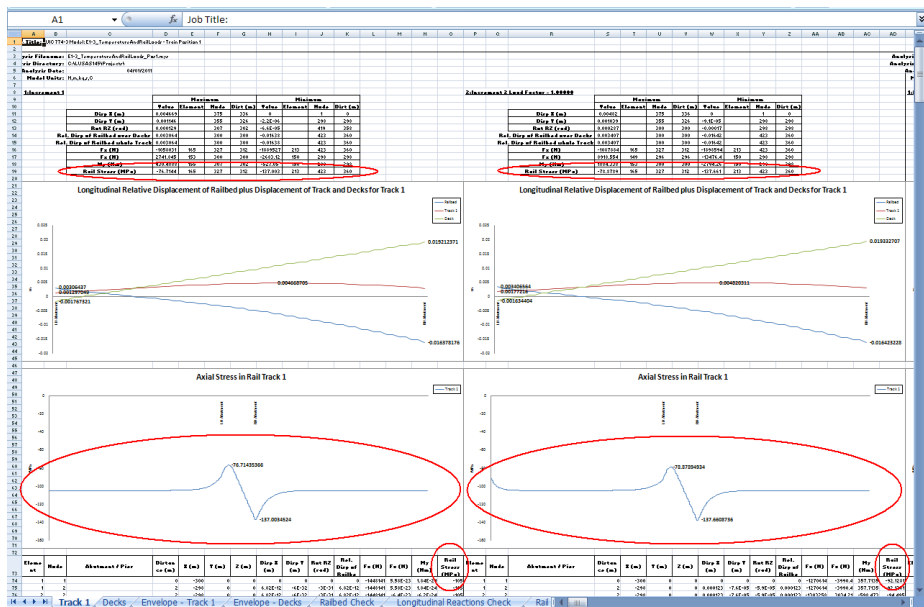

Concentrating on the envelopes for the combination of the temperature and trainset loading in the **Envelope - Track 1** worksheet the maximum and minimum stresses

observed in the rail track were -30.73MPa in compression and -176.32MPa in compression. The value of -176.32MPa compares well with the UIC774-3 E1-3 test case published results of -182.4MPa with a difference of -3.4%.

	AE	AF	AG	AH	AI	AJ	AK	AL	AM	AN	AO
1											
2											
3											
4											
5											
6											
7											
8											
9											
10											
11											
12											
13											
14											
15											
16											
17											
18											
19											
20											

	AT	AU	AV	AW	AX	AY	AZ	BA	BB	BC	BD
1											
2											
3											
4											
5											
6											
7											
8											
9											
10											
11											
12											
13											
14											
15											
16											
17											
18											
19											
20											

In addition to the envelope worksheet, the peak axial stresses in the rails can also be found in the **Rail Stresses Check** worksheet shown below. This shows that the peak compressive axial stress of 176.32MPa occurs when the braking trainset is placed at the 9th position when the front of the 300m long trainset is 20m past the right-hand abutment side of the deck.

Track-Structure Interaction to UIC774-3

Check of Axial Rail Stress											
Job Title: UIC 774-3 Model: E1-3_TemperatureAndRailLoads - Train Position 1											
Analysis Filename: E1-3_TemperatureAndRailLoads_Pos1 --> E1-3_TemperatureAndRailLoads_Pos16											
Model Directory: C:\USAS145\Projects											
Analysis Date: 04/01/2011 --> 04/01/2011											
Model Units: N,m,kg,s,C											
Analysis ID	Results Filename	Loading Type	Track 1		Peak Most Tensile Axial Stress of Rail (MPa)	Track Number with Peak Most Tensile Stress	Distance from Left End of Structure for Peak Most Tensile Stress (m)	Peak Most Compressive Axial Stress of Rail (MPa)	Track Number with Peak Most Compressive Stress	Distance from Left End of Structure for Peak Most Compressive	
			Distance from Left End of the Model to the Starting Position of the Loading (m)	Distance from Left End of the Model to the Finishing Position of the Loading (m)							
1	E1-3_TemperatureAndRailLoads_Pos1.mys	Temperature Only	0	300	-76.7435363	1	12	-137.0034524	1	60	
2	E1-3_TemperatureAndRailLoads_Pos2.mys	Braking	0	300	-76.0784934	1	12	-137.0000736	1	60	
3	E1-3_TemperatureAndRailLoads_Pos3.mys	Braking	10	300	-80.3955903	1	12	-139.8525426	1	60	
4	E1-3_TemperatureAndRailLoads_Pos4.mys	Braking	20	300	-87.2362077	1	6	-144.524454	1	60	
5	E1-3_TemperatureAndRailLoads_Pos5.mys	Braking	30	300	-93.7204384	1	-2	-148.4265033	1	60	
6	E1-3_TemperatureAndRailLoads_Pos6.mys	Braking	40	340	-119.929844	1	-2	-155.0498907	1	60	
7	E1-3_TemperatureAndRailLoads_Pos7.mys	Braking	50	360	-140.8529475	1	-2	-160.0720201	1	60	
8	E1-3_TemperatureAndRailLoads_Pos8.mys	Braking	60	360	-160.7270057	1	-2	-164.6798601	1	60	
9	E1-3_TemperatureAndRailLoads_Pos9.mys	Braking	70	370	-182.2305085	1	-2	-174.683054	1	60	
10	E1-3_TemperatureAndRailLoads_Pos10.mys	Braking	80	380	-203.6301052	1	-2	-179.3564545	1	60	
11	E1-3_TemperatureAndRailLoads_Pos11.mys	Braking	90	390	-224.7672747	1	-2	-195.8420763	1	60	
12	E1-3_TemperatureAndRailLoads_Pos12.mys	Braking	100	400	-245.809626	1	-2	-195.5162174	1	60	
13	E1-3_TemperatureAndRailLoads_Pos13.mys	Braking	110	410	-266.8499536	1	-2	-195.4621611	1	60	
14	E1-3_TemperatureAndRailLoads_Pos14.mys	Braking	120	420	-287.4746523	1	-2	-195.4269862	1	60	
15	E1-3_TemperatureAndRailLoads_Pos15.mys	Braking	130	430	-307.4720078	1	-2	-195.419333	1	60	
16	E1-3_TemperatureAndRailLoads_Pos16.mys	Braking	140	440	-327.4703888	1	-2	-195.406345	1	60	
17	E1-3_TemperatureAndRailLoads_Pos17.mys	Braking	150	450	-347.468681	1	-2	-195.4047033	1	60	

Peak Longitudinal Reactions at the Abutments

The left-hand abutment provides all of the longitudinal restraint to the deck of the structure and the peak longitudinal reactions at this abutment are now investigated.

When post-processing, the option to create the envelopes in Microsoft Excel was chosen which caused an additional worksheet tabulating the peak longitudinal reactions for all of the analyses to be created. This can be found in the **Longitudinal Reactions Check** worksheet shown below.

This shows that the peak longitudinal reaction occurs when the braking trainset is placed at the 9th position when the front of the 300m long trainset is 20m past the right-hand abutment side of the deck and gives a reaction of 861.667 N which compares well with the UIC774-3 E1-3 test case published result of 874.42kN with a difference of -1.5%.


Check of Longitudinal Reactions											
Job Title: UIC 774-3 Model: E1-3_TemperatureAndRailLoads - Train Position 1											
Analysis Filename: E1-3_TemperatureAndRailLoads_Pos1 --> E1-3_TemperatureAndRailLoads_Pos16											
Model Directory: C:\USAS145\Projects											
Analysis Date: 04/01/2011 --> 04/01/2011											
Model Units: N,m,kg,s,C											
Analysis ID	Results Filename	Loading Type	Track 1		Peak Longitudinal Reaction (N)	Abutment / Pier Number with Peak Reaction					
			Distance from Left End of the Model to the Starting Position of the Loading (m)	Distance from Left End of the Model to the Finishing Position of the Loading (m)							
1	E1-3_TemperatureAndRailLoads_Pos1.mys	Temperature Only	0	300	682504.516	LH Abutment					
2	E1-3_TemperatureAndRailLoads_Pos2.mys	Braking	0	310	634815.3367	LH Abutment					
3	E1-3_TemperatureAndRailLoads_Pos3.mys	Braking	10	320	616897.4303	LH Abutment					
4	E1-3_TemperatureAndRailLoads_Pos4.mys	Braking	20	330	696937.4492	LH Abutment					
5	E1-3_TemperatureAndRailLoads_Pos5.mys	Braking	30	340	780237.909	LH Abutment					
6	E1-3_TemperatureAndRailLoads_Pos6.mys	Braking	40	340	818784.661	LH Abutment					
7	E1-3_TemperatureAndRailLoads_Pos7.mys	Braking	50	350	798117.6866	LH Abutment					
8	E1-3_TemperatureAndRailLoads_Pos8.mys	Braking	60	360	795113.5173	LH Abutment					
9	E1-3_TemperatureAndRailLoads_Pos9.mys	Braking	70	370	835907.2391	LH Abutment					
10	E1-3_TemperatureAndRailLoads_Pos10.mys	Braking	80	380	861667.3316	LH Abutment					
11	E1-3_TemperatureAndRailLoads_Pos11.mys	Braking	90	390	856264.9725	LH Abutment					
12	E1-3_TemperatureAndRailLoads_Pos12.mys	Braking	100	400	853269.6311	LH Abutment					
13	E1-3_TemperatureAndRailLoads_Pos13.mys	Braking	110	410	852037.4255	LH Abutment					
14	E1-3_TemperatureAndRailLoads_Pos14.mys	Braking	120	420	851571.6085	LH Abutment					
15	E1-3_TemperatureAndRailLoads_Pos15.mys	Braking	130	430	851400.3552	LH Abutment					
16	E1-3_TemperatureAndRailLoads_Pos16.mys	Braking	140	440	851338.0187	LH Abutment					
17	E1-3_TemperatureAndRailLoads_Pos17.mys	Braking	150	450	851315.4236	LH Abutment					

- Close the Microsoft Excel application.

Alternative Analyses with Same Temperature Only Model

If further studies are required on the same structure for identical temperature conditions but with different trainset loading the Rail Track Analysis option can make use of the temperature only analysis from a previous analysis for a new one. For small structures the time saving from avoiding the reconstruction of an identical track-structure interaction model will generally not be significant but where the structure is very long and has many decks and spans this time saving can become significant.

Applying Alternative Trainset Rail Loading

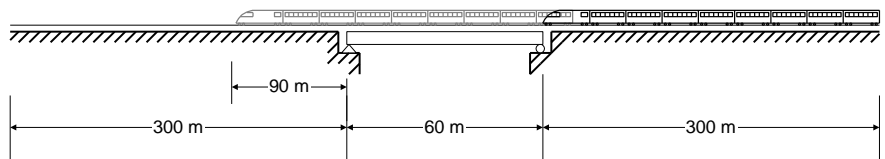

UIC774-3 test case E4-6 (shown above) is very similar to the one for test case E1-3. The only difference between the two tests is the direction that the braking trainset is travelling. As a result the temperature only model from test case E1-3 can and will be used as the starting point for the application of the alternative trainset rail loading that needs to be considered for the E4-6 track-structure interaction analysis.

Defining the Trainset Loading for the Structure


- Copy the **UIC E1-3 Analysis.xlsx** (or **UIC E1-3 Analysis.xls**) Microsoft Excel spreadsheet created for the E1-3 test case and save it as a new Microsoft Excel spreadsheet with the filename **UIC E4-6 Analysis.xlsx** (or **UIC E4-6 Analysis.xls**).
- Open the spreadsheet in Microsoft Excel.

	A	B	C	D	E	F	G	H	I	J
1	Loading	Units : Temperature : Celsius	Load Position/Length : m	Load : kN/m						
2										
3	For Deck		Amount							
4		Temperature	35							
5		Temperature	50							
6										
7		Number of Track Loading Locations	16							
8										
9		Loading Type	Track Selection to be Loaded	Parametric Starting Position for Loadings	Parametric End Position for Loadings	Amount (per unit length)	Loaded Length	Starting Location of Loading for First Analysis	Finishing Location of Loading for Last Analysis	Location Increment for each Analysis
10		Braking	1	0	300	-20	300	360	210	-10
11	For Rails	Vertical	1	0	300	80	300	360	210	-10
12										
13										
14										
15										
16										
17										
18										
19										
20										
21										
22										
23										
24										
25										


- Pick the **Loading** worksheet.
- Enter **-20** in the **Amount (per unit length)** for the trainset braking loading to indicate that the braking load is now acting to the left for a trainset that is travelling from right to left.
- Enter **360** for the **Starting Location of Loading for First Analysis** of both the **Braking** and **Vertical** loading to place the trainset in a location where it is just about to enter the deck structure for the first analysis, recalling that the left-hand embankment is 300m long and the deck is 60m long.
- Enter **210** for the **Finishing Location of Loading for Last Analysis** of both the **Braking** and **Vertical** loading to place the left-hand extent of the trainset 90m past the 60m deck span for the last analysis.
- Save the spreadsheet and close the Microsoft Excel application.

Applying the Trainset Rail Loading to the Analysis

The E1-3 temperature only model can now be specified along with the updated rail load spreadsheet containing the revised trainset loading for the Rail Track Analysis software option to carry out an analysis for this test case.

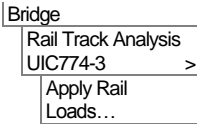

- Enter **E1-3_TemperatureOnly.mdl** for the **Original model filename** which holds the temperature only analysis from the previous section or browse for it using the **Browse...** button. If the full folder is not specified then it will be assumed that the model is in the current working folder.

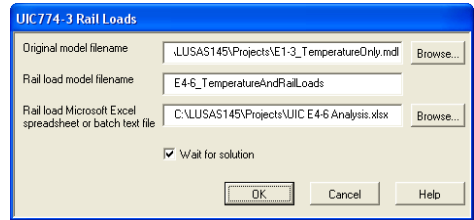

- Enter **E4-6_TemperatureAndRailLoads** as the **Rail load model filename**.
- Enter the **UIC E4-6 Analysis.xlsx** (or **UIC E4-6 Analysis.xls**) filename of the Microsoft Excel spreadsheet created for the analysis or browse for it using the **Browse...** button in the **Microsoft Excel spreadsheet or batch text file** input. If the full folder information is not entered it will be assumed that the Microsoft Excel spreadsheet is in the current working folder.
- Ensure the **Wait for solution** option is selected.
- Click the **OK** button.

Assuming that there have been no errors in the input for the Microsoft Excel spreadsheet the Rail Track Analysis software option will automatically generate a LUSAS model from the spreadsheet data and run a rail track analysis for the alternative trainset positions defined by the spreadsheet data.

If errors were detected...

If errors were detected with the modelling data or the post-processing in the next section gives different results the values in the spreadsheet should be corrected before re-selecting the previous Rail Track Analysis menu item. If it proves impossible for you to correct the errors reported a populated spreadsheet file is provided to enable you to create the model and run an analysis successfully.




- ❑ **UIC E4-6 Analysis.xlsx (.xls)** is a populated spreadsheet containing all input data for the example.

A spreadsheet compatible for an installed version of version of Microsoft Excel should be copied to the working folder where the track-structure interaction example model is to be created, and the **Bridge > Rail Track Analysis UIC774-3 > Apply Rail Loads** menu item re-selected.

Automatic Extraction of Results into Microsoft Excel

Bridge
Rail Track Analysis
UIC774-3
Extract Results to
Excel...

- Enter **E4-6_PostProcess** for the **Filename**.
- Ensure the **Working folder** is set to **Current** to place the post-processing Microsoft Excel spreadsheet into the same folder as the analyses.
- Click the **OK** button.
- Click on **Yes** when asked whether envelopes are to be created in Microsoft Excel.

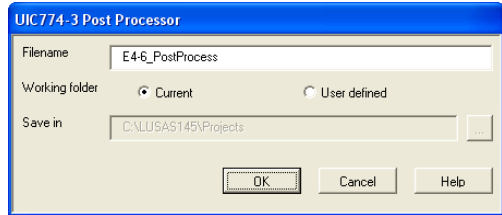

The automatic post-processor will now extract the results from the loaded analysis results and generate the Microsoft Excel spreadsheet in the working folder.

- Open the spreadsheet in Microsoft Excel.

Peak Relative Railbed Displacement

Check of Longitudinal Relative Displacement of Railbed (Relative Displacement between Rails and Deck)									
Job Title: UIC 774-3 Model: E4-6_TemperatureAndRailLoads - Train Position 1									
Analysis Filename: E4-6_TemperatureAndRailLoads_Pos1 -> E4-6_TemperatureAndRailLoads_Pos16									
Model Directory: C:\LUSAS145\Projects									
Analysis Date: 04/01/2011 -> 04/01/2011									
Model Units: N,m,kgs,C									
Track 1									
Analysis ID	Results Filename	Loading Type	Distance from Left End of the Model to the Starting Position of the Loading (m)	Distance from Left End of the Model to the Finishing Position of the Loading (m)	Peak Relative Longitudinal Displacement between Rail and Slab (m)	Track Number with Peak Displacement	Distance from Left End of Structure for Peak Displacement (m)		
1	E4-6_TemperatureAndRailLoads_Pos1.mys	Temperature Only			0.016378176	1	60		
2	E4-6_TemperatureAndRailLoads_Pos2.mys	Braking	360	660	0.016844309	1	60		
3	E4-6_TemperatureAndRailLoads_Pos3.mys	Braking	350	650	0.016822493	1	60		
4	E4-6_TemperatureAndRailLoads_Pos4.mys	Braking	340	640	0.01683469	1	60		
5	E4-6_TemperatureAndRailLoads_Pos5.mys	Braking	330	630	0.016924837	1	60		
6	E4-6_TemperatureAndRailLoads_Pos6.mys	Braking	320	620	0.017028863	1	60		
7	E4-6_TemperatureAndRailLoads_Pos7.mys	Braking	310	610	0.01717806	1	60		
8	E4-6_TemperatureAndRailLoads_Pos8.mys	Braking	300	600	0.017160002	1	60		
9	E4-6_TemperatureAndRailLoads_Pos9.mys	Braking	290	590	0.017058362	1	60		
10	E4-6_TemperatureAndRailLoads_Pos10.mys	Braking	280	580	0.017038848	1	60		
11	E4-6_TemperatureAndRailLoads_Pos11.mys	Braking	270	570	0.017033471	1	60		
12	E4-6_TemperatureAndRailLoads_Pos12.mys	Braking	260	560	0.017031749	1	60		
13	E4-6_TemperatureAndRailLoads_Pos13.mys	Braking	250	550	0.017031153	1	60		
14	E4-6_TemperatureAndRailLoads_Pos14.mys	Braking	240	540	0.017030942	1	60		
15	E4-6_TemperatureAndRailLoads_Pos15.mys	Braking	230	530	0.017030866	1	60		
16	E4-6_TemperatureAndRailLoads_Pos16.mys	Braking	220	520	0.017030838	1	60		
17	E4-6_TemperatureAndRailLoads_Pos17.mys	Braking	210	510	0.017030828	1	60		

From the **Railbed Check** worksheet of the results spreadsheet the peak relative railbed displacement is shown to be 0.01722m when the braking trainset is placed at the 6th position where it is 10 m from the left-hand abutment of the deck. This peak relative railbed displacement compares well with the UIC774-3 E4-6 test case published result of 1.78E-2 m with a difference of -3.4%.

Peak Axial Rail Stresses

Check of Axial Rail Stress										
Job Title: UIC 774-3 Model E4_6_TemperatureAndRailLoads - Train Position 1										
Analysis Filename: E4_6_TemperatureAndRailLoads_Pos1 -> E4_6_TemperatureAndRailLoads_Pos16										
Model Directory: C:\USAS145\Projects										
Analysis Date: 04/01/2011 -> 04/01/2011										
Model Units: N,m,kg,s,C										
				</						

From the **Rail Stresses Check** worksheet of the results spreadsheet the peak axial rail stress is shown to be -147.13 MPa when the braking trainset is placed at the 6th position where it is 10 m from the left-hand abutment of the deck. This peak rail stress compares well with the UIC774-3 E4-6 test case published result of -162.06 MPa with a difference of -10.15% which is just outside the 10% limit specified in the code of practice due to the coarseness of the modelling.

Peak Longitudinal Reactions at the Abutments

A1	B	C	D	E	F	G	H
Check of Longitudinal Reactions							
Job Title: UIC 774-3 Model: E4-6_TemperatureAndRailLoads - Train Position 1							
Analysis Filename: E4-6_TemperatureAndRailLoads_Pos1 --> E4-6_TemperatureAndRailLoads_Pos16							
Model Directory: C:\USAS145\Projects							
Analysis Date: 04/01/2011 --> 04/01/2011							
Model Units: N,m,kg,s,C							
Track 1							
Analysis ID	Results Filename	Loading Type	Distance from Left End of the Model to the Starting Position of the Loading (m)	Distance from Left End of the Model to the Finishing Position of the Loading (m)	Peak Longitudinal Reaction (N)	Abutment / Pier Number with Peak Reaction	
1	E4-6_TemperatureAndRailLoads_Pos1.mys	Temperature Only			682504.516	LH Abutment	
2	E4-6_TemperatureAndRailLoads_Pos1.mys	Braking	360	660	708415.0784	LH Abutment	
3	E4-6_TemperatureAndRailLoads_Pos2.mys	Braking	350	650	855638.4237	LH Abutment	
4	E4-6_TemperatureAndRailLoads_Pos3.mys	Braking	340	640	1093806.474	LH Abutment	
5	E4-6_TemperatureAndRailLoads_Pos4.mys	Braking	330	630	1403512.002	LH Abutment	
6	E4-6_TemperatureAndRailLoads_Pos5.mys	Braking	320	620	1745558.294	LH Abutment	
7	E4-6_TemperatureAndRailLoads_Pos6.mys	Braking	310	610	2058547.705	LH Abutment	
8	E4-6_TemperatureAndRailLoads_Pos7.mys	Braking	300	600	2295263.075	LH Abutment	
9	E4-6_TemperatureAndRailLoads_Pos8.mys	Braking	290	590	2376466.005	LH Abutment	
10	E4-6_TemperatureAndRailLoads_Pos9.mys	Braking	280	580	2392242.349	LH Abutment	
11	E4-6_TemperatureAndRailLoads_Pos10.mys	Braking	270	570	2396669.352	LH Abutment	
12	E4-6_TemperatureAndRailLoads_Pos11.mys	Braking	260	560	2398062.641	LH Abutment	
13	E4-6_TemperatureAndRailLoads_Pos12.mys	Braking	250	550	2398543.148	LH Abutment	
14	E4-6_TemperatureAndRailLoads_Pos13.mys	Braking	240	540	2398714.15	LH Abutment	
15	E4-6_TemperatureAndRailLoads_Pos14.mys	Braking	230	530	2398775.652	LH Abutment	
16	E4-6_TemperatureAndRailLoads_Pos15.mys	Braking	220	520	2398797.866	LH Abutment	
17	E4-6_TemperatureAndRailLoads_Pos16.mys	Braking	210	510	2398805.895	LH Abutment	
Longitudinal Reactions Check Rail Stresses Check							

From the **Longitudinal Reactions Check** worksheet of the results spreadsheet the peak reaction is shown to be 2398.81kN when the braking trainset is placed at the last position where the front of it is 90m past the left-hand abutment of the deck. This peak reaction compares well with the UIC774-3 E4-6 test case published result of 2196.1kN

with a difference of +8.4% which is within the 20% limit specified in the code of practice. The maximum reaction is also comparable with the alternative calculation method which gives 2373.47kN.

- Close the Microsoft Excel application.

This completes the example.

General Modelling Discussion

The modelling of the structure and approach embankments in this example is relatively crude to ensure that the track-structure analyses can be carried out within a reasonable length of time. As a result the accuracy of some calculated results such as the rail stresses has been reduced and some results (for test case E4-6) are outside the permitted accuracy stated in UIC774-3.


Description	Test Case	Railed Displacement	Reaction	Rail Stress
2m Elements 16 Location Increments of 10m	E1-3	0.01740 m +0.6%	861.67 kN -1.5%	-176.32 MPa -3.4%
	E4-6	0.01722 m -3.4%	2398.81 kN +8.4%	-147.13 MPa -10.15%
1m Elements 16 Location Increments of 10m	E1-3	0.01740 m +0.6%	860.41 kN -1.6%	-177.63 MPa -2.7%
	E4-6	0.01722 m -3.4%	2398.76 kN +8.4%	-148.04 MPa -9.5%
1m Elements 31 Location Increments of 5m	E1-3	0.01741 m +0.6%	860.41 kN -1.6%	-177.63 MPa -2.7%
	E4-6	0.01723 m -3.3%	2398.76 kN +8.4%	-148.50 MPa -9.1%
1m Elements 151 Location Increments of 1m	E1-3	0.01741 m +0.6%	860.72 kN -1.6%	-177.66 MPa -2.7%
	E4-6	0.01724 m -3.2%	2398.76 kN +8.4%	-148.51 MPa -9.1%
0.6m Elements 251 Location Increments of 0.6m	E1-3	0.01741 m +0.6%	860.00 kN -1.7%	-178.18 MPa -2.4%
	E4-6	0.01724 m -3.2%	2398.81 kN +8.5%	-148.90 MPa -8.8%
0.5m Elements 301 Location Increments of 0.5m	E1-3	0.01741 m +0.6%	859.86 kN -1.7%	-178.31 MPa -2.3%
	E4-6	0.01724 m -3.2%	2398.86 kN +8.5%	-149.00 MPa -8.8%
0.3m Elements 501 Location Increments of 0.3m	E1-3	0.01741 m +0.6%	859.73 kN -1.7%	-178.58 MPa -2.1%
	E4-6	0.01724 m -3.2%	2398.98 kN +8.5%	-149.20 MPa -8.6%

Refinement of the modelling will improve the accuracy of the solution at the cost of increased computer memory requirements and increased modelling / analysis and post-processing time. The previous table shows the improvement of accuracy for the two test cases when element sizes of less than 2m and trainset location increments of less than 10m are used. For the UIC774-3 code of practice the computed values should be within -10% and +20% (if on the safe side) and based on this criterion all results with the exception of those from the 2m element analysis pass the criterion.

In the previous table the meshing and increment size can be seen to have a less significant effect on the railbed displacement and reactions obtained than on the rail stress values. This is because the Finite Element solution is a displacement method and reactions should be in equilibrium with the applied load which is constant. An element size of 1m can be seen to satisfy the accuracy of the rail stresses against the fundamental test cases in UIC774-3 but a refinement of the incrementation will allow more accurate capture of the value of the maximum stress and location of the trainset where the maximum rail stress occurs.

Running Analyses with Multiple Decks


To model a structure with multiple decks spreadsheet data similar to that shown on the following pages would need to be defined.

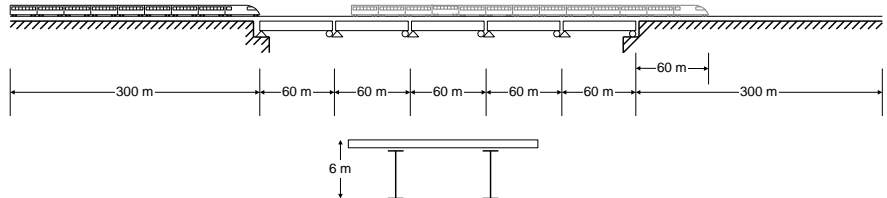

Decks, Tracks and Embankment			
	A	B	C
1	Decks, Tracks and Embankment	Units : m	
2			
3	Number of Decks	5	
4	Number of Tracks	1	
5	Left Embankment Length	300	
6	Right Embankment Length	300	
7	Length of Decks Only / Total Length (m)	300	900
8			
9			

Track-Structure Interaction to UIC774-3

Structure Definition									
Units: Pier Height: m, Bearing springs on top of each pier: kN/mm, Span Length: m									
		Spring Support for each Abutment / Pier	Pier Height	Pier Geo. Assign.	Pier Mat. Assign.	Bearing Springs on Top of each Pier	Span Length	Geo. Assign.	Mat. Assign.
Deck 1	Left End	1200				R			
	Span 1	1200				F	60	1	1
	Span 2								
	Span 3								
	Span 4								
	Span 5								
	Span 6								
	Span 7								
	Span 8								
	Span 9								
	Number of Supports for the Deck / Pier	2				2	60		
Deck 2	Left End	1200				R			
	Span 1	1200				F	60	1	1
	Span 2								
	Span 3								
	Span 4								
	Span 5								
	Span 6								
	Span 7								
	Span 8								
	Span 9								
	Number of Supports for the Deck / Pier	2				2	60		
Deck 3	Left End	1200				R			
	Span 1	1200				F	60	1	1
	Span 2								
	Span 3								
	Span 4								
	Span 5								
	Span 6								
	Span 7								
	Span 8								
	Span 9								
	Number of Supports for the Deck / Pier	2				2	60		
Deck 4	Left End	1200				R			
	Span 1	1200				F	60	1	1
	Span 2								
	Span 3								
	Span 4								
	Span 5								
	Span 6								
	Span 7								
	Span 8								
	Span 9								
	Number of Supports for the Deck / Pier	2				2	60		
Deck 5	Left End	1200				R			
	Span 1	1200				F	60	1	1
	Span 2								
	Span 3								
	Span 4								
	Span 5								
	Span 6								
	Span 7								
	Span 8								
	Span 9								

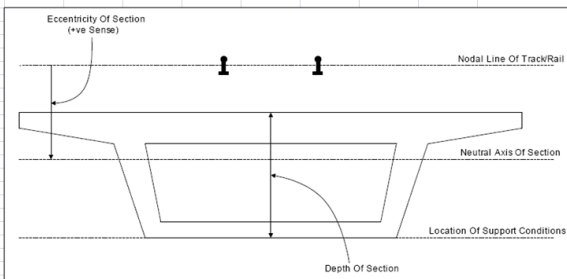Geometric Properties									
Units: m									
									
	Depth of Section to Support	A	I _{yy}	I _{zz}	J	A _{yy}	A _{zz}	Eccentricity	Description
26	Rail	1.30E-02	5.77E-05	1.02E-05	2.60E-06	0.01093138	0.00566618		0 Track with 2 UIC 60 Rails
27	1	0.74	2.59	2.59	2.59	740	740	1.21	Deck Cross-Section

A1		Material Properties						
	A	B	C	D	E	F	G	H
1	Material Properties		Units : N, mm, kg					
2								
3			E	ν	ρ	α	Description	
4		Rail	210000	0.3	0	1.00E-05	Rails	
5		1	210000	0.3	0	1.00E-05	Deck	
6								
7								
8								
9								
10								

A1	Interaction Joint Properties Between Rail/Slab						
	A	B	C	D	E	F	
1	Interaction Joint Properties Between Rail/Slab		Units : Bilinear springs characteristic : kN/mm/m, Eccentricity between rail/slab : m				
2	<p>Eccentricity Between Rail/Slab (+ve Sense)</p> <p>Nodal Line Of Track/Rail</p> <p>Neutral Axis Of Section</p> <p>Location Of Support Conditions</p> <p>Depth Of Section</p>						
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							
13							
14							
25							
26	Item			Longitudinal	Transverse	Vertical	
27	Unloaded Bilinear Springs Characteristic		Contact Stiff	10	infinite	infinite	
28			Lift-off Force	20	infinite	infinite	
29			Lift-off Springs	1.00E-06	infinite	infinite	
30	Loaded Bilinear Springs Characteristic		Contact Stiff	30	infinite	infinite	
31			Lift-off Force	60	infinite	infinite	
32			Lift-off Springs	1.00E-06	infinite	infinite	
33							
34							
35	Rail Expansion Joints		Units : Distance : m, Initial gap : mm				
36							
37							
38							
39							
40							
41							
42							

Track 1		Track 2	
Position	Initial Gap	Position	Initial Gap
		</	

Track-Structure Interaction to UIC774-3

A1	fx Loading										
1	Loading	Units : Temperature : Celsius , Load Position/Length : m , Load : kN/m									
2											
3	For Deck	Amount									
4		Temperature	35								
5		Temperature	0								
6											
7		Number of Track									
8		Loading Locations	73								
9		Loading Type	Track Selection to be Loaded	Parametric Starting Position for Loadings	Parametric End Position for Loadings	Amount (per unit length)	Loaded Length	Starting Location of Loading for First Analysis	Finishing Location of Loading for Last Analysis	Location Increment for each Analysis	
10	For Rails	Braking	1	0	300	20	300	0	360	5	
11		Vertical1	1	0	300	80	300	0	360	5	
12											
13											
14											
15											
16											
17											
18											
19											
20											
21											
22											
23											
24											
25											
26											